


# SETTINGS FLIP DISC CLOCK 4x7-SEGMENT

- TIME - 12/24 HOUR
- LEADING ZERO - ON/OFF
- REST PERIOD - CLOCK ON/OFF HOUR RANGE
- SPEED/DELAY FLIP DISC EFFECT 0-99ms
- TEMPERATURE DISPLAY - ON/OFF
- TEMPERATURE DEGREES - °F / °C
- HUMIDITY DISPLAY - ON/OFF
- TEMPERATURE AND HUMIDITY DISPLAY FREQUENCY - 30/60 SECONDS

TO ENTER THE SETTINGS, PRESS ONE OF THE BUTTONS FOR 1 SECOND DURING NORMAL CLOCK OPERATION.

TO ENTER SPEED/DELAY EFFECT SETTINGS PRESS THE **TOP** BUTTON.  
SETTINGS FOR 12/24 HOUR TIME, LEADING ZERO AND TIME AFTER PRESSING THE **MIDDLE** BUTTON.



SETTINGS THE TEMPERATURE/HUMIDITY DISPLAY METHODS BY PRESSING THE **BOTTOM** BUTTON.

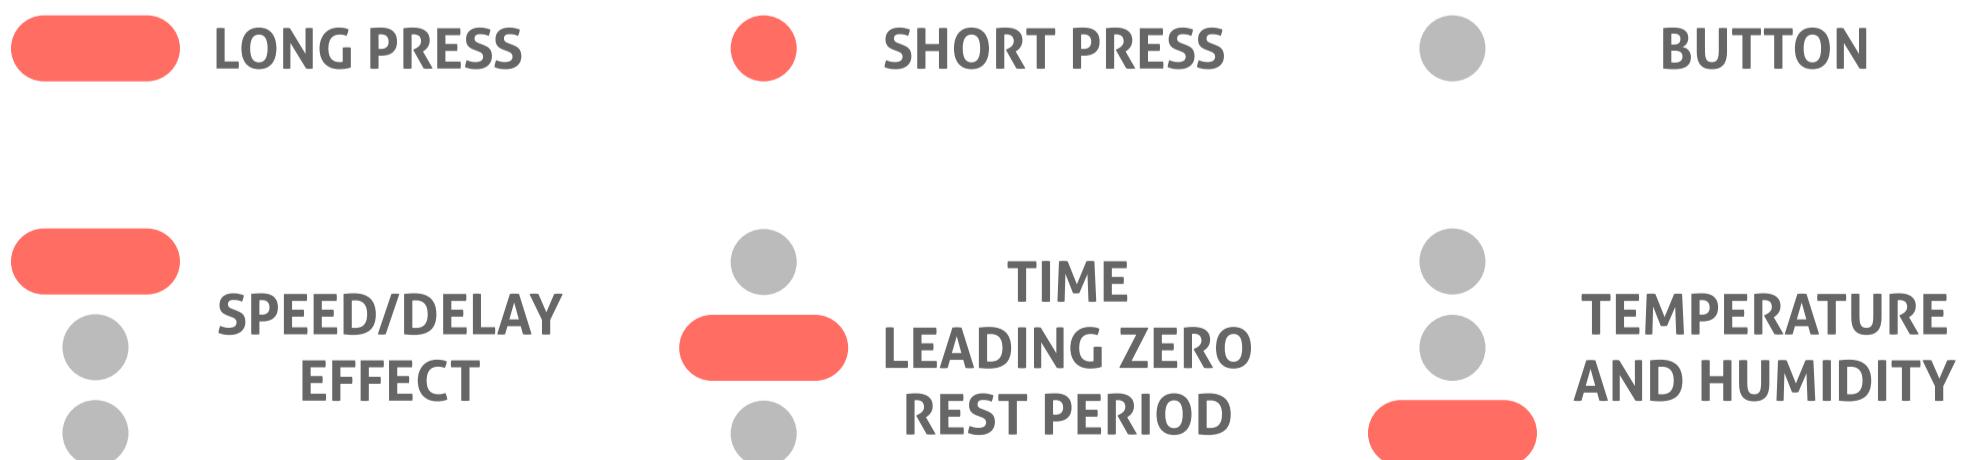


FLIP<sup>o</sup>.io

# SPEED/DELAY EFFECT



LONG PRESS TOP BUTTON TO ENTER SPEED/DELAY EFFECT SETTINGS

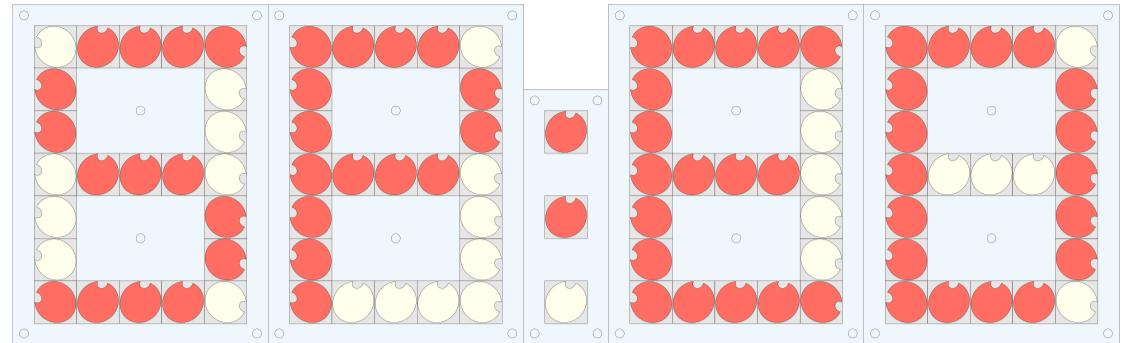

SHORT PRESS TOP/BOTTOM BUTTON TO CHOOSE SPEED/Delay VALUE

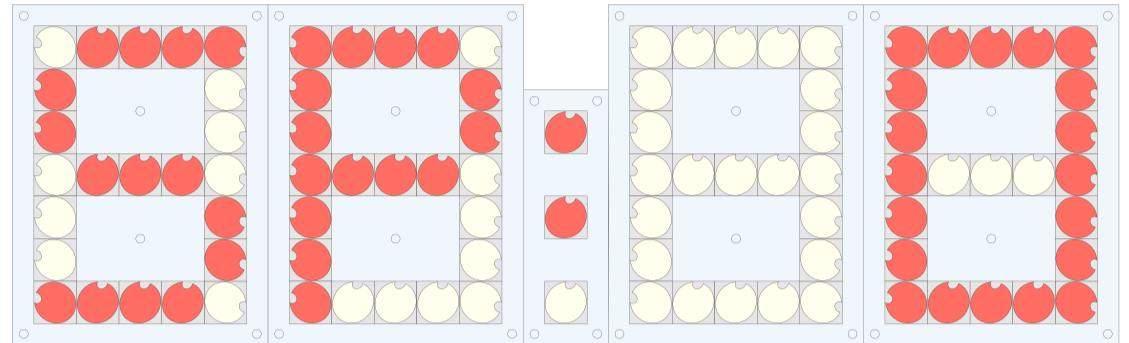

LONG PRESS MIDDLE BUTTON TO SAVE SETTINGS AND EXIT

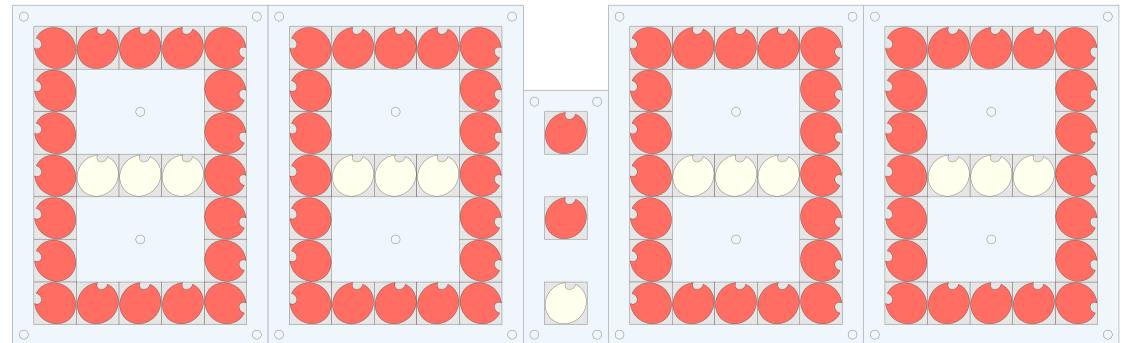


# TIME SETTINGS 1/4



LONG PRESS MIDDLE BUTTON  
TO ENTER TIME SETTINGS



## TIME FORMAT 12/24 HOUR

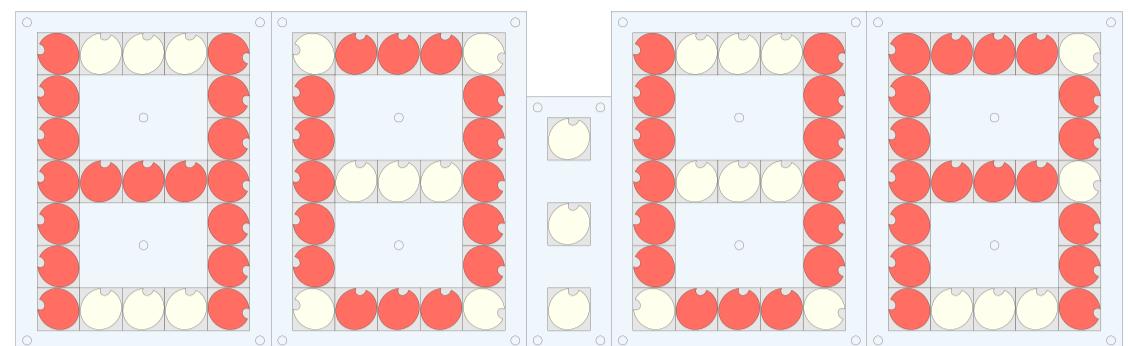

SHORT PRESS TOP/BOTTOM BUTTON  
TO CHOOSE HOUR FORMAT 12/24

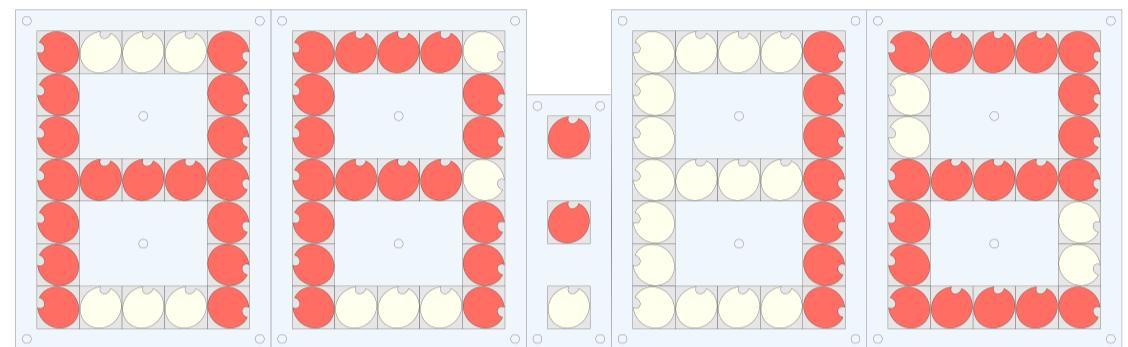



LONG PRESS MIDDLE BUTTON  
TO ENTER LEADING ZERO SETTINGS




## LEADING ZERO ON/OFF

SHORT PRESS TOP/BOTTOM BUTTON  
TO ON/OFF LEADING ZERO

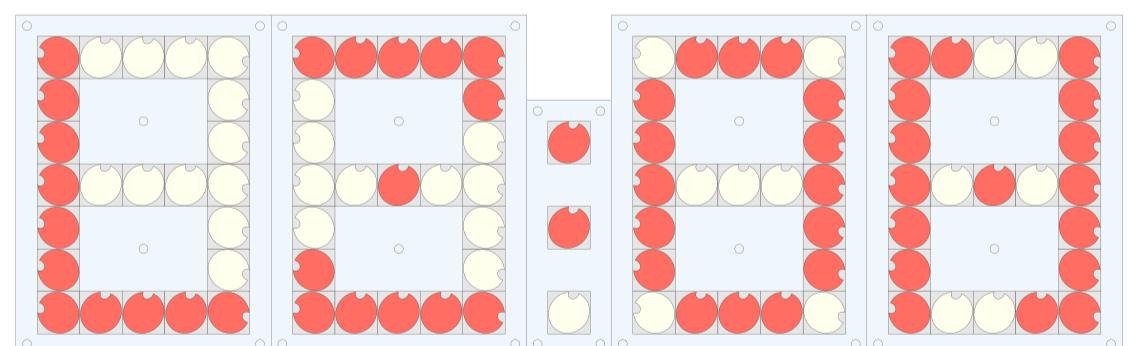


LONG PRESS MIDDLE BUTTON  
TO ENTER TIME SETTINGS



# TIME SETTINGS 2/4

TIME HH:MM

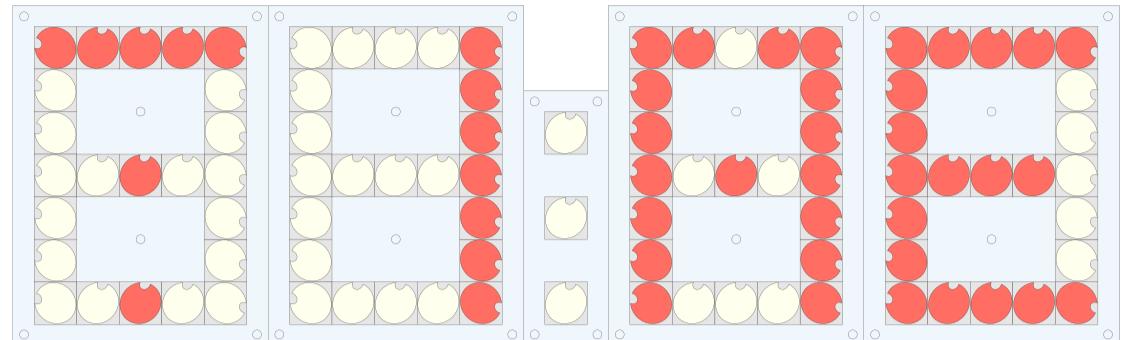

SHORT PRESS TOP/BOTTOM BUTTON TO SET DIGITS



LONG PRESS MIDDLE BUTTON TO MOVE TO NEXT DIGIT




LONG PRESS MIDDLE BUTTON TO ENTER REST PERIOD SETTINGS OR TIME FORMAT AM/PM SETTINGS FOR 12 HOUR TIME





SHORT PRESS TOP/BOTTOM BUTTON TO SET AM/PM TIME FORMAT



LONG PRESS MIDDLE BUTTON TO ENTER REST PERIOD SETTINGS




12 HOUR TIME FORMAT AM/PM

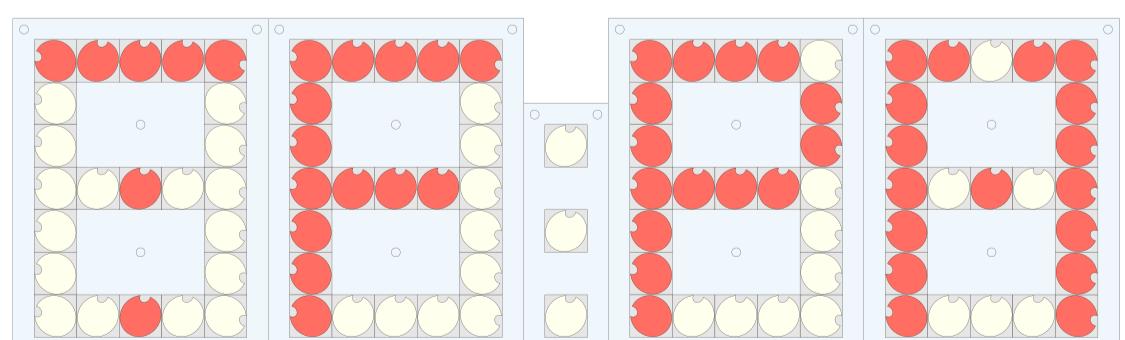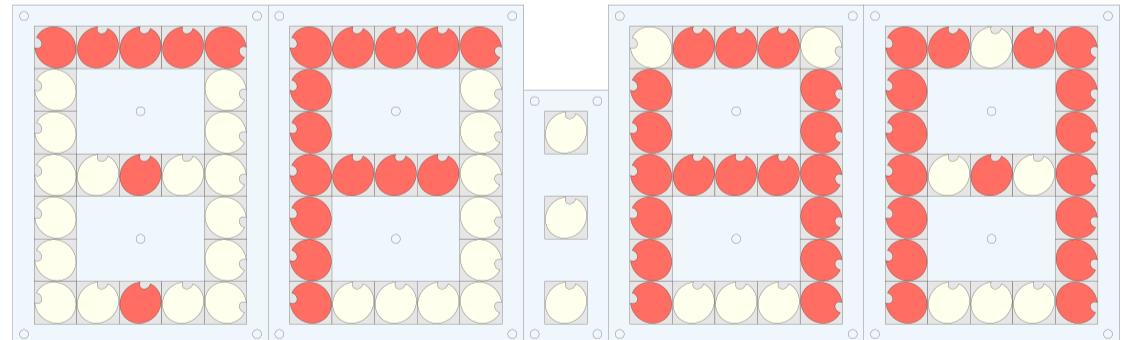

# TIME SETTINGS 3/4

## REST PERIOD ON/OFF


SHORT PRESS TOP/BOTTOM BUTTON TO ON/OFF REST PERIOD

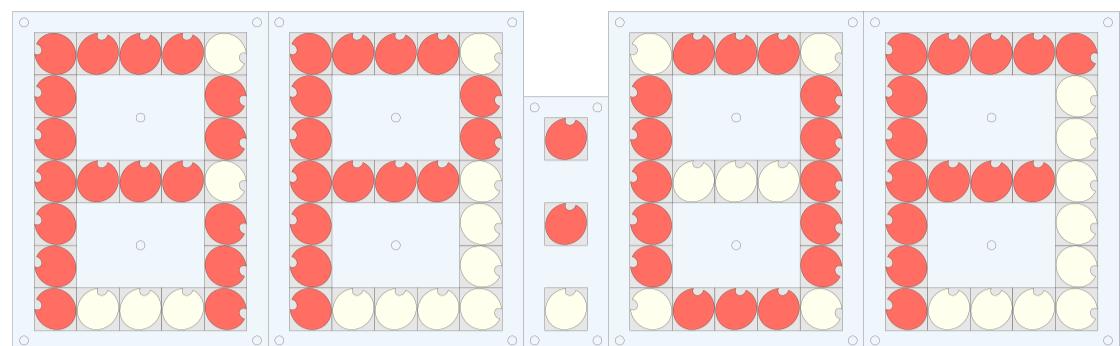

LONG PRESS MIDDLE BUTTON  
IF ON ENTER SLEEP HOUR SETTINGS  
IF OFF EXIT SETTINGS



SHORT PRESS TOP/BOTTOM BUTTON TO SET SLEEP HOUR



LONG PRESS MIDDLE BUTTON  
TO ENTER WAKE HOUR SETTINGS  
OR HOUR FORMAT AM/PM SETTINGS  
FOR 12 HOUR TIME




SHORT PRESS TOP/BOTTOM BUTTON  
TO SET AM/PM SLEEP HOUR FORMAT




LONG PRESS MIDDLE BUTTON  
TO ENTER WAKE HOUR SETTINGS



## SLEEP HOUR

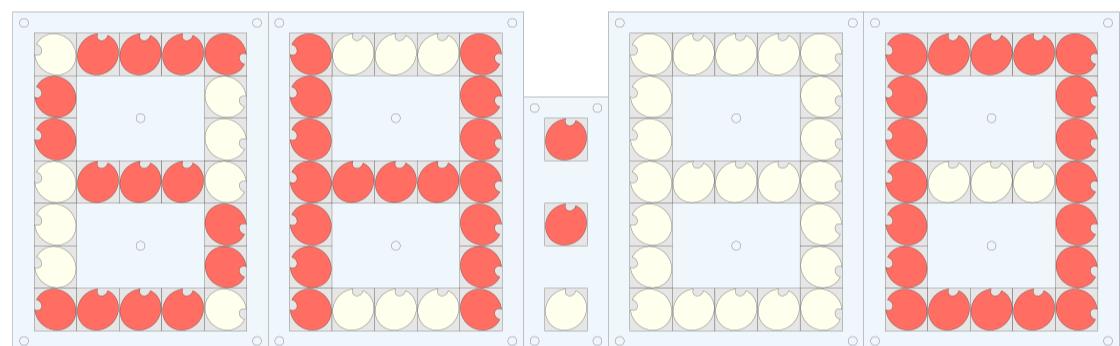

## 12 HOUR TIME FORMAT AM/PM

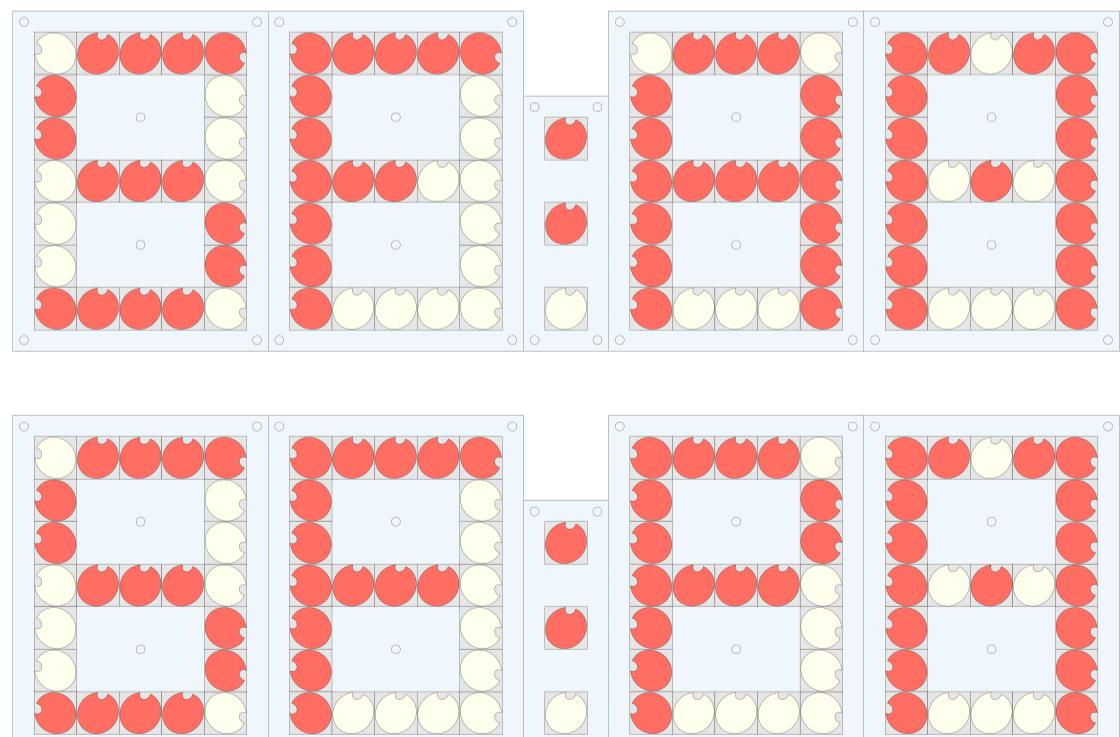

# TIME SETTINGS 4/4


SHORT PRESS TOP/BOTTOM BUTTON TO SET WAKE HOUR



LONG PRESS MIDDLE BUTTON TO EXIT SETTINGS OR TO ENTER HOUR FORMAT AM/PM SETTINGS FOR 12 HOUR TIME




SHORT PRESS TOP/BOTTOM BUTTON TO SET AM/PM WAKE HOUR FORMAT




LONG PRESS MIDDLE BUTTON TO EXIT SETTINGS







LONG PRESS MIDDLE BUTTON TO SAVE SETTINGS AND EXIT



## WAKE HOUR

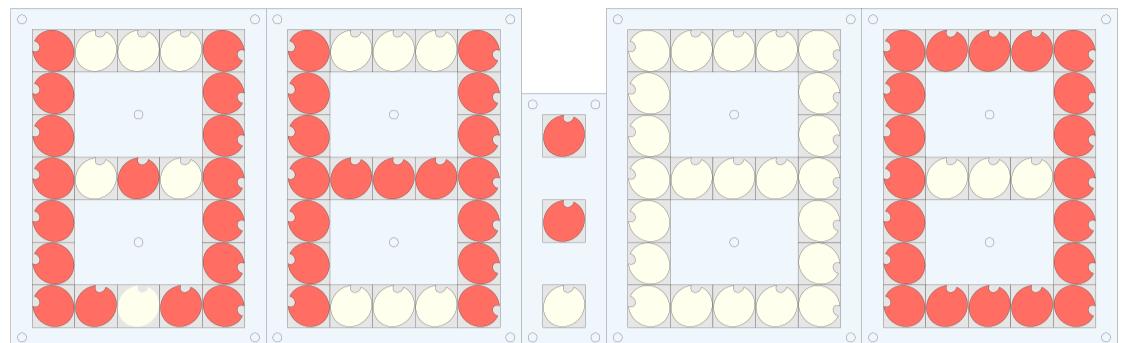

## 12 HOUR TIME FORMAT AM/PM

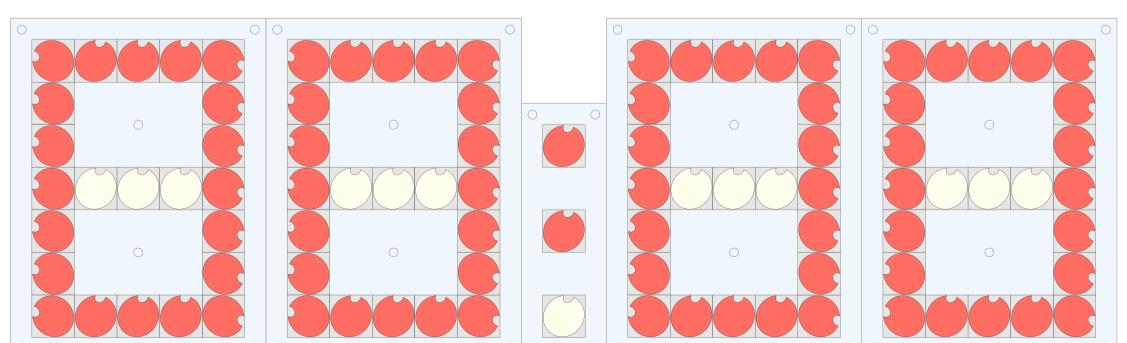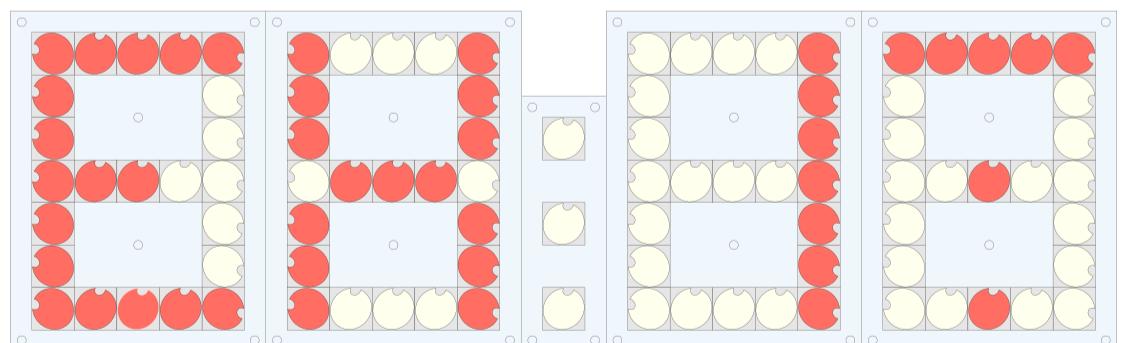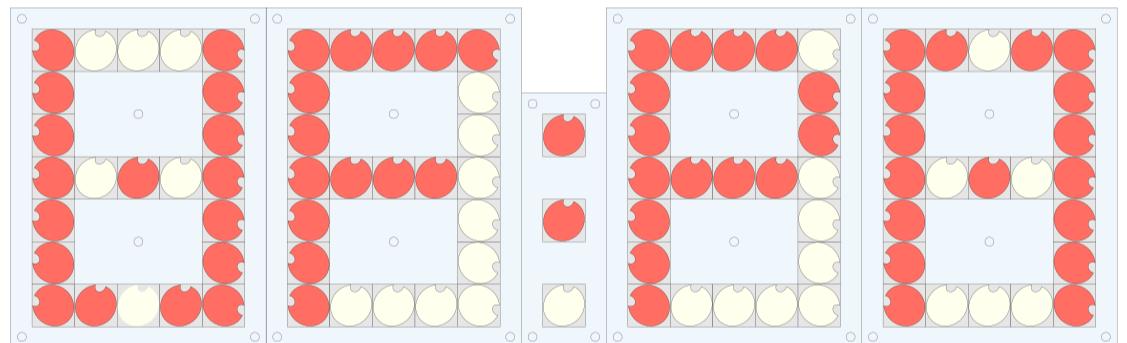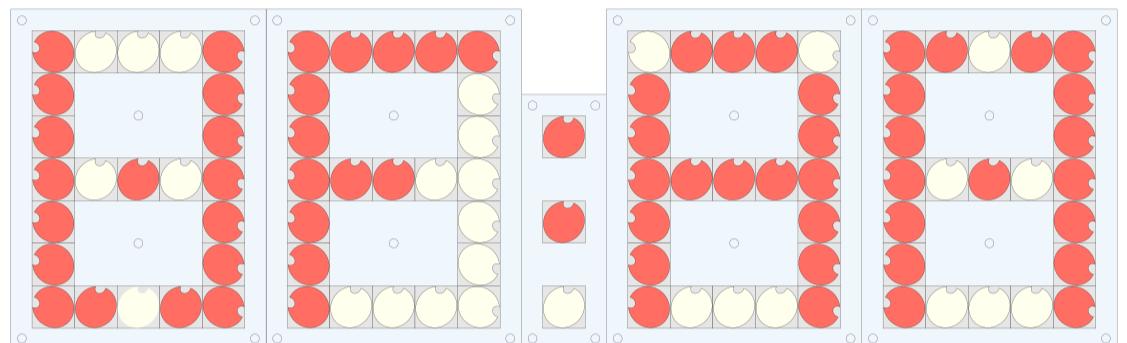

# TEMP/HUM SETTINGS 1/2

LONG PRESS MIDDLE BUTTON  
TO ENTER TEMP/HUM SETTINGS



SHORT PRESS TOP/BOTTOM BUTTON  
TO ON/OFF TEMPERATURE DISPLAY



LONG PRESS MIDDLE BUTTON  
IF ON ENTER TEMPERATURE  
DEGREES SETTINGS OR  
IF OFF HUMIDITY SETTINGS






SHORT PRESS TOP/BOTTOM BUTTON  
TO SET TEMPERATURE DEGREES





LONG PRESS MIDDLE BUTTON TO  
ENTER HUMIDITY DISPLAY SETTINGS



## TEMPERATURE DISPLAY ON/OFF

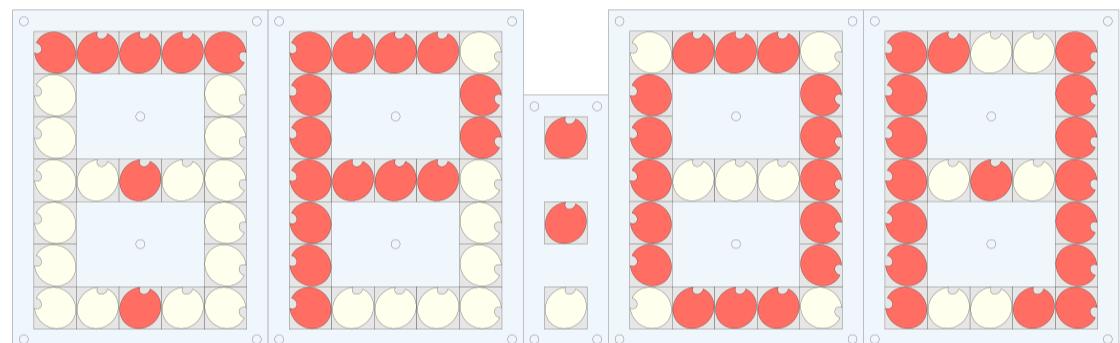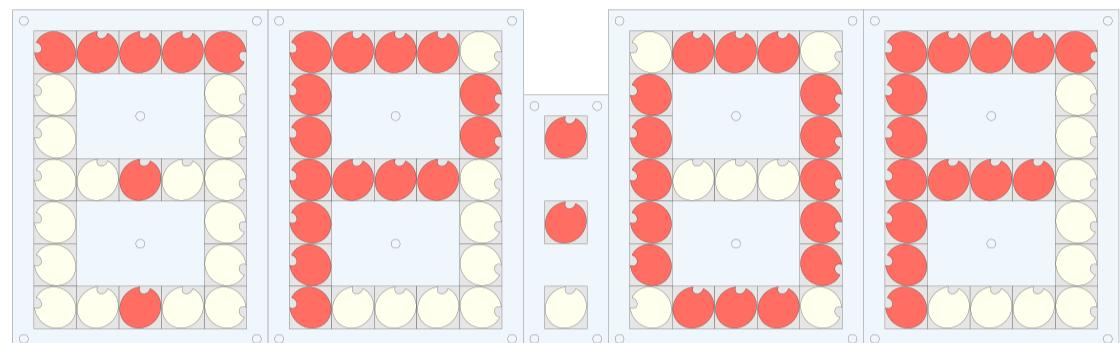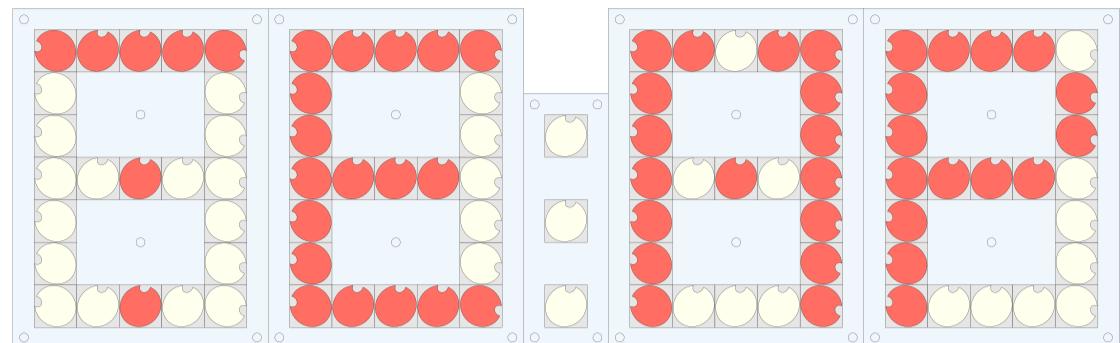



## TEMPERATURE DEGREES °F/°C

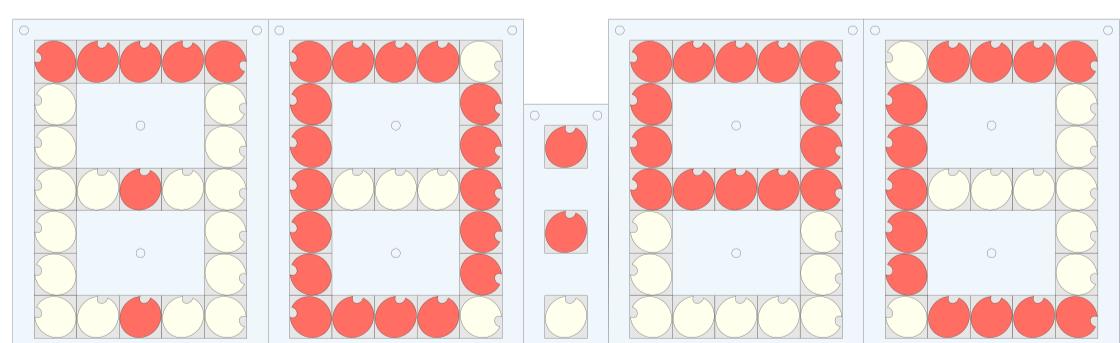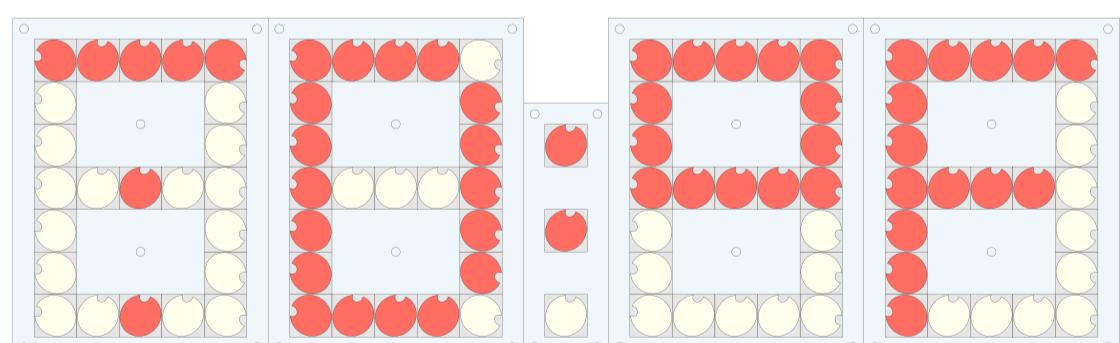

# TEMP/HUM SETTINGS 2/2

## HUMIDITY DISPLAY ON/OFF

SHORT PRESS TOP/BOTTOM BUTTON  
TO ON/OFF HUMIDITY DISPLAY

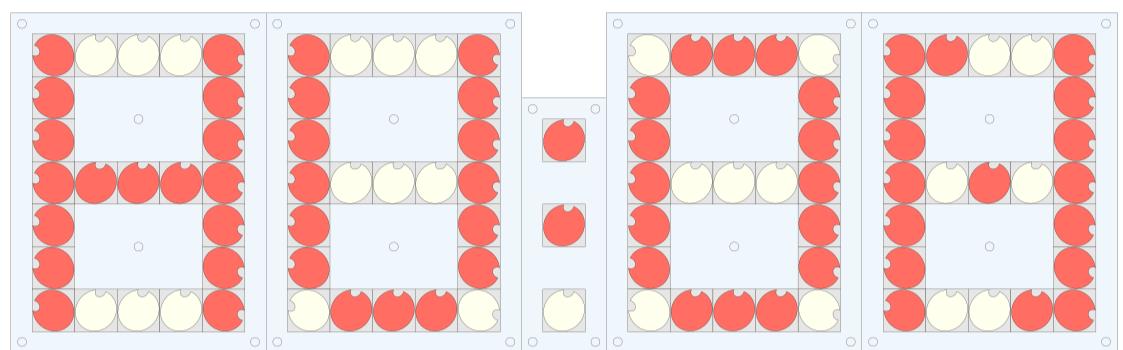
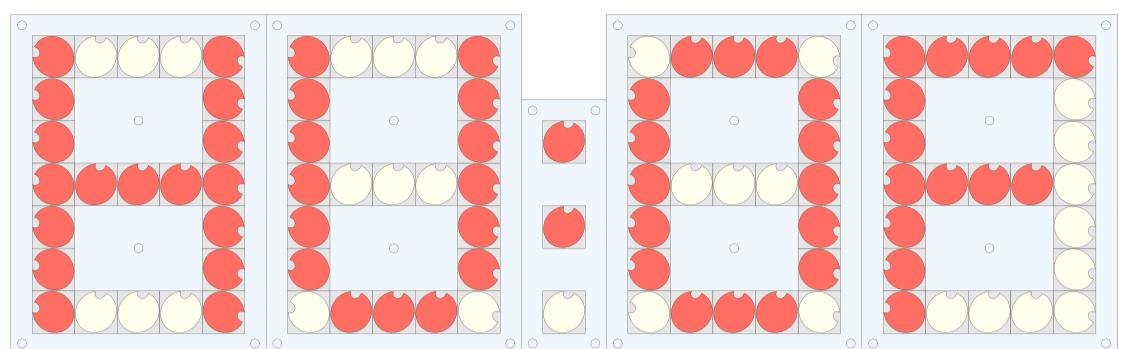


LONG PRESS MIDDLE BUTTON  
IF TEMP OR HUM ON ENTER  
DISPLAY FREQUENCY SETTINGS  
IF TEMP AND HUM OFF EXIT



## DISPLAY FREQUENCY 60/30 SECONDS

SHORT PRESS TOP/BOTTOM BUTTON  
TO SET TEMPERATURE OR/AND  
HUMIDITY DISPLAY FREQUENCY

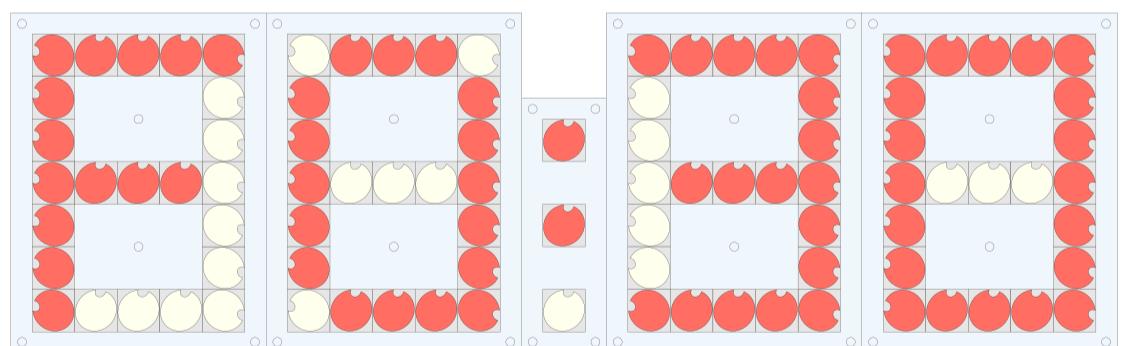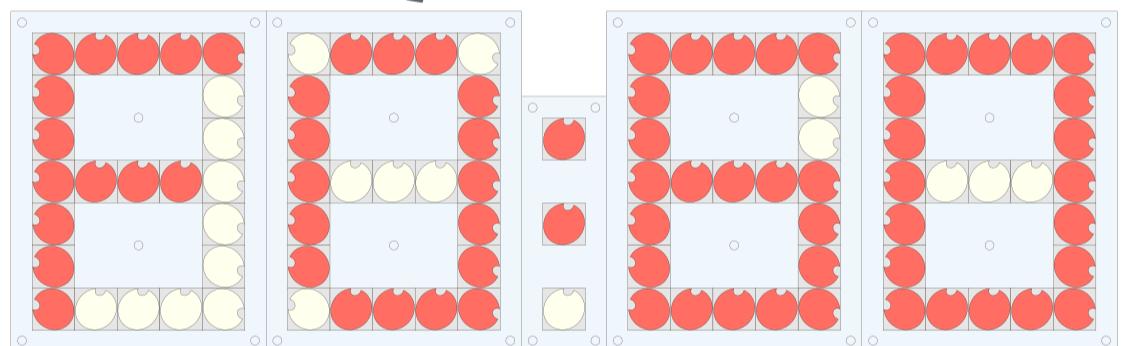

LONG PRESS MIDDLE BUTTON  
TO EXIT SETTINGS

