


SETTINGS FLIP DISC CLOCK 4x7-SEGMENT

- TIME - 12/24 HOUR
- LEADING ZERO - ON/OFF
- REST PERIOD - CLOCK ON/OFF HOUR RANGE
- SPEED/DELAY FLIP DISC EFFECT 0-99ms
- TEMPERATURE DISPLAY - ON/OFF
- TEMPERATURE DEGREES - °F / °C
- HUMIDITY DISPLAY - ON/OFF
- TEMPERATURE AND HUMIDITY DISPLAY FREQUENCY - 30/60 SECONDS

TO ENTER THE SETTINGS, PRESS ONE OF THE BUTTONS FOR 1 SECOND DURING NORMAL CLOCK OPERATION.

TO ENTER SPEED/DELAY EFFECT SETTINGS PRESS THE **TOP** BUTTON.
SETTINGS FOR 12/24 HOUR TIME, LEADING ZERO AND TIME AFTER PRESSING THE **MIDDLE** BUTTON.



SETTINGS THE TEMPERATURE/HUMIDITY DISPLAY METHODS BY PRESSING THE **BOTTOM** BUTTON.

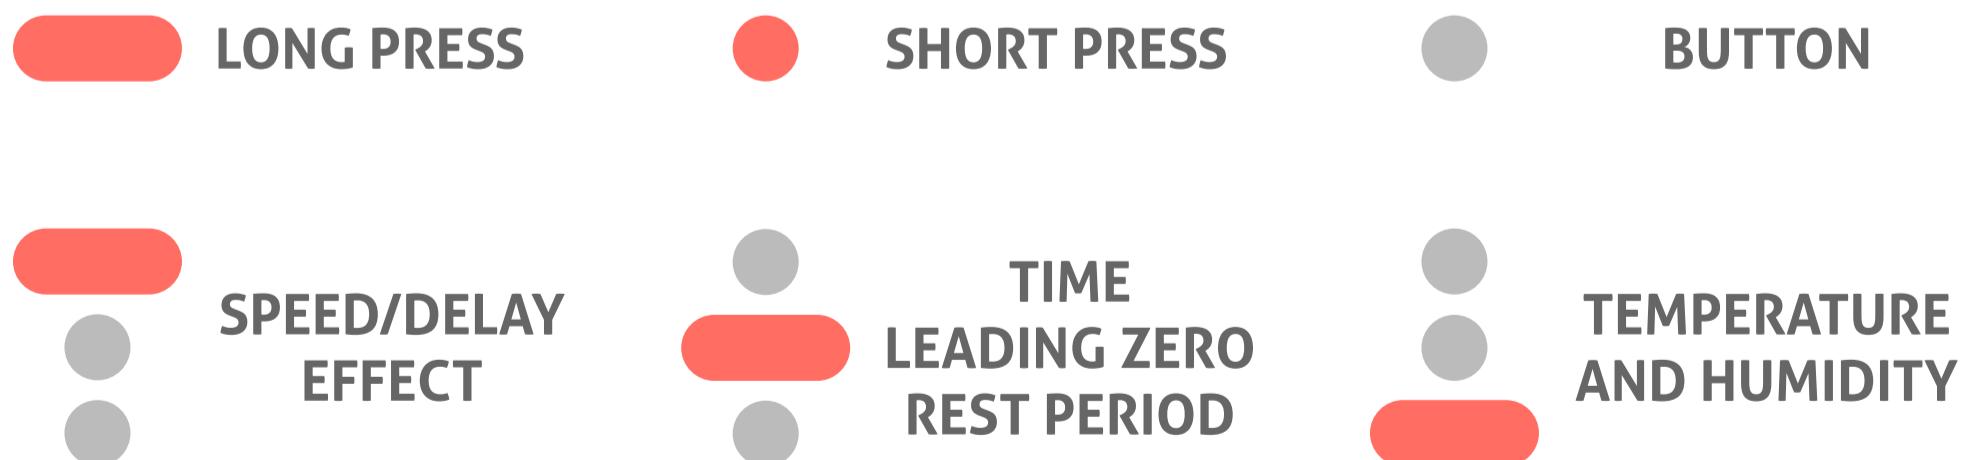


FLIP^o.io

SPEED/DELAY EFFECT


LONG PRESS TOP BUTTON TO ENTER SPEED/DELAY EFFECT SETTINGS

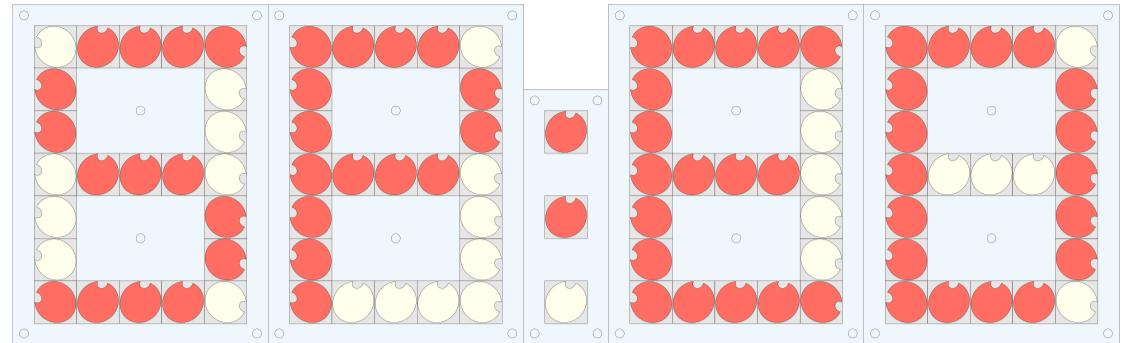

SHORT PRESS TOP/BOTTOM BUTTON TO CHOOSE SPEED/Delay VALUE

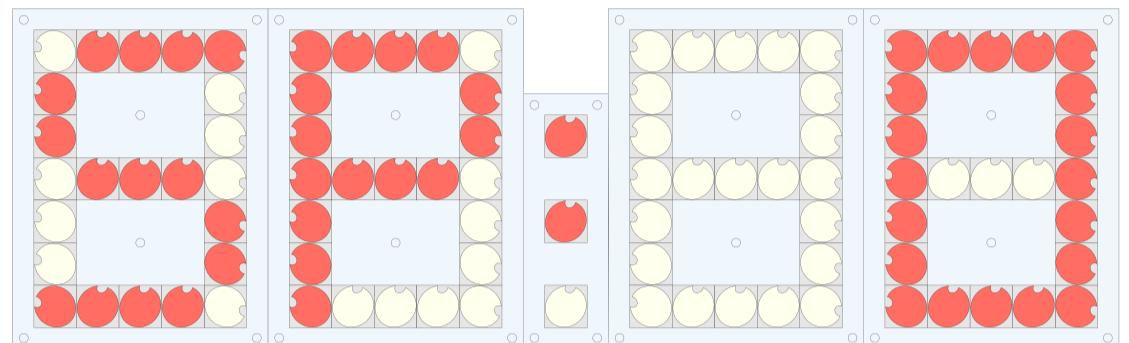

LONG PRESS MIDDLE BUTTON TO SAVE SETTINGS AND EXIT

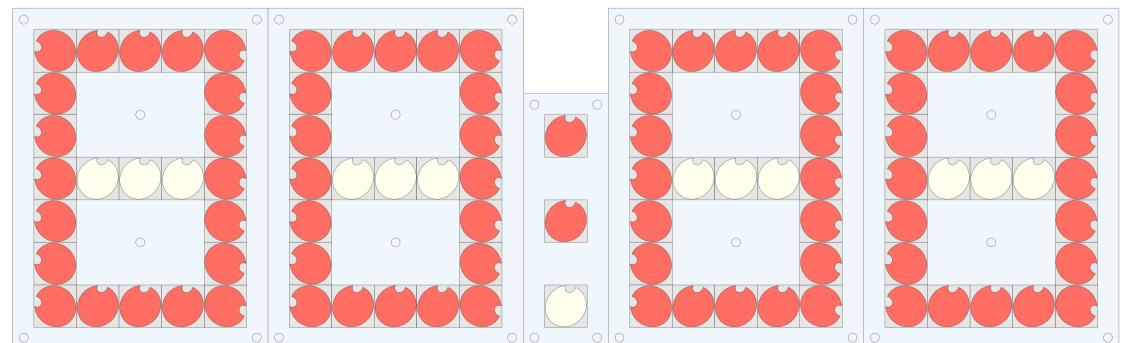


TIME SETTINGS 1/4



LONG PRESS MIDDLE BUTTON
TO ENTER TIME SETTINGS



TIME FORMAT 12/24 HOUR

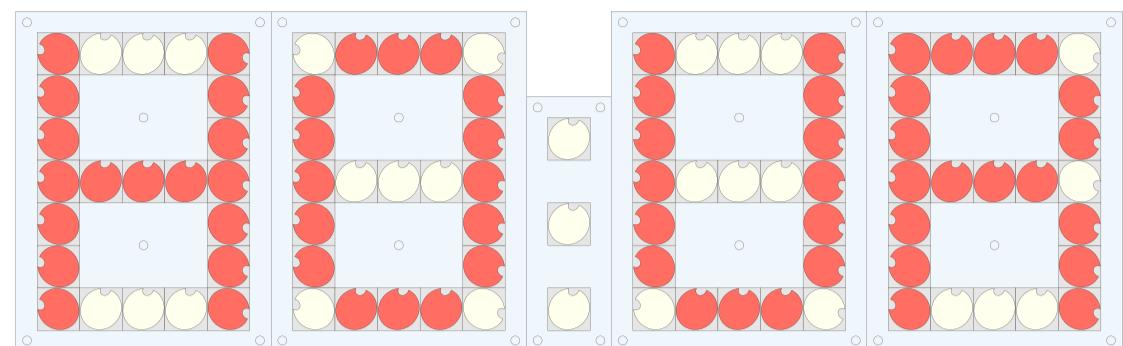


SHORT PRESS TOP/BOTTOM BUTTON
TO CHOOSE HOUR FORMAT 12/24

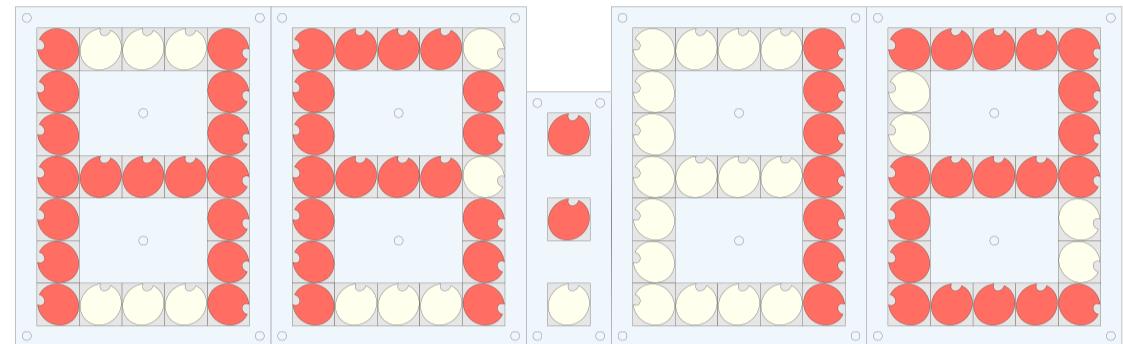



LONG PRESS MIDDLE BUTTON
TO ENTER LEADING ZERO SETTINGS



LEADING ZERO ON/OFF

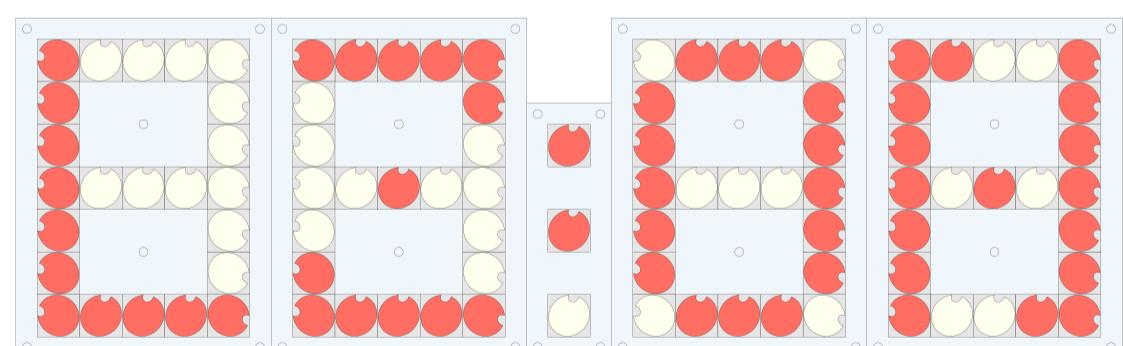

SHORT PRESS TOP/BOTTOM BUTTON
TO ON/OFF LEADING ZERO

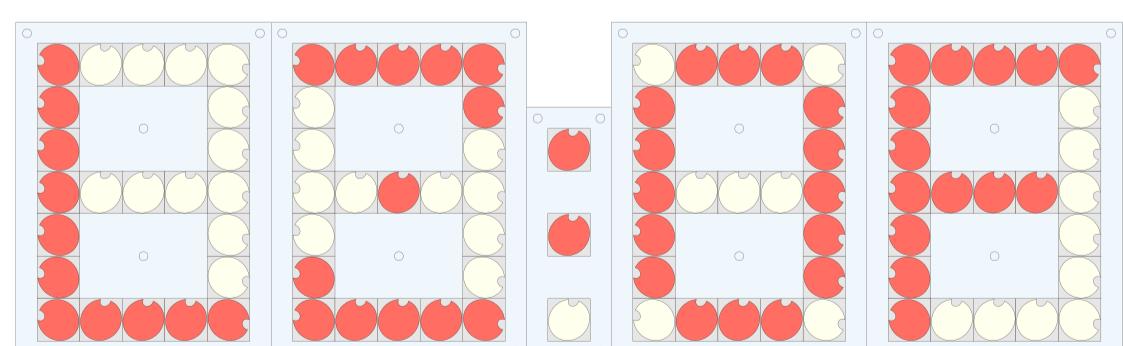


LONG PRESS MIDDLE BUTTON
TO ENTER TIME SETTINGS



TIME SETTINGS 2/4

TIME HH:MM

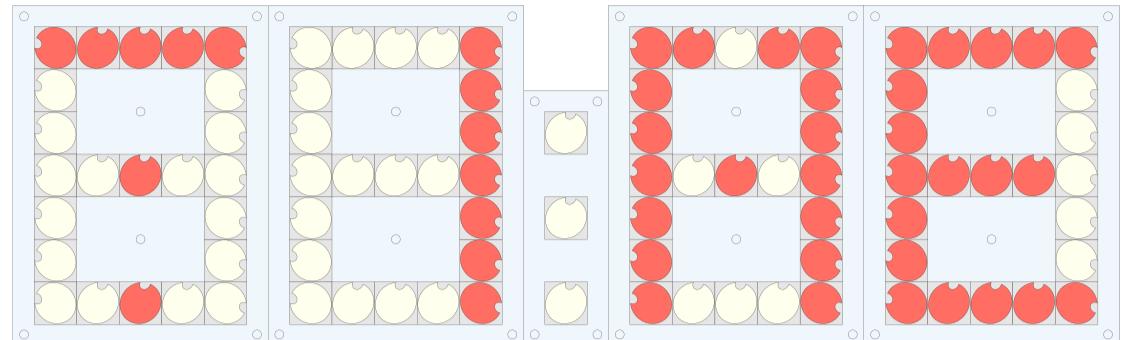

SHORT PRESS TOP/BOTTOM BUTTON TO SET DIGITS



LONG PRESS MIDDLE BUTTON TO MOVE TO NEXT DIGIT



LONG PRESS MIDDLE BUTTON TO ENTER REST PERIOD SETTINGS OR TIME FORMAT AM/PM SETTINGS FOR 12 HOUR TIME





SHORT PRESS TOP/BOTTOM BUTTON TO SET AM/PM TIME FORMAT



LONG PRESS MIDDLE BUTTON TO ENTER REST PERIOD SETTINGS




12 HOUR TIME FORMAT AM/PM

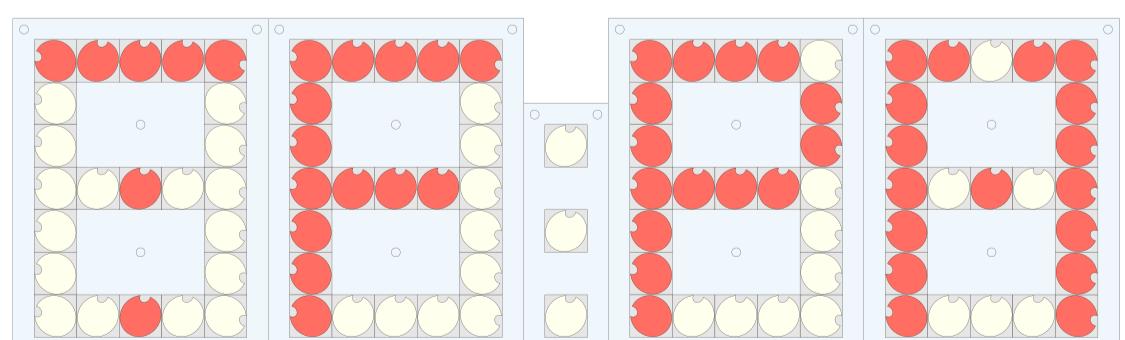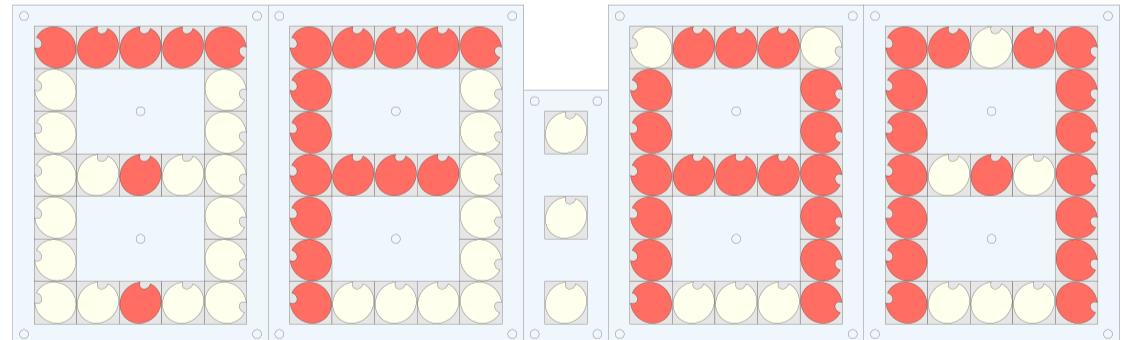

TIME SETTINGS 3/4

REST PERIOD ON/OFF

SHORT PRESS TOP/BOTTOM BUTTON TO ON/OFF REST PERIOD

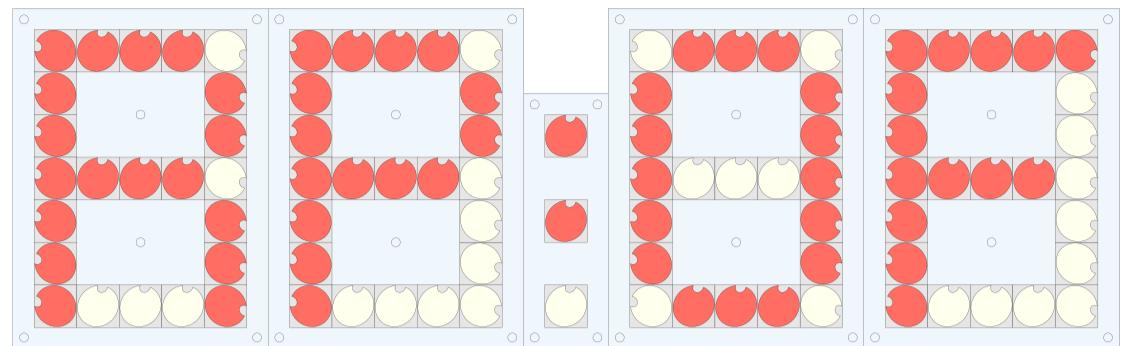

LONG PRESS MIDDLE BUTTON
IF ON ENTER SLEEP HOUR SETTINGS
IF OFF EXIT SETTINGS



SHORT PRESS TOP/BOTTOM BUTTON TO SET SLEEP HOUR




LONG PRESS MIDDLE BUTTON
TO ENTER WAKE HOUR SETTINGS
OR HOUR FORMAT AM/PM SETTINGS
FOR 12 HOUR TIME



SHORT PRESS TOP/BOTTOM BUTTON TO SET AM/PM SLEEP HOUR FORMAT




SLEEP HOUR

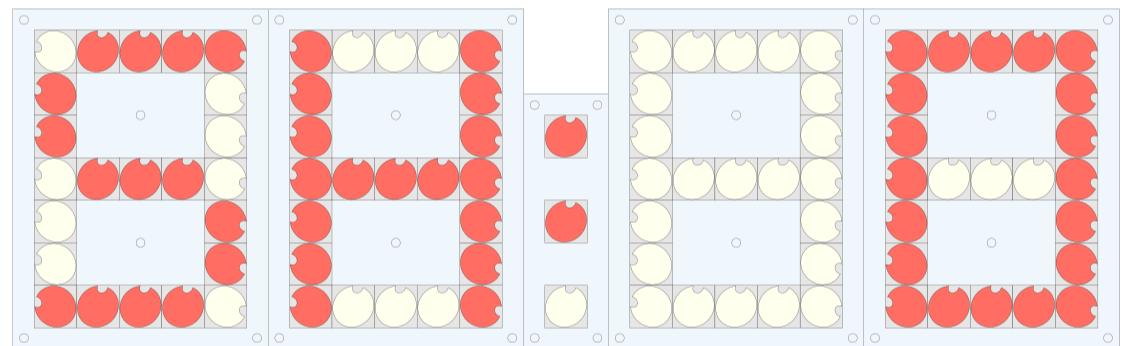

12 HOUR TIME FORMAT AM/PM

LONG PRESS MIDDLE BUTTON
TO ENTER WAKE HOUR SETTINGS

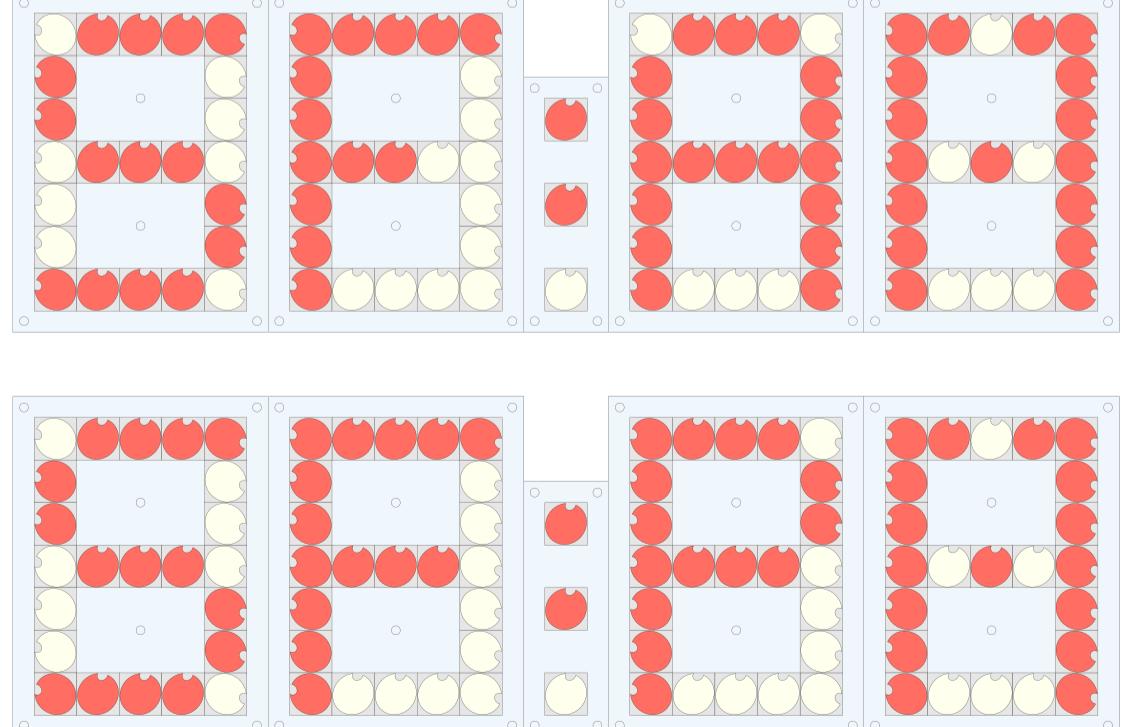

TIME SETTINGS 4/4

SHORT PRESS TOP/BOTTOM BUTTON TO SET WAKE HOUR



LONG PRESS MIDDLE BUTTON TO EXIT SETTINGS OR TO ENTER HOUR FORMAT AM/PM SETTINGS FOR 12 HOUR TIME



SHORT PRESS TOP/BOTTOM BUTTON TO SET AM/PM WAKE HOUR FORMAT




LONG PRESS MIDDLE BUTTON TO EXIT SETTINGS







LONG PRESS MIDDLE BUTTON TO SAVE SETTINGS AND EXIT



WAKE HOUR

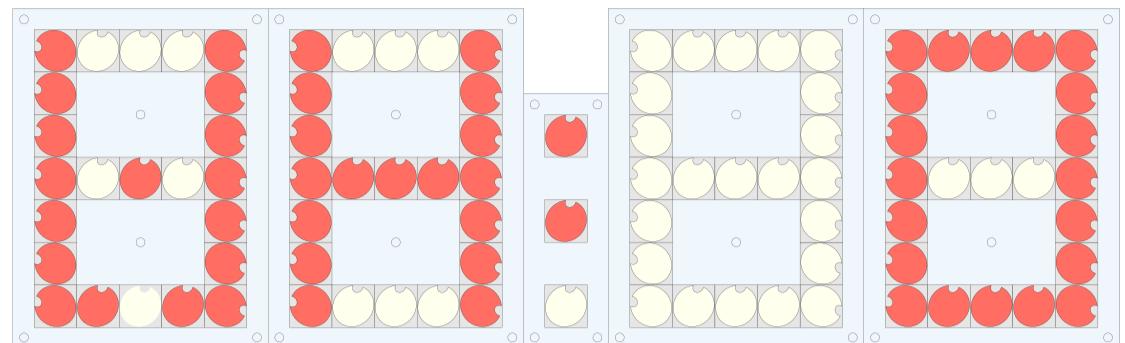


12 HOUR TIME FORMAT AM/PM

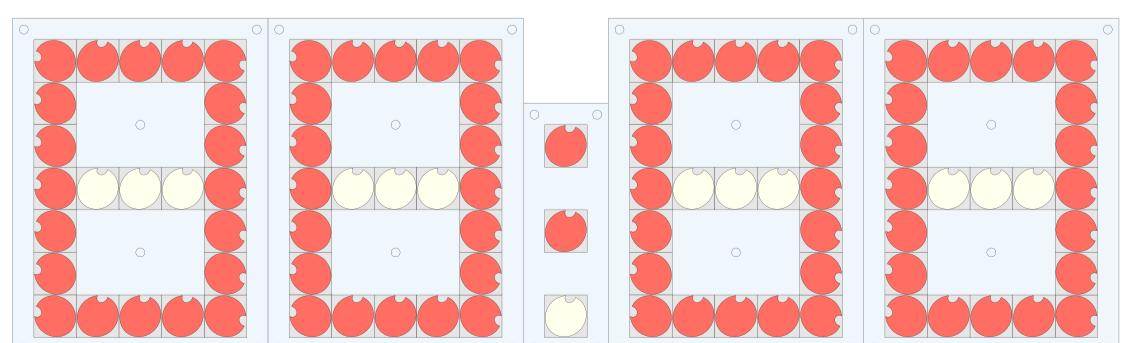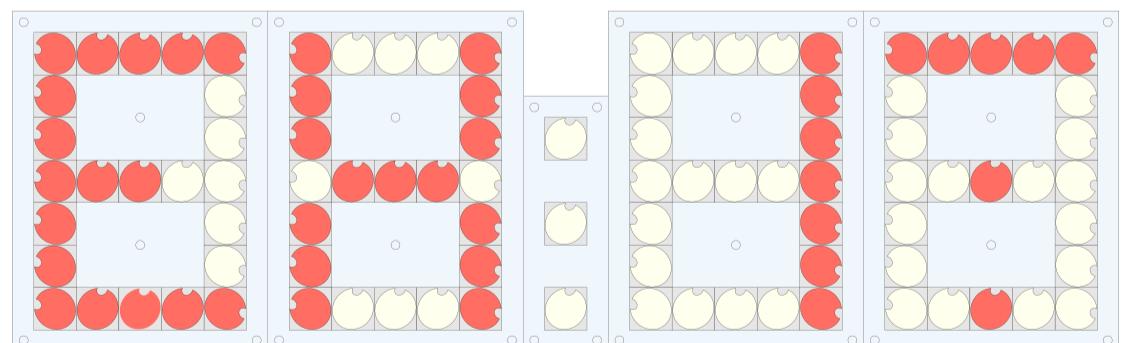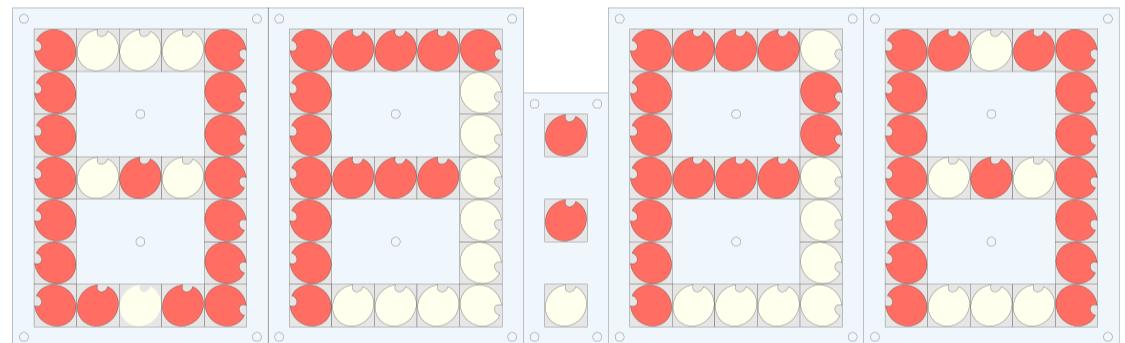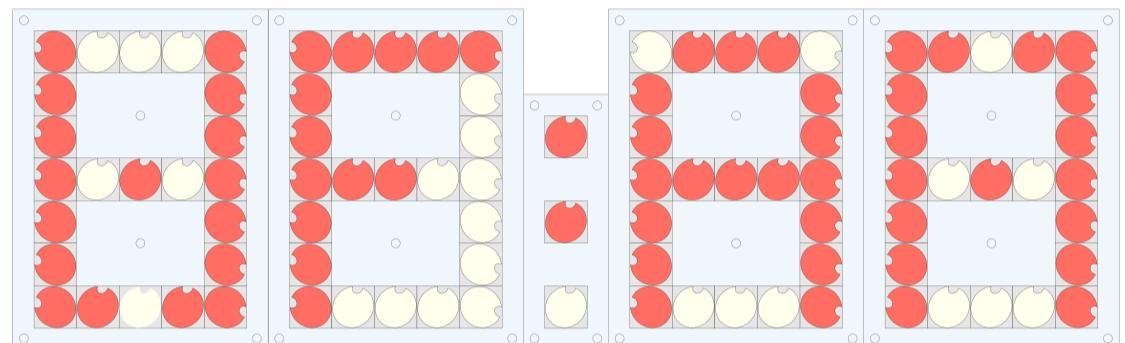


TEMP/HUM SETTINGS 1/2


LONG PRESS MIDDLE BUTTON
TO ENTER TEMP/HUM SETTINGS



TEMPERATURE DISPLAY ON/OFF

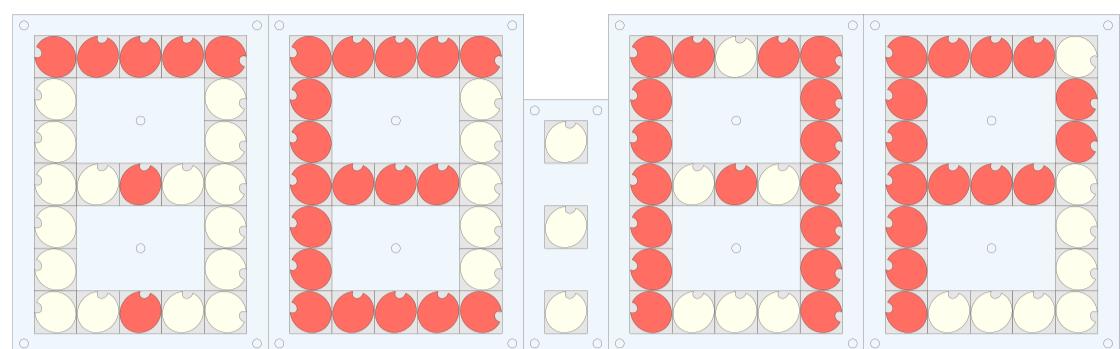


SHORT PRESS TOP/BOTTOM BUTTON
TO ON/OFF TEMPERATURE DISPLAY

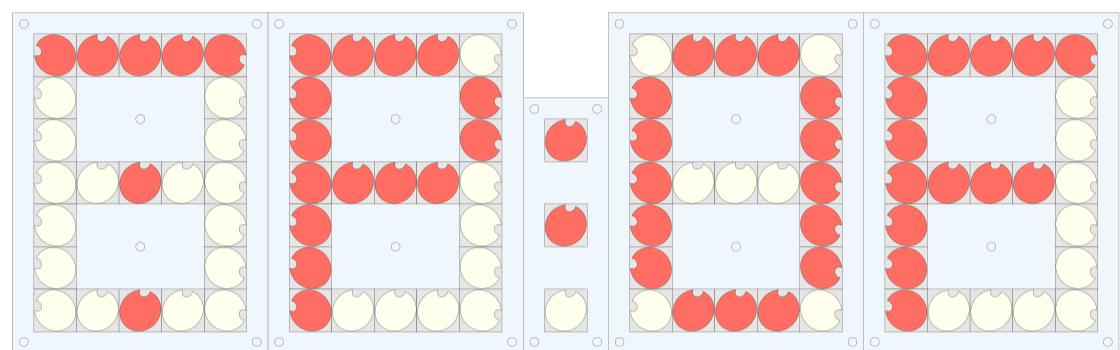


LONG PRESS MIDDLE BUTTON
IF ON ENTER TEMPERATURE
DEGREES SETTINGS OR
IF OFF HUMIDITY SETTINGS



TEMPERATURE DEGREES °F/°C

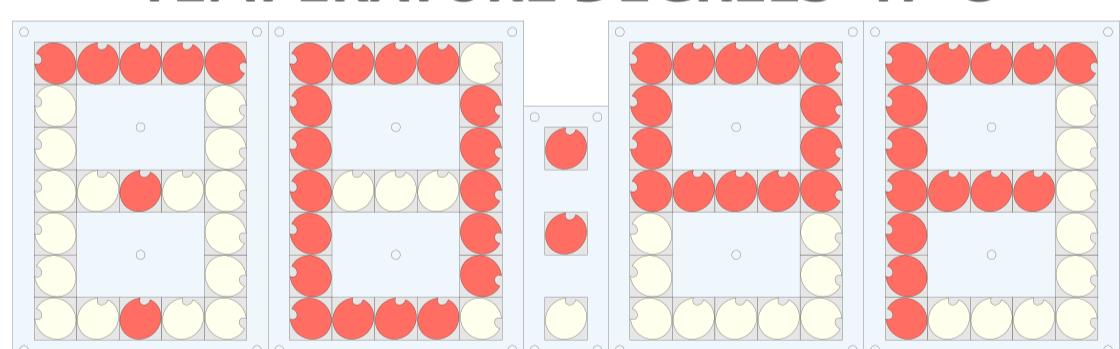

SHORT PRESS TOP/BOTTOM BUTTON
TO SET TEMPERATURE DEGREES

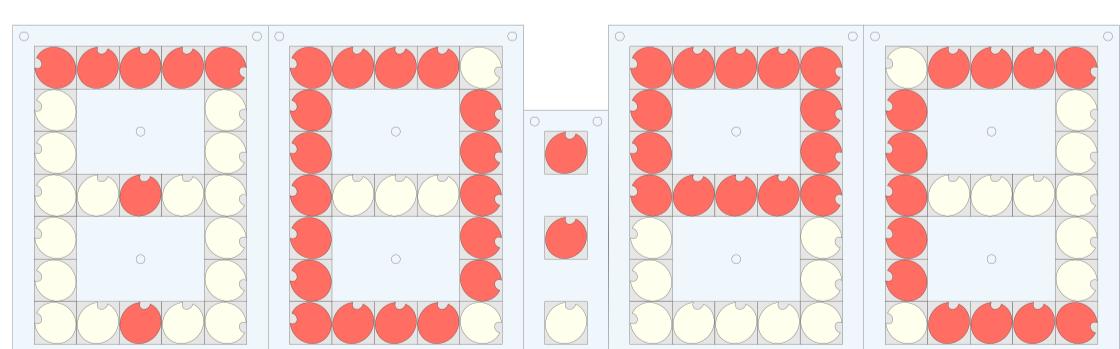



LONG PRESS MIDDLE BUTTON TO
ENTER HUMIDITY DISPLAY SETTINGS



TEMP/HUM SETTINGS 2/2

HUMIDITY DISPLAY ON/OFF

SHORT PRESS TOP/BOTTOM BUTTON
TO ON/OFF HUMIDITY DISPLAY

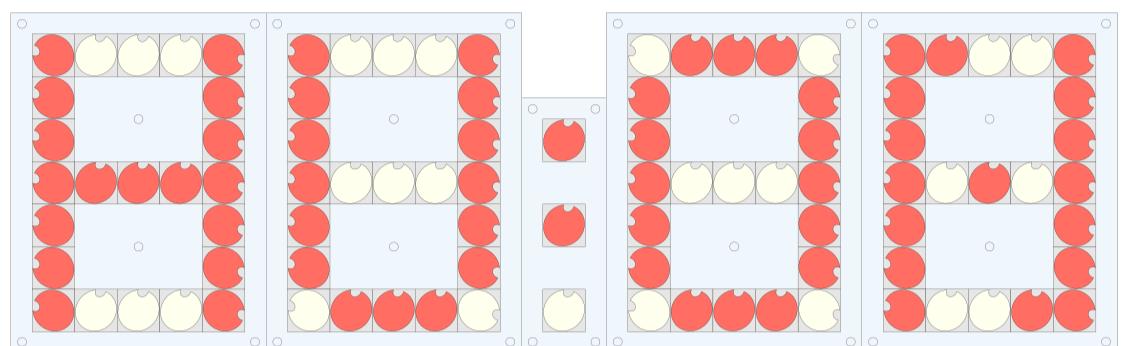
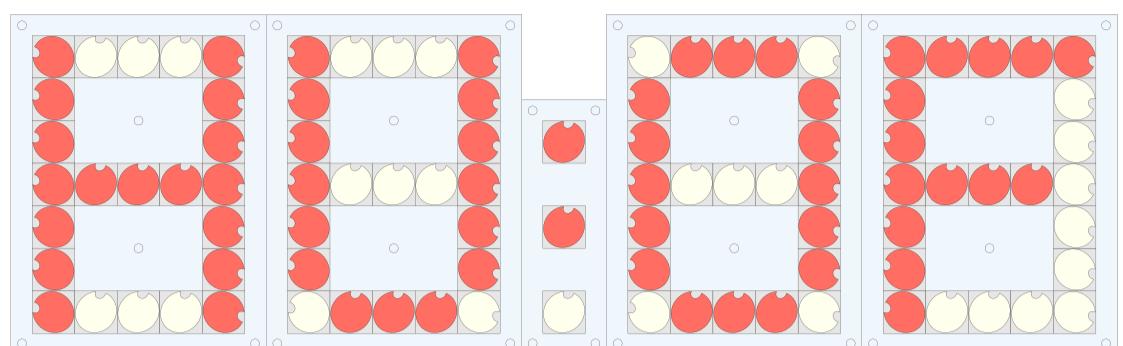


LONG PRESS MIDDLE BUTTON
IF TEMP OR HUM **ON** ENTER
DISPLAY FREQUENCY SETTINGS
IF TEMP AND HUM **OFF** EXIT



DISPLAY FREQUENCY 60/30 SECONDS

SHORT PRESS TOP/BOTTOM BUTTON
TO SET TEMPERATURE OR/AND
HUMIDITY DISPLAY FREQUENCY

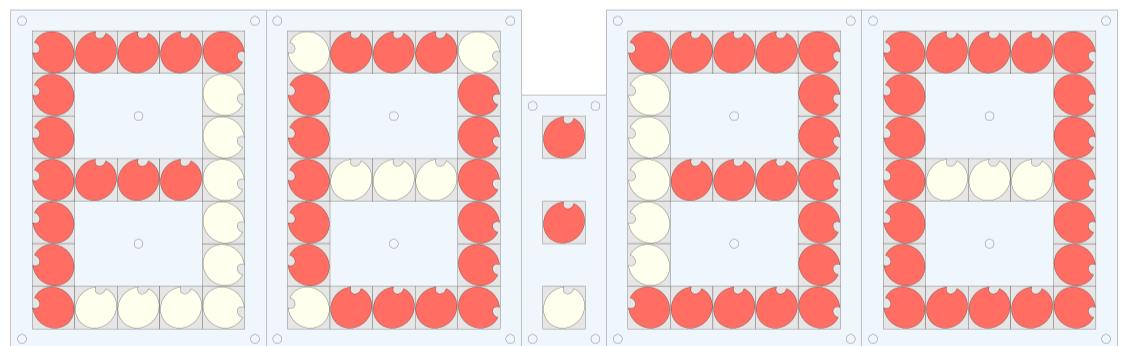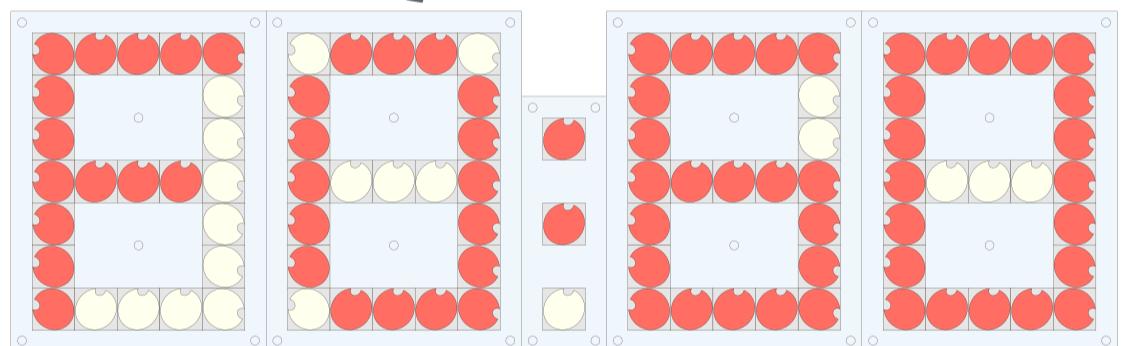

LONG PRESS MIDDLE BUTTON
TO EXIT SETTINGS

