


Outline

It is possible to export data to PC through network directly in MR-6000. The setup step for export is described below.


Creation of common folder in PC

Set the folder for receiving export data to the common folder.

1. Open the control panel and click "Network and Sharing Center".

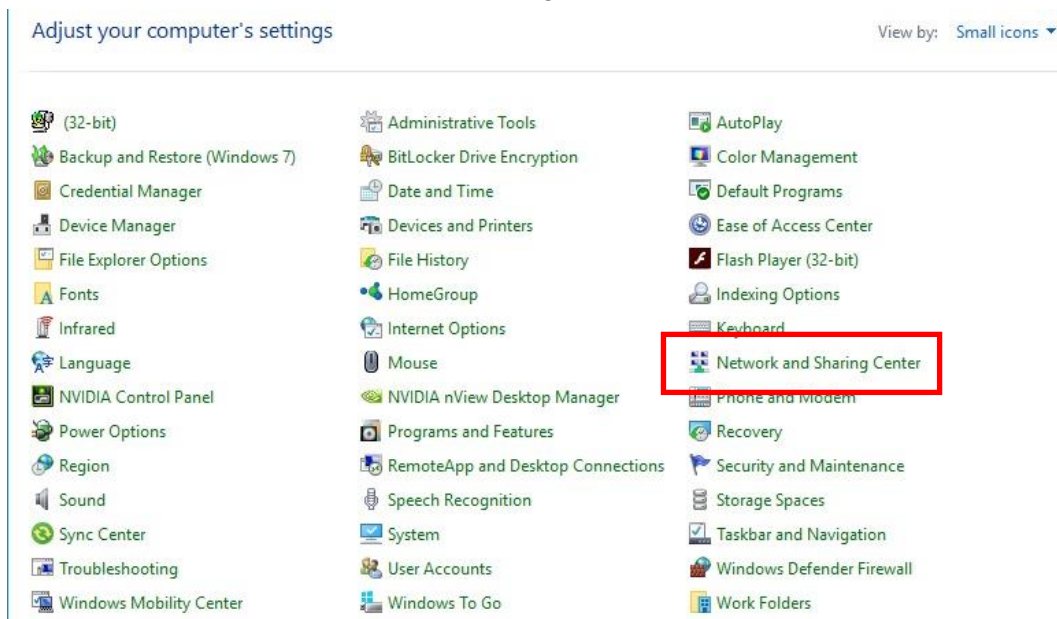


2. Click "Change advanced sharing settings"


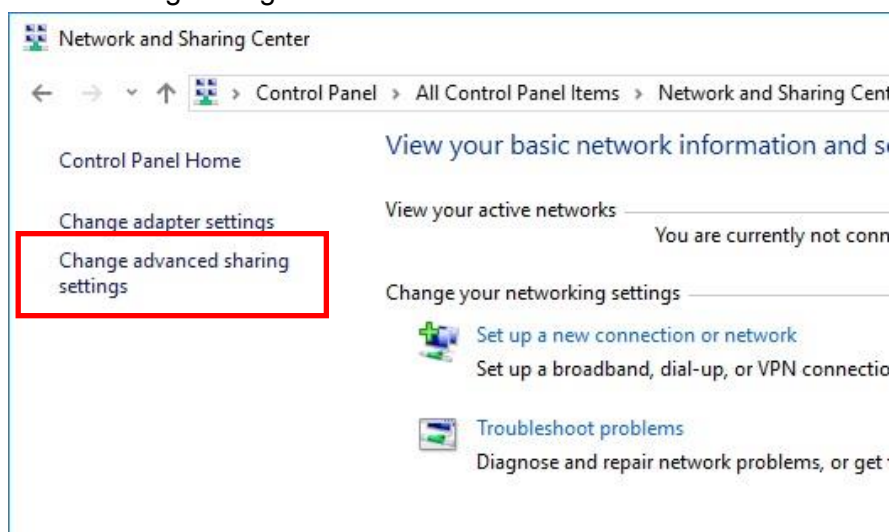


MR-6000 Export procedure(ver.0F)

3. Set the network profile according to user network (below is example of Public network). Select “Turn on network discovery” and click “Save changes”.

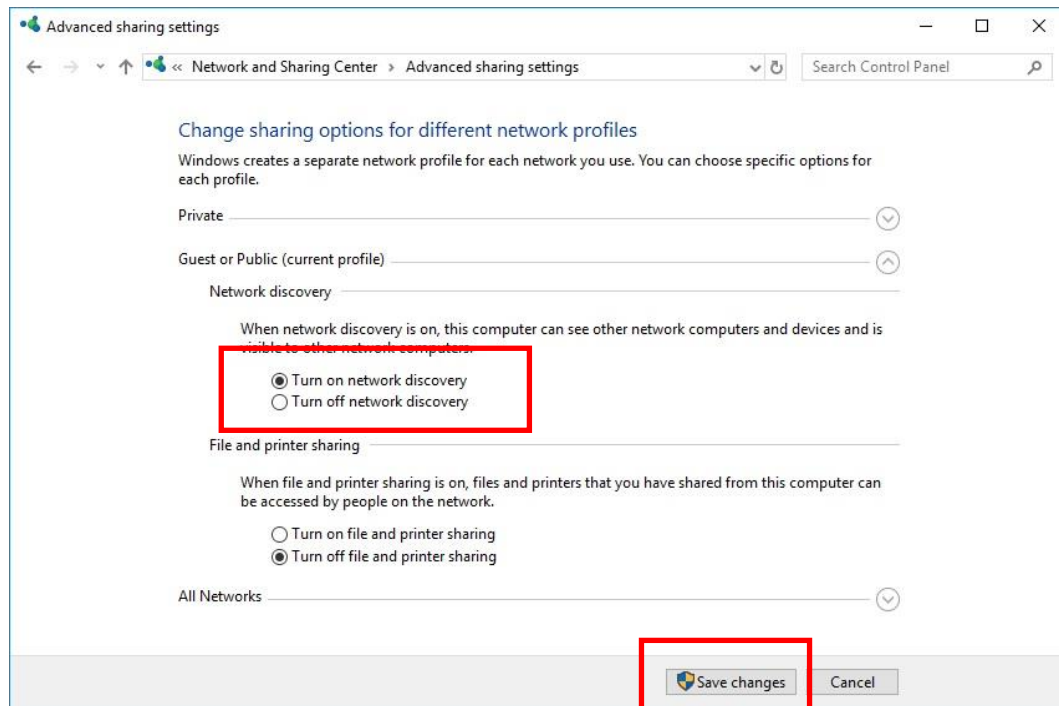


4. Share the folder for export. Right click the folder, select “Properties” and click “Sharing”. Click “Advanced Sharing”.

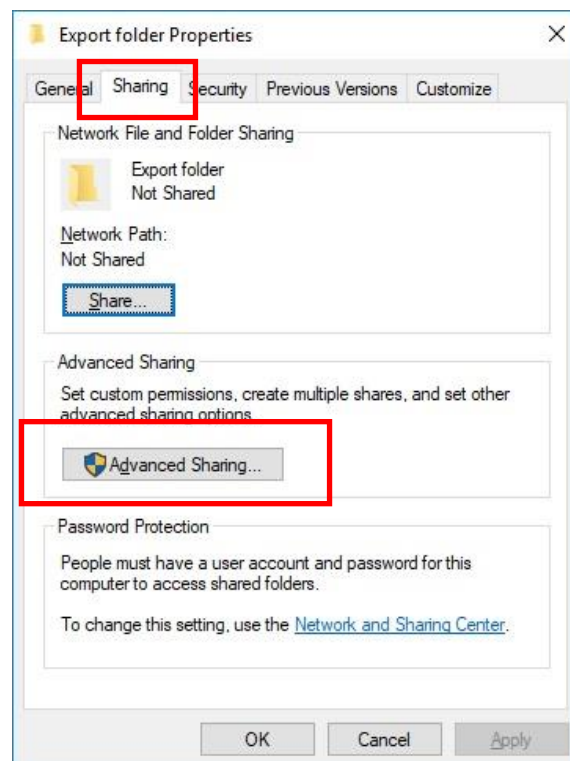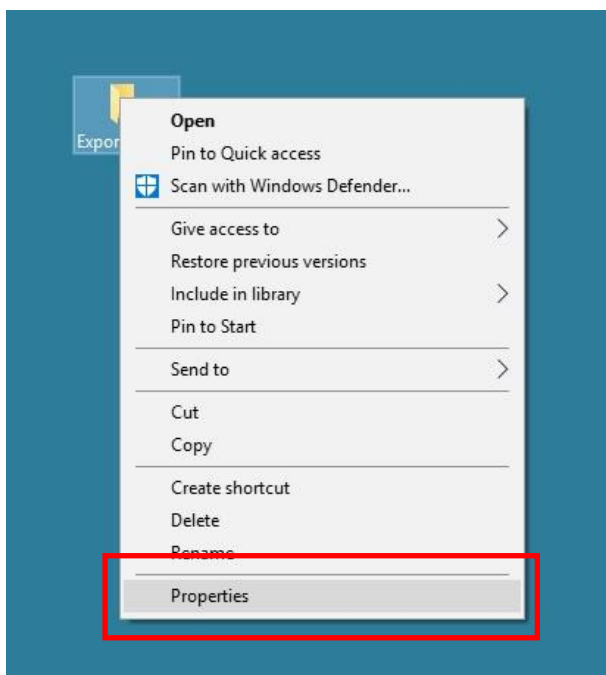


MR-6000 Export procedure(ver.0F)

5. Check "Share this folder" and click "Permissions".

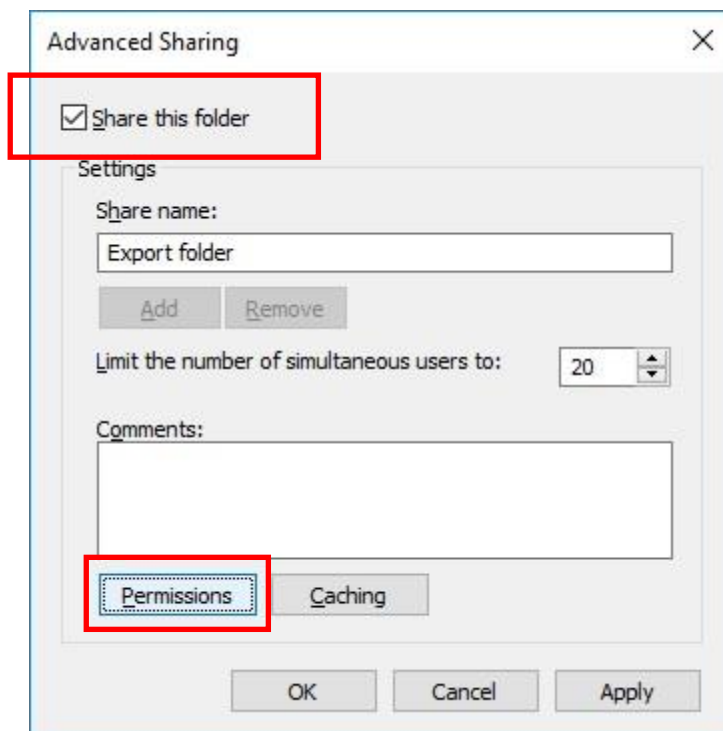

6. Select "Everyone", check "Full Control" and click "OK".
Click "OK" in Advanced sharing screen to close it.

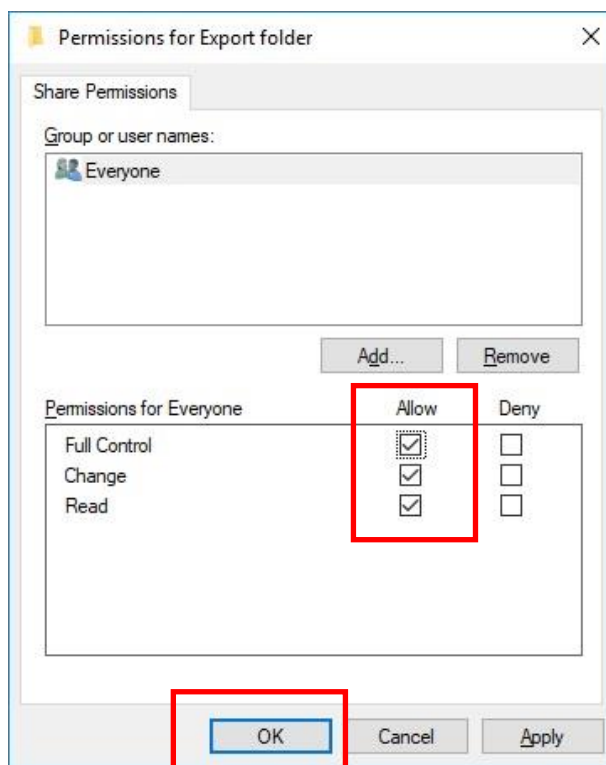


MR-6000 Export procedure(ver.0F)


Setting of IP address in PC

Setting or confirming IP address of PC is necessary for MR-6000 export setting.

1. Open the control panel and click "Network and Sharing Center".

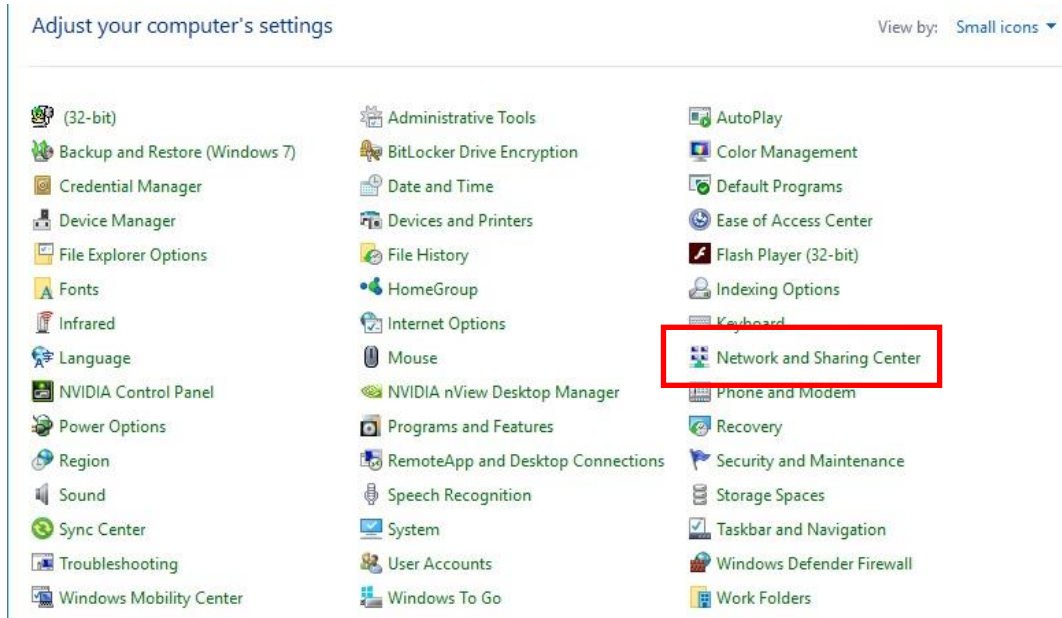


2. Click "Change adapter settings".

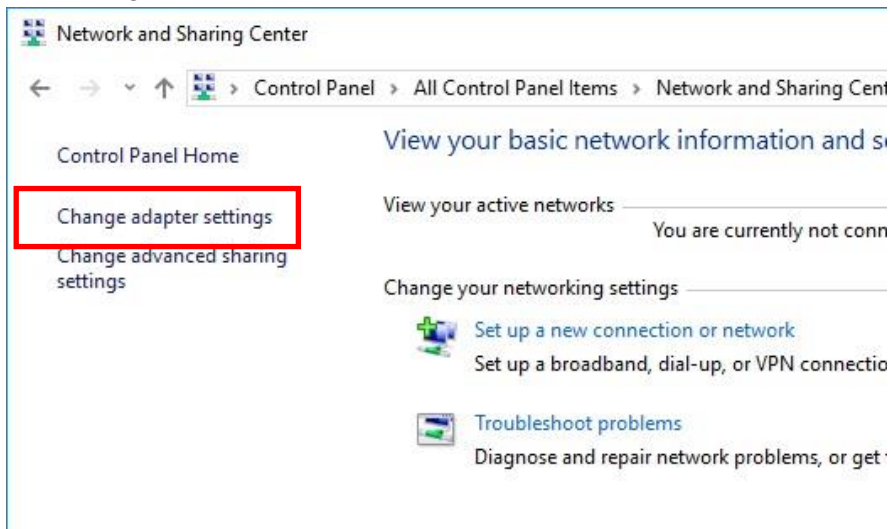


MR-6000 Export procedure(ver.0F)

3. Right click the icon for setting IP address and select "Properties".

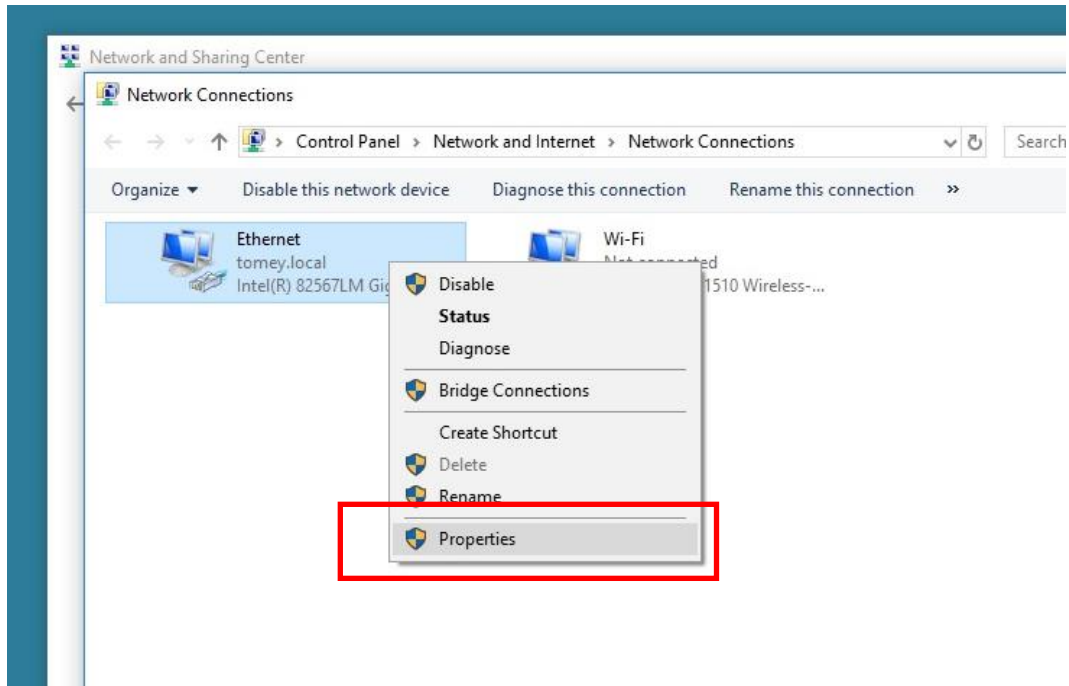


4. Select "Internet Protocol Version 4 (TCP/IPv4)" and click "Properties".

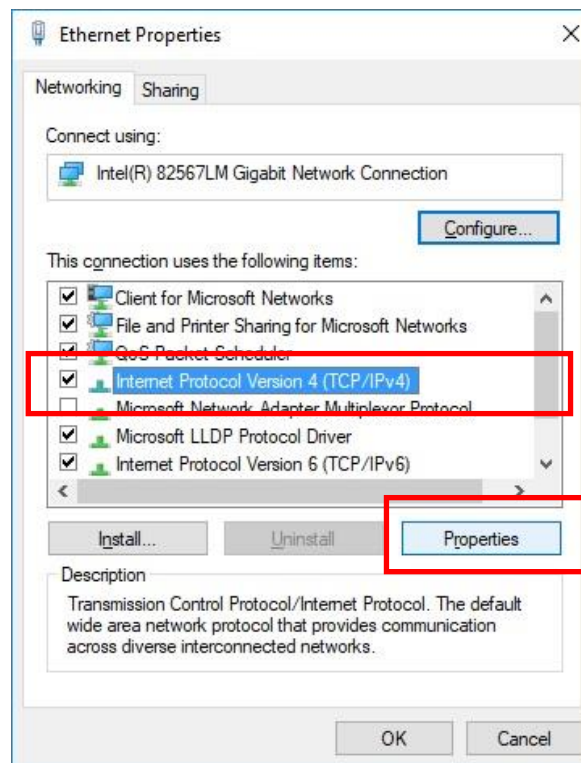

MR-6000 Export procedure(ver.0F)

5. In the case of setting IP address manually, select “Use the following IP address” and enter each item.
In the case of obtaining IP address from network, select “Obtain an IP address automatically”. Then, check the IP address by command prompt etc..

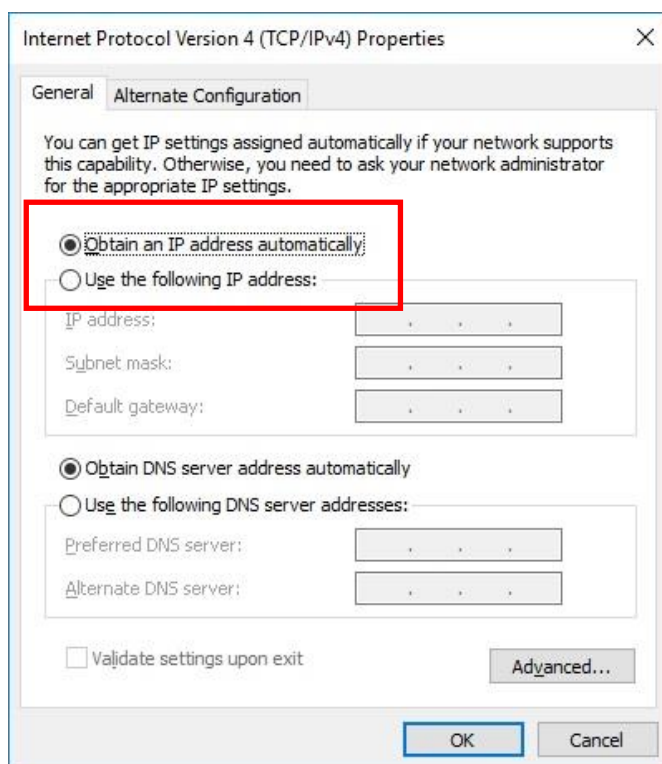

6. Close the properties screen to complete the setting.

MR-6000 Export procedure(ver.0F)

Setting of MR-6000

1. Setting of My IP Address

IP Address of MR-6000 can be set on the screen below.

Open "Connection & Print" in "System Setup" and press "Settings" of Network. Then press "Settings" of My IP Address.

The screenshot shows the 'System Setup' window with the following elements:

- System Setup** title bar with an 'Exit' button.
- Breadcrumb navigation: **Connection & Print** > **Network** > **My IP Address**.
- Left sidebar with icons and labels: **General**, **Measurement**, and **Connection & Print** (highlighted in green).
- Main content area:
 - Two tabs: **DHCP** and **Manual** (highlighted in green).
 - My IP Address**: 172 . 30 . 81 . 101
 - Sub Net Mask**: 255 . 255 . 240 . 0
 - Default Gateway**: 172 . 30 . 80 . 1
 - MAC Address**: 00-04-5F-9E-93-B3


- DHCP / Manual:
Select DHCP or Manual to set how to obtain IP address. Enter the followings when selecting.
 - My IP Address
 - Sub Net Mask
 - Default Gateway
- MAC Address:
MAC Address of the device is displayed.

MR-6000 Export procedure(ver.0F)

2. Setting of PC

Enter the information of PC which receives export data.

Open "Connection & Print" in "System Setup" and press "Settings" of Network. Then press "Settings" of PC.

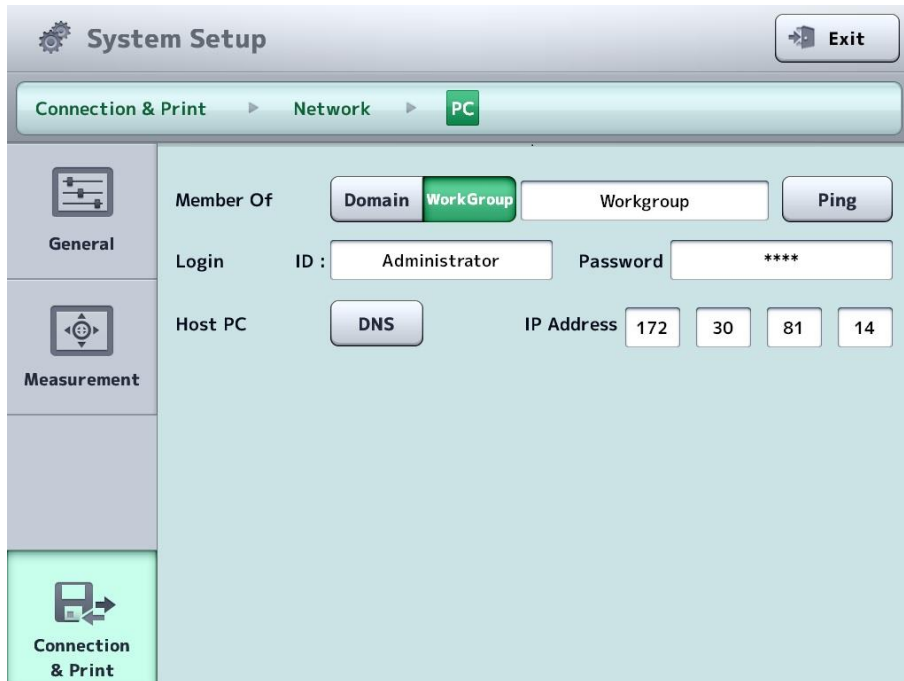

- Member of
 - Domain / Workgroup
Select whether the PC belongs to Domain or Workgroup.
** Select Workgroup because stable export cannot be done when selecting Domain in the current software version.*
- Login
 - ID
Enter user ID which enables access to the PC.
 - Password
Enter Password which enables access to the PC.
** Due to the selection of Workgroup in "Member of", set ID/Password for Workgroup.*
- Host PC
 - DNS
When applying PC name, press "DNS" for activation and enter the PC name. When applying IP address, enter IP address with no activated "DNS".
** DNS setting may not work well IP address entry is recommended.*


MR-6000 Export procedure(ver.0F)

- Ping

Communication test between MR-6000 and PC is executed. It is the same function as Ping in the command prompt of Windows. The test can be done after only entering IP address.

**In case of selecting DNS and entering PC name, Ping error sometimes occurs. IP address entry is recommended.*

Confirmation screen is shown as below when successful. Error screen is shown when failure.

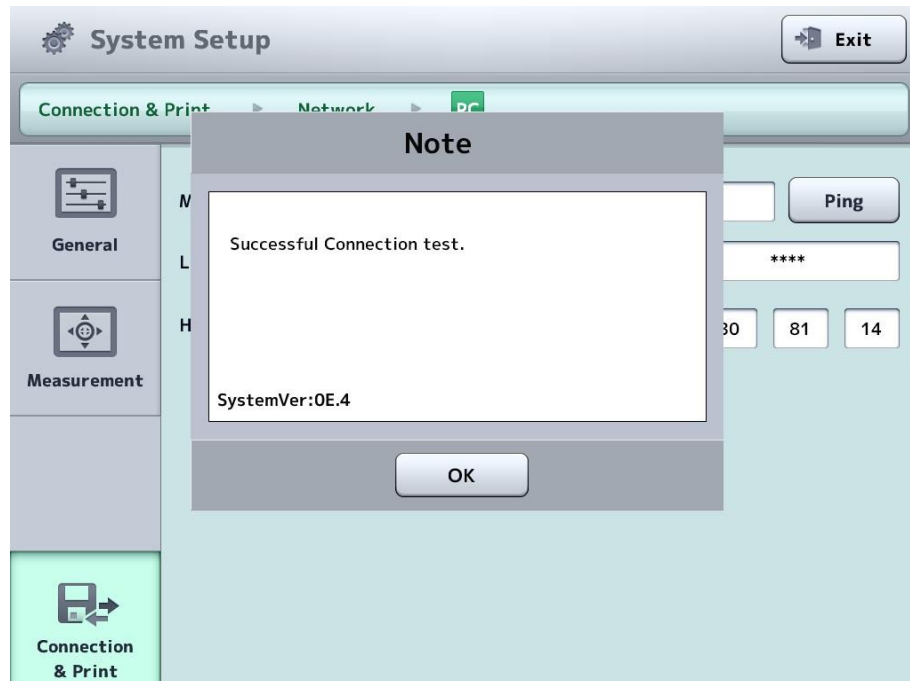

Note :


- ✧ A successful Ping test does not automatically register an ID and password into Windows Credential. However, the Ping test is likely to be successful even if the address field is blank. The information may be recorded somewhere in windows or previous address may be used when the address field is blank.

MR-6000 Export procedure(ver.0F)

3. Setting of Export Drive Select

Set the folder path of the PC.

Open "Connection & Print" in "System Setup" and press "Drive Select" of Export.

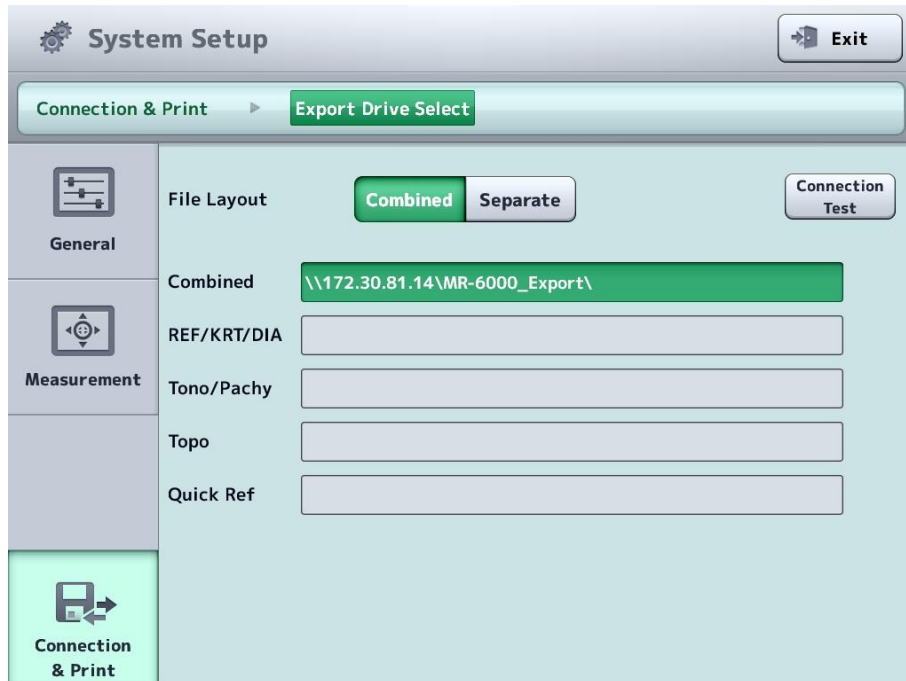

- File Layout

➤ Combined / Separate

Select whether export file is combined in one file or separated with each measurement.。

➤ Folder path

Set the folder path for each measurement. Enter full-path which includes IP address and PC name and put "¥" at the end.


* No fields for Dry eye because its export function has not been implemented.

MR-6000 Export procedure(ver.0F)


- Connection Test

Do test if data can be sent to the designated folder.

The indicator is shown as below during data transfer. Test is canceled if “cancel” button pressed.

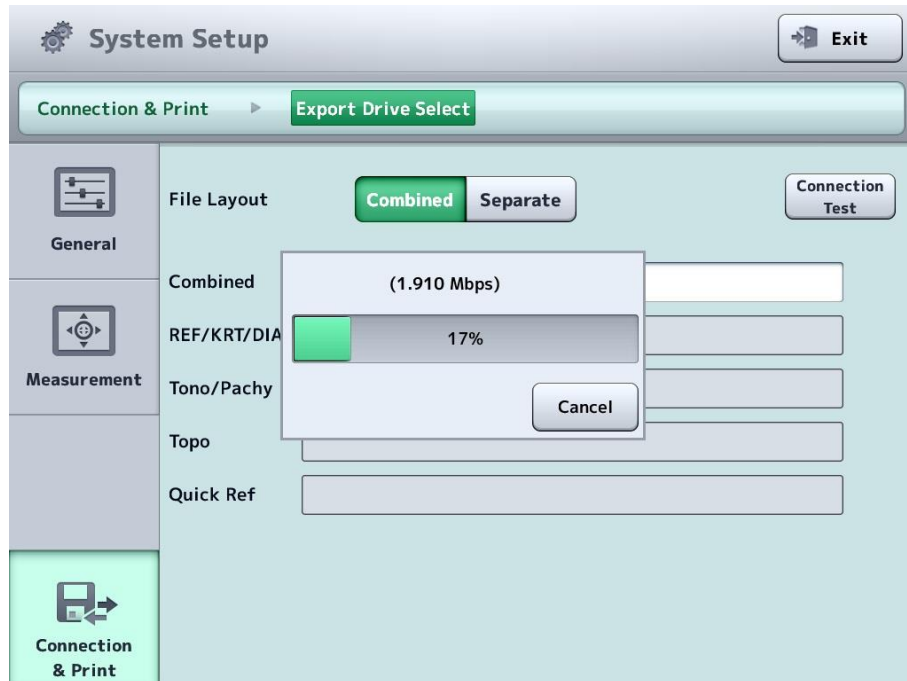


Confirmation screen is shown as below when successful. Error screen is shown when failure.

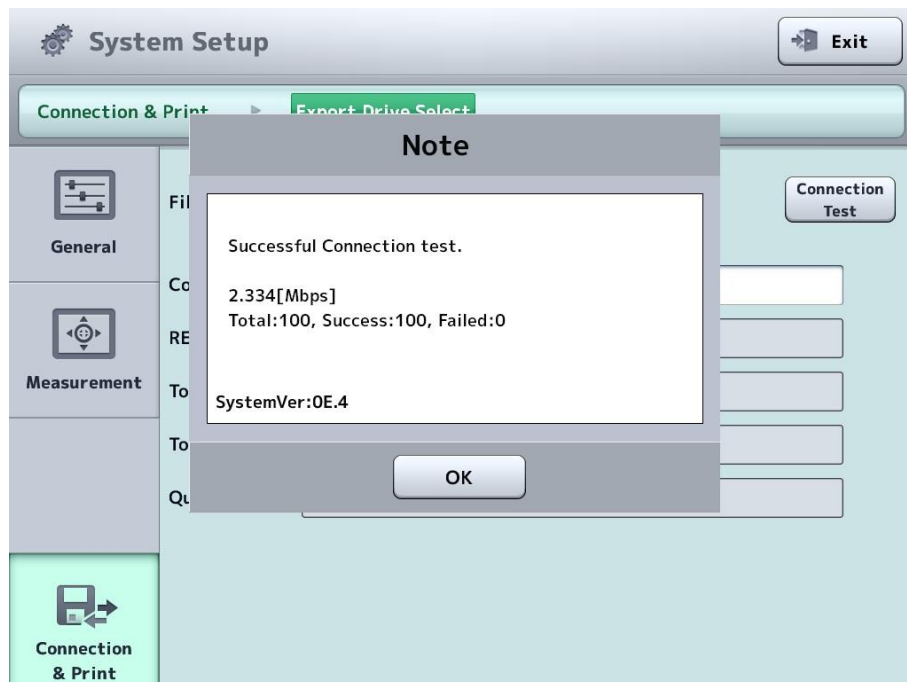

MR-6000 Export procedure(ver.0F)

Note:

- ✧ Connection test can be done even if no checks on Export File Format screen (later mentioned).
- ✧ After the test is successful once, ID, password and IP address is saved in Credential information in Windows Control panel. A Connection test is successful even if these parameters are blank in each field.

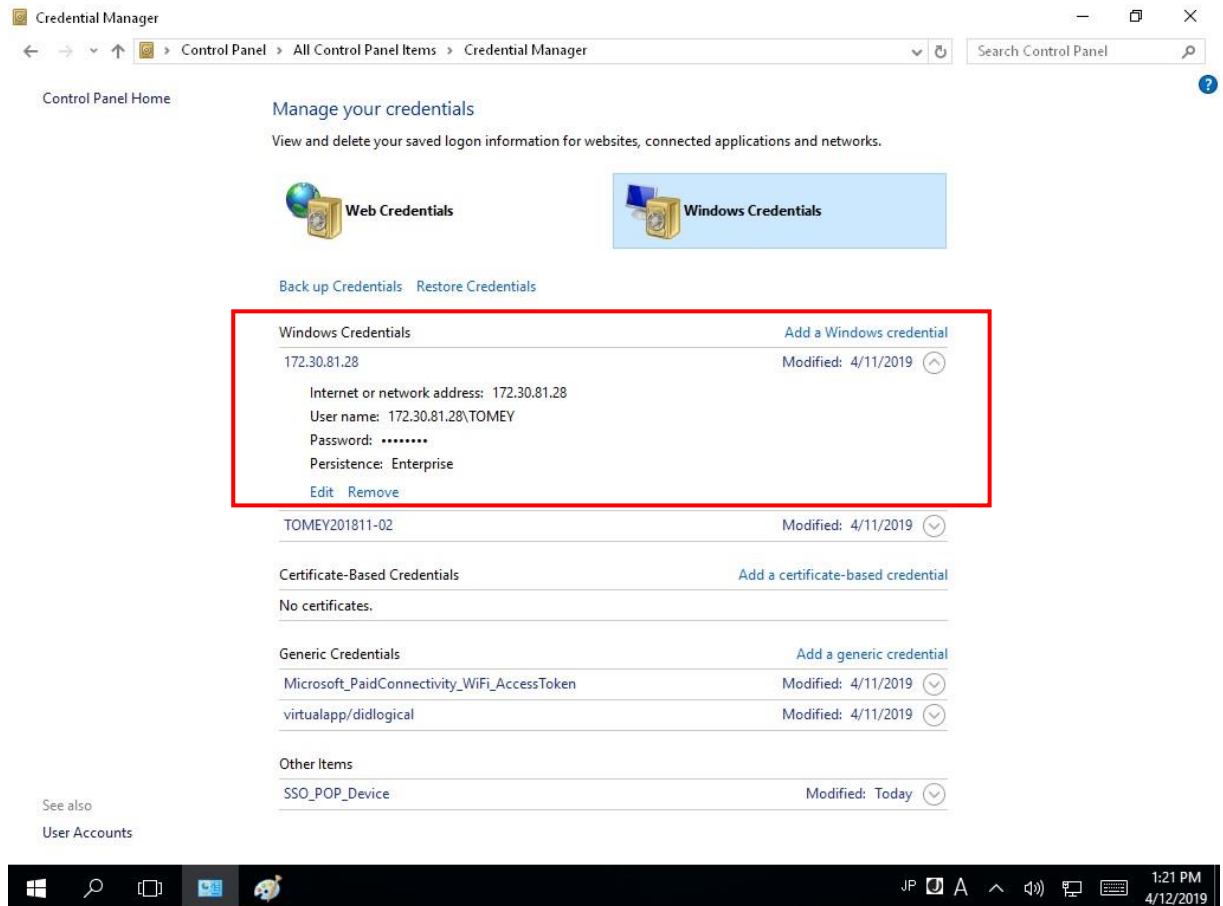


- ✧ If removing information by clicking “Remove” in Credential manager, ID, password and IP address need reentering in the MR-6000 System setup screen.

MR-6000 Export procedure(ver.0F)

4. Setting of Export File Format

Set the format for export files.

Open "Connection & Print" of "System Setup" and press "File Format" of Export.

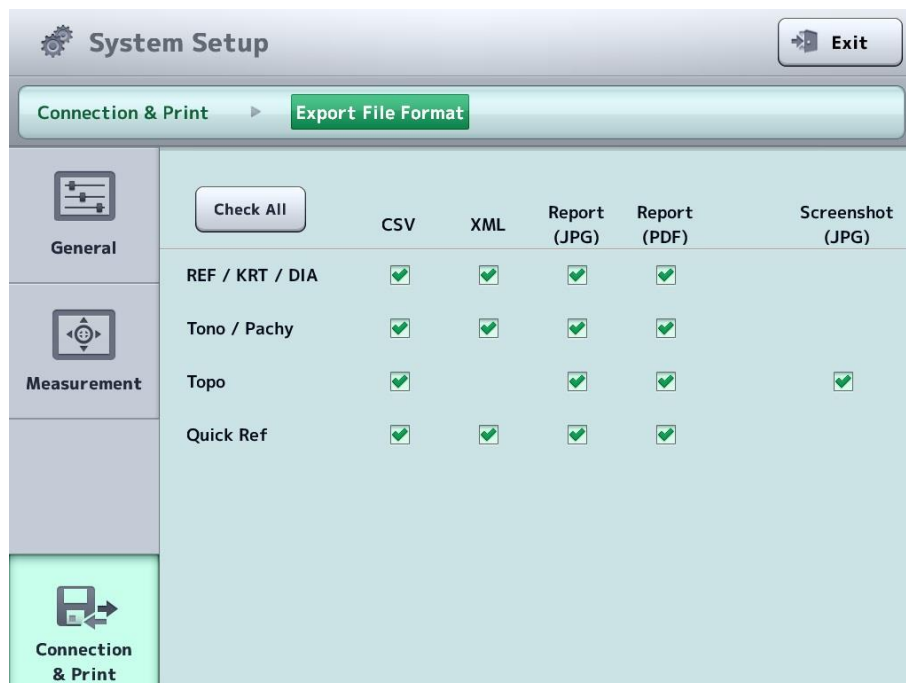

Select the export format of each measurement in checkbox. Multiple selection is possible.

If no checkboxes are selected, an error message will appear when the Export button in Measurement / View screen is pressed.

- Check All


When pressed, all checkboxes will be marked.

MR-6000 Export procedure(ver.0F)


5. Setting of Wireless LAN

Stable communication may not work well in Wireless LAN in the current software version. Using Wireless is not recommended although the setting is described below.

Open "Connection & Print" of "System Setup" and press "Network".

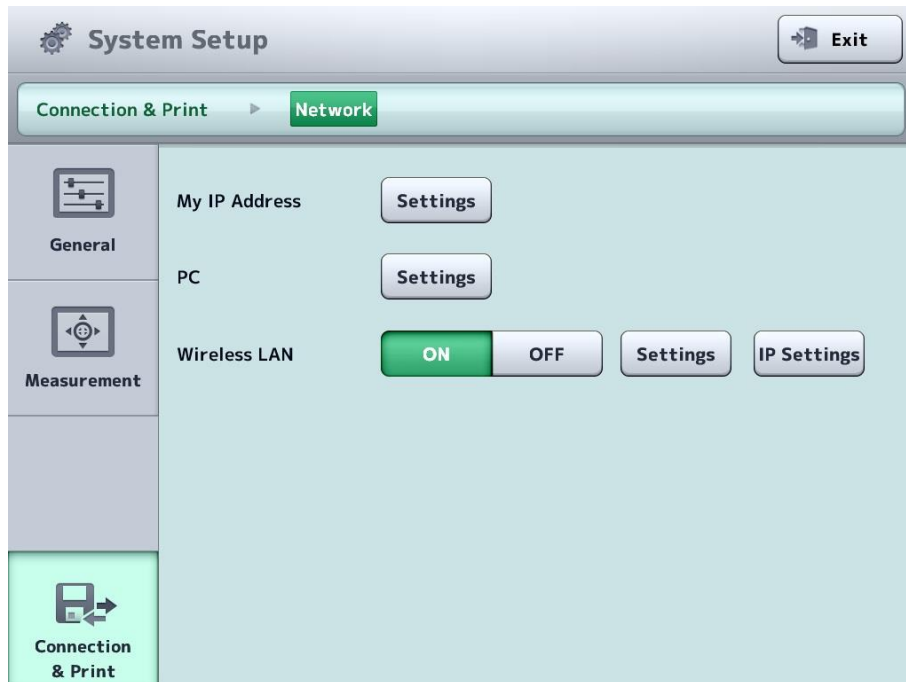


- Wireless LAN
Select "ON" or "OFF". When selecting "OFF", entry cannot be performed in the Setting screen.
- Settings
Select "ON" and press "Settings", then the following screen appear.

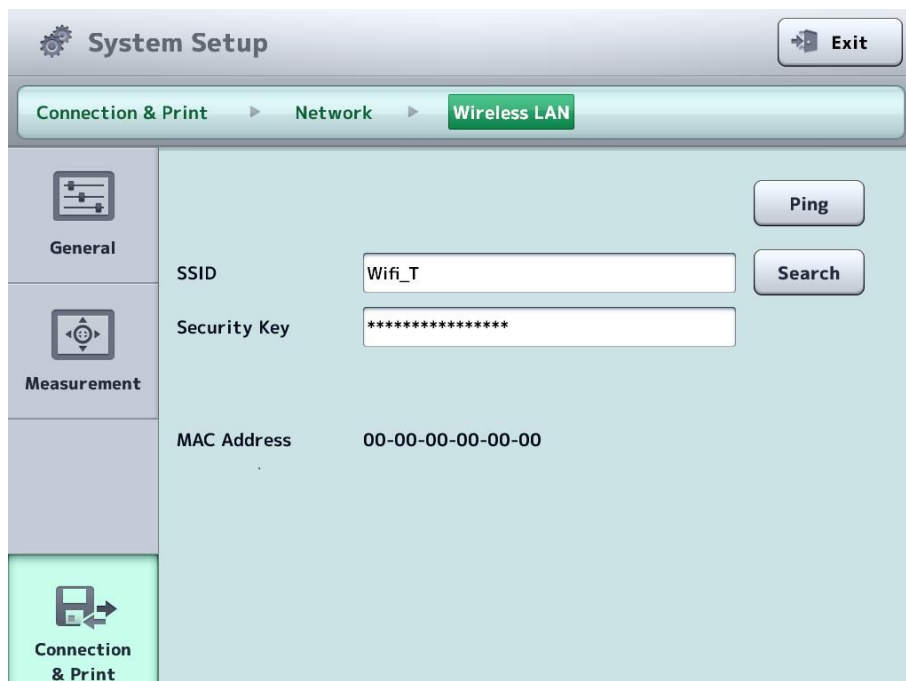

MR-6000 Export procedure(ver.0F)

➤ Search

Start searching for access points. After searching, the screen below appears. Make a selection and press "OK" button, then the access point is entered into the SSID field.

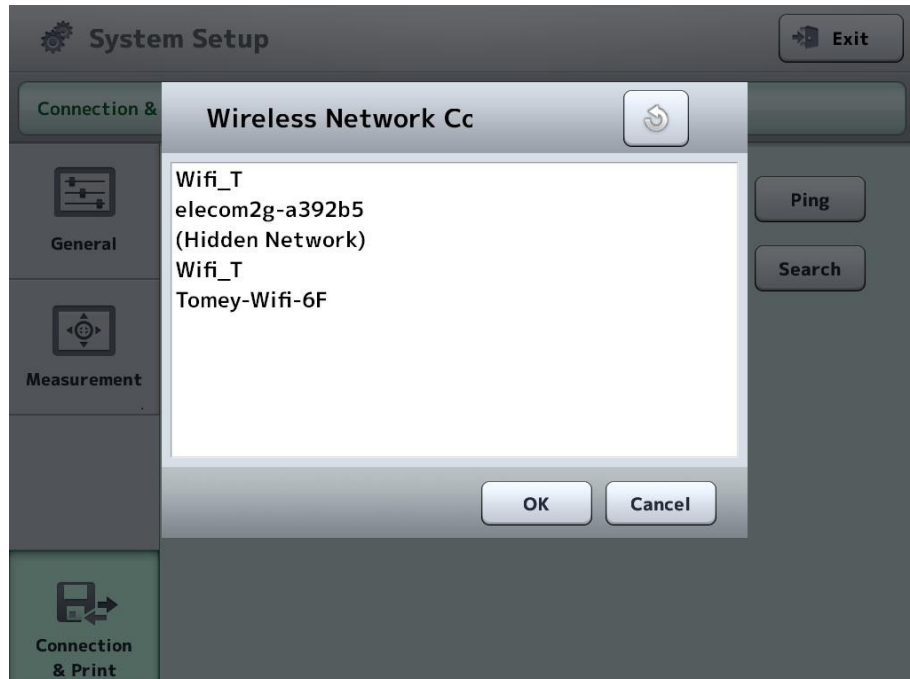


➤ Ping

Communication to the PC set in "PC" screen is executed.

*There is a possibility Ping test may not be successful (see IP Settings below).

- IP Settings

Set My IP of Wireless LAN.

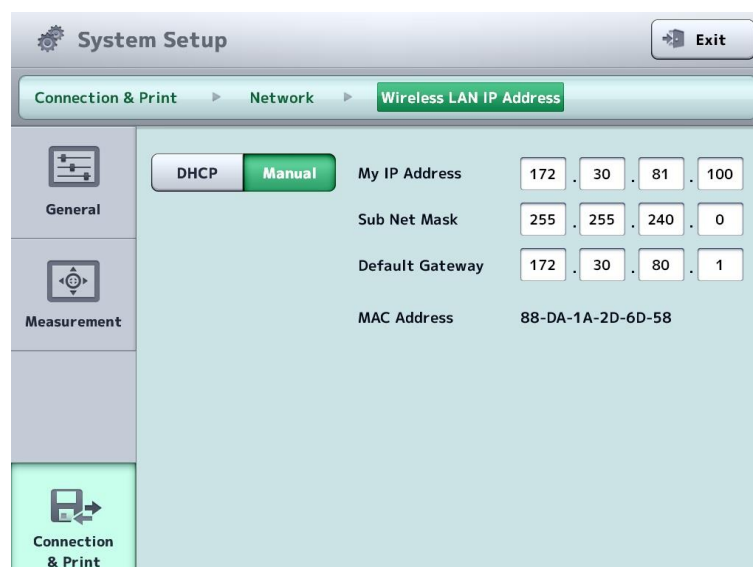

*Select DHCP because My IP set in Manual doesn't work well. However, Ping error may occur even if set in DHCP.