




OWNER'S MANUAL

HYDRAULIC DOCK LEVELER

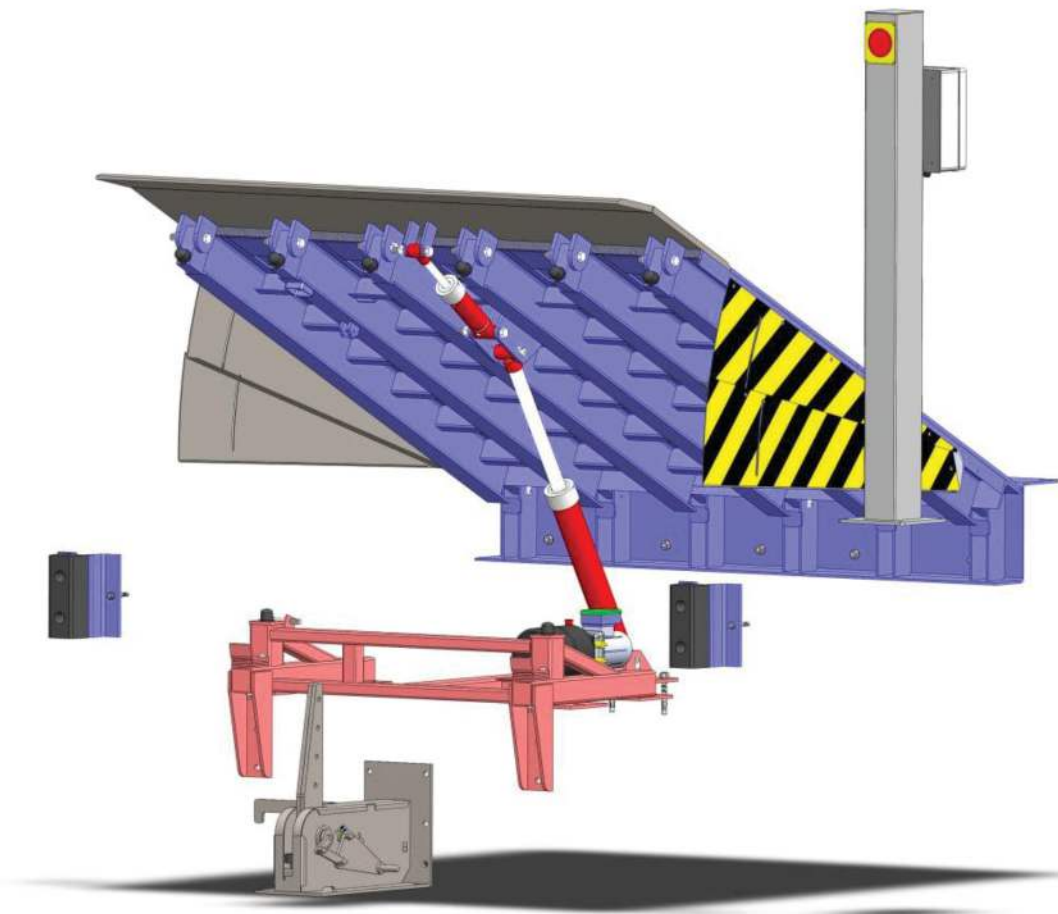

ACTUAL PRODUCT MAY NOT APPEAR EXACTLY AS SHOWN



WARNING

Do not operate or service this product unless you have read and fully understand the entire contents of this manual. Failure to do so may result in property damage, bodily injury or death.



Marina platforms Co. was founded in **1984**,

Marina has a well-qualified team of salesmen, engineers and service men with several years of experience which are available for your assistance, and our aim is to offer you high-quality products with the best possible consultancy and service



Our Head office and Factory located in **Alexandria**, a Branch in **Cairo**, Gulf branches in **Doha – Qatar** and **Muscat – Oman** and **Al Ard- Saudi Arabia** .

With this General Catalogue we would like to present our products and our extensive service to both new and existing customers, as we are manufacturing special specifications according to the customer request.

Our products are approved by: the Egyptian authority for specifications and qualification, the General Authority for manufacturing , the Industrial Design Development Authority and have ISO certificates :

ISO quality certificate

ISO environment certificate

ISO Occupational Safety and health certificate

We are the first supplier of: Egyptian Army, The Ministry of Military Production, Oil & Petroleum Ministry, Electric & Power Ministry, The ministry of Agriculture and Suez Canal Authority

Our Customers are the top companies in Egypt such as Construction Company, petroleum companies, all power station, industrial companies.

Our target is competitiveness, quality and service in order to become the leader in our field



We are the first supplier of: Egyptian Army, The Ministry of Military Production, Oil & Petroleum Ministry, Electric & Power Ministry, The ministry of Agriculture and Suez Canal Authority

Our Customers are the top companies in Egypt such as Construction Company, petroleum companies, all power station, industrial companies.



Our target is competitiveness, quality and service in order to become the leader in our field In **2008**, the company's branch in Qatar was opened, This branch is considered one of the most important branches of the company, as it houses the largest permanent exhibition of elevators in the Middle East region. This branch has achieved many successes since its opening, which has contributed to strengthening the position of Marina Company as one of the most important heavy equipment manufacturing companies in the region.



In **2022**, the company's branch in Oman was opened, The Oman branch enjoys a distinguished location in the heart of the Omani capital, Muscat.

In **2024**, the company's branch in Saudi Arabia was opened, in Al Riyadh

these locations makes it easy for customers to reach the company's branch and obtain its services.

TABLE OF CONTENTS

1.0 ABOUT THE HYDRAULIC DOCK LEVELER	Page 4
1.1 Owner's Purchase Record	
1.2 Introduction	
1.3 Warranty Information	
1.4 Exclusion of Liability	
1.5 Manufacturer's Note	
2.0 OWNER'S RESPONSIBILITY	Page 6
2.1 Best Practices for Operation & Maintenance	
2.2 Documentation and Safety Labels	
2.3 Load Classification Compliance	
3.0 SAFETY INSTRUCTIONS	Page 7
3.1 Message Color Identification	
3.2 Operational Safety Warnings	
3.3 Lockout / Tagout Procedure and Rules	
4.0 CONTROL STATION & BUTTON FUNCTION	Page 9
4.1 Control Station Overview	
4.2 Button Function	
5.0 DOCK STRUT SETUP	Page 10
5.1 Engaging the Dock Strut	
5.2 Disengaging the Dock Strut	
6.0 MAINTENANCE	Page 11
6.1 Planned Maintenance Program (PMP)	
6.2 Operator Daily Inspection	
6.3 Routine Servicing	
6.4 Maintenance Sequence & Checklist	

7.0 OPERATING INSTRUCTIONS	Page 13
7.1 Functional Description	
7.2 Deploying the Dock	
7.3 Storing the Dock Leveler	
7.4 Below Level / End Loading	
8.0 DECAL IDENTIFICATION AND LOCATION	Page 16
8.1 Safety Label Locations	
8.2 Equipment Component Illustrations	
9.0 MECHANICAL ASSEMBLY	Page 18
9.1 Deck, Lip, Shaft & Barrier	
9.2 Frame & Pit Dimensions	
10.0 POWERPACK PART IDENTIFICATION	Page 25
11.0 DOCK LEVELER TROUBLESHOOTING	Page 26
11.1 Common Problems and Causes	
11.2 Troubleshooting Continued	
12.0 WARRANTY	Page 28
13.0 LIMITATION OF LIABILITY	Page 28

1.0 OWNER'S RESPONSIBILITY

1. The owner should recognize the inherent danger of the interface between the dock and the freight carrier. The owner should, therefore, train and instruct operators in the safe use of the dock equipment and accessories in accordance with the manufacturer's recommendations.
2. The owner should thoroughly familiarize themselves with the following procedures and specifications, and request immediate replacement of all manufacturer-supplied documents that are missing, damaged, or otherwise illegible. Below is a list of Best Practices for dock equipment usage and maintenance.
 - Commissioning instructions
 - Operating instructions
 - Daily maintenance procedures checklist
 - Inspections procedures
 - Recommended spare parts lists

Upon receipt of any newly purchased dock equipment, the owner shall verify the presence of owner's manuals, operating placards, and any other documentation necessary for training dock personnel how to use the equipment safely and effectively.
3. All Marina Platforms dock equipment should undergo regularly scheduled planned maintenance. Maintenance requirements will vary according to usage frequency and application, so the owner shall consult with their authorized Marina Platforms distributor for schedule recommendation. Written records of the performance of these procedures should be kept as per warranty requirements.
4. Dock equipment that is structurally damaged, experiencing performance irregularities, or has been potentially compromised shall be removed from service until a trained and authorized manufacturer's representative can conduct an inspection and perform any necessary repairs.
5. As with any piece of machinery, dock equipment requires routine maintenance, lubrication, and adjustments. Recommended procedures are itemized in the Planned Maintenance Program (PMP) checklist included in installation and technical manuals. It is recommended that for anything other than the basic maintenance procedures outlined in this manual, you contact your local Marina Platforms representative.
6. The owner shall ensure that all name plates and safety labels are in place and legible, and that the appropriate manuals are provided to authorized users. Replacement name plates, safety labels, and manuals are available through the Marina Platforms Aftermarket Department. See "Decal Identification and Location" section in this manual for more information.
7. The owner or a trained and authorized representative shall verify that all freight carrier brakes have been applied and a vehicle restraint and/or wheel chocks properly engaged before cross-docking procedures begin. For safety reasons trailers must be held securely in place to avoid accidental separation from the loading dock.
8. Unless specifically agreed to in writing by Marina Platforms Equipment Corporation at the time of order (and prior to manufacture), all Marina Platforms Dock equipment is sold as a complete offering and must not be altered or added to in any manner (which includes configuration and function) without written permission from an authorized manufacturer's representative. These changes shall also satisfy all safety recommendations of the original equipment manufacturer for the particular application of the dock equipment.
9. If, at the request of the owner, Marina Platforms does not supply all or some of the dock equipment power unit and/or control panel components, the owner shall assume responsibility for any and all operational and safety issues associated with the resulting configuration.
10. The owner must adhere to the load classification information provided on the product serial plate. Failure to do so will void product warranty.

3.0 OWNER'S MANUAL SAFETY MESSAGE COLOR IDENTIFICATION

This manual includes color-coded safety messages that clarify instructions and specify areas where potential hazard exists. To prevent the possibility of equipment damage and serious injury or death, please observe strictly the instructions and warnings contained in the messages. If warning decals become damaged or missing, replace them immediately. Avoid accidents by recognizing dangerous procedures or situations before they occur.

 DANGER
Serious injury or death will likely occur if the instructions are not followed.
 WARNING
Serious injury or death may occur if the instructions are not followed.

NOTICE
Procedures marked important must be followed in order to prevent damage to machinery.
 CAUTION
Instructions marked caution concern safe operating procedure. Failure to comply may result in personal injury.

3.1 OPERATIONAL SAFETY WARNINGS

 DANGER
1. Do not enter the pit area below the dock leveler. 2. BEFORE BEGINNING ANY SERVICE PROCEDURES: – Follow all lockout / tagout procedures. 3. Never operate a broken or damaged dock leveler. Have repairs done immediately by a qualified service technician. 4. Always secure and center loads on the forklifts. Loose or unbalanced loads are dangerous.

 WARNING
1. The upper hinge point is a hazardous pinch point. Do not use fingers or hands to remove foreign materials. 2. Post safety warnings and barricade working area at dock level and at ground level to prevent unauthorized use of the leveler during maintenance/service. 3. Never leave the dock leveler unattended in the raised position. 4. Always make sure that the lip is seated inside the night lock after putting the dock in the parked position. 5. Never leave loads sitting on the dock leveler. 6. Do not attempt to raise the dock leveler if someone is standing on it. 7. Do not use the dock leveler if the lip's full width is not fully supported by the vehicle load bed. 8. Do not operate the dock leveler beyond its rated capacity. 9. Do not drive or walk onto the truck until it is parked against the dock bumpers and the wheels are chocked, or the vehicle restraint has been fully engaged. 10. Never attempt to lift or hold the lip out by hand. Serious personal injury could occur. 11. Never remove the wheel chocks until loading/ unloading is finished and the truck driver has been given permission to depart.

NOTICE
1. Do not ground welding equipment to any electrical components. 2. Do not attach welder as ground to leveler platform when welding on base frame assembly. Attach welder ground to base frame assembly only. 3. Always keep the work area clean and free of litter. 4. Always clean all side openings of dirt and debris. 5. Always clean all dirt and debris from the lip hinge. 6. Always clean up dry and liquid spills immediately after they occur. 7. Always maintain proper lighting in the work area. 8. If a procedure is not clearly defined in this manual, contact your authorized Service Representative.

 CAUTION
1. Only trained personnel should operate or service this equipment. 2. Do not operate the dock equipment until the transport vehicle is parked against the dock bumpers. 3. Always park the dock equipment after use. 4. Conduct routine inspections and maintenance. Failure to do so could cause equipment damage and or personal injury. 5. Always call your authorized service representative or manufacturer immediately if a malfunction occurs.

4.0 LOCKOUT / TAGOUT PROCEDURE AND RULES

In accordance with the rules and regulations of the Occupational Safety and Health Administration (OSHA), all affected employees must be notified that the machine or equipment will be shut down and locked out to perform repair or maintenance work. The work area must be checked to ensure that all personnel have been removed or safely repositioned. The machine or equipment power supply shall be locked in the OFF position or disconnected from the energy source.

The energy isolating device must bear a prominent warning tag indicating that work is being done on the equipment and the name of the authorized employee responsible for the lockout. It is mandatory that tagout notices not be susceptible to deterioration or illegibility due to weather conditions or exposure to chemicals and moisture.



WARNING

Always lockout and tagout any power source before performing any work on any electrical devices or electrical controls .



5.0 CONTROL STATION OPERATION

INDEPENDENT TYPE CONTROL STATION

Controls one individual dock leveler only, equipped with a constant-pressure 'UP' button.

5.1 BUTTON FUNCTION

'UP' button activates the dock leveler when pressed and held.



Note: Contactors come standard with control box.

CAUTION

For safety reasons, the operator's view of the moving dock leveler must not be obstructed at any time.

Potential obstructions include but are not limited to the dock wall, curtains, and stacked cargo. Ensure that the operator's field of vision is clear throughout the dock leveler operating cycle.

6.0 DOCK STRUT SET-UP



DANGER

Failure to properly secure the dock leveler deck prior to working underneath it may result in property damage, bodily injury, or death. Engage the Dock Strut AND Service Stand first. If the device cannot be successfully engaged, contact your authorized service representative.



WARNING

Post safety warnings and barricade work area at dock and ground level. Notify all affected personnel that work is being performed on the unit and follow proper lock-out procedure. Ensure that power to the unit has been completely cut off and cannot be turned back on accidentally.

6.1 ENGAGING THE DOCK STRUT



WARNING

Head protection and other applicable PPE is recommended when working under or around the raised deck.



WARNING

Install dock strut and secondary service stand only when the unit is fully raised and deployed.



CAUTION

Use of a service stand and hard hat while performing this step is required.



WARNING

Use of a service stand in conjunction with the dock strut is required when working under the leveler.

7.0 MAINTENANCE



WARNING

Do not operate and/or service this dock leveler until you have read and understood all of the safety information and instructions contained herein and on the dock leveler.

Do not work under or around dock leveler without first placing adequate barriers to positively prevent vehicle traffic from entering the work area.

Follow proper lock-out/tag-out procedures.

Keep hands and feet clear of dock leveler pinch points and wear appropriate safety attire – safety glasses, gloves and work boots.

The dock strut and service stand must be in place before commencing maintenance procedures.

7.1 PLANNED MAINTENANCE PROGRAM (PMP)

In addition to the Daily Maintenance Procedures (DMP), the manufacturer recommends (and local government regulations may require) that a Planned Maintenance Program (PMP) and safety inspection program be performed by a trained and authorized service technician on a regular basis to ensure the equipment is in safe operating condition. The PMP will provide an opportunity to make a thorough inspection of the safety and operating condition of the dock leveler. Necessary adjustments and repairs can be done during the PMP, which will increase the life of components and reduce unscheduled downtime.

Recommended procedures for a periodic planned maintenance program that covers inspections, operational checks, cleaning, lubrication, and minor adjustments are outlined in the Installation and Technical manual for this product.

An authorized dealer or distributor is prepared to assist with a planned maintenance program by offering trained service personnel with expertise in dock leveler maintenance requirements.

7.2 OPERATOR DAILY INSPECTION

The dock leveler should always be examined by the operator PRIOR TO ANY USE to verify that it is safe to operate.

The manufacturer recommends making multiple photocopies of the DMP Checklist. The operator should fill out this form to keep a daily record of operation and maintenance issues.

7.3 ROUTINE SERVICING AND MAINTENANCE

Regular maintenance and care of the dock leveler is very important for cost and operation efficiency and more importantly; operator safety. A faulty dock leveler is a potential source of danger to the operator, and to other personnel working near it. As with all quality equipment, keep the dock leveler in good operating condition by following the recommended schedule of maintenance. Failure to properly maintain or operate the dock leveler within its rated load classification can void the manufacturer warranty.

7.4 PLANNED MAINTENANCE PROGRAM INTERVALS

Arrange for a qualified dock leveler repair technician to perform regularly scheduled planned maintenance on your dock leveler every three months for single shift operations or monthly for multi-shift operations. Contact Marina Platforms.

7.5 MAINTENANCE SEQUENCE

1. Cleaning, including pit area
2. Visual inspection of all components
3. Lubrication, as required (by a trained service technician only)
4. Test operate all functions
5. Adjustments, if required (by a trained service technician only)
6. Check for missing or damaged dock bumpers
7. Record inspection details and findings for owners' files



DANGER

Prior to installation, place adequate barriers to prevent unauthorized personnel and vehicle traffic from entering the work area.



WARNING

All repairs and maintenance work are to be conducted by trained and authorized personnel ONLY.



DANGER

When repairing or conducting maintenance procedures on electrical components, perform lockout / tagout steps according to OSHA regulations and approved electrical codes.

8.0 OPERATING INSTRUCTIONS



WARNING

Do not operate this leveler unless you have been trained and authorized to do so, and have read and understood all of the safety information and instructions contained herein.

Do not operate the dock leveler beyond its rated capacity.

Do not operate this leveler until you have checked its condition. Report the need for repairs to your supervisor immediately and do not operate the unit until repairs are made. Neglect may cause a minor repair to become a major service problem and cause the leveler to become unsafe.

Never try to lift or move any part of the dock leveler manually.

Do not drive on the leveler unless the lip is securely on the truck bed and has a minimum of 4" (102mm) overlap on its surface.

Do not exceed 4 mph when driving over the dock leveler.

Do not drive over edges of the leveler and / or dock bumper blocks (bumpers blocks are not structural).

Confirm brakes have been set and air has been removed from the air-ride suspension (if applicable).

OPERATING INSTRUCTIONS

Only for Single Push Button Dock Levelers


A



DEPLOYING THE DOCK LEVELER

1. Raise the leveler by pressing the "UP" button. Continue holding the "UP" button until the leveler is in its fully raised position, at which time the lip will deploy.
2. Release the "UP" button once the lip has fully deployed. The leveler will then descend with the deployed lip on the vehicle load bed. When the leveler has fully deployed on the load bed, loading and unloading may commence.

B



STORING THE DOCK LEVELER

1. To store the leveler, press the "UP" button. The leveler will raise and the lip will retract.
2. When the lip has fully retracted, release the button. The leveler will lower into the stored position with the lip in the home position.

C



BELOW LEVEL / END LOADING

A. HYDRAULIC LEVELER ONLY: Raise the dock leveler by pressing the "UP" button. Continue holding the "UP" button until the dock is in its fully raised position. Release the "UP" button once the lip has partially deployed (2-3") and let the leveler lower to the below level position, with the lip hanging between the dock face and the truck bed.

B. AIRBAG LEVELER ONLY: Raise the dock leveler by pressing the "UP" button. Release the "UP" button when the lip clears the right lock by 6-12". When the dock is lowering, pull the full-size disengaging chain on the dock to partially extend the lip and to lower to the below level position.

⚠ DANGER

1. Only trained and authorized personnel may operate this dock leveler.
2. Read, understand, and follow the instructions on this document.
3. Prior to using the dock leveler:
 - Ensure that the dock leveler is free and clear of all debris, snow and ice.
 - Ensure that all personnel near the dock leveler are aware that it is being operated.
4. When using the dock leveler:
 - Confirm that the transport vehicle has been properly restrained.
 - Keep hands and feet clear of pinch points.
 - If the dock leveler is equipped with a light communication package, load and unload on green only.
 - Do not exceed the rated capacity as indicated on the serial plate.
 - Do not leave equipment or material unattended on the dock leveler.
 - Keep a safe distance from both edges.
 - If dock leveler fails to operate as outlined in the accompanying manual's operating instructions, refer to the Troubleshooting section.
5. If service or maintenance is required:
 - Only authorized service personnel shall maintain or service the unit.

APPLIES TO ALL DOCK LEVELERS


*Actual control station may not appear exactly as shown.

8.1 FUNCTIONAL DESCRIPTION

The U-Series hydraulic dock leveler serves as a bridge between a loading dock floor and the load bed of a transport vehicle. The leveler's upper deck plate, complete with a hinged, vertically hanging lip, is in a shallow pit at the edge of the dock, flush with the dock's edge and the floor surface.

The rear of a transport vehicle is parked and restrained in place against the outer wall of the loading dock, in working alignment with the dock leveler. The dock attendant maintains pressure on a touch button to raise the front of the deck. The hinged lip plate raises at the same time, its leading edge swinging out horizontally over the rear of the transport vehicle once the deck reaches its fully raised position. The dock attendant releases the push button, causing the deck and extended lip to lower together until the lip's underside comes to rest on the load bed. A solid bridge is now formed between the dock and the truck.


Once all work is completed, the dock attendant returns the leveler to its original stored position.

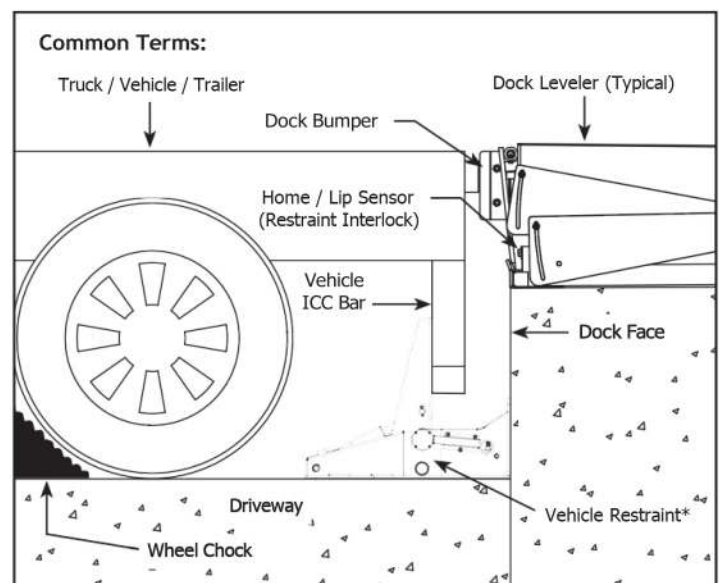

STANDARD OPERATION PROCEDURES


8.2 DEPLOYING THE DOCK LEVELER

1. Raise the dock leveler by pushing the 'UP' button. If the button is still being pressed while the dock is in its fully raised position, the lip will then deploy.
2. When the lip has fully extended, release the button and the dock leveller will descend. The dock will stop when the lip rests on the vehicle load bed.
3. After ensuring that there is a minimum overlap of 4" (102 mm) between the dock leveler lip and the truck bed, begin loading or unloading.

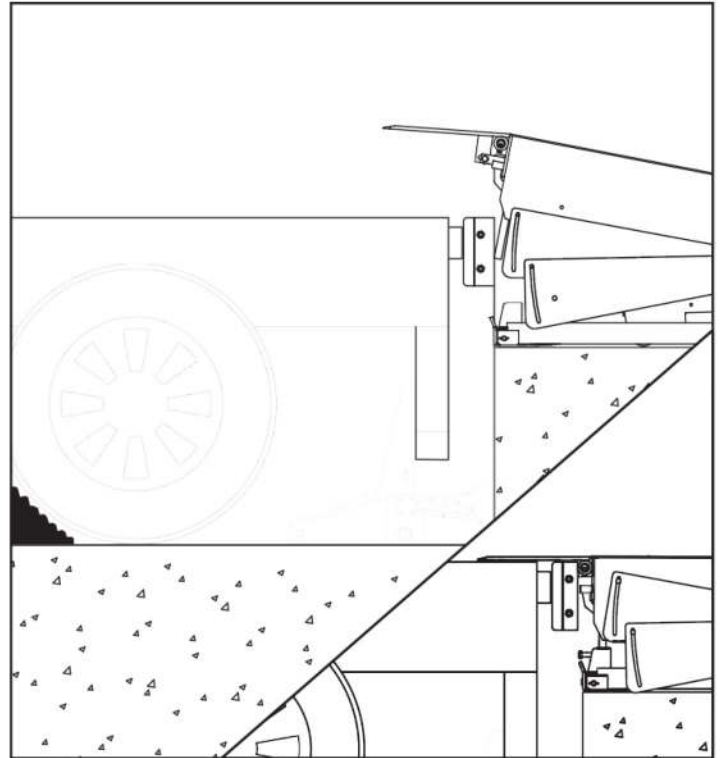

8.3 STORING THE DOCK LEVELER


1. To store the dock leveler, press the 'UP' button. The dock will raise and the lip will retract.
2. When the lip has fully retracted, release the button. The dock will resume the stored position with the lip in the night lock.

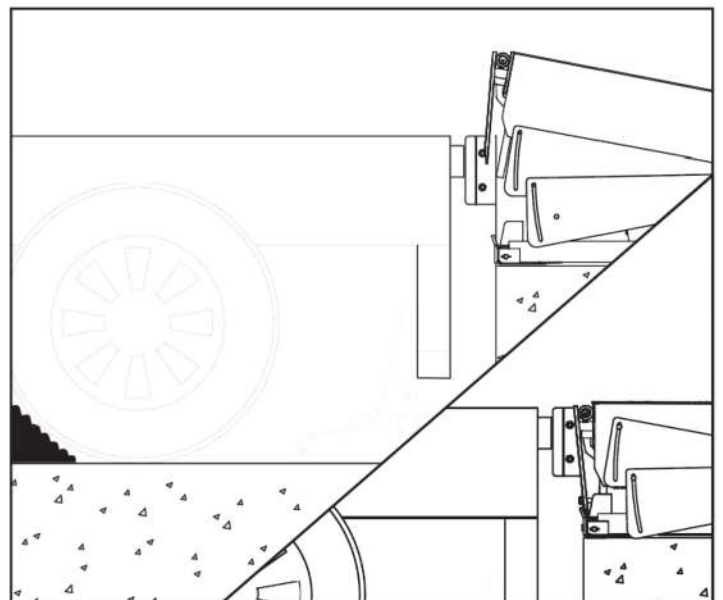


8.4 OW LEVEL / END LOADING

This section outlines dock leveler operation in situations where the lip cannot make contact with the vehicle load bed (i.e. loading or unloading the first skid or pallet from the truck when there is not enough room to extend the lip) or the truck height is below dock level.

1. Raise the leveler by pressing the 'UP' button. Continue holding the 'UP' button until the dock is in its fully raised position.
2. Release the 'UP' button once the lip has partially deployed 2 - 3" and let the leveler lower to the below level position, with the lip hanging between the dock face and the truck bed.

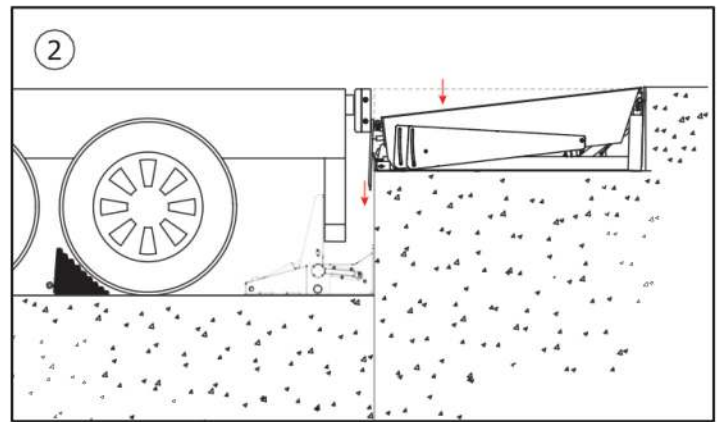

3D View

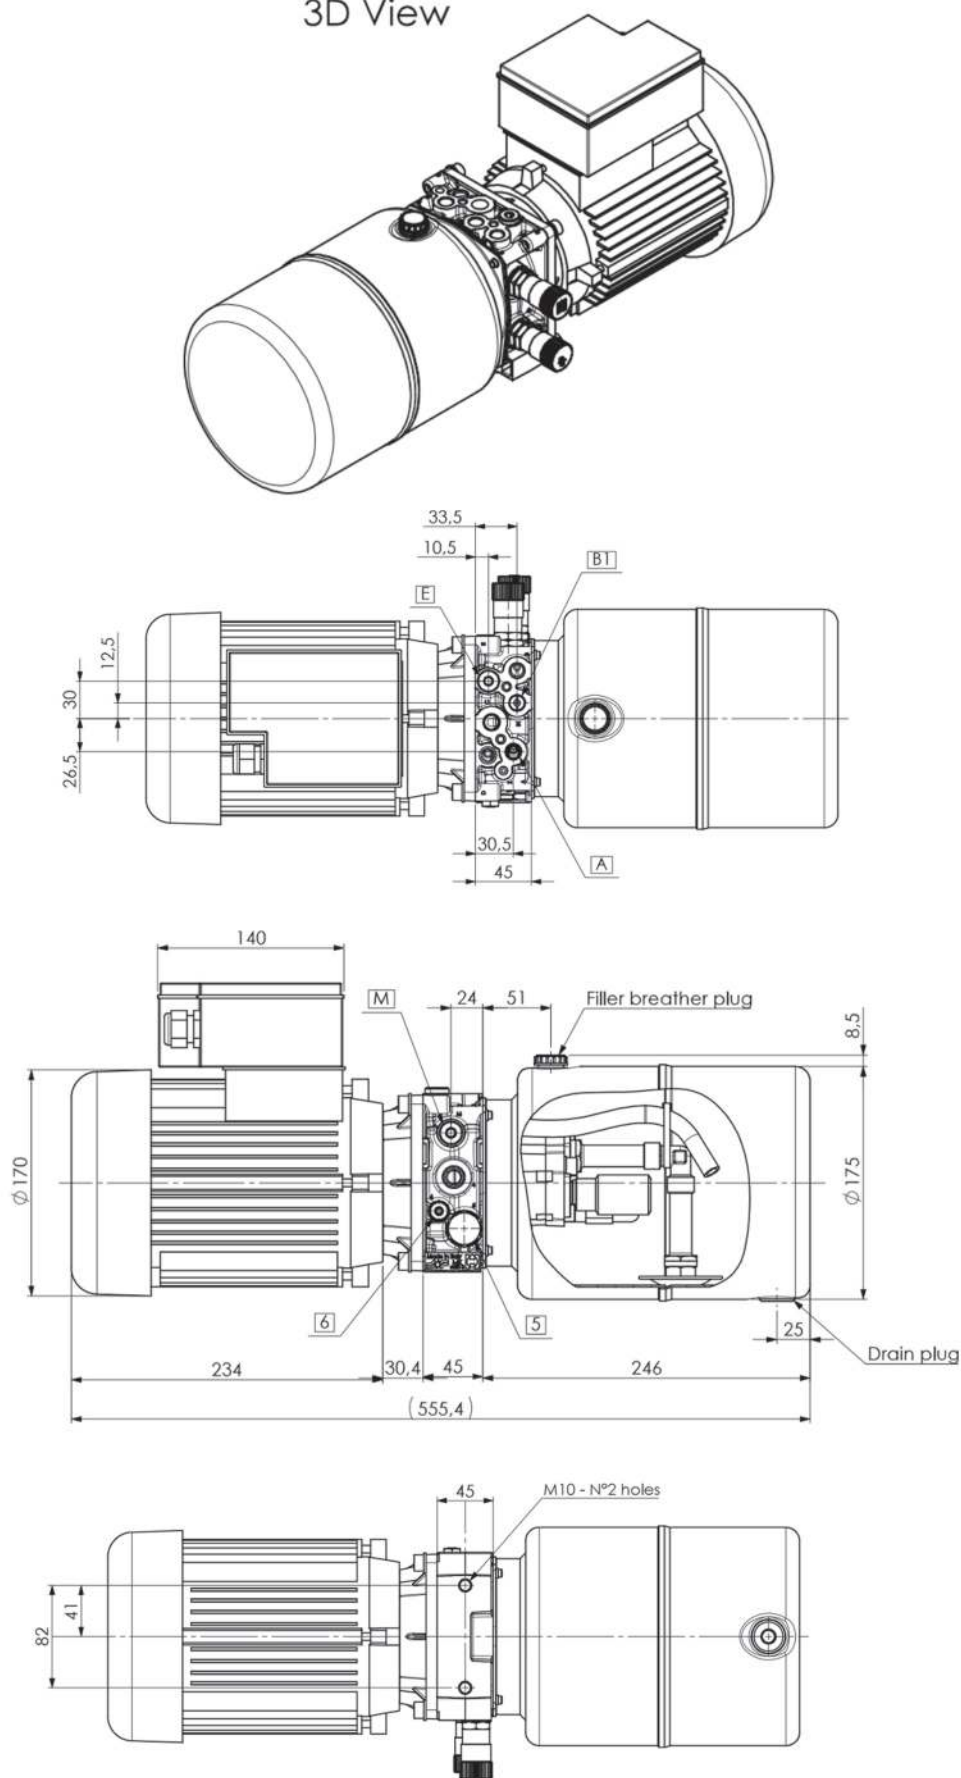

11.0 DOCK LEVELER TROUBLESHOOTING



WARNING

Do not attempt to install, make repairs or adjustments. Only a trained and authorized service technician should perform the installation process. Contact your local dealer or distributor for assistance.

PROBLEM	PROBLEM CAUSE
Deck will not raise when touch button is operated. Motor DOES start and run.	1. Foreign materials may be lodged between the side of the deck and the pit wall. 2. The bumpers may be damaged or missing, allowing the truck to contact and hold the lip. 3. Equipment or goods may be parked on the dock leveler. 4. Low hydraulic oil in power unit. 5. Incorrect motor rotation (three phase power supply only). 6. Relief valve is bypassing 7. Pilot operated to close Check Valve (9) will not close.
Deck will not begin to raise immediately when motor begins to run. Usually occurs only after the deck cylinder hose has been replaced with a new hose that was not pre-filled with oil.	1. Air is trapped in the deck lifting cylinder. Bleed.
Deck will not raise when touch button is operated. Motor does not attempt to run, no sound is heard from motor/powerpack/control box	1. No power supply to control box. 2. Thermal overload tripped open.
Deck will not raise when touch button is operated. Motor attempts to run, but power supply breaker switch trips to off position	1. Power supply circuit is overloaded by other equipment or components being used on a branch circuit controlled by the same breaker switch. The power supply line circuit must be upgraded to meet the requirements of the power unit
Lip does not extend fully. Oil level in reservoir is not low.	1. Lip plate bent causing hinge to bind. 2. Foreign material lodged in the lip hinge area. 3. Relief valve is bypassing.
Lip lowers slowly in normal temperatures and very slowly in extremely cold weather. Deck lowering speed is correct.	1. A valve adjustment will not correct this problem. Opening the needle valve will cause the deck to lower too quickly, which will in turn cause the fail-safe velocity fuse to lock. 2. The lip lowers by gravity and must pivot freely on its full length hinge.
Deck lowering speed is too slow or too fast.	1. Lowering speed adjustment required

12.0 DOCK LEVELER TROUBLESHOOTINGCONT'D.



WARNING

Do not attempt to install, make repairs or adjustments. Only a trained and authorized service technician should perform the installation process. Contact your local dealer or distributor for assistance.

PROBLEM	PROBLEM CAUSE
Deck raises partially and stops. Motor continues to run and power unit makes more noise than normal	1. Oil level in reservoir is low.
Deck raises more slowly than normal and level in reservoir is normal	1. Deck or damaged skirts dragging on side of pit. 2. Pilot operated to close Check Valve (9) will not close. 3. Faulty powerpack.

WARRANTY

Marina Platforms Standard Warranty

Marina Platforms warrants that its products are free from defects in design, materials, and workmanship for a period of 365 days from the date of installation or sixty (60) days from the date of shipment, whichever occurs first.

All warranty claims must be submitted within 30 days of the date the defect is discovered or could reasonably have been discovered, and no more than 30 days after the warranty period has expired.

To be eligible for the benefits of this warranty, the products must be properly installed, maintained, and operated by trained personnel, and in full compliance with the manufacturer's guidelines, particularly regarding rated loads and design-specific parameters. The product must not be misused under any circumstances.

Periodic adjustments, lubrication, and maintenance are solely the responsibility of the end user.

This warranty replaces any other expressed or implied warranties, including but not limited to implied warranties of merchantability or fitness for a particular purpose. There are no warranties that extend beyond what is described in this document.

Any non-standard warranties must be provided in writing by Marina Platforms.

Marina Platforms will remedy any covered defect by repairing or replacing defective parts or equipment, covering all reasonable costs of parts, labor, and freight. This shall be the exclusive remedy for any claims, whether based on contract, negligence, or strict liability.

LIMITATION OF LIABILITY

Marina Platforms shall not be held liable for loss of use of any product or equipment, or for any incidental, consequential, or special damages, including loss of profit or business interruption resulting from the use of the product.

MORE PRODUCTS



Goods Elevator



Elevator




Scissor Lift



Parking System



Car Elevator

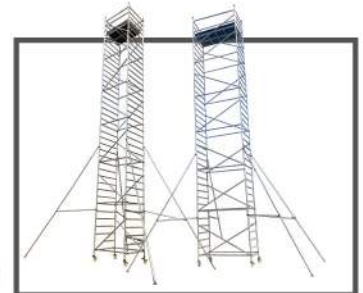

Scaffolding



Manlift



Cradles



Aluminum Ladders



BMU



Dock Elevators

بعض من شركائنا في النجاح ومن وضعوا ثقتهم بنا

SOME OF OUR PARTNERS IN SUCCESS AND PLACED THIER TRUST IN US

AUTOMOTIVE SECTOR قطاع السيارات



PETROLEUM INDUSTRIES SECTOR قطاع الصناعات البترولية



FOOD INDUSTRY SECTOR قطاع الصناعات الغذائية



PHARMACEUTICAL SECTOR القطاع الطبي



CONSTRUCTIONS SECTOR قطاع الإنشاءات



BANKING SECTOR القطاع المصرفي



COMPANIES AND INSTITUTIONS شركات ومؤسسات



HOTELS AND TOURISM SECTOR قطاع السياحة والفنادق



EDUCATION SECTOR القطاع التعليمي





CONTACTS



EGYPT

(Cairo -Alex -Merghem- Borg El Arab)

☎ 01277722261 ☎ 01273640086

✉ info@marinaplatform.com



QATAR

📍 Premium Lounge – Royal Plaza Mall – Al Sadd – Third Floor

☎ (+974)70274511 ☎ (+974)74096650



OMAN

📍 November 18th Street - Boshar North Ghubra - Muscat, Sultanate Oman

☎ (+968) 79017032 ☎ (+968) 79042564



SAUDI ARABIA

📍 Al Aarid , King Abdulaziz Rd-Riyadh

☎ 055 044 7400

