bokar

bokar

Corner fireplace stoves | Straight fireplace inserts
Corner fireplace inserts | Fireplace stoves
Inserts with guillotine mechanism
Ventilation grilles | Mounting frames

ECO DESIGN — Compliance with Eco Design requirements

SCHOTT ROBAX® — German refractory glass up to 760 °C

CERAMATEX — Ceramatex is type of reliable ceramics of our own production

5 years warranty

A reliable Ukrainian product with European requirements for standards

Chernivtsi, Ruska St., 129

+38 (067) 372 18 18
+38 (067) 222 18 18

info@bokar.com.ua

Working hours

Mon–Fri: **09:00 – 18:00**
Sat: 10:00 – 15:30
Sun: Closed

INSTRUCTION
manual

bokar.com.ua

www.bokar.com.ua

www.bokar.com.ua

FOLLOW BOKAR:



CONTENTS

1. **GENERAL PROVISIONS** 3

2. **BASIC SAFETY RULES** 3
   2.1. SAFETY WARNINGS 3
   2.2. WARNINGS WHEN OPERATING THE DEVICE 4

3. **TECHNICAL CHARACTERISTICS** 4
   3.1. PACKAGE CONTENTS 4
   3.2. DESIGN 4
   3.3. FEATURES 4
      3.3.1. *Installation features* 5
      3.3.2. *Placement options* 5
   3.4. TECHNICAL PARAMETERS 5
   3.5. FUEL 5

4. **TRANSPORTATION AND STORAGE** 6

5. **INSTALLATION** 6
   5.1. INSTALLATION SITE 6
   5.2. DOORS FOR BOKAR FIREPLACE INSERTS AND STOVES 8
   5.3. DOUBLE DEFLECTOR 8
   5.4. AIR SUPPLY 9
   5.5. INSTALLATION OF THE DECORATIVE (MOUNTING) FRAME 9

6. **CHIMNEY** 10
   6.1. CHIMNEY REQUIREMENTS 10
   6.2. CONNECTION TO THE CHIMNEY OF FIREPLACE INSERTS 11

7. **CLADDING OF FIREPLACE INSERTS** 11

8. **OPERATION AND MAINTENANCE** 12
   8.1. COMBUSTION INTENSITY REGULATOR 12
   8.2. FIRST IGNITION 12
   8.3. CARE AND CLEANING OF THE FIREPLACE INSERT 13
   8.4. INSPECTION AND CHECKING OF THE CHIMNEY CONDITION 13

9. **POSSIBLE MALFUNCTIONS AND METHODS OF ELIMINATION**
   (or COMMON MALFUNCTIONS AND POSSIBLE SOLUTIONS) 14

10. **WASTE DISPOSAL** 16

11. **STRUCTURE OF BOKAR FIREPLACE INSERTS** 16

12. **WARRANTY FOR BOKAR PRODUCTS** 17
   12.1. Warranty terms 17
   12.2. Warranty service obligations 17
   12.3. Cases not covered by the warranty 17
   12.4. Procedure for submitting claims 17
   12.5. Liability 17

1. GENERAL PROVISIONS

BOKAR fireplace inserts and stoves belong to heating equipment and are intended for heating residential houses and commercial premises as the main or an additional source of thermal energy. BOKAR products comply with the requirements of EN 16510-2-2:2022 ("Residential solid fuel appliances. Part 2-2: Built-in appliances, including open fireplaces"), EcoDesign requirements, and applicable fire safety regulations. The design of the insert предусматривает the use of hardwood firewood only as fuel.

This "Installation and Operation Manual" is an integral part of the product and must be provided to the user together with the appliance. The user should carefully read this document and keep it for future reference, as it contains important instructions regarding the safe installation, operation, and maintenance of the equipment.

Improper operation, the use of unsuitable fuel, overloading of the equipment during operation, or insufficient maintenance may result in damage that is not covered by the warranty. Pay special attention to the safety instructions provided in this document. This will help identify potential risks and prevent damage.

The contents of this manual are the property of BOKAR and are protected by copyright. The manufacturer reserves the right to make changes and updates to this publication without prior notice as part of the continuous improvement of the products. Up-to-date information can always be found on the official ***https://bokar.com.ua/***.

2. BASIC SAFETY RULES

2.1. SAFETY WARNINGS

- When using the equipment, the applicable national and local safety regulations must be strictly observed. The installation of the appliance must be carried out in accordance with all regulatory requirements in force in the respective region or country.
- The equipment must not be operated by persons (including children) with reduced physical, sensory, or mental capabilities, or by persons who lack appropriate experience or knowledge, unless they are supervised by a person responsible for their safety.
- The equipment must be used only for its intended purpose. Any other use shall be considered improper and may pose a danger.
- Before installation, make sure that the floor or other supporting structure at the selected location is capable of supporting the load of the appliance, taking into account its weight. If there is any doubt regarding the strength of the base, the installation area must be reinforced beforehand.
- In the event of any malfunction, the operation of the appliance may be resumed only after the identified problem has been completely eliminated.
- The user bears personal responsibility for improper use of the product, thereby releasing BOKAR from any civil or criminal liability in such cases.
- Any modification of the appliance or replacement of its parts with non-original components may pose a danger to the user and releases BOKAR from any civil or criminal liability.
- Improper installation or maintenance that does not comply with the applicable building regulations and the technical recommendations provided in this manual may result in injury to people or animals, or damage to property. In such cases, BOKAR shall bear no civil or criminal liability.

2.2. WARNINGS DURING OPERATION OF THE APPLIANCE

- Do not operate the appliance with the door open or if the glass panel in the door is damaged (for example, cracked).
- The surfaces of the appliance become very hot during operation (door, handle, glass, chimney pipe, etc.). Avoid contact with these surfaces without appropriate protective equipment (heat-resistant gloves, etc.).
- Keep children and pets away from the operating appliance to prevent burns.
- Do not place or dry clothes or laundry on the appliance. Ensure that fabrics and other flammable objects are kept at a sufficient distance from the device, as this may cause a fire hazard. The recommended minimum safe distances between the hot surfaces of the fireplace insert (stove) and flammable materials (furniture, curtains, etc.) are specified in Section 5.1 of this manual.
- If the base on which the appliance is installed is made of combustible material (parquet, wooden flooring, etc.), an insulating plate must be placed under the stove. The plate must extend beyond the dimensions of the appliance by at least the minimum required distance (see Section 5.1).
- The fuel used in this appliance must comply with the requirements specified in this manual (see Section 3.5).
- It is strictly prohibited to use flammable liquids, coal, or any chemical products to ignite the fire.
- The internal parts of the fireplace insert (stove) must not be washed with water or other liquids.
- Do not allow water to come into contact with the painted external surfaces of the stove until the coating has fully cured. The coating on new appliances is not anti-corrosive; the heat-resistant paint acquires its protective properties only after final curing under high temperatures (after several initial firing cycles).
- Always ensure that the combustion chamber door is tightly closed during operation.
- Periodically inspect and clean the flue gas exhaust ducts (from the connecting pipe to the chimney).

3. TECHNICAL CHARACTERISTICS

3.1. PACKAGE CONTENTS:

- Fireplace insert / stove – 1 pc.;
- Ceramic lining of the combustion chamber – 1 set;
- Installation and Operation Manual

The fireplace insert (stove) is supplied on a pallet, fully assembled and wrapped in polyethylene film.Upon the user's request, additional components or assemblies may be included in the delivery set (such as a mounting frame or ventilation grilles).

3.2. DESIGN

The fireplace insert (stove) functions as a convective heater for the room in which it is installed.

The body of the fireplace insert (stove) is made of high-quality low-alloy European steel. The combustion chamber is lined with high-temperature ceramic of our own production, "Ceramatex", which increases fuel combustion efficiency, ensures high-temperature combustion and thermal stability, and protects the walls of the insert from overheating.

The cold air required for the combustion process is supplied from outside through the air supply connection pipe, located in the lower part of the appliance. The flue gas outlet pipe is located in the upper part of the fireplace insert or stove.

3.3. FEATURES

Fireplace inserts and stoves differ from each other in terms of installation method, placement within the room, and functional capabilities.

3.3.1. Installation features

A fireplace insert requires the construction of a convection heating chamber niche, connection to the chimney, and decorative finishing.

A fireplace stove does not require complex installation – it can be placed on a fire-resistant base, connected to the flue duct, and used immediately.

3.3.2. Placement options

A fireplace insert is installed permanently, therefore its location should preferably be planned at the interior design stage.

A stove offers greater flexibility – it can be placed near a wall, in a corner, or even in the center of the room, provided that access to the chimney is available.

3.4. TECHNICAL PARAMETERS

For the design and technical drawings, see Section 11.

3.5. FUEL

The fireplace insert or stove is designed for burning hardwood firewood (oak, hornbeam, ash, beech) with a moisture content of less than 20%. The wood must be properly seasoned for at least two years before use.

Softwood firewood (such as pine or spruce) and soft hardwood species (such as willow or poplar) burn too quickly because they contain a large amount of resin and have a lower density. Resin emissions may contaminate the chimney and potentially cause a chimney fire. Softwood also produces less heat than hardwood.

For fireplace inserts and stoves, hardwood firewood is recommended, as it burns more slowly, produces more heat, and causes less contamination of the chimney.

The maximum log length depends on the dimensions of the combustion chamber of a specific model (see Table 1). Although the optimal log size may vary depending on the appliance model, there are general recommendations regarding log dimensions. In particular, the length and thickness of a log should be approximately 3/4 of the width of the front opening of the fireplace insert or stove. Recommended optimal log dimensions: length 300–350 mm, diameter 90–140 mm.The firewood should be split logs.

Table 1. *Maximum firewood length for BOKAR fireplace inserts and stoves*

Model	Power, kW	Maximum log length, мм
BOKAR Aston ST, FD, WD; BOKAR Forum	9,0-9,2	350
BOKAR 6050, BOKAR 655047	14,4	500
BOKAR 7050, BOKAR 755047	15,2	600
BOKAR 8050, BOKAR 855047	16,8-17,0	700
BOKAR 9050	19,1	800

- Do not fill the fireplace insert (stove) completely with firewood; the volume of loaded logs must not exceed 1/3 of the combustion chamber volume.
- The use of wet (unseasoned) firewood is not permitted, as this leads to intensive soot formation, contamination of the firebox, and a reduction in efficiency.
- The use of any other types of fuel is prohibited, including mineral coal, softwood (coniferous) wood, rotten or damaged wood, tropical wood species, as well as any liquid fuels.
- It is prohibited to burn garbage or any wood waste in the firebox. The use of unsuitable materials for ignition may damage the fireplace and poses a serious risk to the life and health of users (due to the release of toxic flue gases).

Attention! The use of low-quality fuel or fuel that does not comply with the above recommendations may result in damage to the equipment, as well as the loss of warranty and release of BOKAR from liability for the product.

4. TRANSPORTATION AND STORAGE

The fireplace insert (stove) is transported on a pallet, in a fully assembled condition and protected with polyethylene film. It is recommended to transport the insert in its original factory packaging as close as possible to the installation site in order to minimize the risk of damage to the appliance body.

Appropriate lifting equipment should be used for lifting and moving the product. During transportation, the insert must be securely fixed on the vehicle platform (to prevent shifting or tipping) using tie-down straps, wedges, and wooden blocks.

Attention! The fireplace insert (stove) must be transported in a vertical position.

The fireplace insert (stove) should be stored in a dry, covered area with adequate ventilation.

Before installation, make sure that all parts of the appliance are cleaned of grease and in proper technical condition.

5. INSTALLATION

The installation and connection of the fireplace insert (stove) must be carried out by qualified specialists in accordance with this "Installation and Operation Manual", as well as with applicable building regulations and fire safety requirements. Carefully read the instructions before starting the installation and regular operation of the equipment.

After installation is completed, the work must be accepted by the relevant inspection authorities and confirmed by an appropriate certificate or inspection report.

5.1. INSTALLATION LOCATION

The correct choice of installation location for the fireplace insert or stove is essential to ensure an adequate level of heating for the living space. Before starting installation, it is necessary to determine a location that is as close as possible to the chimney.

The fireplace insert (stove) must be installed on a flat horizontal surface made of non-combustible material. It is necessary to verify whether the floor at the selected location can support the weight of the insert. If the strength of the floor is insufficient, the floor structure must be reinforced beforehand. According to Ukrainian building standards for residential premises (BNiP 2.01.07-85), the standard operational load on floor structures is 150 kg/m² (each square meter of floor structure must withstand a load of 150 kg). If this condition is met, the BOKAR fireplace insert (stove) can be installed without additional reinforcement of the floor structures.

The floor or insulating base on which the insert or stove will be installed must be made of non-combustible building materials (ceramic tiles, sheet steel, tempered glass, stone, etc.).

The minimum permissible safety distances between the hot surfaces of the insert and materials that are sensitive to heat or flammable must be observed (see Figures 1 and 2). A protective strip made of non-combustible material of the minimum required width must be arranged around the stove to ensure fire safety (see Figure 2).

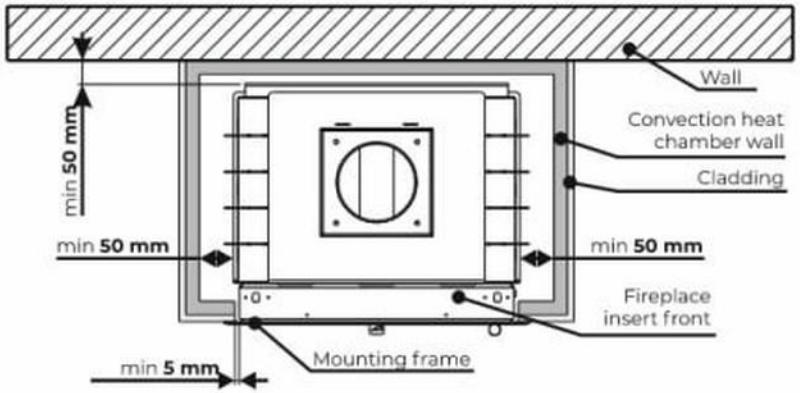


Figure 1. *Minimum safe distances when installing a fireplace insert.*

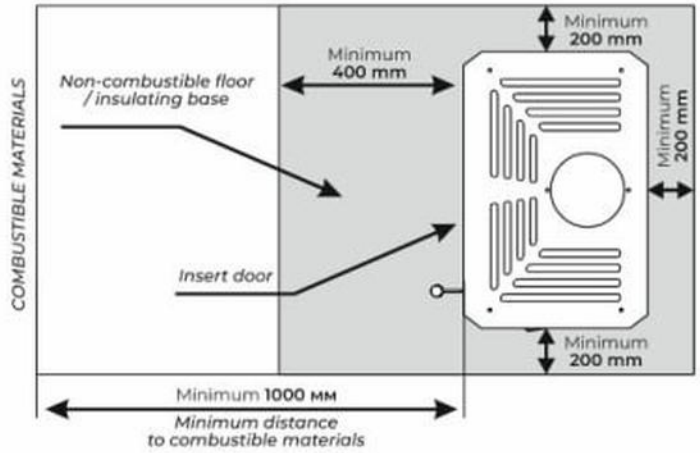


Figure 2. *Minimum safe distances when installing a fireplace stove.*

Minimum safety distances when installing a fireplace stove:

- The minimum projection of the insulating base from the door must be 400 mm, and 200 mm from the other sides of the stove.
- The minimum distance from the stove walls (side and rear) to flammable materials of medium combustibility must be 400 mm.
- The minimum zone in front of the firebox, within which no combustible objects should be placed, must be 1000 mm from the front side of the appliance.

If it is not possible to maintain the above-mentioned distances, appropriate technological and structural measures must be taken to insulate the contact surfaces made of combustible or flammable materials.

In case of fire, it is recommended to keep a sufficient amount of sand available for local extinguishing of flames. In the event of a fire, the oxygen supply to the combustion zone should also be restricted by using the appropriate regulator on the appliance in order to suppress the flame.

5.2. DOORS OF BOKAR FIREPLACE INSERTS AND STOVES

The frame of the doors of BOKAR fireplace inserts and stoves is made of a high-strength profile resistant to deformation, thermal expansion, and twisting caused by high temperatures.

The sealing of the fireplace insert ensures airtightness, increases combustion efficiency, and reduces the risk of leakage of harmful substances. This is important for the safe and efficient operation of the fireplace. An airtight firebox allows better control of the combustion process, which increases the heating efficiency and reduces fuel consumption.

In BOKAR insert models 6050, 7050, 8050, and 9050 with straight glass, it is possible to change the direction of door opening — to the right or to the left, depending on the user's needs. This does not apply to corner insert (stove) models or models equipped with a vertical door lifting system (guillotine mechanism).



Figure 3. *Doors of fireplace inserts and stoves*

In BOKAR models equipped with a vertical opening mechanism (main operating mode), an additional side opening is provided for maintenance purposes. The system automatically pulls the door closed to ensure tight sealing and also allows the door to be fixed in any position during opening. The lifting mechanism can be adjusted according to the weight of the door, allowing the user to select a comfortable opening and closing force according to individual preferences.

5.3. DOUBLE DEFLECTOR

The deflector changes the direction of the flue gas flow and redirects heat back into the combustion chamber, which increases the combustion temperature and improves the efficiency of the fireplace insert or stove. Its effectiveness depends on its shape, position, and quantity.

BOKAR insert models are equipped with a double deflector. This design ensures an even distribution of heat, extends the path of the flue gases, and increases heat transfer through the walls of the insert and the smoke collector.

All BOKAR products are equipped with double vermiculite deflectors, which are removed before transportation. The first deflector consists of two parts, and the second consists of one part. Installation is performed at an inclined angle: the rear edge is placed on the shelf, while the front edge rests on supports with a metal holder above. Proper alignment ensures efficient operation of the insert (see photo).

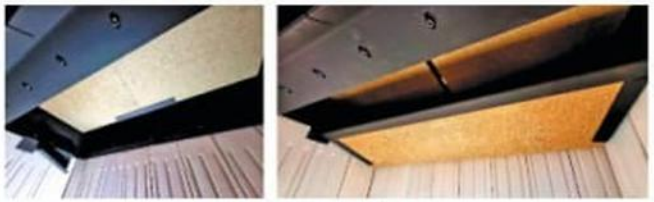


Figure 4. *Double deflector*

5.4. AIR SUPPLY

For proper operation of the fireplace insert (stove), it is necessary to ensure an adequate supply of combustion air. According to regulations, up to 10 m³/h of air per 1 kW of nominal power of the appliance must be supplied.

To improve the efficiency of the equipment, it is recommended to organize external air supply (or from a basement) directly into the combustion chamber of the appliance in order to avoid using oxygen from the room. Air intake from adjacent rooms is also permitted provided that they have supply ventilation from outside (with the exception of bedrooms, bathrooms, and potentially explosive areas such as garages, woodsheds, or fuel storage rooms). If the room where the fireplace insert or stove is installed is equipped with forced exhaust ventilation, the supply of external air is mandatory.

Air supply should be provided through a permanent ventilation opening with an area of not less than 100 cm² (equivalent to an opening with a diameter of approximately 120 mm or a square section of 100 × 100 mm), located in the external wall of the building (see photo 4). This opening must be protected by a ventilation grille, metal mesh, or appropriate cover that does not reduce the minimum cross-section of the air channel.

BOKAR fireplace inserts and stoves allow air duct connection from the lower part of the appliance.



Figure 5. *External air supply to the fireplace insert, stove*

The legs of BOKAR fireplace inserts are height-adjustable, which simplifies the installation of the air supply connection.



Figure 6. *Legs of fireplace inserts and stoves*

5.5. INSTALLATION OF THE DECORATIVE (MOUNTING) FRAME

After completing the installation of the fireplace insert, a BOKAR decorative frame (ordered separately) can be installed if desired. The frame is made of high-quality steel, ensuring durability and reliability. Thanks to its heat-resistant coating, the frame withstands high temperatures and maintains its original appearance even after long-term use.

The installation of the frame is relatively simple: it can be easily attached to the body of the insert, giving it a finished aesthetic appearance without the need for complex tools.

Attention! The decorative frame must not fit tightly against the convection heating chamber (cladding). A deformation gap of 5–10 mm must be provided between the decorative frame and the convection heating chamber.

6. CHIMNEY

After installing the fireplace insert (stove), it must be connected to a separate chimney. The installation and assembly of the chimney must be carried out by a qualified specialist in accordance with the manufacturer's instructions, as well as in compliance with building regulations, standards, and fire safety requirements applicable in the country of installation.Chimneys for heating fireplaces (stoves) that operate seasonally must be inspected and cleaned at least once a year (before the start of the heating season). Chimneys for appliances that operate year-round must be inspected and cleaned twice a year (in spring and autumn).

Attention! It is prohibited to connect several appliances to a single chimney flue!

6.1. CHIMNEY REQUIREMENTS

Requirements for the height of chimneys and their position relative to the roof are specified in BNiP 2.04.05-91.

Chimney height above the roof (see Figure 6):

- **Flat roof:** the chimney must extend at least 0.5 m above the roof level.
- **Pitched roof:**
  - *If the chimney is located at a distance of up to 1.5 m from the ridge, its top must be at least 0.5 m above the ridge.*
  - *If the distance is 1.5 to 3 m, the chimney top must be at the same level as the ridge.*
  - *If the distance is more than 3 m, the chimney top must be not lower than the line drawn from the ridge downward at an angle of 10° to the horizontal.*

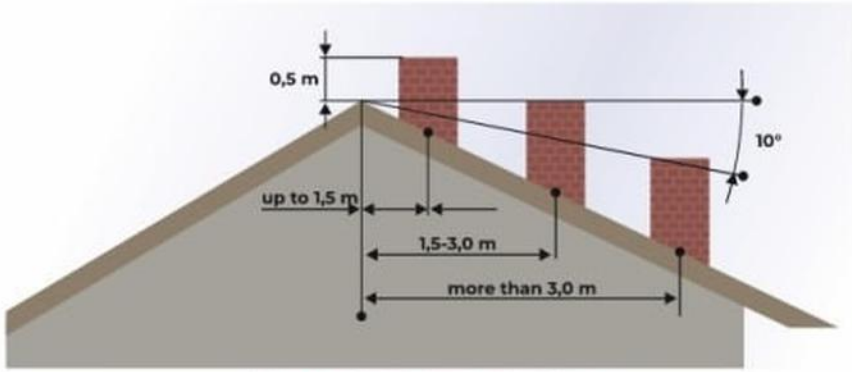


Figure 7. *Chimney height requirements*

Basic requirements for chimneys intended for connection to fireplace inserts:

- The chimney must have a circular cross-section or another shape permitted by regulations (if the cross-section is square or rectangular, the corners of the channel must be rounded with a radius of at least 20 mm).
- The internal cross-section of the chimney must remain constant along its entire height (it must not narrow).

- The chimney must be thermally insulated, airtight (waterproof), and made of fire-resistant materials.
- It must not have any intersections or deviations from the vertical of more than 45°.
- For rectangular channels, the maximum allowable aspect ratio of the cross-section is 1:2.
- The recommended minimum chimney height is 4 m (measured from the point where the connecting pipe joins the chimney).
- The chimney structure must include a cleaning opening (inspection hatch) for collecting and removing combustion residues.
- An excessively large chimney cross-section may complicate the operation of the appliance. To avoid this issue, it is recommended to perform chimney lining — installing a metal liner (pipe) of the required diameter inside the brick chimney along its entire length.
- A chimney with a cross-section that is too small may result in insufficient draft, causing smoke to enter the room.
- The required chimney draft should be 12 ± 2 Pa (minimum permissible — 6 ± 1 Pa). Pressure measurements must be carried out while the appliance is operating at the nominal combustion mode. If the draft exceeds 20 Pa, an additional draft regulator (stabilizer) must be installed to reduce and stabilize it.

6.2. CONNECTION TO THE CHIMNEY OF FIREPLACE INSERTS

Before connecting the fireplace insert (stove) to the chimney, the flue channels must be cleaned if necessary, and it must be verified that the chimney complies with all the requirements described above (see Section 6.1).

If the fireplace appliance is connected to the chimney without chimney lining (or if lining is not planned), the tightness of the chimney walls must be ensured.

The connection to the chimney is made using a certified pipe approved for use with solid fuel appliances.The angle of connection between the pipe and the chimney must not exceed 45°; 90° elbows must not be used.The connecting pipe must have a diameter identical to the diameter of the outlet nozzle of the fireplace insert or stove.

7. CLADDING OF FIREPLACE INSERTS

In addition to its aesthetic function, the fireplace cladding and the convection heating chamber play an important role in controlling convection airflow and protecting the fireplace insert from overheating (see Figure 8).

Cladding requirements:

- The cladding and the structure of the convection heating chamber must be made of non-combustible materials;
- There must be no direct contact between the body of the fireplace insert and the walls of the convection heating chamber (cladding); sufficient space must be provided for free thermal expansion of the appliance. The gap between the walls of the convection heating chamber (cladding) and the heated body of the fireplace insert at the rear and sides must be at least 50 mm;
- A deformation gap of 5–10 mm must be provided between the door frame (decorative frame) and the walls of the convection heating chamber (cladding).



Figure 8. *Fireplace insert Cladding.*

- The convection heat chamber (cladding) must protrude at least 10 mm in front of the fireplace insert façade to ensure a free airflow.
- If the niche under the fireplace insert serves as the lower convection channel and is also used for firewood storage, never block it completely (always leave an open area according to the parameters of the fireplace ventilation grilles).

The fireplace insert can also be connected to an air distribution system.

8. OPERATION AND MAINTENANCE

During the first days of operation, the BOKAR fireplace insert (stove) should be used with a load of approximately 30% of its nominal power. The temperature should be increased gradually to avoid thermal shocks and to ensure the durability of the device.



Figure 9. *Combustion Intensity Regulator*

8.1. COMBUSTION INTENSITY REGULATOR

The fireplace insert (stove) is equipped with an air supply regulator (see photo).By moving the handle to the far left position (position 1), you ensure a minimum airflow into the combustion chamber. Moving the handle to the right gradually increases the air supply (intermediate position – 2, fully open – 3).This regulator allows convenient control of the air supply to the combustion chamber and the combustion intensity.

8.2. FIRST IGNITION

Before the first start-up, remove all protective films and packaging, and check the equipment seals.

Open the air supply regulator to the maximum position (position 3). Place firewood of different sizes in the combustion chamber, starting with larger logs and finishing with small kindling. Load about 1 kg of firewood into the combustion chamber and ignite it. Close the door.



Figure 10. *First Ignition*

After ignition, add firewood to the recommended volume (no more than 1/3 of the combustion chamber). The combustion process is regulated by moving the air damper.

Do not leave the door open while the device is operating. The door should be opened only for adding fuel after the flame decreases and embers form.

During the first few hours of operation, a paint smell may be noticeable from the device — this is normal. At this time, it is recommended to ventilate the room well.

During the first firing, the heat-resistant paint coating of the stove completes its curing process. Avoid touching the painted surfaces with any objects until the paint curing process is fully completed to prevent damage to the coating.

After the fuel has completely burned out and the equipment has cooled down, check the tightness of all connections again.

8.3. CARE AND CLEANING OF THE FIREPLACE INSERT

Any maintenance or repair work must be performed with increased caution and only by adults who are thoroughly familiar with this manual. Do not clean or service a hot fireplace insert (stove), **and do not perform any work in the presence of children.**

> **Attention! All operations related to cleaning the components of the fireplace insert (stove) must be carried out only after the device has completely cooled down. Use protective heat-resistant gloves.**

It is recommended to regularly remove excess ash, as its accumulation may obstruct the air supply to the combustion zone. The removed ash should be placed in a container with a tight-fitting lid made of non-combustible material. A container with hot ash should be placed on a non-combustible surface away from any flammable materials and left until the contents cool completely. During cleaning, ensure adequate ventilation of the room.

Every BOKAR fireplace insert or stove is equipped with a "clean glass" system, which directs an airflow to the inner surface of the door glass, helping it stay clean longer. However, under certain conditions, deposits may appear on the glass. This may occur when using insufficiently dry wood, softwood logs, weak chimney draft, logs placed too close to the glass, or prolonged operation with minimal air supply.In such cases, the glass must be cleaned. For cleaning the ceramic heat-resistant glass, it is recommended to use a dry soft brush. If the contamination is heavy, use special fireplace glass cleaning products.

Under the influence of high temperatures, the door and glass seals are subject to wear. To ensure proper device operation, it is recommended to check their condition and replace them in time. Worn or damaged seals lose their functionality — they may lose shape, burn out, or fall out, which leads to loss of tightness and reduced efficiency.

> **Attention! Do not use abrasive cleaning agents for cleaning the glass. It is also forbidden to spray glass cleaner directly onto painted parts or the door seal (ceramic fiber rope).**

For safe operation, check the cleanliness of the external air supply duct to the insert at least once a year.

8.4. INSPECTION AND CHECKING OF THE CHIMNEY CONDITION

The basis for the correct and safe operation of a fireplace insert (stove) is a properly functioning and regularly cleaned chimney. According to regulations, chimney cleaning and inspection should be carried out at least twice a year. In practice, this frequency may be higher if the chimney has insufficient thermal insulation or if wood with a moisture content exceeding 20% is used. Under such conditions, the risk of soot ignition in the chimney flue increases significantly due to the formation of a thick layer of flammable deposits (creosote), which must be removed regularly.

Typical signs of soot ignition in the chimney include: the smell of burning in the room, an unusual humming or roaring sound coming from the chimney, excessive heating of the chimney walls, as well as the appearance of sparks or flames at the top of the chimney.

In the event of a chimney fire, the following measures must be taken immediately:

- Immediately call the fire service (101);
- If possible, try to extinguish the fire in the chimney by pouring sand or soil into it;
- Cut off the air supply to the fireplace insert (stove): close the door and shut the air supply regulator.

After the fire has been extinguished, a qualified specialist must inspect the chimney. The fireplace insert (stove) may only be used again after receiving confirmation that the chimney is suitable for operation.

> **Attention! It is strictly forbidden to extinguish a chimney fire with water, as sudden cooling and intense evaporation may cause cracking of the chimney and further spread of the fire!**

9.POSSIBLE MALFUNCTIONS AND METHODS OF ELIMINATION (or COMMON MALFUNCTIONS AND POSSIBLE SOLUTIONS)

MALFUNCTION	CAUSE	RECOMMENDED ACTIONS
Firewood is difficult or impossible to ignite The fire goes out	Firewood with high moisture content	Use hardwood firewood with a moisture content **not exceeding 20%**. See section 3.5.
	Logs are too large for ignition	Use smaller or split logs. Increase combustion intensity by moving the air supply regulator to the right.
	Insufficient air supply	Increase the oxygen supply by opening the air supply regulator to the combustion chamber.
	Combustion chamber clogged	Remove ash before ignition. Arrange logs so they do not block the airflow.
	Insufficient chimney draft	Check the chimney flue; if it is closed, open it. Inspect the chimney for tightness and blockages (clean if necessary). Make sure all chimney requirements are met (see section 6.1).
Flame is too large. Firewood burns too quickly	Small logs	Use larger logs. See recommendations in section 3.5. Reduce combustion intensity by moving the air supply regulator to the left.
	Too much air for combustion	Reduce the air supply using the air regulator feeding air to the combustion chamber.
	Poor-quality firewood	Use hardwood logs. Softwood and soft deciduous wood burn too quickly. See section 3.5.
	Excessive chimney draft	Install an automatic draft regulator.

НЕСПРАВНІСТЬ	ПРИЧИНА	РЕКОМЕНДОВАНІ ДІЇ
Smoke or odor in the room	Weak draft or chimney blockage	Check whether the chimney is blocked and whether the chimney damper is open. Inspect the chimney flue for tightness and blockages (clean if necessary).
	Cold chimney	Preheat the chimney (burn paper or small wood chips in the chimney).
	Wind entering the chimney	Install a chimney cowl on the chimney outlet to protect it from wind.
	Ventilators (bathroom, kitchen) create negative pressure in the living space and draw smoke from the fireplace stove	Turn off all such appliances.
Glass becomes dirty quickly	Poor-quality firewood	Use hardwood logs with a moisture content **not exceeding 20%**. Do not use softwood or soft deciduous wood. See section 3.5.
	The combustion chamber door is not airtight	Check the door seal.
	Weak chimney draft	Check whether the chimney is blocked and whether the chimney damper is open. Inspect the chimney flue for tightness and blockages (clean if necessary).
	Insufficient air supply	Increase the oxygen supply by opening the air supply regulator to the combustion chamber.
Soot forms and settles on the ceramic lining	Poor-quality firewood	Use hardwood logs with a moisture content **not exceeding 20%.** Do not use softwood or soft deciduous wood. See section 3.5.
	Insufficient air supply	Increase the oxygen supply by opening the air supply regulator to the combustion chamber.
	Too little firewood – the combustion chamber remains cold	Increase the amount of firewood, but not more than 1/3 of the combustion chamber volume.
Condensation on the glass, water droplets	Poor-quality firewood	Use hardwood logs with a moisture content **not exceeding 20%.** Avoid using wet or insufficiently dried firewood. See section 3.5.
	Moisture entering the chimney	Install a chimney cap to prevent rainwater from entering the chimney.

10. WASTE DISPOSAL

The fireplace insert is made of materials that are not harmful to the environment. All parts can be disposed of in accordance with generally accepted regulations, mainly as scrap metal.

- BOKAR fireplace inserts (stoves) must not be disposed of with household waste.
- The main materials — steel, glass, and ceramics — are suitable for recycling and can be disposed of at a local recycling collection point.
- Heat-resistant glass must be disposed of through specialized companies that hold the appropriate licenses and comply with waste management regulations.

11. STRUCTURE OF BOKAR FIREPLACE INSERTS

The structure of BOKAR fireplace inserts can be seen in Figure 11.

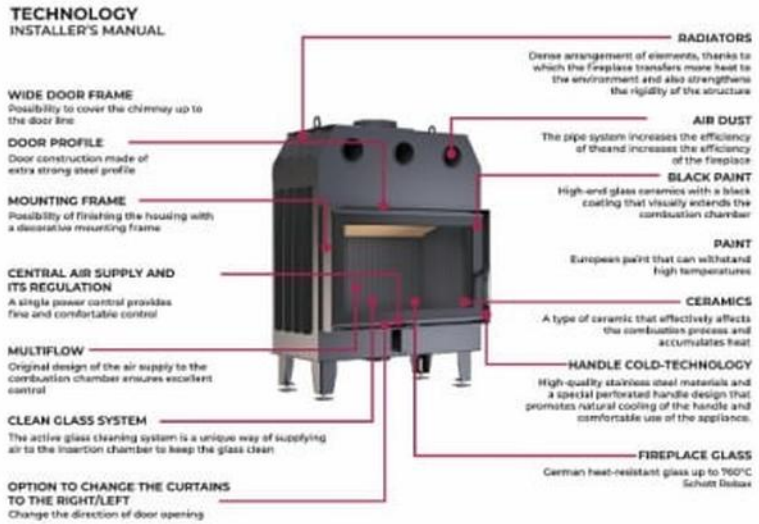


Figure 11. *Structure of the fireplace insert.*

Technical parameters and drawings of the insert models are available via QR code (in the "Documents" section of the selected model).

12. WARRANTY FOR BOKAR PRODUCTS

The BOKAR trademark guarantees the proper quality of materials and workmanship of its products. In the event that manufacturing defects or deficiencies are detected, the company undertakes to eliminate them or replace the product. The warranty is valid in accordance with the current legislation of Ukraine on consumer protection.

12.1. Warranty terms

The warranty period begins from the date of purchase, indicated in the sales documents. The warranty for BOKAR fireplace inserts is 5 years, unless otherwise specified in the product specifications.

To obtain warranty service, the following documents must be provided:

- A warranty card registered by a certified dealer;
- A proof of purchase (receipt or invoice).

If the document is missing, it is necessary to contact the certified dealer who supplied and sold the appliance.

12.2. Warranty service obligations

The Guarantor undertakes to repair manufacturing defects free of charge discovered during the warranty period or replace the product with a new one. Repair or replacement is carried out at the discretion of the Guarantor, depending on the complexity and nature of the defect.

The warranty applies only to products purchased from certified dealers and installed by qualified specialists who have the appropriate certificates.

12.3. Cases not covered by the warranty

The warranty does not apply in the following cases:

- Use of the product for purposes other than intended;
- Mechanical damage caused by the consumer or third parties;
- Modification of the product design not approved by the manufacturer;
- Incorrect installation performed by unqualified specialists;
- Damage caused by the use of low-quality or unsuitable fuel.

The warranty also does not cover glass elements, seals, ceramic lining, and other parts subject to natural wear during operation.

12.4. Procedure for submitting claims

In the event of defects, the owner of the product should contact an authorized service center or the dealer from whom the product was purchased. If it is impossible to contact the dealer, a written claim can be sent to the email address: info@bokar.com.ua.

Warranty service may be provided either at the place of operation of the product or at service centers designated by the Guarantor.

12.5. Liability

The Guarantor shall not be liable for any possible damage caused by the product in case of failure to follow operating instructions, improper installation, or unqualified repair.

It is recommended to carry out regular service maintenance of the fireplace insert by qualified specialists to ensure the long-term and safe use of the product.

bokar