CRESTRON SIMPL#PRO PROGRAM LIBRARY

CwsDebug

Self-contained CWS debug log page for Crestron SIMPL#Pro programs

Author	Mark Jervis
Company	Stage Front Presentation Systems
Version	1.3.0
Date	2026-08-11
Assembly	CwsDebug.dll (Crestron.SimplSharp.SDK.ProgramLibrary 2.21.257, net8.0) References Crestron.SimplSharpPro.DeviceSupport
Namespace	CwsDebug
Public type	CwsDebugPage

Overview

CwsDebug hosts a small, self-contained web page on the Crestron Web Server (CWS) that streams your program's own log messages and — on a hardware appliance — the processor error log. The page provides live search, severity filtering, light/dark themes, a pause control, a master logging switch, and one-click text export. It also hosts a **Signals panel** for viewing and forcing a registered device's joins live. The entire UI (markup, CSS, and JavaScript) is embedded in the library, so there are no external content files to deploy.

The log is held in a bounded in-memory ring buffer (size configurable at registration) and is **mirrored to disk**, so the most recent entries survive a program restart. Messages are stamped to millisecond resolution, and the page fetches only new entries on each poll. A process-wide **singleton** exposes the whole API statically, so any class on any thread can log without being handed an instance.

> **API note (since 1.1.0):** the API is *static*. Call `CwsDebugPage.LogInfo(…)` and `CwsDebugPage.Register(…)` directly — do *not* construct a `new CwsDebugPage()` (the constructor is private).

It is built as a **Program Library** and referenced by a SIMPL#Pro program; at build time the program bundles `CwsDebug.dll` into its own program archive (`.cpz`). The library is not separately loadable onto a processor.

Example

The debug page running live on an appliance. The header reads `TEST - Debugger` (the host program is named *TEST*); each entry shows its source, severity badge, message, and timestamp, with search and level filters above.



CwsDebug page at /cws/debugger/debugger.html (dark theme). Later builds add Logging and Pause controls to the header.

Installation

Add a reference to the library from your SIMPL#Pro program project:

```
<ItemGroup>
  <ProjectReference Include="..\CwsDebug\CwsDebug\CwsDebug.csproj" />
</ItemGroup>
```

(Or reference the compiled `CwsDebug.dll` directly.)

Usage

The API is static, so there is nothing to instantiate. Call `Register()` once from `InitializeSystem()`; you can log from anywhere, on any thread, even before `Register()` runs (early entries are kept and shown once the page is up).

```
using CwsDebug;

public class ControlSystem : CrestronControlSystem
{
    public override void InitializeSystem()
    {
        CwsDebugPage.Register("/debugger");          // default base path; buffer
defaults to 2000 entries
        // CwsDebugPage.Register("/debugger", 5000);  // optional: larger ring buffer
        // CwsDebugPage.MinLevel = CwsDebugPage.DebugLevel.Notice;  // optional: drop
anything below Notice
```

```
        CwsDebugPage.LogInfo("System starting");
        CwsDebugPage.LogNotice("Loaded {0} devices", deviceCount);
        CwsDebugPage.LogWarning("Low buffer on {0}", deviceName);
        CwsDebugPage.LogError("Comms timeout on {0}", deviceName);
        CwsDebugPage.LogFatal("Unrecoverable: {0}", reason);   // also written to the
system ErrorLog
    }

    public override void InitializeSystem_Example_Catch()
    {
        try { /* ... */ }
        catch (Exception e)
        {
            CwsDebugPage.LogException(e, "Error during init");  // full type + message +
stack trace
        }
    }
}
```

Cleanup is automatic — the library releases the CWS server and flushes the log to disk when the program stops or restarts — so calling `Dispose()` / `Shutdown()` by hand is optional.

Browsing to the page

Platform	URL
Appliance (RMC4, etc.)	`http://<processor>/cws/debugger/debugger.html`
VC-4 (Server)	`http://<processor>/VirtualControl/Rooms/<roomId>/cws/debugger.html`

API reference

All members are `static` on `CwsDebugPage`.

Member	Description
`LogInfo(msg, args)`	Records an informational message.
`LogNotice(msg, args)`	Records a notice-level message.
`LogWarning(msg, args)`	Records a warning-level message. *(new in 1.2.0)*
`LogError(msg, args)`	Records an error-level message.
`LogFatal(msg, args)`	Records a fatal message and mirrors it to the system error log.

`LogException(ex, context?)`	Records an exception at Error level with its full type, message and stack trace (and inner exceptions). *(new in 1.2.0)*
`Register(basePath, maxEntries?)`	Starts the CWS server. `basePath` defaults to `"/debugger"`; `maxEntries` defaults to `2000` (values ≤ 0 are ignored).
`MinLevel` PROP	Minimum severity recorded (`DebugLevel` = Info, Notice, Warning, Error, Fatal). Below-floor messages are dropped at the source. Defaults to `Info`. *(new in 1.2.0)*
`LoggingEnabled` PROP	Master record switch. When `false`, all `Log*` calls are no-ops (fatals are still mirrored to the system ErrorLog). Persisted across restarts. Defaults to `true`. *(new in 1.2.0)*
`Dispose()` / `Shutdown()`	Stops the server, flushes the log, releases resources. Idempotent and optional (cleanup is automatic).
`RegisterDevice(name, device)`	Exposes a device's joins in the Signals panel. Accepts any `BasicTriList` (XPanel, TSW, and other touchpanels). Safe from any thread and before `Register()`. *(new in 1.3.0)*
`UnregisterDevice(name)`	Drops a registered device; call before disposing it. Returns `false` if the name was not registered. *(new in 1.3.0)*
`UnregisterAllDevices()`	Drops every registered device. *(new in 1.3.0)*
`ValueWritesAllowed` PROP	Master switch for forcing. When `false` the Signals panel stays read-only whatever the page does. Defaults to `true`. Not persisted. *(new in 1.3.0)*
`ValueWritesArmed` PROP	Arm gate for forcing. Defaults to `false` at every program start and is never persisted. *(new in 1.3.0)*
`ValueArmTimeoutMs` PROP	Idle time before forcing disarms itself. Defaults to `300000` (5 minutes); `≤ 0` disables the timeout. *(new in 1.3.0)*

Each `Log*` method accepts an optional `string.Format` template plus arguments, e.g. `CwsDebugPage.LogInfo("Connected to {0}:{1}", host, port);`

Signals panel

Registering a device exposes its joins on the page, where they can be viewed live and forced — the same watch-and-force workflow as Crestron Toolbox, without leaving the browser. One call is all the program needs:

```
public override void InitializeSystem()
{
    CwsDebugPage.Register("/debugger");
    CwsDebugPage.RegisterDevice("Panel", tsPanel);   // any BasicTriList
}
```

Call `UnregisterDevice` before disposing the device. A program's own stop handler usually runs before the library's, so without it the page can briefly reach a disposed panel:

```
CwsDebugPage.UnregisterDevice("Panel");
panel.Dispose();
```

Adding a signal

Open **Signals** in the header and choose a device, a type (Digital, Analog or Serial) and a direction:

- **Out** — the program's value going *to* the panel: button feedback, gauge levels, indirect text. This is the side that can be forced.
- **In** — what the panel sends *back*: presses and slider moves. Read-only, because a panel's output signals cannot be written.
- **Both** — one row showing a join's two directions together.


Entering a **Smart Object ID** lists that object's signals by their SGD names (`Item 1 Pressed`, `Select Item`, `Item 1 Text`) instead of by number, so there is no need to work out which sig number a control uses. Rows can be given friendly names, and the list is remembered in the browser rather than declared in the program.

Viewing and forcing

Digital rows show the signal's state and light a lamp for as long as it is high — a press too brief to fall on a poll still registers as a flash. Analog and serial rows are edited by typing a value and pressing Enter; a value that changes on the system while a field is being edited replaces what was typed, so a force can never overwrite a change it has not shown.

Digital joins are forced with **High**, **Low** and **Pulse**. Forcing writes to the join itself: unlike Toolbox there is no separate "unforce", so a forced value stands until the program or the panel changes it again.

> **Forcing a feedback join does not run the program's button logic.** Writing a digital input drives the panel (the button lights); a program's press handlers run from the panel's *output* signals, which cannot be written. Forcing feedback tests what the panel displays, not what a press would do.

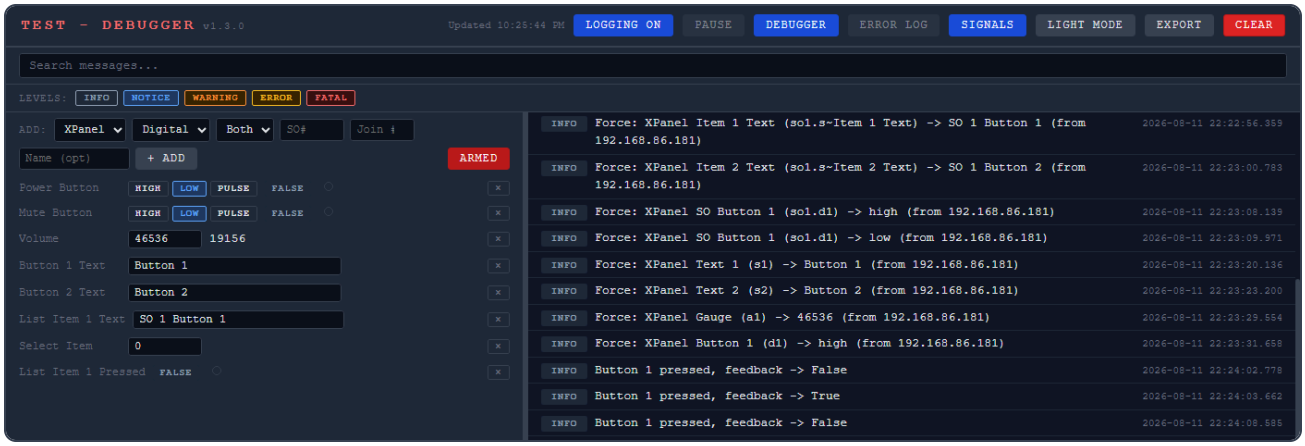

The Signals panel beside the log, with digital, analog, serial and Smart Graphics signals. The divider between the two panes can be dragged.

Keeping forcing safe

- Forcing is off until it is armed on the page. Arming is never persisted: it is forgotten whenever the program restarts or the page is reloaded, and lapses after `ValueArmTimeoutMs` (default five minutes) without activity.
- `ValueWritesAllowed = false` makes the panel read-only regardless of the page — the intended setting for a system being handed over, since it keeps the live view.
- Every force and every refusal is written to the log with the address it came from, ignoring both the master logging switch and the severity floor, so the record cannot be turned off.
- Signals coming from a panel are read-only, and forced values are never persisted.

Configuration & persistence

- **Buffer size:** the log is a bounded ring buffer; once full, the oldest line is dropped as each new one arrives. Size it per program with `Register("/debugger", maxEntries)` (default 2000). This bounds both memory and the JSON payload sent to the page.
- **Severity floor (`MinLevel`):** drops sub-threshold messages before they are ever stored — distinct from the page's level-filter buttons, which only hide already-recorded entries in the browser.
- **Master switch (`LoggingEnabled` / "Logging" button):** turns recording on for a debugging session and off when finished. The state is persisted, so it survives a restart. When off, the page status shows "LOGGING OFF".
- **Persistence:** the buffer is mirrored to the application directory (`cwsdebug_<path>.log`, plus `.state` for the switch) every few seconds when changed and once on program stop, then reloaded on the next `Register()` — so recent history survives a restart.
- **Pause:** a page-side control that freezes polling/rendering. Recording continues on the processor, so resuming shows everything logged during the freeze (subject to the ring cap).

Platform behavior

- **Base path (VC-4):** with the default base path, the redundant segment is collapsed so the page is served directly at `.../cws/debugger.html`. Passing an explicit (non-default) base path keeps it in the URL on every platform — required if a single program hosts more than one debug page.
- **Concurrent rooms (VC-4):** each room is an isolated program instance with its own CWS namespace and its own log, so multiple rooms run side-by-side without conflict.
- **Header title:** shown as `"{Name} - Debugger"`, where Name is the *room name* on VC-4 and the *host program's namespace/assembly name* on an appliance, falling back to the controller prompt name, then the base-path segment, then "Debugger".
- **Processor error log:** read via the console `err` command and shown only on a hardware appliance; the feature is hidden on VC-4, where no per-program console error log exists.

A note on network access

The debug page has no login. Anyone who can reach the processor on the network can open the page, read the log, clear it, or switch logging off — the same way Crestron's own built-in web pages work. On a dedicated control-system network this is normally fine. If the processor sits on a network shared with general office traffic or guests, keep in mind that the log is visible to everyone on that network — so avoid logging passwords, door codes, or anything else sensitive, and ask your IT/network administrator to place the processor on a restricted VLAN if that's a concern.

The same applies to the Signals panel, which can change values on a running system. Forcing is switched off until someone arms it, arming is forgotten whenever the program restarts or the page is reloaded, it switches itself back off after five idle minutes, and every force is written to the log with the address of the machine that sent it. For a system being handed over, set `CwsDebugPage.ValueWritesAllowed = false` to leave the panel read-only while keeping the live view.