MD770 RGB BT Box Contents:

- MD770 RGB BT Keyboard **(two halves)**
- USB C to C Coiled Cable ***1pcs**
- USB A to C Cable ***1pcs**
- Mistel Key Puller ***1pcs**
- Rubber Foot Stand W/Screw ***4pcs**
- User Manual ***1pcs**

MD770 RGB BT Specifications:


- Model **Barocco MD770 RGB BT**
- Keyboard Layout **ANSI**
- Keycap **PBT Double Shot**
- Macro Funtion **YES**
- Polling Rate **1000Hz**
- Key Switch **Cherry MX RGB**
- Matrix **NKRO**
- Media Key **Yes**
- On-Board Memory **Yes**
- Operating System **Window OS / Mac OS**
- Dimensions **L 334.5mm x W 140mm x H 34.5mm**
- Weight **830g**

Keyboard Installation:

■ **Check the keyboard and contents before use to ensure everything is functioning properly**


- All dip switches OFF
- All key press properly and smoothly
- All accessories are in the box

Congratulations, now let's get the keyboard going. The right half of the keyboard is the "master", so first plug the USB C to C coiled cable joining the left and right sides. Then use the USB A to C cable to plug the right half of the keyboard into your computer.

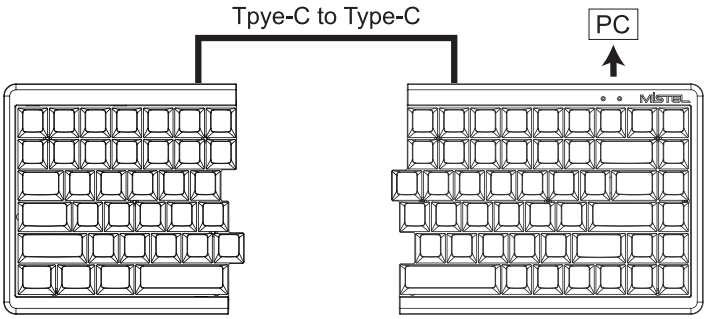


Keyboard Installation:


To use the keyboard separately, insert the USB A to C cable into the connector on both halves and remove the USB C to C coiled cable between both halves.

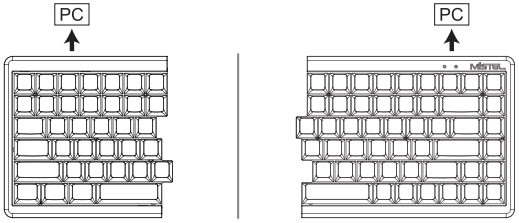

*When both halves are connected, insert the USB A to C cable into the left side keyboard, the right side keyboard will not function properly.

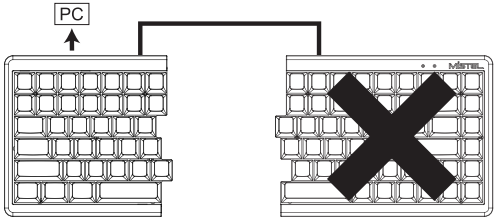

LED Indicators:



■ **LED1 : Keyboard Layer / Programming Indicator.**

choose different programming layers for the keyboard. This allows each key to have a different function programmed for each layer.

- LED1 Off --- Default Layer
- LED1 Red --- Layer 1
- LED1 Green --- Layer 2
- LED1 Blue --- Layer 3
- LED1 White --- Programming

■ **LED2 : Capslock Indicator.**

DIP Switch:

- Dip Switch 1 ON: Mac layout ; OFF for Windows layout.
- Dip Switch 2 ON: Capslock and L_Ctrl keys exchange position.
- Dip Switch 3 ON: L_Win and L_Alt keys exchange position.
- Dip Switch 4 ON: Capslock and Fn keys exchange position.

Keyboard Layout Switch:

■ **Keyboard Arrangement change.**

Cycle change different keyboard layout when press Pn + “.

- Default --- QWERTY
- Press 1 time --- COLEMAK
- Press 2 time --- DVORAK



Macro:

■ **Macro Programming Instruction:**

- Macro programming is prohibited on the default layer.
- Macro is not allowed on the following keys, for example: **Pn / Fn.**

1. Choose Layer 1, 2 or 3.



Default **Layer1** **Layer2** **Layer3**

Pn + M --- Default (LED1 Off)
Pn + , < --- Layer 1 (LED1 Red)
Pn + . > --- Layer 2 (LED1 Green)
Pn + / ? --- Layer 3 (LED1 Blue)

2. Press Fn + R_Ctrl to enter marco mode. (LED1 will light on white)




3. Reassign the key. The LED1 will blink white.
   3-1) Select the key position for the new macro.
   3-2) Press the button to be changed (For example, select the “L” key first, and then press the “P” key. This would change the position of the “L” key to the “P” key.)
4. Press the Pn key once to save the new setting. The LED1 will turn solid white again.
5. Press Fn + R_Ctrl again to exit the macro mode. The LED1 will turn off.
6. Repeat step 1 through 5 to change any of the original key to other keys.

Remapping:

■ **Remapping Instruction:**


- Remapping is prohibited on the default layer.
- You cannot move the Fn/Pn key to R_Ctrl, R_Shift or L_Shift in Layer 1, 2 or 3.
- To move a command from one key to another.
  For example, to remap the Fn/Pn key to the CapsLock key.

1. Choose Layer 1, 2 or 3.




Pn + M --- Default (LED1 Off)
Pn + , < --- Layer 1 (LED1 Red)
Pn + . > --- Layer 2 (LED1 Green)
Pn + / ? --- Layer 3 (LED1 Blue)

2. Press Fn + L_Shift for 3 seconds (LED1 light on Red)



Press Pn + L_Shift for 3 seconds (LED1 light on Red)



3. Press the New Function Key (for example CapsLock).
4. The Target Key is now remapped as the New Function Key.
   (for example, now the Fn/Pn command is activated when pressing the CapsLock key).


Reset:

- Reset Current Single Layer (to factory settings): Choose Layer 1, 2 or 3 then press Fn + R for about 1 seconds (LED3 will flash White 5 times).
- Full Keyboard Reset (to factory settings): Press 2 Alt keys together for 1 seconds. (LED 1 will flash White 5 times). ***Warning: all programmed layers, macros and remaps will be lost.**

Bluetooth Pairing:


■ Interface Swich:

- Pn + 1 = **BT mode**
- Pn + 2 = **USB mode**



■ Keyboard Pairing:

1. Turn the BT switch to " ON  ".
2. Press **Pn + 1** to switch to BT mode, then press **Pn + F1 / F2 / F3** for about 3 seconds to pair your deivce (LED2 flash blue and will turn off after pairing).



Pn + F1 --- Device1
Pn + F2 --- Device2
Pn + F3 --- Device3

3. Turn on PC Bluetooth and other devices settings.
4. Select " Add Bluetooth or orther devices ".



5. Add a device and select " Mistel1 / Mistel2 / Mistel3 "




6. Complete.

■ Multi-device Switch:

- Press **Pn + F1 / F2 / F3** to switch to different devices (LED2 flash blue for 2 times)
- Maximum pairing for 3 different devices.

*Note: The battery will be fully charged within 2-3 hours. When you operate the RGB LED under BT mode, Build-in lithium battery will be no power after 30 minutes.

Fn/Pn Keymap:

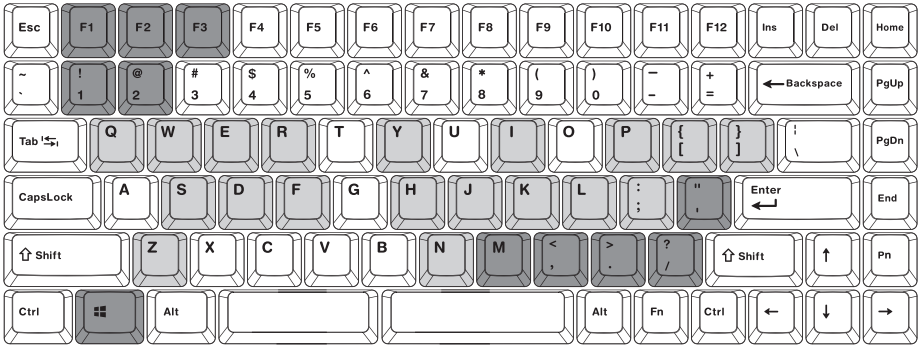

Pn + " = **Keyboard Arrangement Change**
Pn + L_Win = **Win Lock**

Pn + M = **Default Layer**
Pn + < = **Layer 1**
Pn + > = **Layer 2**
Pn + ? = **Layer 3**

Pn + 1 = **BT mode**
Pn + 2 = **USB mode**
Pn + F1 = **BT Device1**
Pn + F2 = **BT Device2**
Pn + F3 = **BT Device3**

Fn + Q = **Previous Track**
Fn + W = **Play / Pause**
Fn + E = **Next Track**

Fn + S = **Volume Up**
Fn + D = **Volume Down**
Fn + F = **Volume Mute**


Fn + P = **PrtSc**
Fn + [= **ScrLk**
Fn +] = **Pause**
Fn + ; = **Insert**
Fn + H = **Home**
Fn + N = **End**

Fn + **I** = **Up Arrow**
Fn + J = **Left Arrow**
Fn + K = **Down Arrow**
Fn + L = **Right Arrow**

Fn + Z = **APP**
Fn + Y = **Calculator**
Fn + R = **Reset Single Layer**


RGB Lighting Mode:

- Default setting: Wave mode.
- Pn + Esc = Color palette.
- Pn + F6 = Red color adj.
- Pn + F7 = Green color adj.
- Pn + F8 = Blue color adj.
- Pn + F5 = LED mode.
- Pn + 0 = Turn off LED.




1st	Fulling lighting	Customized
2nd	Breathing	Customized
3rd	Cycling	RGB Random
4th	wave	RGB Random
5th	Rain drop	RGB Random
6th	Reactive	RGB Random
7th	Ripple	RGB Random
8th	Rotating	RGB Random
9th	Snake	RGB Random
10th	WASD and Arrow key	

- Pn + Arrow key (Up / Down) = adjust LED **Brightness**.




- Pn + Arrow key (Right / Left) = adjust LED **Speed**.



- Pn + F9 = Single LED setting in Zone1. (press again to save it)
- Pn + F10 = Display the customized Zone1 LED.

Mac OS Function:

- You can not upgrade the keyboard firmware under Mac OS.
- Ensure DIP switch is in Mac mode. (DIP switch 1 On)



F1	Decrease screen brightness
F2	Increase screen brightness
F3	MISSION CONTROL
F4	
F5	Decrease keyboard brightness
F6	Increase keyboard brightness
F7	Previous track
F8	PLAY/PAUSE
F9	Next track
F10	Mute
F11	Decrease volume
F12	Increase volume

Troubleshooting:

■ If the keyboard is not working properly, do the following steps.

1. Perform a single layer reset on the layer that is not working properly.
2. Perform a full keyboard reset.
3. Replug all keyboard cables.

■ If the left half of the keyboard does not work properly, do the following steps.

1. Check the USB C cable joining the two halves. Inspect the cable to check if it is faulty.
2. Visually check if the right and left USB connectors on the keyboard are damaged.
3. Confirm that the right half is working properly alone (unplug the left side).
4. Download firmware for the keyboard and test again after replug.

■ If the key fails to work or respond properly, please check it by the following steps.

1. Check that all 4 dip switches are off.
2. Perform a single layer reset on the layer that is not working properly.
3. Perform a full keyboard reset.
4. Check whether a single key does not respond or multiple keys do not respond.
   - If a single key does not respond, there may be a shaft fault that needs to be repaired.
   - If there are multiple keys that do not respond at the same time, a short circuit may be present somewhere inside the keyboard.


Firmware Update:

■ **How to download or update firmware on the MISTEL keyboard:**

1. Download new firmware from MISTEL web-site, www.mistelkeyboard.com/support
2. Connect and upgrade the firmware by each side separately.


▪ Note: Mac OS does not support the firmware update software.

■ **Do not connect the coiled cable between LEFT and RIGHT keyboard while updating.**

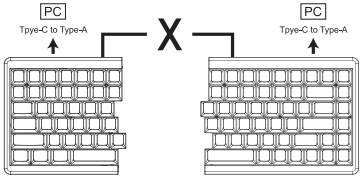

■ **Firmware will detect the keyboard version automaticly when plug-in.**

▪ If the “current keyboard firmware version” is blank, please make sure you download the correct firmware version from MISTEL web-site.

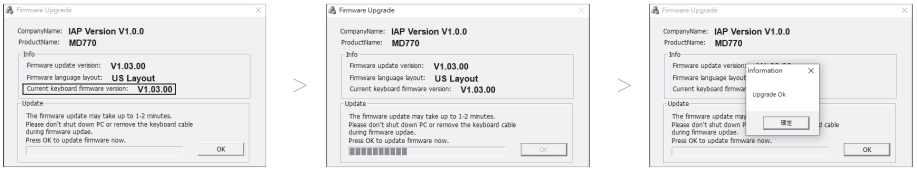

Warranty Description:

▪ The warranty for each keyboard is one year. If the keyboard fails after the warranty period, MISTEL can repair the keyboard but you will be asked to pay for shipping to and from MISTEL. Repair costs will only be charged for major parts failures.

▪ If the keyboard fails within one year, we will provide free repair service. Please send the keyboard to us for maintenance and repair. We will send it back to you as soon as possible after repair or provide parts for you to replace on your own.

▪ If the keyboard is damaged due to human factors or the keyboard is damaged due to external forces, we can provide repairs but will charge shipping and repair fees. If the keyboard has water or fluid inside the PCB, DO NOT wash it with water, but use only a dry cloth. Fluid in the keyboard can cause corrosion, requiring the entire PCB to be replaced.

▪ If you need any other service or help with your new keyboard, please email MISTEL at: services@mistelkeyboard.com

MD770 RGB BT 產品內容物:

- MD770 RGB BT 鍵盤 **(左半、右半)**
- USB C to C 捲線 ***1條**
- USB A to C 直線 ***1條**
- Mistel 拔鍵器 ***1個**
- 橡膠腳墊與螺絲 ***4組**
- 使用說明書 ***1本**
- 內建鋰電池 ***1個**

MD770 RGB BT 產品規格:


- 型號 **Barocco MD770 RGB BT**
- 鍵盤配置 **ANSI**
- 鍵帽 **PBT 二色成型**
- 巨集功能 **YES**
- 回報率 **1000Hz**
- 軸體 **Cherry MX RGB**
- 按鍵衝突 **NKRO**
- 多媒體 **Yes**
- 硬體儲存 **Yes**
- 作業系統 **Window OS / Mac OS**
- 鍵盤尺寸 **L 334.5mm x W 140mm x H 34.5mm**
- 鍵盤重量 **830g**

產品安裝:

■ **使用前請務必檢查產品外觀、功能與盒裝內容物。**


- 指撥開關保持關閉
- 所有按鍵按壓順暢與輸出正常
- 盒裝內容物是否完整

鍵盤的主控端位於右邊，透過USB A to C直線將右邊與硬體裝置連接，再使用USB C to C捲線連接鍵盤左右兩邊，即可使用完整的鍵盤功能。

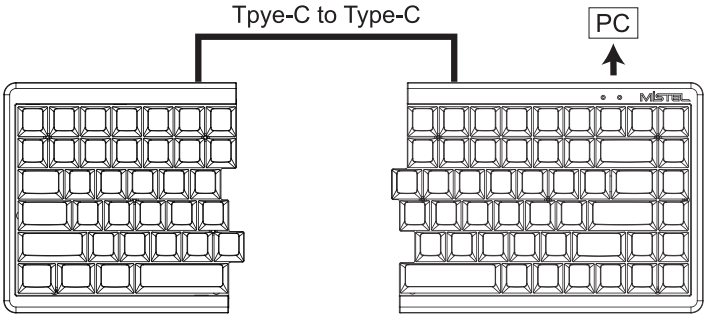


產品安裝:


單獨使用左邊/右邊鍵盤，僅需要將USB A to C直線連接至硬體裝置即可單獨使用。

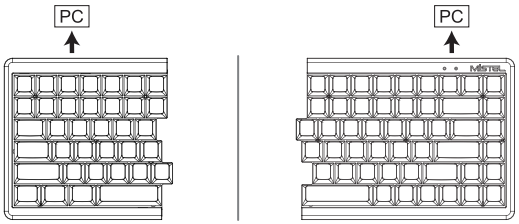

*如果以左邊連接硬體裝置，並且將兩邊連接時，右邊則會沒有功能。

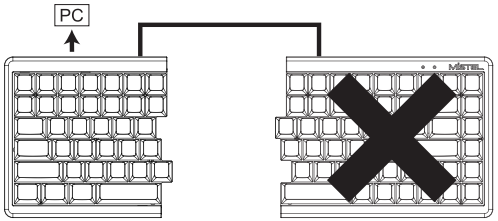

LED 指示燈:



■ LED1：鍵盤配置 / 巨集功能指示燈

為鍵盤選擇不同的巨集編輯層。

- LED1 未亮燈 --- 預設層
- LED1 紅燈 --- 編輯層 1
- LED1 綠燈 --- 編輯層 2
- LED1 藍燈 --- 編輯層 3
- LED1 白燈 --- 巨集編程中

■ LED2：大寫鎖定指示燈

指撥開關:

- 指撥開關1 ON: Mac 鍵位配置 ; OFF Windows 鍵位配置
- 指撥開關2 ON: Capslock 與 L_Ctrl 鍵位交換
- 指撥開關3 ON: L_Win 與 L_Alt 鍵位交換
- 指撥開關4 ON: Capslock 與 Fn 鍵位交換

鍵位配置切換:

■ 按下 Pn + “ 循環切換鍵位配置

- 預設 --- QWERTY
- 按一次 --- COLEMAK
- 按二次 --- DVORAK




巨集編程:

■ 巨集編程操作:

- 無法在預設層進行巨集編程
- 在編程操作時，有些鍵無法做編程設定: **Pn / Fn**

1. 選擇編輯層 1, 2 or 3



預設層 **編輯層1** **編輯層2** **編輯層3**

Pn + M --- 預設層 （ LED1 未亮燈 ）
Pn + , < --- 編輯層 1 （ LED1 紅燈 ）
Pn + . > --- 編輯層 2 （ LED1 綠燈 ）
Pn + / ? --- 編輯層 3 （ LED1 藍燈 ）

2. 按下 Fn + R_Ctrl 進入編程模式 (LED1 白燈衡亮)




3. 鍵位編程 (LED1 白燈閃爍)
   3–1) 選擇可編程之原始鍵位置
   3–2) 按下欲更改之按鍵 (舉例： 先選擇 “L” 鍵後再按下 “P” 鍵，此時按下 ”L” 鍵輸出為 ”P”)
4. 按下 Pn 一次儲存新的編程設定 (LED1 返回白燈衡亮)
5. 按下 Fn + R_Ctrl 退出編程模式 (LED1 白燈熄滅)
6. 重複步驟 (1) 至 (5) 來編程其他鍵位

Fn/Pn 功能鍵位移:

■ Fn/Pn 功能鍵位移模式

- 無法在預設層進行功能鍵位移
- 無法將 Fn/Pn 位移至 **R_Ctrl**、**R_Shift** 或 **L_Shift**


1. 選擇編輯層 1, 2 or 3




預設層 **編輯層1** **編輯層2** **編輯層3**

Pn + M --- 預設層 （LED1 未亮燈）
Pn + , < --- 編輯層 1（LED1 紅燈）
Pn + . > --- 編輯層 2（LED1 綠燈）
Pn + / ? --- 編輯層 3（LED1 藍燈）

2. 長按 Fn + L_Shift 約3秒後進入功能鍵位移模式 LED1 紅燈閃爍，放開 Fn + L_Shift 後紅燈恆亮



長按 Pn + L_Shift 約3秒後進入功能鍵位移模式 LED1 紅燈閃爍，放開 Pn + L_Shift 後紅燈恆亮




3. 按下欲替換之功能鍵位置 (舉例：CapsLock).
4. 此時 Fn/Pn 功能鍵已位移至 CapsLock，原先 Fn/Pn 位置則輸出Windows鍵

鍵盤功能重置:

- 重置目前的編程分層(恢復原廠設定值)：選擇編輯層1–3，長按 Fn+R 直到 LED1 白燈閃爍完畢



- 重置整把鍵盤功能(恢復原廠設定值)：長按 R_Alt+L_Alt 直到 LED1 白燈閃爍完畢



藍芽功能:


■ 鍵盤介面切換:

- Pn + 1 = BT 模式
- Pn + 2 = USB 模式



■ 鍵盤藍芽配對:

1. 將位於右邊鍵盤底部的藍芽開關打開
2. 按下 **Pn + 1** 切換至藍芽模式，再長按 **Pn + F1 / F2 / F3** 約3秒開始進行藍芽配對 (LED2 閃爍藍燈)



Pn + F1 --- 裝置1
Pn + F2 --- 裝置2
Pn + F3 --- 裝置3

3. 開啟電腦藍芽裝置設定
4. 選擇 " 新增藍芽與其他裝置 "



5. 新增裝置並選擇 " Mistel1 / Mistel2 / Mistel3 "




6. 完成藍芽配對 (LED2 藍燈熄滅)

■ 多重裝置切換:

- 按下 **Pn + F1 / F2 / F3** 進行藍芽裝置間的切換 (LED2 閃爍藍燈兩次)
- 藍芽裝置配對上限3組

*備註：MD770 RGB BT內建580mA鋰電池，第一次使用請先把電池充滿，大約需要2–3小時
請不要自行拆解電池，這將會喪失保固權益，且會造成鍵盤故障並產生危險
再藍芽模式下操作RGB LED時，內置鋰電池將於30分鐘耗盡

Fn/Pn 組合鍵:

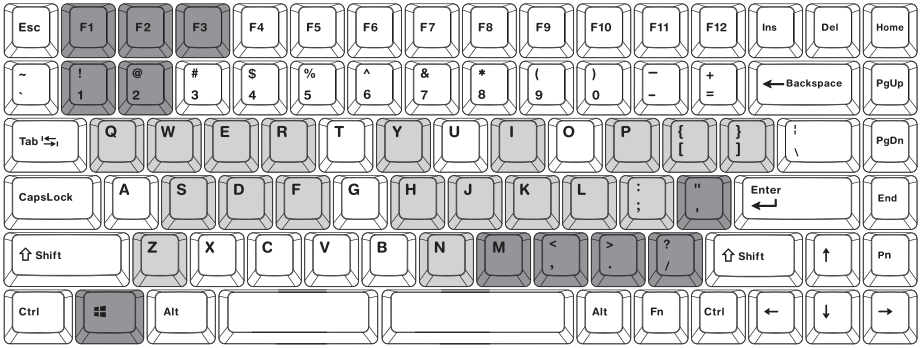

Pn + “ = 鍵位配置切換
Pn + L_Win = Win 鎖/解鎖

Pn + M = 預設層
Pn + < = 編輯層1
Pn + > = 編輯層2
Pn + ? = 編輯層3

Pn + 1 = **BT 模式**
Pn + 2 = **USB 模式**
Pn + F1 = **BT 裝置1**
Pn + F2 = **BT 裝置2**
Pn + F3 = **BT 裝置3**

Fn + Q = 上一首
Fn + W = 播放/暫停
Fn + E = 下一首

Fn + S = 音量增加
Fn + D = 音量減少
Fn + F = 靜音


Fn + P = PrtSc
Fn + [= ScrLk
Fn +] = Pause
Fn + ; = Insert
Fn + H = Home
Fn + N = End

Fn + I = 方向鍵 (上)
Fn + J = 方向鍵 (左)
Fn + K = 方向鍵 (下)
Fn + L = 方向鍵 (右)

Fn + Z = APP
Fn + Y = 計算機
Fn + R = 重置單一編輯層


RGB 燈光模式:

- 原始設定: 波浪模式
- Pn + Esc = 開啟調色盤
- Pn + F6 = 紅色燈調整
- Pn + F7 = 綠色燈調整
- Pn + F8 = 藍色燈調整
- Pn + F5 = 燈光模式切換
- Pn + 0 = 關閉所有燈光




1st	燈光全亮	自定義
2nd	呼吸模式	自定義
3rd	循環模式	隨機
4th	波浪模式	隨機
5th	雨滴模式	隨機
6th	單點亮模式	隨機
7th	漣漪模式	隨機
8th	旋轉模式	隨機
9th	貪食蛇模式	隨機
10th	WASD與方向鍵模式	

- Pn + 方向鍵 (上 / 下) = 調整**燈光亮度**



- Pn + 方向鍵 (右 / 左) = 調整**燈光速度**



- Pn + F9 = 單燈自定義 ZONE 1 (再次按下 Pn+F9 儲存設定)
- Pn + F10 = 顯示ZONE 1 自定義燈光

Mac OS 模式:

▪ 確保將指撥開關1開啟，進入Mac模式



F1	減少螢幕亮度
F2	增加螢幕亮度
F3	MISSION CONTROL
F4	
F5	減少鍵盤燈光亮度
F6	增加鍵盤燈光亮度
F7	上一首
F8	播放/暫停
F9	下一首
F10	靜音
F11	減少音量
F12	增加音量

故障排除:

■ 如果鍵盤功能沒有辦法正常運作，請嘗試以下步驟

1. 如果在單一編輯層下無法正常運作，請試著重置單一編輯層
2. 如果整把鍵盤無法正常運作，請試著重置整把鍵盤
3. 重新安裝所有鍵盤連接線

■ 如果左半邊鍵盤功能沒有辦法正常運作，請嘗試以下步驟

1. 檢查左右鍵盤連接線是否故障，並確實將連接線完整插入鍵盤
2. 觀察鍵盤上的USB連接口是否有損壞情況(歪斜、針腳或卡榫斷裂)
3. 單獨使用右邊鍵盤時，檢測功能輸出是否正常
4. 於MISTEL官方網站下載鍵盤韌體，更新後是否正常

■ 如果按鍵無法正常運作，請嘗試以下步驟

1. 檢查鍵盤底部指撥開關是否全部關閉
2. 如果在單一編輯層下無法正常運作，請試著重置單一編輯層
3. 如果整把鍵盤無法正常運作，請試著重置整把鍵盤
4. 檢查是單一按鍵還是多顆按鍵無法正常運作
   - 如果是單一按鍵，有可能為軸體故障，需要進行維修
   - 如果是多顆按鍵，有可能為PCBA短路，需要進行維修


韌體更新:

■ 如何下載與更新鍵盤韌體:

1. 請至 MISTEL 官方網站/技術支援 www.mistelkeyboard.com/support 下載最新韌體檔
2. 將兩邊鍵盤單獨連接至硬體設備後，執行韌體更新檔


▪ 備註：韌體更新檔無法在 Mac OS 作業系統下執行

■ 執行韌體更新檔時，請勿將左右鍵盤連結

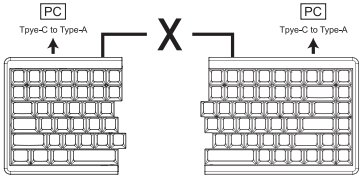

■ 當連接線正確插入鍵盤後，當前韌體版本將會自行偵測

▪ 如果"current keyboard firmware version"是空白的，表示硬體沒有偵測到鍵盤，請確保下載的韌體檔版本是否正確

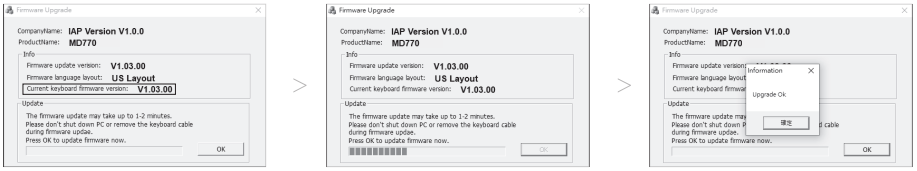

保固條款:

▪ MISTEL全系列鍵盤提供消費者與授權分銷一年保固

▪ 產品保固期內僅適用於正常使用下之材料或製造過程所造成的問題，提供維修或更換零件的服務，保固期內的往來費用由廠商或消費者各自支付一趟費用。若屬人為造成之產品損壞故障，在可維修的情形下，將按照損壞情況來收取相關維修費用，若無法維修將退還予消費者

▪ 若產品本體已曾拆解過或序列號及保固貼紙遭移除、損毀變更，將無法進行產品保修

▪ 若產品已過保固期，往來兩趟之費用將由消費者支付，維修亦照損壞情況收取相關維修費用

▪ 本產品使用時，不得將飲料或是任何液體潑灑/倒入鍵盤中，如此將導致鍵盤完全故障，亦無法維修請消費者要特別注意

Barocco Mistel 键盘
使用说明书

目录

1. 产品配件内容 —— 51
2. 产品规格 —— 51
3. 键盘布局 —— 51
4. LED指示灯 —— 51
5. 键盘使用说明 —— 52
6. 按键自定义功能 —— 52
7. 功能键调整 —— 52
8. 蓝牙配对说明(仅限蓝牙版本) —— 53
9. 键盘配列切换 —— 53
10. 键盘重置 —— 53
11. DIP开关说明 —— 53
12. RGB灯光模式 —— 54
13. 默认层Fn+Pn功能说明 —— 54
14. Mac OS功能 —— 55
15. 保修条款 —— 55
16. 官方联系方式 —— 55


1. 产品配件内容：

MD770 键盘x1
USB类型 C to C线x1
USB 类型C to A线x1
原厂拔键器 x1
使用说明书 x1
内置电池（仅限蓝牙版本）


2. 产品规格：

型号：Barocco MD770
键帽：PBT 二色成型键帽
连接方式：USB / 蓝牙
回报率：1000Hz
轴体：Cherry MX轴
按键冲突：有线下全键无冲 / 蓝牙下6键无冲
按键自定义功能：支持
多媒体功能键：支持
板载存储功能：支持
操作系统：Windows / Mac OS
尺寸：长 442 mm x 宽 138 mm x高 42mm

3. 键盘布局：

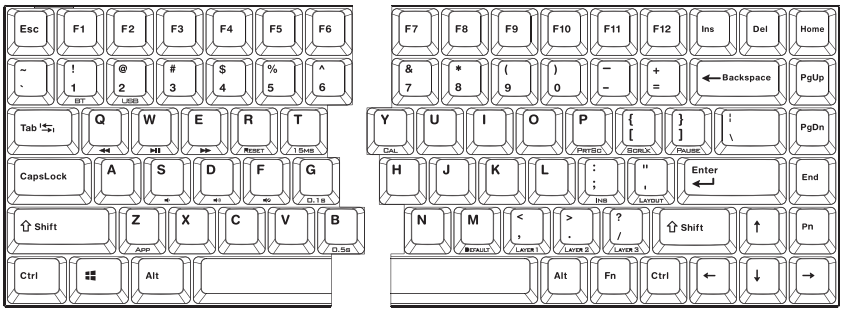


4. LED指示灯：



LED1：可编程操作指示灯
　　显示目前分层位置
　　电池低电量时，闪烁红灯（仅限蓝牙版本）
LED2：Capslock 指示灯
　　BT蓝牙配对指示灯（仅限蓝牙版本）
　　电池充电时，快速闪烁蓝灯（仅限蓝牙版本）
　　完成充电时，蓝灯恒亮（仅限蓝牙版本）

5. 键盘使用说明:

1. 使用USB TypeC to C 线材将左右键盘连接
2. 使用USB TypeC to A 线材将右侧键盘与硬件设备连接
*备注:主要控制IC位于右侧的键盘, 如果要同时使用左右两边键盘, 请务必使用USB将右侧键盘与设备连接;也可以单独使用左侧键盘, 此时将USB与左边键盘链接。
3. 如您使用MD770 RGB 蓝牙版本, 请先确认电池电量是否足够, 并开启位于键盘底部的蓝牙开关。
*备注:如果在蓝牙模式下使用RGB灯效, 将加速电池耗电量, 蓝牙功能仅限有蓝牙之产品使用。

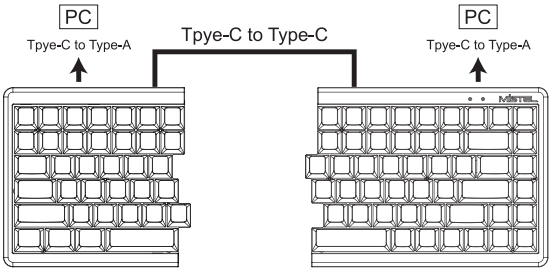

6. 按键自定义功能:

- 在默认层操作时, 不能使用自定义功能。
- 在自定义按键时, 有些键无法做自定义设置, 例如 Fn/Pn。
- 在自定义按键前, 需检查是否将底部DIP开关完全关闭。
1. 选择自定义分层1、2、3 (Pn + </>/?) , 按下Pn+< / Pn+> / Pn+? 选择选中的设置层
   a. Pn+M=默认键位层=LED1未亮灯
   b. Pn+<=第一层=LED1 亮红灯
   c. Pn+>=第二层=LED1亮绿灯
   d. Pn+?=第三层=LED1亮蓝灯
2. 按下Fn+右Ctrl(LED1 亮起白灯进入自定义按键)
3. 修改方法:先选择原始按键, 再按下将要更改的按键
   (举例:先选择L键, 再按下P键, 此时L键位置更换成P键)
4. 按下Pn键一次, 存储新的编程设置(LED1 白灯再次亮起)
5. 重复步骤1-4, 可编程其他键位
6. 按下Fn+右Ctrl退出编程模式(LED1灯熄灭)
7. 针对于已经修改后的按键, 如要改回原按键, 进入自定义模式后, 连续按原按键两次后进行保存, 即可改回。

7. 功能键调整:

举例:要将Fn键移至Capslock位置
1. 选择编程分层1、2、3层 (Pn+<, Pn+>, Pn+?)
2. 长按Fn+左Shift约3秒(LED2 闪烁红灯)
3. 按下要替换的功能键Capslock
4. 此时Fn键已移至Capslock, 而原本的Fn键位置变成Windows Key
*备注:Fn键不能被设置在右Ctrl, 右Shift与左Shift键位上

8. 蓝牙配对说明(仅限蓝牙版本):

请先开启键盘底部蓝牙开关
配对:按下Pn+1切换至BT蓝牙模式, 再长按Pn+F1(或F2/F3)约三秒后(LED2闪烁蓝灯)开始配对
a. Pn+F1=配对设备1
b. Pn+F2=配对设备2
c. Pn+F3=配对设备3
完成配对后, LED2灯会熄灭
*蓝牙设备配对上限3组
*键盘默认为蓝牙模式
切换:按下Pn+F1(F2/F3)切换不同蓝牙设备, 切换设备时, LED2会闪烁2次
*蓝牙与有线模式切换:当连接USB时, 按下Pn+1切换至蓝牙模式/Pn+2切换至有线模式
注意:MD770 RGB BT内置一个580mA 锂电池, 第一次使用请先把电池充满, 大约需要2-3小时。
请不要自行拆解电池, 这将会丧失质保权益, 且会造成键盘故障并产生危险, 另外请勿将热源靠近电池。
*在蓝牙模式下开始RGB灯效时, 内置锂电池将于30分钟内耗尽。

9. 键盘配列切换 :

按下Pn+"来切换不同种类的键盘配列
原始配列:QWERTY
切换一次:COLEMAK
切换二次:DVORAK
可循环切换

10. 键盘重置(恢复出厂设置):

重置当前键位层(原厂设置值):
选择编程分层1~3, 长按Fn+R约三秒, 将单一分层恢复至原厂设置值(LED1闪烁白灯两次)

重置键盘(原厂设置值):
同时长按左右Alt键约三秒, 将键盘全部功能恢复原厂设置值(LED1闪烁白灯五次)

11. DIP开关说明:

DIP 开关1:On=Mac 配列和功能, Off=Windwos 配列
DIP开关2:Capslock和左Ctrl互换键位(只能在QWERTY排列)
DIP开关3:左Wins和左Alt互换键位(只能在QWERTY排列)
Dip开关4:Capslock和Fn键位互换
备注:如同时打开Dip1, Dip2与Dip3, 键盘会无法使用。

12. RGB灯光模式：

1. 原始设置 = 波浪亮灯模式
2. Pn + Esc = 打开调色盘
3. Pn + F6 = 红色灯调整, Pn + F7 = 绿色灯调整, Pn + F8 = 蓝色灯调整
4. Pn + F5 = 灯光模式切换（每按一次灯光切换一次, 顺序循环）

模式 1	键盘全亮	可自定义
模式 2	呼吸模式	可自定义
模式 3	循环模式	随机
模式 4	波浪模式	随机
模式 5	雨滴模式	随机
模式 6	单点亮模式	随机
模式 7	涟漪模式	随机
模式 8	旋转模式	随机
模式 9	贪食蛇模式	随机
模式 10	WASD与方向键	

Pn+方向鍵功能：
Pn+上下方向键：调整灯光亮度
Pn+左右方向键：调整灯光速度

LED 自定义方式：

Pn+F9	设置单个按键的区域灯光	再次按压Pn+F9存储
Pn+F10	显示自定义灯光的区域	
Pn+0	关闭全部灯光	

13. 默认层Fn+Pn功能说明：

键盘与编程功能	多媒体功能	其他功能
Pn+" 切换键盘排列	Fn+Q : 上一首	Fn+P：PRINT SCREEN
（QWERTY, COLEMAK , DVORAK）	Fn+W : 播放/暂停	Fn++：SCROLL LOCK
Pn+M：默认层	Fn+E : 下一首	Fn+] : Pause
Pn+<：编辑层1	Fn+S : 音量增加	Fn+H：Home
Pn+>：编辑层2	Fn+D : 音量减少	Fn+N：End
Pn+?：编辑层3	Fn+F : 静音	Fn+; : Insert
Pn+G：0.1ms		Fn+I : 上方向鍵
Pn+B：0.5ms		Fn+J : 左方向鍵
Pn+T：15ms		Fn+K : 下方向鍵
Pn+1：切换蓝牙模式		Fn+L : 右方向鍵
Pn+2：切换有线模式		Fn+Z：App
Fn+R：重置单层		Fn+Y：计算器
Pn+左Win：锁/解锁Win键		

14. Mac OS功能：

备注：打开DIP开关1，启动Mac键盘功能

F1	降低屏幕亮度
F2	增加屏幕亮度
F3	调度中心
F7	上一首
F8	播放/暂停
F9	下一首
F10	静音
F11	降低音量
F12	增加音量

在Mac OS下重置键盘设定：同时长按左右Command键约5秒，灯光闪烁5次后，即恢复至原厂设定值。

15. 保修条款：

1. Barocco Mistel 全系列键盘产品提供一年质保。
2. 保修期内仅适用于正常使用所造成的问题，提供维修或更换零件的服务，质保期内的往来运费由厂商和消费者各支付一趟。若属人为造成之产品故障损坏，在可维修情形下，将按损坏情况收取相关维修费用，若无法维修将退还予消费者。
3. 若产品本体已曾拆解，或序列号及质保贴纸遭移除、损毁或变更，将无法保修。
4. 若产品已过质保期，往来运费由厂商和消费者各支付一趟，维修亦照损坏情况收取相关维修费用。
5. 本产品于使用时，不得将饮料或是任何液体泼洒或倒入键盘中，如此将使键盘完全故障，亦无法维修，请消费者要特别注意。

16. 官方联系方式：

services@mistelkeyboard.com