
# **Econet Station ID Jumper Settings**

The following guide will tell you the configuration for every Econet Station ID.


It's assumed that Jumper 0 (Normally the top most jumper in a Model B) is on the left hand side, i.e Little Endian

- Closed / Soldered
- Open / Unsoldered


### 1 to 20:

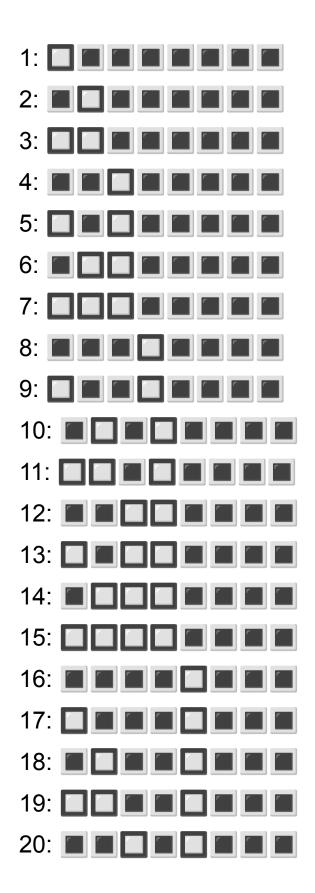


# 21 to 40:

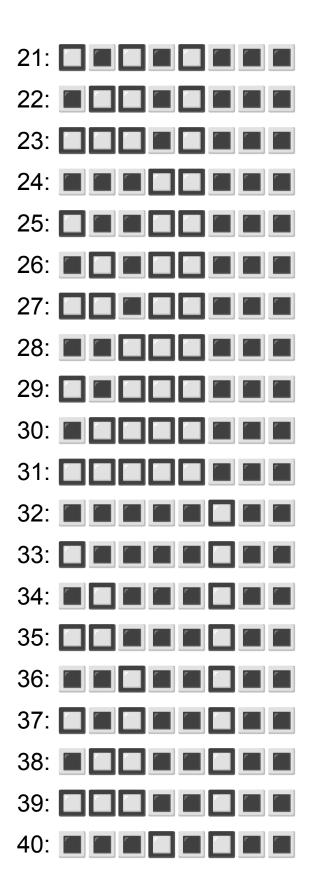


### 41 to 60:

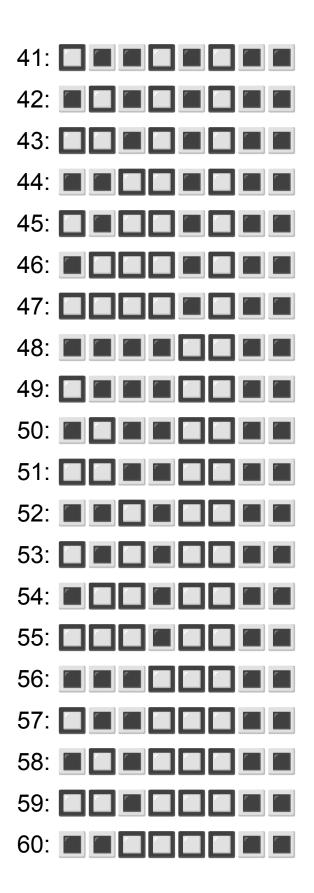


# 61 to 80:

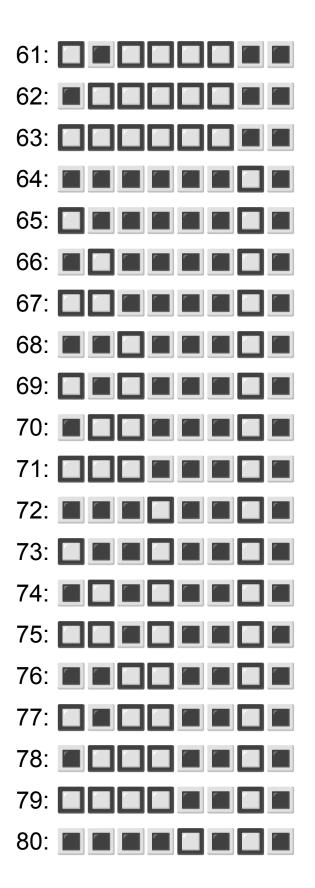


# 81 to 100:

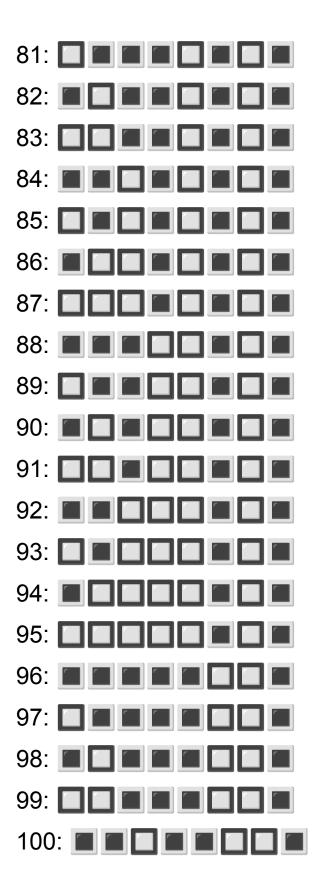


### 101 to 120:

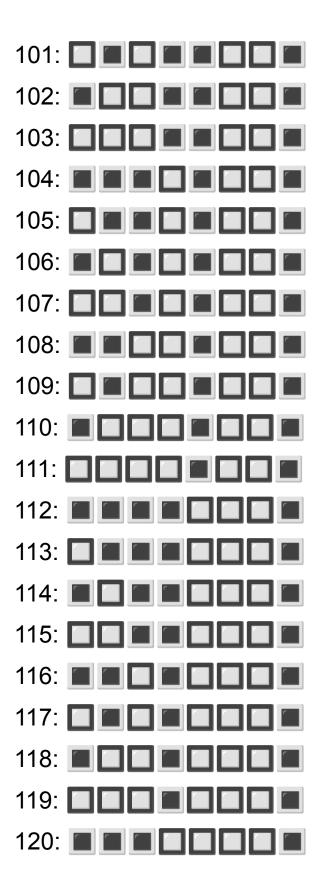


#### 121 to 140:

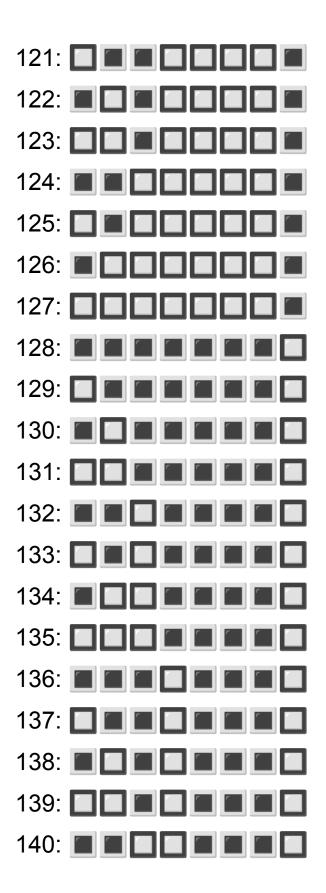


#### 141 to 160:

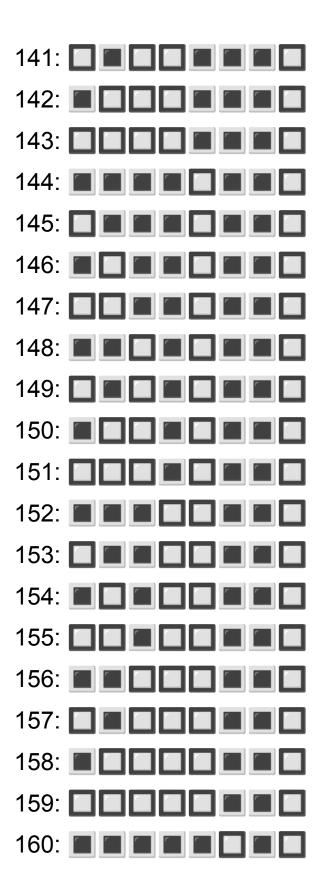


# 161 to 180:

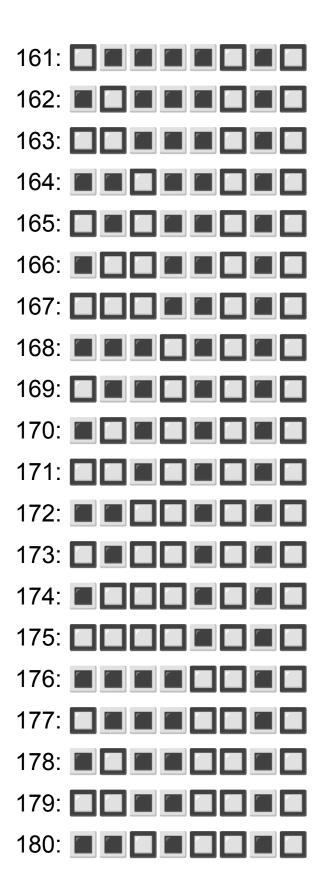


### 181 to 200:

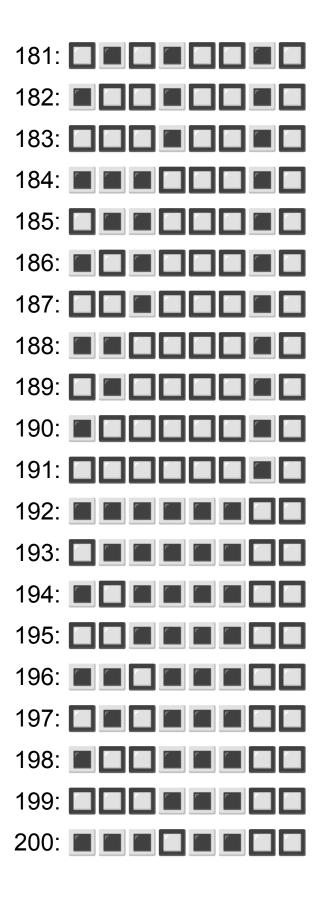

#### 201 to 220:

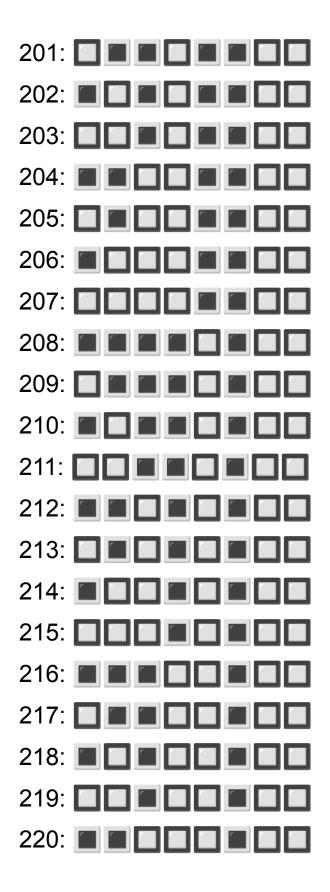

# 221 to 240:

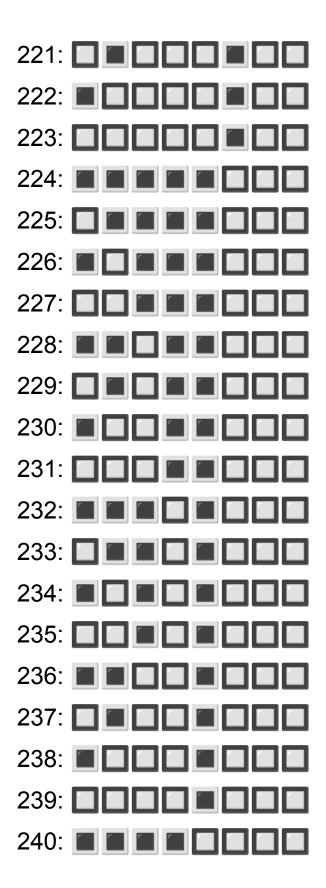

### 241 to 254:

