ASR Driver Installation Guide

TRACASRDIGD001

V1.00



Driving Smarter IoT

www.queclink.com

Document Title	ASR Driver Installation Guide
Version	1.00
Date	July 18, 2023
Status	Release
Document Control ID	TRACASRDIGD001

General Notes

Queclink offers this information as a service to its customers, to support application and engineering efforts that use the products designed by Queclink. The information provided is based upon requirements specifically provided to Queclink by the customers. Queclink has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by Queclink within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information which is the property of Queclink Wireless Solutions Co., Ltd. The copying of this document and giving it to others and the using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of grant of a patent or the registration of a utility model or design. All specifications supplied herein are subject to change without notice at any time.

Queclink Confidential

Contents

Contents 2
History 3
1. Introduction 4
1.1. System Requirement 4
2. Driver Installation 5
2.1. Step_1: Uninstall related drivers 5
2.2. Step_2: Run DrvInstaller_Queclinkx64.exe and click update driver 6
2.3. Step_3: Successful installation 7

Queclink Confidential

History

Version	Date	Author	Description of Change
1.00	July 18, 2023	Evan Tu	Initial.

Queclink Confidential

1. Introduction

DrvInstaller_Queclinkx64.exe for 64-bit operating system
DrvInstaller_Queclink.exe for 32-bit operating system

1.1. System Requirement


The driver can run on Windows 7 (and above).

Queclink Confidential


2. Driver Installation


2.1. Step_1: Uninstall related drivers

If you have installed related drivers, please uninstall them first**.** You can find **Queclink Modem Device** in the **Device Manager**, right-click, and select **Uninstall Device.**

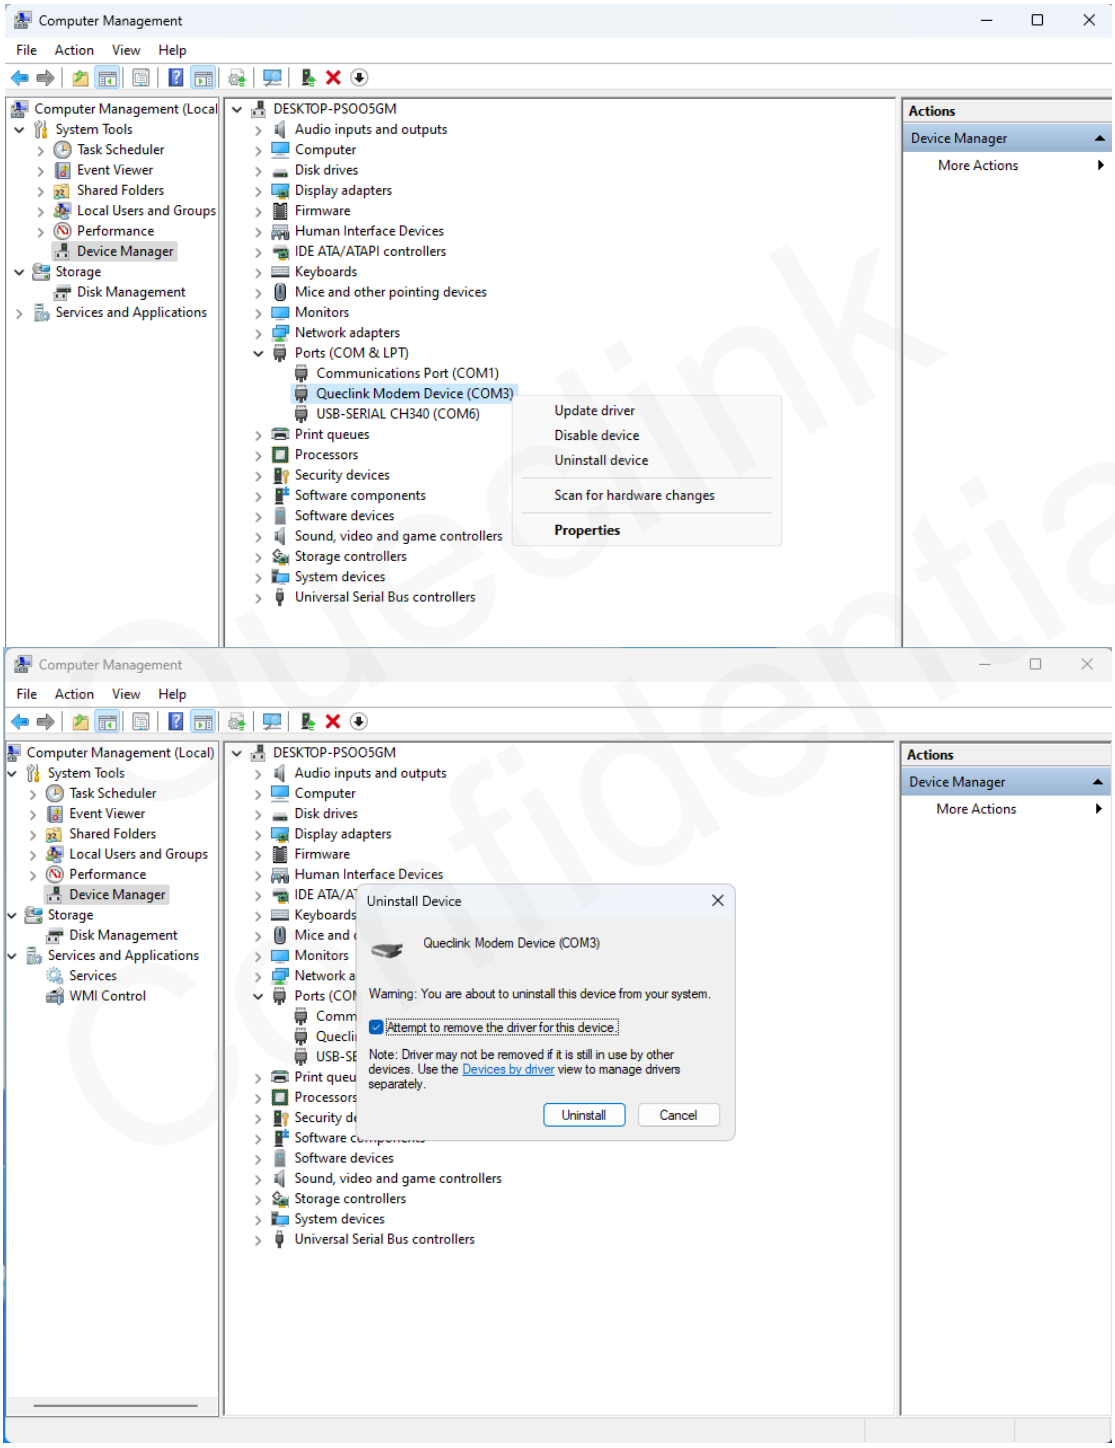

2.2. Step_2: Run **DrvInstaller_Queclinkx64.exe** and click **update driver**

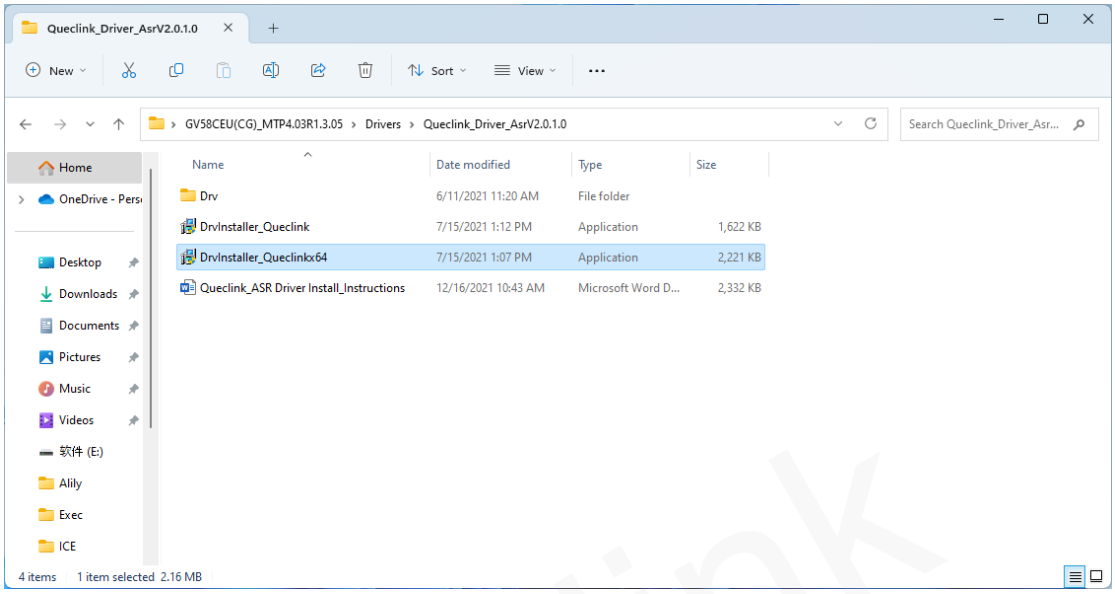


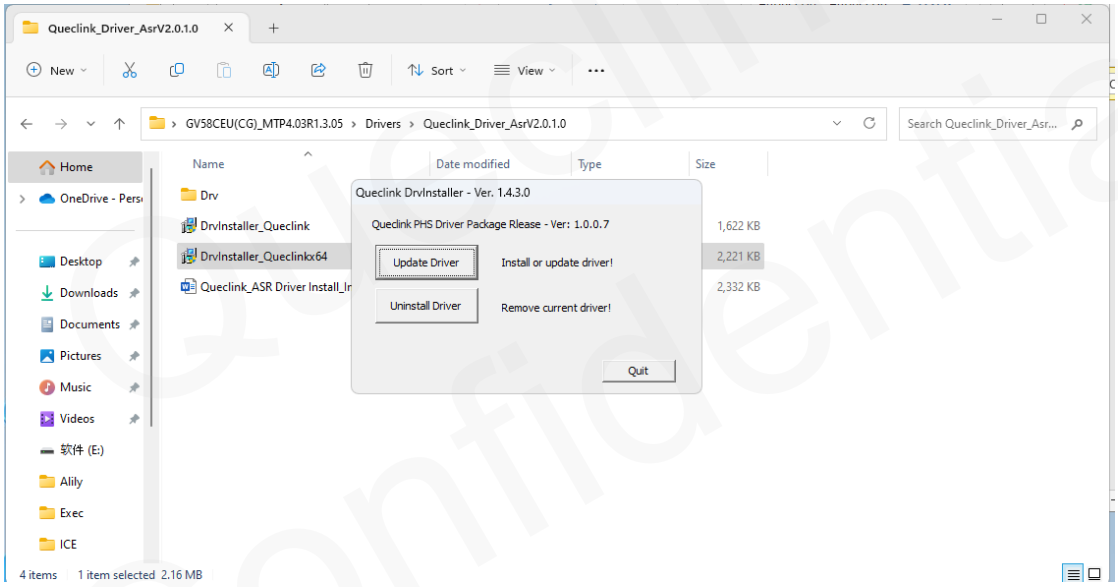

Note: If your system is 32-bit operating system, please run **DrvInstaller_Queclink.exe**.

Queclink Confidential

2.3. Step_3: Successful installation

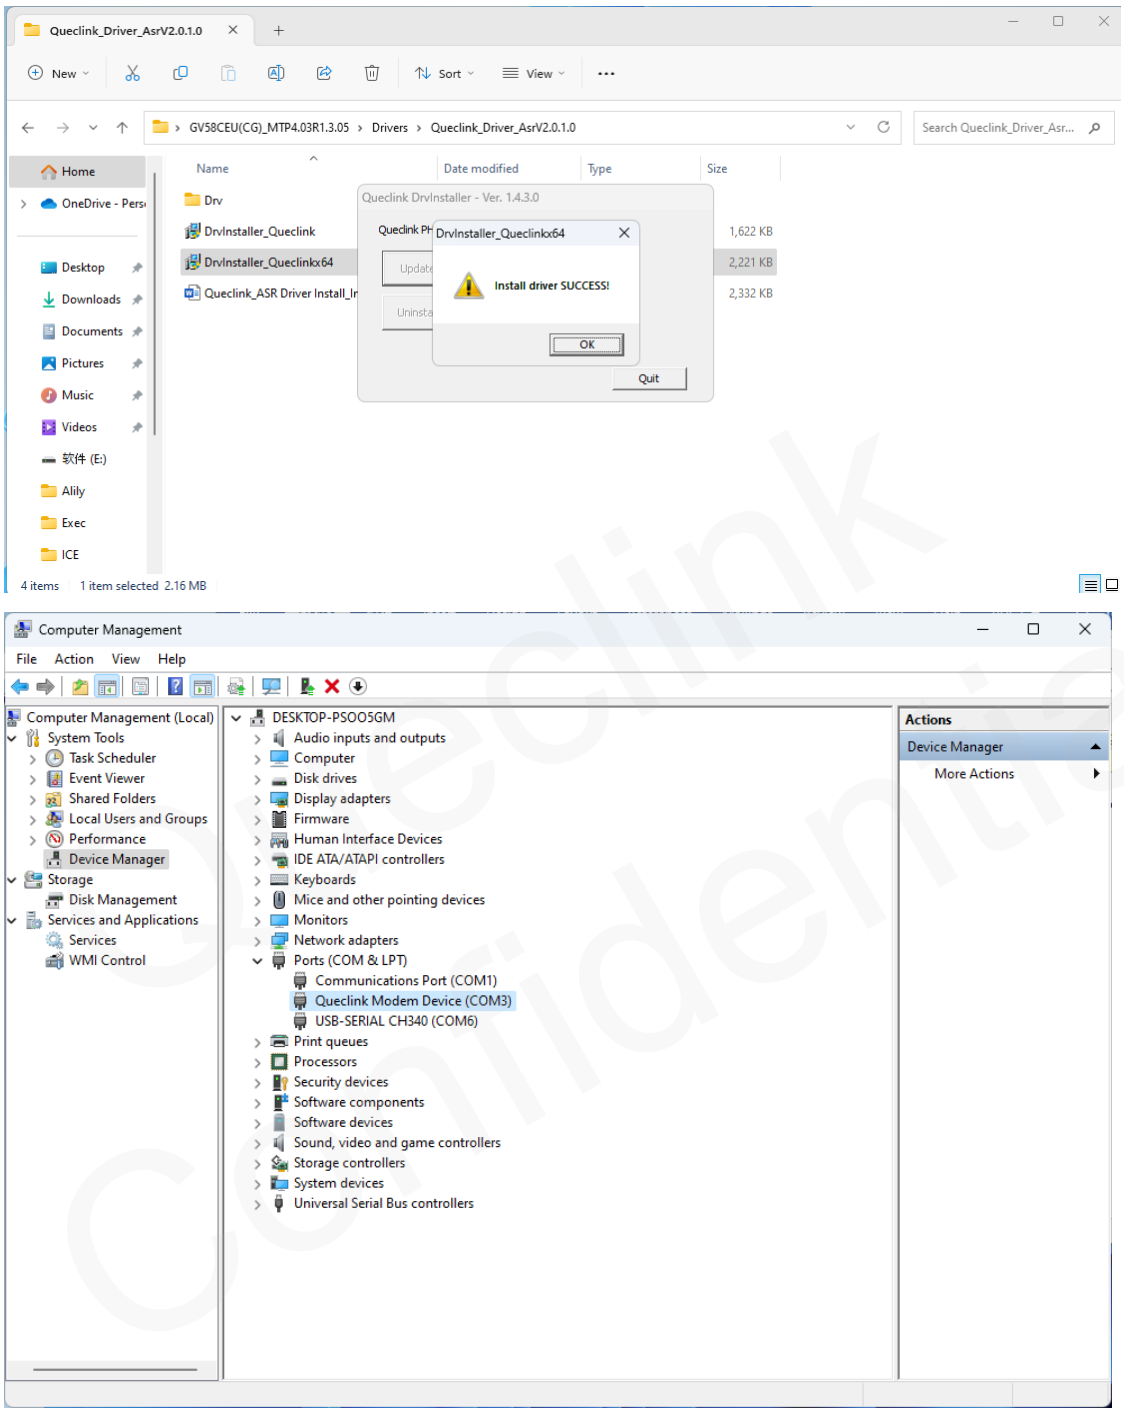

After the driver is successfully installed, you can find the **Queclink Modem Device** in the **Device Manager**.