

RONIN User Manual

Semi-modular synthesizer and effect · Jidai Collection · Martial Systems

Contents

1. Overview
2. Quick start
3. Panel reference
4. Patching
5. MIDI and host sync
6. Factory programs by bank
7. DAW setup
8. Specs
9. Troubleshooting
10. Legal

Back Panel Patching (RONIN in the JIDAI RACK)

1. Overview

RONIN puts a whole analog-style rack inside one plugin. Run your track through it, or let it make its own sound. It has sixteen sections, all wired with patch cables you drag across the panel:

- **VCO** with saw, triangle and pulse outputs, a footage switch (32', 16', 8', 4'), fine tune, pulse width, two FM inputs, a 1 V/oct input and a linear Hz/V input.
- **VCF**, a resonant two-pole lowpass that self-oscillates. An input-level pull lets hot signals darken the filter. Its response is the same at every sample rate.
- **VCA 1**, an AC-coupled amplifier with a LOW CUT control, and **VCA 2**, an opto-style amplifier with a smooth lag.
- **EG 1** (attack, decay, sustain, release) and **EG 2** (hold, delay, attack, release), with S-trig inputs. Every time knob shows the real duration.
- **MG**, an LFO from 0.01 Hz to 200 Hz with a morphing triangle, saw, inverted saw and pulse.
- **NOISE** (white and pink), **S&H** (sample and hold), **RING** (ring modulator), **DIV** ($\div 2$ and $\div 4$), **INV** (inverter), **INT** (integrator, for slew and slide) and a three-input inverting **MIX**.
- **EXT IN**, which turns your track into signals: left, right, a mono sum and a gate. **OUTPUT** blends the patch back in with your dry signal.

Every feedback loop is delayed by exactly one sample, so self-patching stays stable and sounds the same every time.

RONIN runs as a VST3 effect and as a device in the JIDAI RACK, where its jacks patch into the other Jidai devices (see Back Panel Patching).



2. Quick start

1. Install the plugin (section 7) and insert RONIN as an effect on an audio track or bus.
2. RONIN opens on **01 INIT**. Your track runs through the VCF and VCA 1. When the input crosses the EXT IN threshold, EG 1 opens the VCA and moves the filter.
3. Hold the **HOLD** key to open the EXT IN gate by hand.
4. Click the **PRESET** screen and choose **08 ACID LINE**. RONIN now plays an acid bass line on its own, with no input needed.
5. Drag from any jack to another to patch. Drop a plug on empty space to unplug it.
6. Use **MIX** (OUTPUT) to blend the patch with your dry signal, and the **EFFECT** switch to go back to dry.

3. Panel reference

3.1 Using the controls

Action	What it does
Drag a knob up or down	Turns it. 200 pixels of travel cover the full range.
Shift-drag a knob	Fine adjustment, five times finer.
Mouse wheel	Small steps. Hold Shift for smaller steps.
Double-click a knob	Resets it to its default.
Hover over a knob or jack	Shows its real value: Hz, note and cents, seconds, volts or percent.
Right-click a knob	Type a value. RONIN reads what it shows: 1.07 kHz , 621 ms , 2.5 s , +34 c , Q 4 , 3 V , 58 % or 8' . A bare number uses the knob's own unit.
Click the DIV switch	Toggles between /2 and /4.
Right-click a list or selector	Opens the whole list with the current item ticked (the DIV switch, the PRESET screen, the selectors on the tabs).
Shift-click a list control	Steps back one item; a plain click steps forward.

Every knob is a host parameter, so your DAW can automate it. Knobs move without zipper noise.

3.2 Tabs and header

The tab strip at the top switches between **MAIN** (the panel), **VOICE**, **ENV**, **PATCH**, **MIDI** and **SETUP**.


Control	What it does
Colour swatches (red, white, yellow, green)	The colour for new cables when SETUP > CABLE COLOUR is MANUAL.
PRESET screen	Shows the current program. Click it to open the list of all 22 programs in two columns. Up and down move through the list, left and right jump between columns, Enter loads, Esc closes.
EFFECT rocker	Left is OFF : the dry signal on OUTPUT L and R passes and MIX is not used. Right is ON : you hear the MIX blend of dry and WET. The patch keeps running either way and OUTPUT LEVEL still applies.
VU METER	Reads the jack you last clicked, with ± 5 V as full scale.



Loading a program replaces all cables, resets every knob to its default and then sets the program's own knobs.

3.3 MAIN page: the modules

The panel reads left to right. Knob ranges and defaults are below, in the units the hover readout shows.

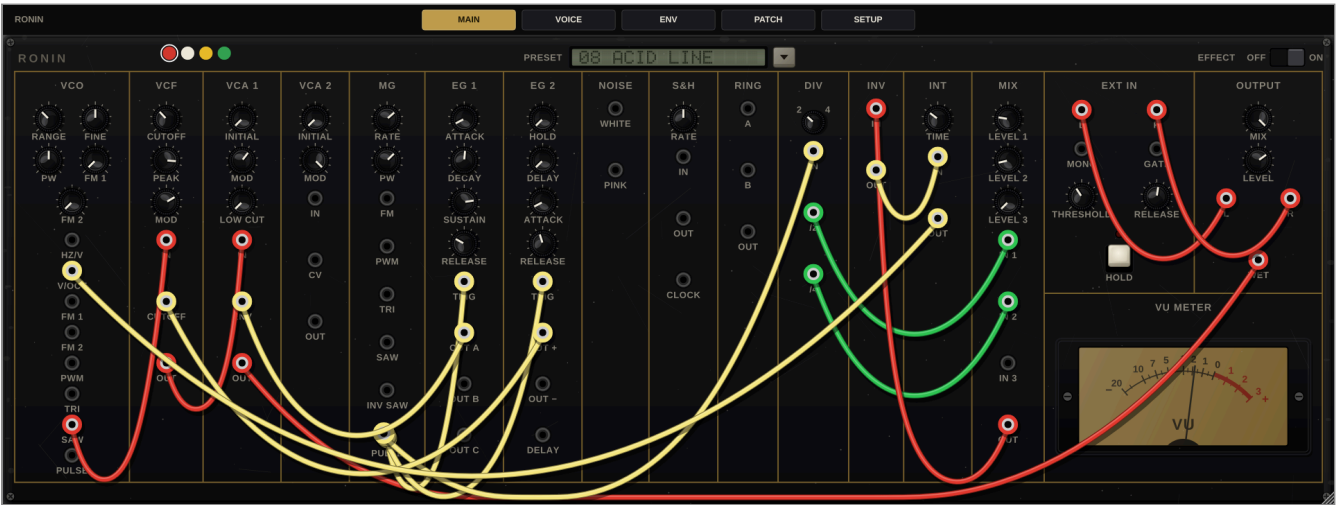

Section	Control	Range	Default
VCO	RANGE	32', 16', 8', 4' (0 V plays C1, C2, C3, C4)	8'
VCO	FINE	−200 to +200 cents	0 c
VCO	PW	Pulse duty 5 % to 95 %	50 %
VCO	FM 1, FM 2	Amount for the FM 1 and FM 2 jacks. Full turn: 1 V moves the pitch one octave.	0
VCF	CUTOFF	20 Hz to 18 kHz	427 Hz
VCF	PEAK	Resonance, Q 0.5 to 8	Q 2.00
VCF	MOD	Amount for the CUTOFF jack, 0 to 4 octaves per 5 V	1.60 oct / 5 V
VCA 1	INITIAL	Gain with no ENV signal, 0 to 100 %	0 %
VCA 1	MOD	Overall gain, 0 to 100 %	85 %
VCA 1	LOW CUT	Low-cut corner, 10 Hz to 2 kHz	10 Hz
VCA 2	INITIAL	Gain with no CV, 0 to 100 %	0 %
VCA 2	MOD	Overall gain, 0 to 100 %	100 %
MG	RATE	0.01 Hz to 200 Hz	1.41 Hz
MG	PW	Shape of TRI and duty of PULSE	50 %
EG 1	ATTACK, DECAY, RELEASE	1 ms to 60 s	9.85 ms, 73 ms, 73 ms
EG 1	SUSTAIN	0 V to 5 V	3.00 V
EG 2	HOLD, DELAY	1 ms to 10 s	15.8 ms, 1 ms
EG 2	ATTACK, RELEASE	1 ms to 60 s	9.85 ms, 73 ms
S&H	RATE	Internal clock, 0.1 Hz to 100 Hz	3.16 Hz
DIV	Switch	/2 or /4	/2
INT	TIME	1 ms to 2 s	44.7 ms
MIX	LEVEL 1, 2, 3	0 to 100 % per input	80 %
EXT IN	THRESHOLD	Gate threshold, 0.05 V to 2 V	0.200 V
EXT IN	RELEASE	Gate release, 10 ms to 500 ms	80 ms
OUTPUT	MIX	0 (dry) to 100 % (patch)	100 %
OUTPUT	LEVEL	0 (silent), 70 % (unity) to 100 % (+6 dB)	70 %

VCO. RANGE picks the octave. A RANGE change takes effect at the start of the next cycle, so it never clicks. V/OCT adds 1 V per octave. HZ/V is a linear input: with a cable in it, the pitch is the footage frequency times the input voltage (1 V plays C3 at 8'; voltages below 0.05 V are held at 0.05 V). FM 1 and FM 2 add octaves (volts × knob amount). PWM adds to the PW knob: +5 V adds 50 % duty. The triangle shape is set on the VOICE page.

VCF. CUTOFF and the CUTOFF jack (scaled by MOD) set the corner. At high PEAK settings it self-oscillates. The VOICE page shows the live cutoff after the input pull.

VCA 1. Gain = (ENV ÷ 5 V + INITIAL), held between 0 and 1, times MOD. With INITIAL at 0, nothing passes until a signal arrives at ENV. LOW CUT is the corner of its AC coupling.

VCA 2. The same gain law on its CV jack, with a 20 ms lag for an opto-style feel. It passes DC, so it can scale control voltages as well as audio.

MG. TRI morphs with PW: a falling saw at one end, a triangle in the middle, a rising saw at the other end. SAW and INV SAW are opposite ramps. PULSE is a 0/5 V square whose duty follows PW from 5 % to 95 %. The FM jack changes the rate: +5 V doubles it, and negative voltages slow it down to the bottom of its range. The PWM jack adds to PW.

EG 1. An S-trig input fires the attack, and the envelope holds at SUSTAIN while the trigger is held. RELEASE runs when it lets go. A new trigger restarts the attack from the current level. ATTACK is the time to reach 5 V. DECAY and RELEASE are the times to get within 1 % of their target. OUT A is the envelope (0 to +5 V), OUT B is its negative, and OUT C is the envelope minus the sustain level.

EG 2. Each trigger restarts EG 2 from 0 V. It waits for HOLD and then DELAY, rises over ATTACK to 5 V and falls straight away over RELEASE. It plays through the whole shape however short the trigger is. At the end of HOLD, the DELAY jack sends a 5 V pulse of at least 1 ms. OUT + is the envelope (0 to +5 V) and OUT – is its negative.

NOISE. WHITE peaks at ± 2.5 V. PINK is darker.

S&H. On each clock it samples IN and holds it at OUT. Without a cable in CLOCK, the RATE knob clocks it. With a cable in CLOCK, that signal clocks it on each rising edge.

RING. $OUT = A \times B \div 5$ V. Both inputs pass DC, so it works on control voltages too.

DIV. Counts rising edges at IN. /2 and /4 are 0/5 V square waves at a half and a quarter of the input rate. Both outputs always run. The switch position is saved with the patch.

INV. OUT is IN turned upside down ($OUT = -IN$).


INT. Smooths IN with a one-pole lag set by TIME. Use it for slide (portamento) on pitch or to soften gate edges.

MIX. Sums IN 1–3, each scaled by its LEVEL, and inverts the result: $OUT = -(IN\ 1 \times LEVEL\ 1 + IN\ 2 \times LEVEL\ 2 + IN\ 3 \times LEVEL\ 3)$. Patch MIX OUT through INV for a non-inverted sum.

EXT IN. L and R are your track, MONO is $(L + R) \div 2$, and GATE follows the input level. A level follower rises in 5 ms and falls at the speed set by RELEASE. The gate opens when the level passes THRESHOLD and closes when it falls below 70 % of THRESHOLD, so it opens and closes cleanly, even on bass. The **HOLD** key keeps the gate open while you hold it.


OUTPUT. L and R are the dry path, and WET is the patch. With EFFECT on, each side is $dry \times (1 - MIX) + WET \times MIX$, then LEVEL.

3.4 VOICE page

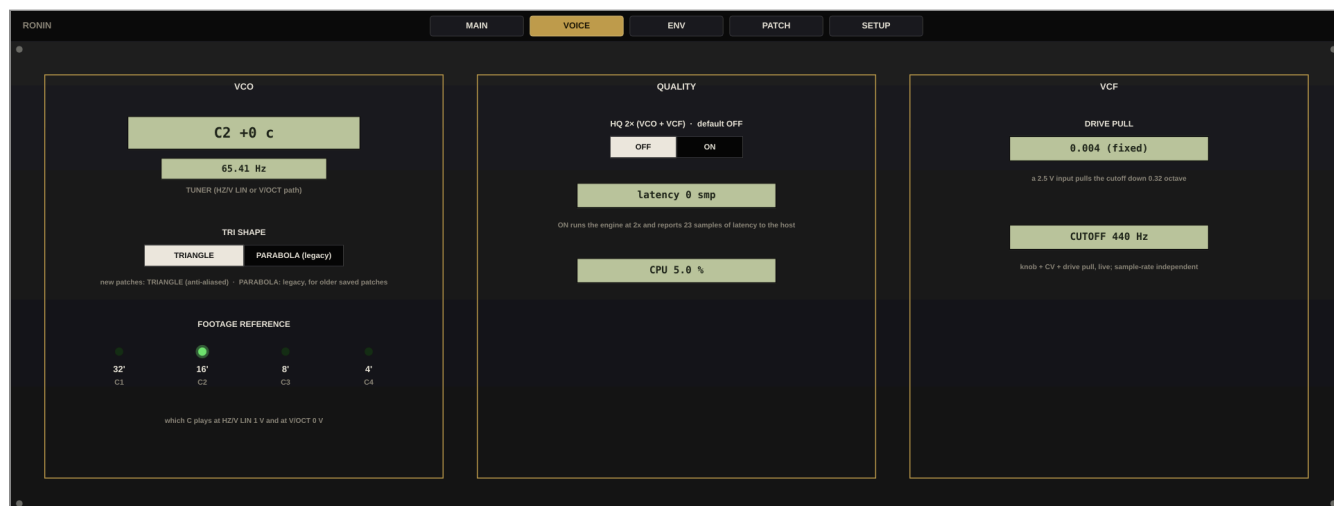


Item	What it shows or does
TUNER	The VCO's pitch as note and cents, and in Hz. C3 is 130.81 Hz.
TRI SHAPE	TRIANGLE : a band-limited triangle with only odd harmonics, used by new patches and every factory program. PARABOLA (legacy) : the rounder shape of earlier RONIN versions, which older projects load on.
FOOTAGE REFERENCE	Lamps for 32', 16', 8' and 4', and which C each one plays at 0 V on V/OCT (or 1 V on HZ/V).
QUALITY: HQ 2× (VCO + VCF)	OFF (default) or ON. ON runs the VCO and VCF at twice the sample rate for less aliasing and reports 23 samples of latency to your host. The page shows the latency (0 or 23 samples) and RONIN's CPU load.
DRIVE PULL	How much a hot input pulls the cutoff down. It is fixed: a 2.5 V input pulls the cutoff down by 0.32 octave.
CUTOFF	The live cutoff, from the knob, the CUTOFF jack and the drive pull together.

3.5 ENV page

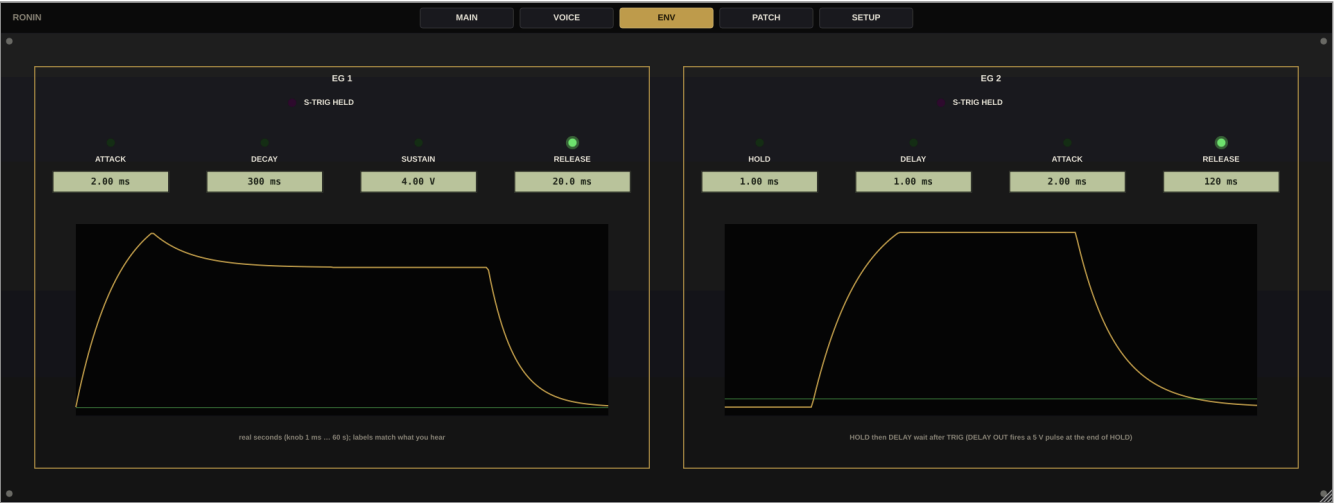


Both envelopes side by side. A lamp lights for each stage while it runs, and the **S-TRIG HELD** lamp lights while the trigger input is held. The readouts show each knob's real value, and the curve shows the envelope's shape.

3.6 PATCH page

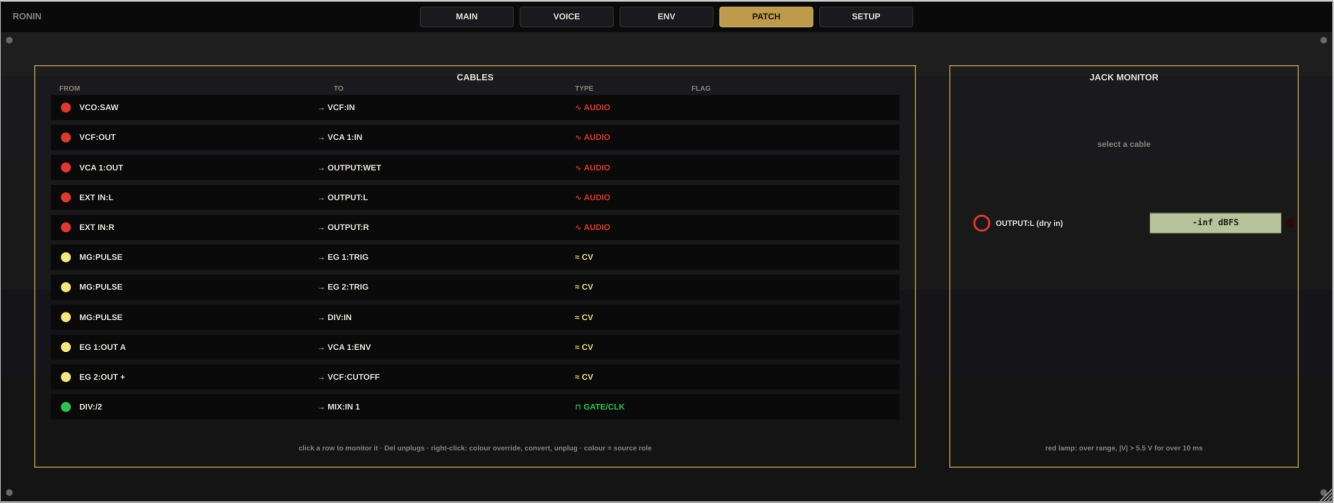

Item	What it does
CABLES list	Every cable: FROM, TO, its signal TYPE and any FLAG. Click a row to monitor it. Delete unplugs the selected cable. Right-click a row to change its colour, convert it or unplug it.
JACK MONITOR	The level of the monitored jack in dBFS. A red lamp lights when the jack goes beyond ± 5.5 V for more than 10 ms.

3.7 SETUP page

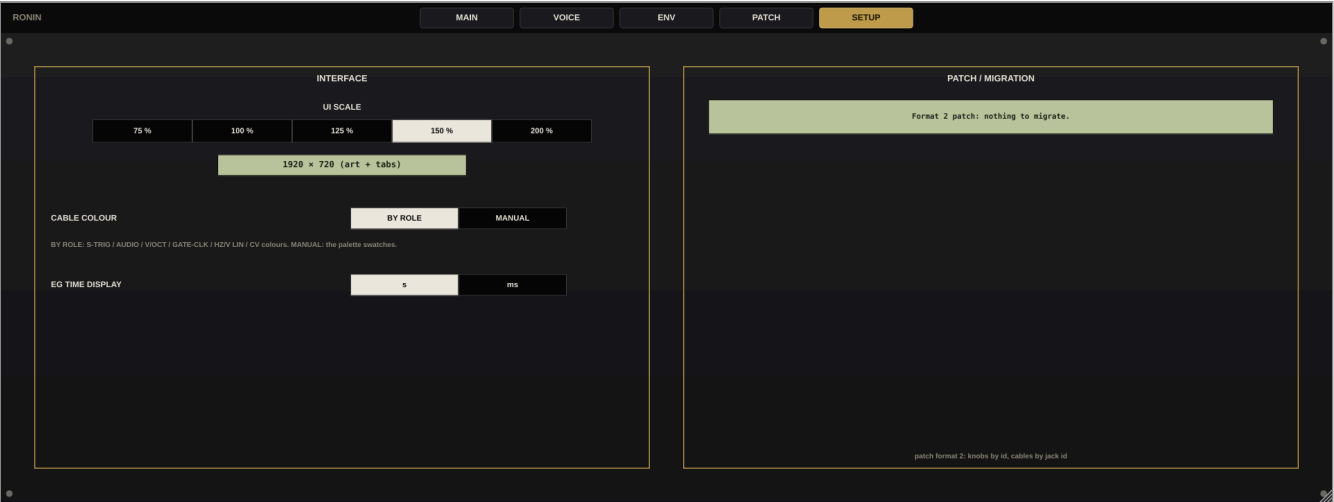

Item	What it does
UI SCALE	75 %, 100 %, 125 %, 150 % or 200 %. At 100 % the window is 1280 × 480. The size readout shows the current window.
CABLE COLOUR	BY ROLE (default): each cable takes the colour of its source's signal type (section 4). MANUAL : new cables take the colour of the swatch you picked.
EG TIME DISPLAY	Show envelope times in seconds (s) or always in milliseconds (ms).
PATCH / MIGRATION	When an older RONIN project loads, this lists what was updated to keep it sounding the same.

4. Patching

4.1 Making cables

- **Drag** from an empty jack to another jack to make a cable. Cables always run from an output to an input.
- **Drag a plug** to move that end of the cable. Drop it on empty space to unplug it.
- **Shift-drag** from a patched jack to stack another cable on it.
- **Click** a jack to choose a cable from its stack. The VU meter then reads that jack.
- **Right-click** a cable to remove it.
- RONIN holds up to 64 cables.

4.2 How signals combine

- One output can feed any number of inputs.
- Several cables into one input are added together.
- Feedback is allowed. When cables form a loop, the newest cable in the loop is delayed by exactly one sample.

4.3 Levels

RONIN works in volts. Full scale is ± 5 V, which is ± 1.0 (0 dBFS) in your DAW.

Signal	Level
Audio	± 5 V = full scale
Pitch, V/OCT	1 V per octave. 0 V plays C3 (130.81 Hz) at 8'.
Pitch, HZ/V	Linear. 1 V plays C3 at 8', 2 V an octave higher.
Gate and clock	0 V off, 5 V on. Inputs read on above 1.0 V and off below 0.5 V.
S-trig (EG 1 and EG 2 TRIG)	Held below 1.0 V, released above 1.5 V. An unpatched TRIG rests at 5 V (released).
CV	Modulation voltages, mostly within ± 5 V

S-trig. The envelope TRIG inputs fire when the voltage drops below 1.0 V, the opposite of a gate. EXT IN GATE already sends this kind of signal: 0 V while the gate is open and 5 V when it is closed. A cable from a gate output, such as EG 2 DELAY or a sequencer gate in the JIDAI RACK, is converted for you, so the envelope fires while the gate is high. Other signals, such as MG PULSE or DIV, arrive as they are: the envelope fires while they are low.

4.4 Cable colours

With CABLE COLOUR set to BY ROLE, a cable takes the colour of its source jack's role:

Colour	Role
Red	Audio
Blue	V/OCT pitch
Light blue	HZ/V linear pitch
Green	Gate / clock
Yellow	CV
Purple	S-trig

4.5 Jack reference

All 57 jacks on the panel, then the four MIDI jacks. "In" is an input and "Out" an output.

Section	Jack	In/Out	Role	Level and behaviour
VCO	HZ/V	In	HZ/V pitch	Linear: pitch = footage frequency $\times$ volts. 1 V = C3 at 8'. Held at 0.05 V or more.
VCO	V/OCT	In	V/OCT pitch	1 V/oct. 0 V = C3 at 8'.
VCO	FM 1	In	CV	Volts $\times$ FM 1 knob, in octaves
VCO	FM 2	In	CV	Volts $\times$ FM 2 knob, in octaves
VCO	PWM	In	CV	+5 V adds 50 % duty. Duty stays within 5–95 %.
VCO	TRI	Out	Audio	± 5 V
VCO	SAW	Out	Audio	± 5 V
VCO	PULSE	Out	Audio	± 5 V
VCF	IN	In	Audio	± 5 V nominal. Hotter signals pull the cutoff down.
VCF	CUTOFF	In	CV	Scaled by MOD, 0 to 4 octaves per 5 V

Section	Jack	In/Out	Role	Level and behaviour
VCF	OUT	Out	Audio	± 5 V nominal
VCA 1	IN	In	Audio	± 5 V
VCA 1	ENV	In	CV	0 to +5 V = closed to fully open (with INITIAL 0)
VCA 1	OUT	Out	Audio	AC-coupled (LOW CUT)
VCA 2	IN	In	CV	Any signal. DC passes.
VCA 2	CV	In	CV	0 to +5 V = closed to fully open (with INITIAL 0), 20 ms lag
VCA 2	OUT	Out	CV	IN $\times$ gain
MG	FM	In	CV	Rate $\times (1 + V \div 5 \text{ V})$
MG	PWM	In	CV	+5 V adds 100 % to PW
MG	TRI	Out	CV	± 2.5 V, shape follows PW
MG	SAW	Out	CV	± 2.5 V
MG	INV SAW	Out	CV	± 2.5 V, the opposite ramp
MG	PULSE	Out	CV	0/5 V, duty 5–95 %
EG 1	TRIG	In	S-trig	Held below 1.0 V, released above 1.5 V
EG 1	OUT A	Out	CV	0 to +5 V
EG 1	OUT B	Out	CV	0 to –5 V (OUT A inverted)
EG 1	OUT C	Out	CV	OUT A minus the sustain level
EG 2	TRIG	In	S-trig	Held below 1.0 V, released above 1.5 V
EG 2	OUT +	Out	CV	0 to +5 V
EG 2	OUT –	Out	CV	0 to –5 V
EG 2	DELAY	Out	Gate	5 V pulse (at least 1 ms) at the end of HOLD
NOISE	WHITE	Out	Audio	Peaks at ± 2.5 V
NOISE	PINK	Out	Audio	Darker than WHITE
S&H	IN	In	Audio	Any signal
S&H	OUT	Out	CV	The held voltage
S&H	CLOCK	In	Gate / clock	Samples on each rising edge (on above 1.0 V, off below 0.5 V). Replaces the RATE clock.
RING	A	In	CV	Any signal, DC passes
RING	B	In	CV	Any signal, DC passes
RING	OUT	Out	CV	$A \times B \div 5 \text{ V}$
DIV	IN	In	Gate / clock	Rising edges counted (on above 1.0 V, off below 0.5 V)
DIV	/2	Out	Gate / clock	0/5 V at half the input rate
DIV	/4	Out	Gate / clock	0/5 V at a quarter of the input rate
INV	IN	In	CV	Any signal
INV	OUT	Out	CV	–IN
INT	IN	In	CV	Any signal
INT	OUT	Out	CV	IN smoothed by TIME

Section	Jack	In/Out	Role	Level and behaviour
MIX	IN 1	In	Audio	Scaled by LEVEL 1
MIX	IN 2	In	Audio	Scaled by LEVEL 2
MIX	IN 3	In	Audio	Scaled by LEVEL 3
MIX	OUT	Out	Audio	–(sum of the scaled inputs)
EXT IN	L	Out	Audio	Your track's left channel, full scale = ± 5 V
EXT IN	R	Out	Audio	Your track's right channel
EXT IN	MONO	Out	Audio	$(L + R) \div 2$
EXT IN	GATE	Out	S-trig	0 V while the gate is open, 5 V while it is closed
OUTPUT	L	In	Audio	Dry left
OUTPUT	R	In	Audio	Dry right
OUTPUT	WET	In	Audio	The patch, to both sides
MIDI	NOTE	Out	V/OCT pitch	From MIDI notes, patched on the MIDI tab. 1 V/oct, C3 (MIDI 48) = 0 V. Holds after release.
MIDI	HZ/V LIN	Out	HZ/V pitch	The same note, linear: C3 = 1 V
MIDI	GATE	Out	Gate / clock	5 V while any key is held
MIDI	VEL	Out	CV	Velocity $\div 127 \times 5$ V, holds until the next key

In the JIDAI RACK, RONIN has four more back-only jacks: HOST IN L/R and HOST OUT L/R (see Back Panel Patching).

5. MIDI and host sync

MIDI. RONIN takes MIDI notes on any channel and turns them into four jacks with the same mapping as the JIDAI RACK: NOTE (1 V/oct, C3 = MIDI 48 = 0 V), HZ/V LIN, GATE (0/5 V) and VEL (0 to 5 V). Patch them to panel inputs on the MIDI tab, for example NOTE $\rightarrow$ VCO V/OCT and GATE $\rightarrow$ EG 1 TRIG. It plays one note at a time: the newest key wins, overlapping keys are legato (the gate stays high), and each note lands on its exact sample. No program patches the MIDI jacks, so programs sound the same with or without MIDI.

Tempo. On the MIDI tab, set MG RATE to **SYNC** and pick a DIVISION (4 bars to 1/32, with dotted and triplet values). While your DAW plays, the MG follows the song position, so it stays in place after a jump or a loop. Stopped, it runs on at the division rate; with no host tempo it uses its RATE knob. Older projects and the factory programs load on **FREE** and sound as before. In FREE, the factory programs are set for 125 BPM; to fit another tempo, right-click MG RATE and type $\text{BPM} \div 15$ Hz for 16th notes, $\text{BPM} \div 30$ Hz for 8ths or $\text{BPM} \div 60$ Hz for quarters.

Automation and programs. All 38 host parameters can be automated: EFFECT, the 33 panel controls, TRI SHAPE, HQ, MG SYNC and MG SYNC DIVISION. The 22 factory programs also appear in your DAW's program list. RONIN's whole state (cables, knobs and page settings) is saved with your DAW project.

6. Factory programs by bank

RONIN has one factory bank of 22 programs. They are voiced for classic EDM at 125 BPM. Every program has EFFECT on and starts the VCO on the TRIANGLE shape. Programs with no input play on their own: the MG is their clock. Each program says what it expects at EXT IN. In the JIDAI RACK, these programs are bank A, and bank B holds your own saves.

INIT

#	Program	What it does	Input
01	INIT	The fresh-instance patch: EXT IN MONO through the VCF and VCA 1 to WET. The input level opens EG 1, which opens VCA 1 and the filter.	Any audio

Effects for your input

These need audio at EXT IN. They pass your dry signal on OUTPUT L and R and the effect on WET.

#	Program	What it does	Input
02	AUTO FILTER	Resonant low-pass swept by the MG, one sweep per bar.	Any audio (pads, loops, chords)
03	ENV FILTER	Envelope filter: each hit at EXT IN snaps the resonant cutoff open.	Drums, bass or plucked parts
04	TRANCE GATE	16th-note gate chopping the input, edges softened by INT.	Sustained audio (pads, chords, vocals)
05	PUMP	Quarter-note ducking from EG 2 into VCA 1, the side-chain pump.	Sustained audio or a full mix
06	S&H FILTER	Random stepped filter: S&H samples noise in 16ths and moves the cutoff.	Any audio, best with pads or loops
07	RING MOD	The input times the VCO triangle, with slow MG drift on the carrier.	Any audio. Voices and drums go metallic.

Acid basses

These play themselves. MG PULSE clocks 16th notes into EG 1 (the VCA), EG 2 (the filter snap on VCF CUTOFF) and DIV. DIV /2 and /4 run through MIX LEVEL 1 and 2 and INV into INT, which slides the pattern into VCO V/OCT. MIX LEVEL 1 at 20 % is one octave (1 V), and each 1.67 % of MIX LEVEL 2 is a semitone. Slide comes from INT TIME. To play one from a sequencer, see Back Panel Patching.

#	Program	What it does	Input
08	ACID LINE	Self-playing acid bass: 16ths at 125 BPM, octave and fifth pattern, short slide.	None needed
09	ACID SQUELCH	Acid bass at full peak with a longer filter snap, a minor-third pattern and a slower slide.	None needed
10	ACID ACCENT	Acid bass with random accents: S&H noise on the cutoff per step.	None needed
11	ACID PULSE	Acid bass on the narrow pulse, EG 2 also sweeping the pulse width.	None needed
12	ACID DRIVE	Saw and pulse summed into the VCF for a hotter, driven acid line.	None needed
13	ACID SLIDE	Long legato gates, a fourth and octave pattern and a slow slide: the rubbery acid line.	None needed

Basses and leads

#	Program	What it does	Input
14	SUB BASS	Round triangle sub on quarter notes, straight into VCA 1 with no filter.	None needed
15	OFFBEAT BASS	Plucky saw bass on the second half of each beat, the off-beat bass.	None needed
16	PWM LEAD	Pulse-width lead: EG 2 sweeps the width on every note, an 8th-note fifth and octave pattern with glide.	None needed
17	SIREN	Rising and falling siren: MG triangle on the VCO pitch. Plays continuously.	None needed

Percussion and effects

#	Program	What it does	Input
18	KICK DRUM	Four-on-the-floor kick: triangle with an EG 2 pitch drop.	None needed
19	OFFBEAT HATS	High-passed noise hats on the off-beats.	None needed
20	NOISE SNARE	Noise and triangle snare on beats 2 and 4.	None needed
21	LASER ZAP	8th-note laser zaps: EG 2 drops the VCO pitch fast.	None needed
22	NOISE RISER	Four-bar noise riser: the MG saw opens the filter and the VCA, then resets.	None needed

The self-playing programs still pass your dry track on OUTPUT L and R. Turn OUTPUT MIX to 100 % (the default) to hear only RONIN.

7. DAW setup

RONIN is a VST3 audio effect with a stereo input and output.

Installing

Copy `RONIN.vst3` into your system's VST3 folder:

System	VST3 folder
Mac	<code>~/Library/Audio/Plug-Ins/VST3/</code> (just you) or <code>/Library/Audio/Plug-Ins/VST3/</code> (all users)
Windows	<code>C:\Program Files\Common Files\VST3\</code>

Then have your DAW rescan its plugins. RONIN is listed under **Martial Systems**, as an effect. Keep a single copy: a second `RONIN.vst3` in another VST3 folder shows up as a second entry.

RONIN is built for Mac and Windows. Version 0.1 is a beta.

Using it in any DAW

1. Insert RONIN as an effect on an audio track, instrument track or bus.
2. For the effect programs (02–07) and INIT, send audio through that track.
3. The self-playing programs (08–22) need no input. They run as long as your DAW processes the plugin. If your DAW puts silent plugins to sleep, turn that off for RONIN's track.
4. Automate any control from your DAW's automation lanes.
5. Leave the DAW's plugin delay compensation on if you use HQ. RONIN reports its 23 samples.

Example: FL Studio

1. Close FL Studio, copy RONIN.vst3 into your VST3 folder, and open FL Studio.
2. Open **Options > Manage plugins** and click **Find installed plugins**. RONIN is listed under the effects.
3. In the **Mixer**, select an insert track, click an empty effect slot and choose RONIN.
4. Route an audio channel to that insert for the effect programs. For the self-playing programs, any insert works.
5. Leave the slot's own mix knob at 100 % and blend with RONIN's OUTPUT MIX instead, or the dry signal is mixed in twice.
6. If a self-playing program stops when the track is silent, turn off **Smart disable** for the plugin.
7. RONIN reports its HQ latency to FL Studio, whose plugin delay compensation uses it.

8. Specs

Type	Semi-modular synthesizer and effect, 16 sections
Format	VST3 audio effect for Mac and Windows. Version 0.1 beta.
Channels	Stereo in, stereo out
MIDI	Notes in: NOTE, HZ/V LIN, GATE and VEL jacks, patched on the MIDI tab
Jacks	57 on the panel: 28 inputs, 29 outputs. 61 in the JIDAI RACK (adds HOST IN L/R, HOST OUT L/R).
Cables	Up to 64. Inputs sum, outputs fan out, plugs stack.
Controls	32 knobs, the DIV switch, the EFFECT rocker and the HOLD key
Host parameters	38, all automatable
Latency	0 samples. 23 samples with HQ on, reported to the host.
HQ	VCO and VCF run at 2× the sample rate
Feedback	Each loop is delayed by exactly one sample
Levels	±5 V = full scale (±1.0 in the host). Gates 0/5 V, read as on above 1.0 V and off below 0.5 V. S-trig held below 1.0 V, released above 1.5 V.
Pitch	1 V/oct, 0 V = C3 (130.81 Hz) at 8'. Linear HZ/V: 1 V = C3 at 8'. RANGE 32' to 4' (C1 to C4 at 0 V). FINE ±200 cents.
VCO	Saw, triangle (or legacy parabola) and pulse, ±5 V. Pulse duty 5–95 %.
VCF	Resonant two-pole lowpass. Cutoff 20 Hz to 18 kHz. Q 0.5 to 8. Cutoff modulation up to 4 octaves per 5 V. Drive pull: a 2.5 V input lowers the cutoff by 0.32 octave.
VCA 1	Low cut 10 Hz to 2 kHz
VCA 2	20 ms lag
MG	0.01 Hz to 200 Hz. TRI, SAW and INV SAW ±2.5 V. PULSE 0/5 V, duty 5–95 %.
EG 1	Attack, decay and release 1 ms to 60 s. Sustain 0 to 5 V. Outputs 0 to ±5 V.
EG 2	Hold and delay 1 ms to 10 s. Attack and release 1 ms to 60 s. Outputs 0 to ±5 V, DELAY pulse 5 V.
S&H	Internal clock 0.1 Hz to 100 Hz, or external clock
INT	1 ms to 2 s
EXT IN gate	Threshold 0.05 V to 2 V (default 0.2 V). Release 10 ms to 500 ms (default 80 ms). Attack 5 ms. Closes below 70 % of the threshold.
Output	LEVEL: 0 is silent, 70 % is unity, 100 % is +6 dB

Factory programs	22 in one bank
Pages	MAIN, VOICE, ENV, PATCH, MIDI, SETUP
UI	1280 × 480 at 100 %. Scale 75 %, 100 %, 125 %, 150 % or 200 %.
Rack device	4 U open, 1 U closed, 4 U back plate. 0 samples latency.

9. Troubleshooting

Problem	What to check
No sound from a self-playing program	EFFECT must be on (right). OUTPUT MIX and LEVEL must be above 0. Check that your DAW keeps processing the plugin on a silent track (section 7).
INIT or an effect program is silent	It needs audio at EXT IN. INIT opens only when the input passes THRESHOLD (0.2 V by default; full scale is 5 V). Lower THRESHOLD, or hold HOLD to check the patch.
I only hear my dry track	EFFECT is off, or OUTPUT MIX is at 0. With EFFECT off, only OUTPUT L and R pass.
RONIN is not in my instrument list	RONIN is an effect, not an instrument. Look for it among your DAW's effects.
Notes don't respond to MIDI	Patch the MIDI jacks on the MIDI tab: NOTE to VCO V/OCT and GATE to an EG TRIG (section 5).
The pattern drifts against my song	Set MG RATE to SYNC on the MIDI tab (section 5), or set MG RATE for your tempo.
Louder than my other tracks, or clipping	OUTPUT LEVEL above 70 % boosts by up to 6 dB. Turn it back to 70 % (unity) or lower. The PATCH page lamp shows jacks beyond ± 5.5 V.
An envelope never fires	EG TRIG fires when the voltage drops below 1.0 V and rests released at 5 V. Gate outputs are converted for you. Other signals fire it while they are low (section 4.3).
An envelope stays open	EG 1 holds at SUSTAIN while its trigger stays below 1.0 V. Check the S-TRIG HELD lamp on the ENV page.
Pitch is wrong or doesn't track	V/OCT is 1 V per octave. HZ/V is linear, so 1 V/oct signals don't track there. Check RANGE and FINE, and read the TUNER on the VOICE page.
A cable won't connect	Cables run from an output to an input. RONIN holds up to 64 cables.
An older project sounds different	Open SETUP > PATCH / MIGRATION to see what was updated. Older projects keep the PARABOLA triangle; switch TRI SHAPE on the VOICE page if you want the new one.
Track is late against others with HQ on	Turn on plugin delay compensation in your DAW. RONIN reports 23 samples.
Two RONIN entries in my DAW	There are two copies of <code>RONIN.vst3</code> . Keep one.

10. Legal

Copyright © 2026 Martial Systems LLC. All rights reserved.

RONIN, JIDAI RACK and the Jidai Collection are products of Martial Systems LLC. See the LICENSE file that comes with RONIN for the full terms.

RONIN is an original Martial Systems design inspired by classic Korg gear. Korg is a trademark of its owner. Martial Systems LLC is not affiliated with or endorsed by Korg.

FL Studio is a trademark of its owner and is named only as an example DAW.

Back Panel Patching (RONIN in the JIDAI RACK)

In the JIDAI RACK, RONIN is a 4 U device when open and a 1 U strip when closed. Its front is the full RONIN panel, and every knob and jack works as in the plugin. Press **Tab** (or click **BACK** in the rack header) to turn the whole rack around. On the back, RONIN is a 4 U rear plate that carries all 61 of its jacks, one framed box per section.



What is different in the rack

- **Preset screen.** Bank **A** holds the 22 factory programs (section 6), and bank **B** your own saves. Loading a program sets RONIN's knobs and replaces the cables between RONIN's own jacks. Cables to other devices stay.

- **Timing.** RONIN runs at the rack's sample rate and reports 0 samples of latency.
- **Saved programs.** Bank B is stored on your computer and shared by every JIDAI RACK instance, in `user_presets.json`:

System	Folder
Mac	~/Library/RONIN/
Windows	%APPDATA%\RONIN\

Back-only jacks

Jack	Behaviour
HOST IN L, HOST IN R	Feed RONIN's EXT IN, the way host audio reaches the plugin. IN R follows IN L when only IN L is patched.
HOST OUT L, HOST OUT R	What RONIN's OUTPUT section sends to the host: its MIX of WET and the dry L and R signals.

Colours on the back

The rear jack rings use the same role colours as the plugin (section 4.4): red audio, blue V/OCT, light blue HZ/V, green gate and clock, yellow CV and purple S-trig. An output has a light label under the jack and an input a plain one. A gate patched into RONIN's EG TRIG inputs is converted to S-trig automatically.

Automatic cables

When you add RONIN, the rack connects HOST OUT L/R to RACK I/O > MAIN OUT. Placed directly under a BUSHIDO, RONIN also gets BUSHIDO's row A pitch (CV A → V/OCT, or → HZ/V when row A uses the linear law) and gate (GATE A → EG 1 TRIG). **RONIN FX** is a RONIN that also takes the host audio (RACK I/O > HOST IN → RONIN > HOST IN), ready for the effect programs. Hold **Shift** while adding a device to skip the automatic cables.

RONIN with BUSHIDO: the acid patch

BUSHIDO is the Jidai step sequencer. It plays RONIN's acid programs in place of RONIN's own MG pattern.




From	To	Why
BUSHIDO > CV A (pitch)	RONIN > INT IN	Row A plays the notes. INT smooths each step into the next: that is the slide.
RONIN > INT OUT	RONIN > VCO V/OCT	The slid pitch drives the VCO.
BUSHIDO > GATE A	RONIN > EG 1 TRIG and EG 2 TRIG	Each step fires both envelopes: EG 1 opens VCA 1 and EG 2 snaps the filter. The gate is converted to S-trig.

From	To	Why
BUSHIDO > CV C (accent)	RONIN > VCF CUTOFF	Row C is the accent.
RONIN > EG 2 OUT +	RONIN > VCF CUTOFF	The filter snap. It sums with the accent on the same jack (two cables on one input).
RONIN > EG 1 OUT A	RONIN > VCA 1 ENV	EG 1 opens the VCA (already in the acid programs).
RONIN > HOST OUT L/R	RACK I/O > MAIN OUT L/R	To your DAW.


Tips:

- **Use the starter rack.** RACKS ▾ > **ACID** > **Acid Line** is this patch, ready to play on BUSHIDO's host clock.
- **Starting from an acid program instead.** The program brings its own MG PULSE cables into EG 1 TRIG and EG 2 TRIG, and its DIV, MIX and INV pattern into INT IN. Remove the MG PULSE cables so only BUSHIDO's gate fires the envelopes. BUSHIDO's pitch adds to the built-in pattern at INT IN; turn MIX LEVEL 1 and 2 to 0 to hear BUSHIDO's notes alone.
- **Octave.** BUSHIDO's pitch starts at C3 (0 V). For bass, set VCO RANGE to 16' (one octave lower) or 32' (two octaves lower). The acid programs use 16'.
- **Slide.** Turn INT TIME down for steps without slide, or up for a slower, rubbery slide.

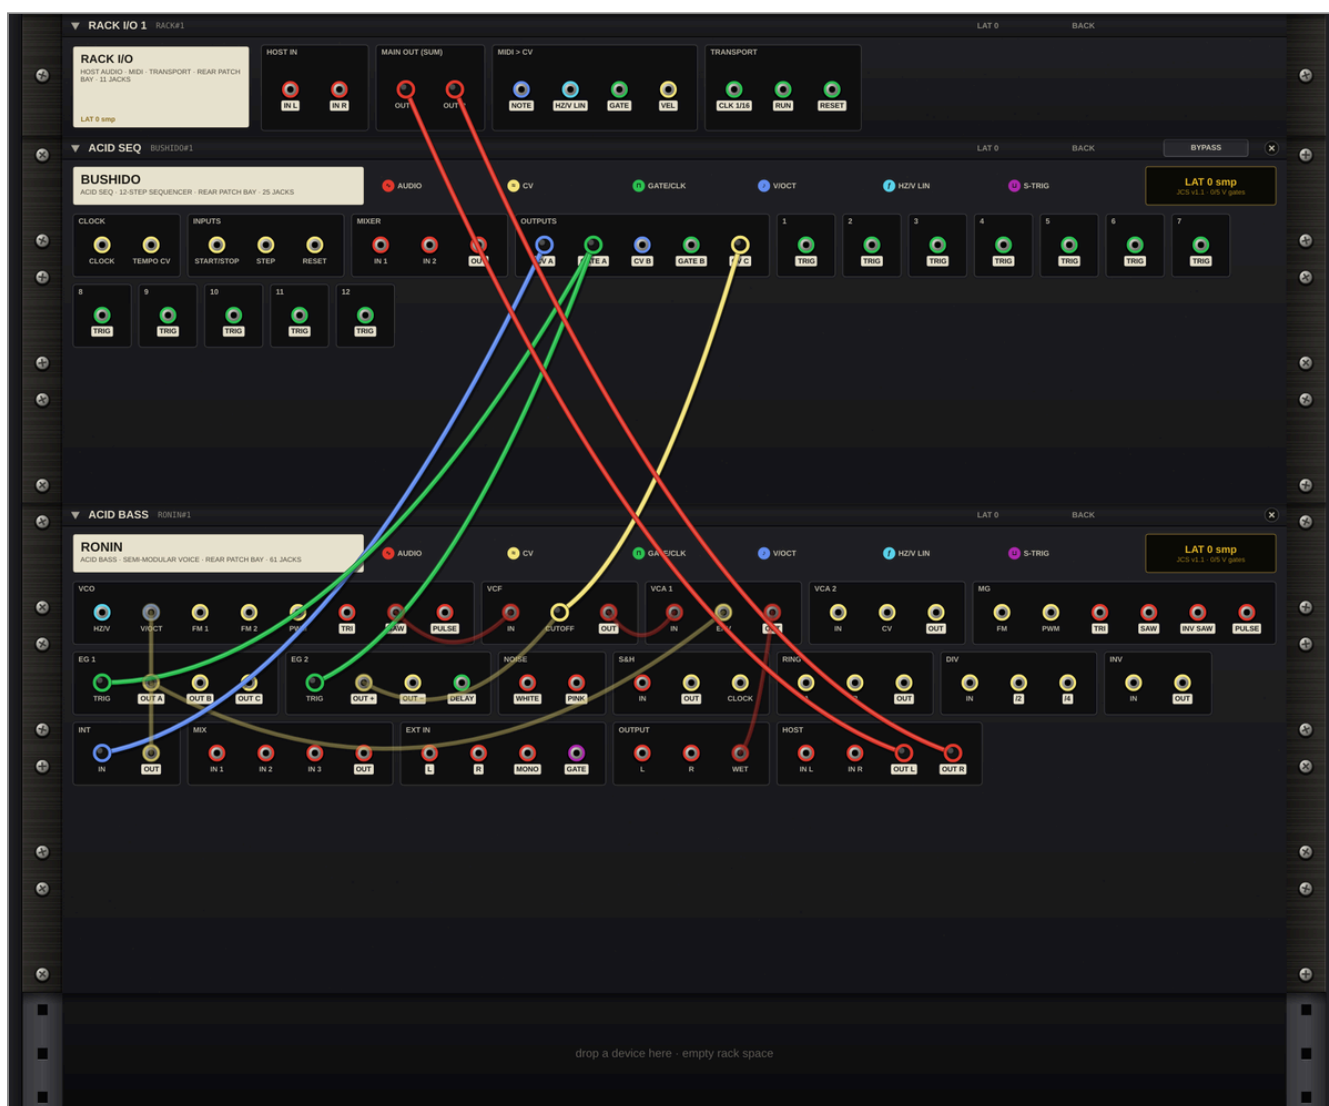


RONIN with SHOGUN

SHOGUN is the Jidai drum machine. Drums and bass meet at MAIN OUT, and the rack lines them up to the sample.

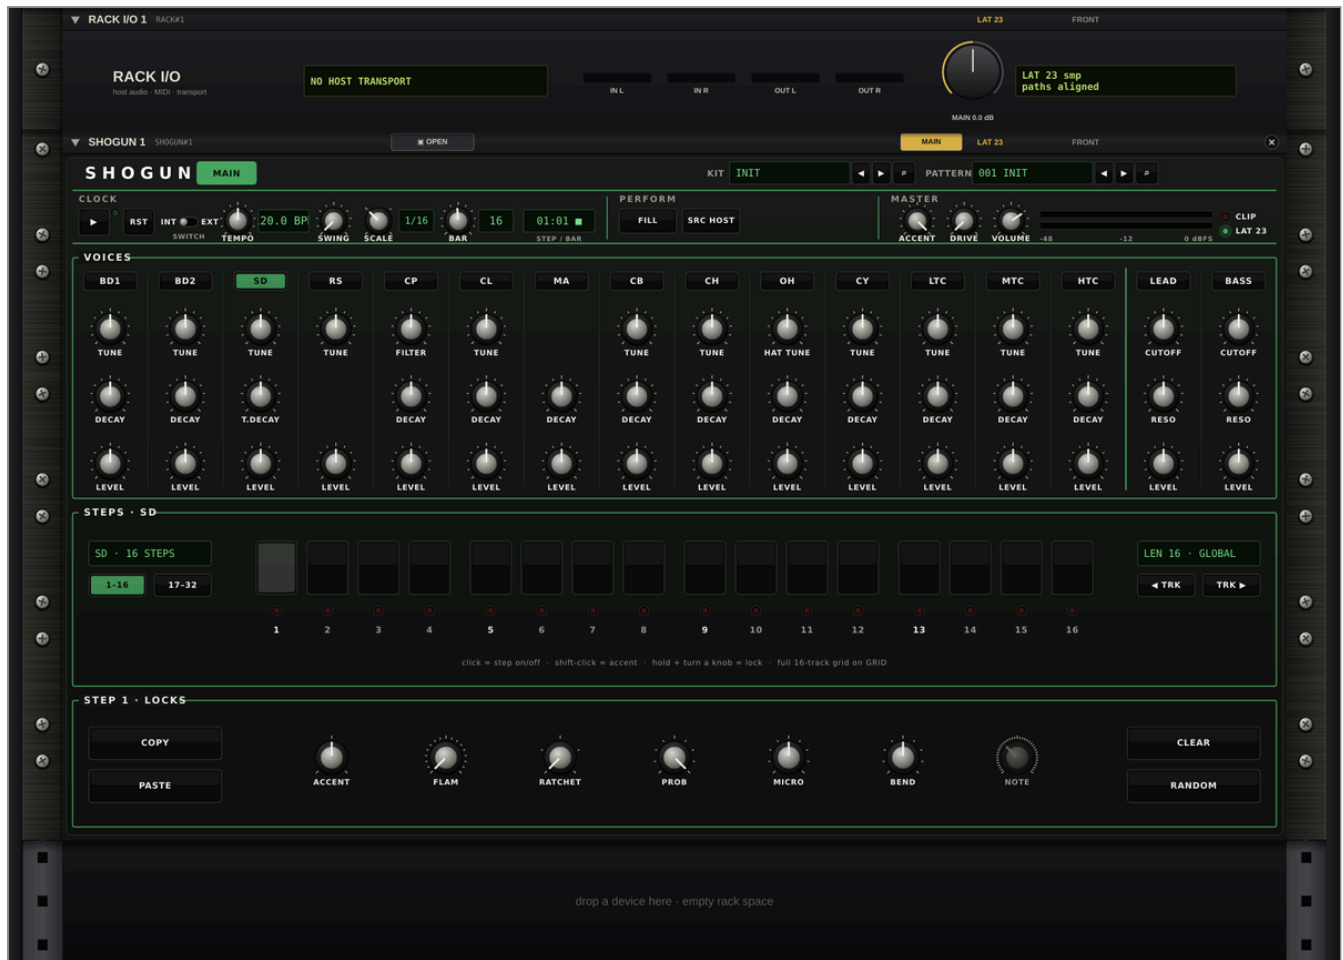

- **Acid Drum Jam (RACKS ▾ > EDM > Acid Drum Jam):** SHOGUN plays a four-on-the-floor kit clocked from RACK I/O > CLK 1/16 and RESET. A BUSHIDO acid line (wired as above) plays RONIN's ACID DRIVE sound through ORIGAMI. SHOGUN > MIX L/R and ORIGAMI > OUT L/R both go to MAIN OUT.
- **Full EDM Jam (RACKS ▾ > EDM > Full EDM Jam):** SHOGUN follows the host transport, its mix runs through ORIGAMI, and BUSHIDO's bass on RONIN joins at MAIN OUT.
- **Drums through RONIN.** Patch SHOGUN > MIX L/R (or one voice's OUT) into RONIN > HOST IN L/R. The drums then arrive at RONIN's EXT IN, ready for the effect programs such as 03 ENV FILTER or 06 S&H FILTER.
- **SHOGUN's clock on RONIN.** SHOGUN > CLOCK CLK OUT is a gate output. Patch it into RONIN > EG 1 TRIG, DIV IN or S&H CLOCK to step RONIN in time with the drums.

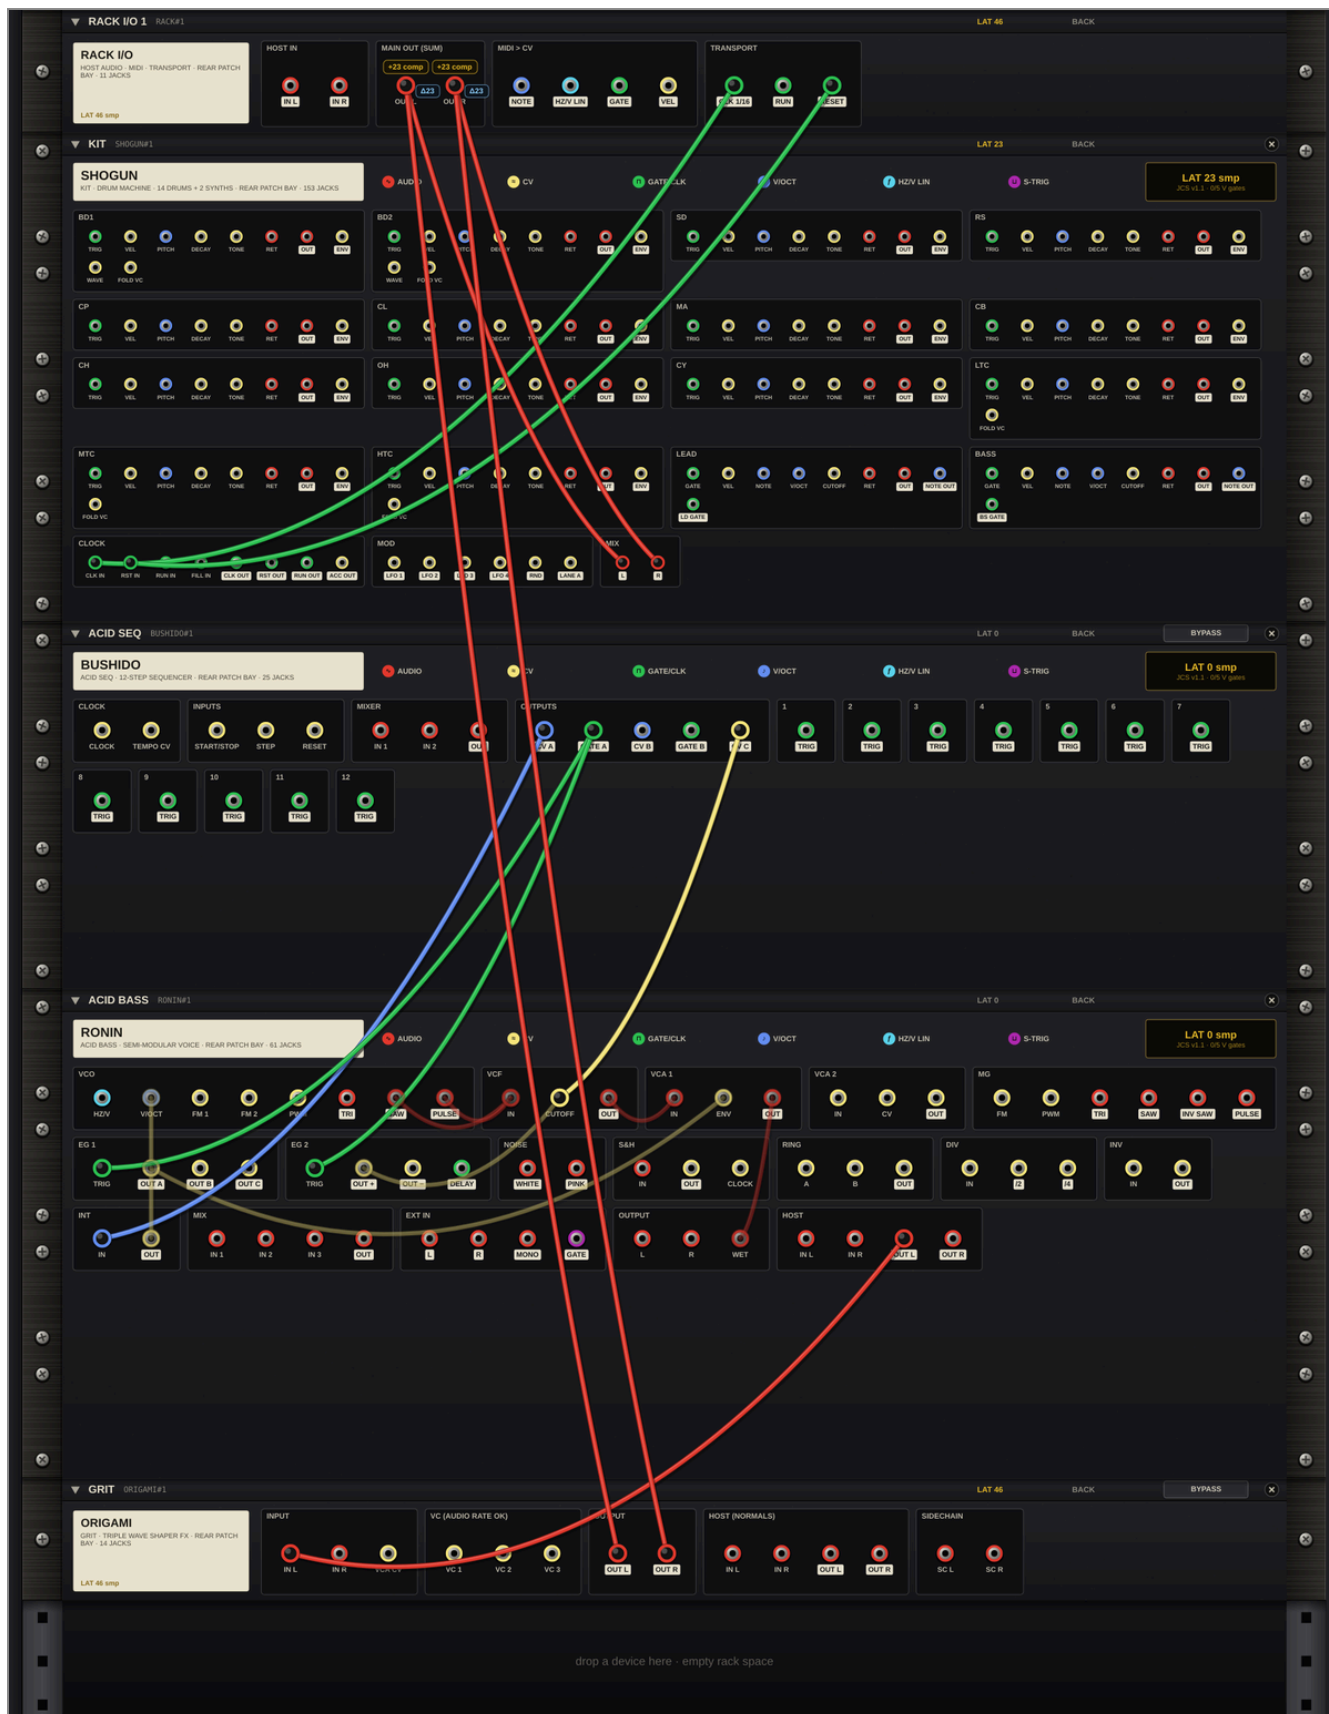


RONIN with ORIGAMI

ORIGAMI is the Jidai wave folder. RONIN's voice through ORIGAMI turns a plain bass or filter sweep into dense harmonics.



- **Voice into the folder.** RONIN > HOST OUT L → ORIGAMI > IN L (ORIGAMI's IN R follows IN L), then ORIGAMI > OUT L/R → MAIN OUT.
- **Envelope on the fold.** In the **Acid Fold** starter rack, RONIN > EG 2 OUT + also drives ORIGAMI > VC 1, so the filter snap folds harder at the same time.
- **Effects on your track. Filter Fold FX** runs your track through RONIN's MG-swept filter, then ORIGAMI. **Tempo Gate FX** chops your track in time: RACK I/O > HOST IN L/R → RONIN > HOST IN L/R, RACK I/O > CLK 1/16 → RONIN > EG 1 TRIG, and EG 1 OUT A opens VCA 1. RONIN's HOST OUT runs through ORIGAMI to MAIN OUT.

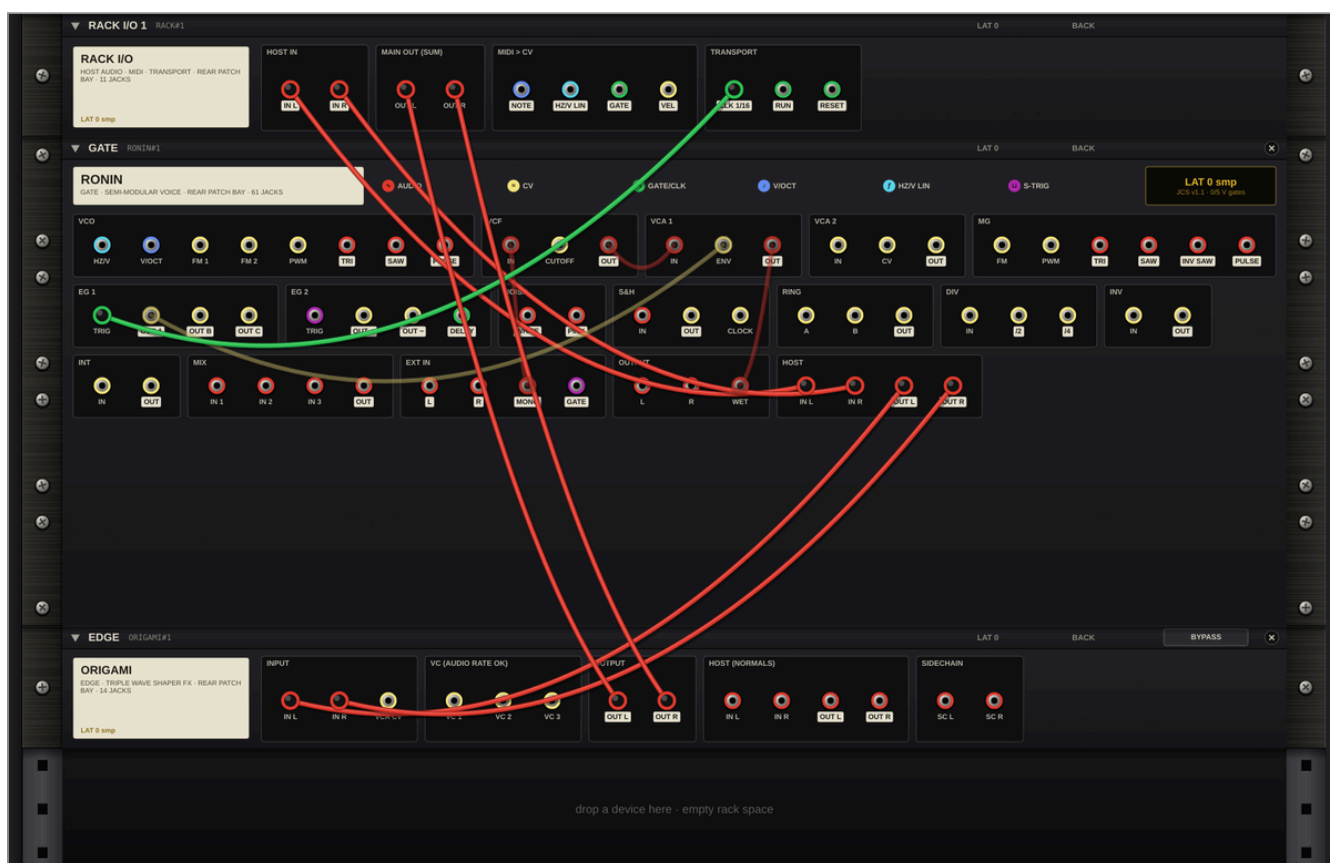

Playing RONIN from MIDI

MIDI Fold Synth (RACKS ▾ > EDM > MIDI Fold Synth) plays RONIN from your keyboard: RACK I/O > NOTE → RONIN > V/OCT, GATE → EG 1 TRIG, and VEL → RONIN > MIX IN 2, where it adds to the envelope on the filter, so harder notes are brighter. RONIN's HOST OUT goes through ORIGAMI to MAIN OUT. For RONIN's HZ/V input, use RACK I/O > HZ/V LIN instead of NOTE.

Starter racks with RONIN

Group	Rack	Devices
ACID	Acid Line	BUSHIDO, RONIN
ACID	Acid Fold	BUSHIDO, RONIN, ORIGAMI
EDM	Driving Bass	BUSHIDO, RONIN, ORIGAMI
EDM	Pluck Lead	BUSHIDO, RONIN, ORIGAMI
EDM	Two Voices	BUSHIDO, 2 × RONIN, ORIGAMI
EDM	Stepped Fold	BUSHIDO, RONIN, ORIGAMI
EDM	MIDI Fold Synth	RONIN, ORIGAMI
EDM	Acid Drum Jam	SHOGUN, BUSHIDO, RONIN, ORIGAMI
EDM	Full EDM Jam	SHOGUN, BUSHIDO, RONIN, ORIGAMI
FX	Filter Fold FX	RONIN, ORIGAMI
FX	Tempo Gate FX	RONIN, ORIGAMI