



THE MINI DRY

Home Trimmer



USER MANUAL

WWW.HIGHMOUNTAINTRIMMERS.COM

TABLE OF CONTENTS

Important Safety Information	4
Machine Overview	7
Motor Assembly Overview	10
Initial Setup	11
Operation	12
Disassembly	16
Reassembly	19
Inspections	22
Cleaning	23
Storage	24
Troubleshooting	25
Warranty Information	27
Specifications	29
Spare Parts and Accessories	30
Contact Us	31

IMPORTANT SAFETY INFORMATION

This manual is for the High Mountain MINI Dry Trimmer used to prepare crops for market or use. In this manual, the MINI Dry Trimmer will simply be referred to as the MINI Trimmer.

The MINI requires special safety precautions to be practiced during operation, cleaning, and maintenance to reduce the risk of personal injury. Read this manual, including all important safety information, danger, warning, and caution signs before using the MINI Trimmer.

Allow only persons who understand this manual to operate the MINI Trimmer. eLOC8 claims no liability for any damage or injury that results from the use of the MINI Trimmer by persons who have not read and understood this manual or through any misuse of the MINI Trimmer. You are responsible for your safety while operating this machine. **Please keep yourself safe!**

eLOC8 is continually improving all its products. As a result, engineering changes are sometimes made. If operation or appearances differ from this manual, please contact eLOC8 technical support for assistance (see **Contact Us** on page 32).

General Safety Information

- Do not operate, clean, or conduct maintenance on the MINI Trimmer while tired or under the influence of drugs, alcohol, or medications.
- Do not wear loose clothing or jewellery when operating, cleaning, or conducting maintenance on the MINI Trimmer.
- Confine long hair when operating, cleaning, or conducting maintenance on the MINI Trimmer.
- Do not move the MINI Trimmer while power is connected to the machine*.

**Unless tilting the machine to load/unload product.*



DANGER

**CARELESS USE OF THE
MINI TRIMMER OR OPERATING
IT WITHOUT READING
THE INSTRUCTIONS AND
ACCOMPANYING DANGER,
WARNING, AND CAUTION
NOTICES MAY RESULT IN
SERIOUS OR FATAL INJURY.**

IMPORTANT SAFETY INFORMATION

- Do not connect the MINI Trimmer to power without all guards* (windows, tumbler plug, and trim bin) attached.
- Always use proper lifting technique and handles when moving the MINI Trimmer.
- Safety glasses, dust masks, and ear protection should be worn when operating the MINI Trimmer.
- Keep the MINI Trimmer well ventilated to prevent overheating.
- Keep visitors and children a safe distance from the MINI Trimmer.
- Substituting factory parts with third-party parts may result in bodily harm or damage to the MINI Trimmer.
- Do not remove safety labels from the machine. **Replace any safety labels if they become damaged or obscured.**

Connection and Electrical Safety Information

- The MINI Trimmer must be used in connection with a properly grounded receptacle. Refer to the specifications (starting on page 29) to determine the correct electrical requirements.
- Observe all applicable building and electrical codes.
- Do not overload outlets or extension cords as this can result in fire or electric shock.
- Do not use extension cords for the trimmer with a diameter narrower than 16AWG.
- Do not use extension cords for the trimmer longer than 50' (15M).
- To power down the MINI Trimmer, switch off the motor via the motor assembly before unplugging the machine.
- The motor assembly is not water tight. Always remove the motor assembly **before** cleaning to avoid water damage and electric shock.
- Do not get the MINI Trimmer wet while it is connected to power.

**The only time it is acceptable to have a guard unattached while the machine is connected to power is during the unloading stage of operation—at which time it is necessary to remove the tumbler cap.*

IMPORTANT SAFETY INFORMATION

Operation Safety Information

- Ensure the MINI Trimmer is fully assembled before operation.
- Conduct all pre-operation inspections listed under **Step 1: Inspect the Machine** on page 12 before operating the MINI Trimmer.
- **Only place plant matter in the MINI Trimmer.** Do not put foreign objects in the MINI Trimmer. Doing so may cause bodily harm or damage to the machine.
- Keep body parts away from the tumbler while in operation.

Maintenance Safety Information

- Conduct regular maintenance on the MINI Trimmer.
- Do not attempt to service electrical components on the MINI Trimmer yourself.
Opening or removing covers may expose you to dangerous voltage and possible fire or electric shock.
- Do not attempt maintenance not covered in this manual unless directed by eLOC8 technical support.
- Some repair or damage will require a qualified service technician who is trained in machinery maintenance, service, and repair.
- Improper adjustments may result in damage to the MINI Trimmer.
- Replacement parts, including the power cord, are specific to the MINI Trimmer and must only be purchased from an authorized dealer. Failure to comply may void warranty, cause bodily harm, and/or damage to the machine.
- Ensure the MINI Trimmer is powered off and the machine is unplugged before conducting any maintenance, repairs, or cleaning. **Never conduct maintenance, repairs, or cleaning while the MINI Trimmer is plugged in.**

The MINI Trimmer is intended for use on legal aromatic herbs and hops. Please check all municipal, provincial/state, and federal laws and regulations before using the MINI Trimmer. eLOC8 does not promote or condone the use of the MINI Trimmer in any way that may be deemed illegal.

MACHINE OVERVIEW

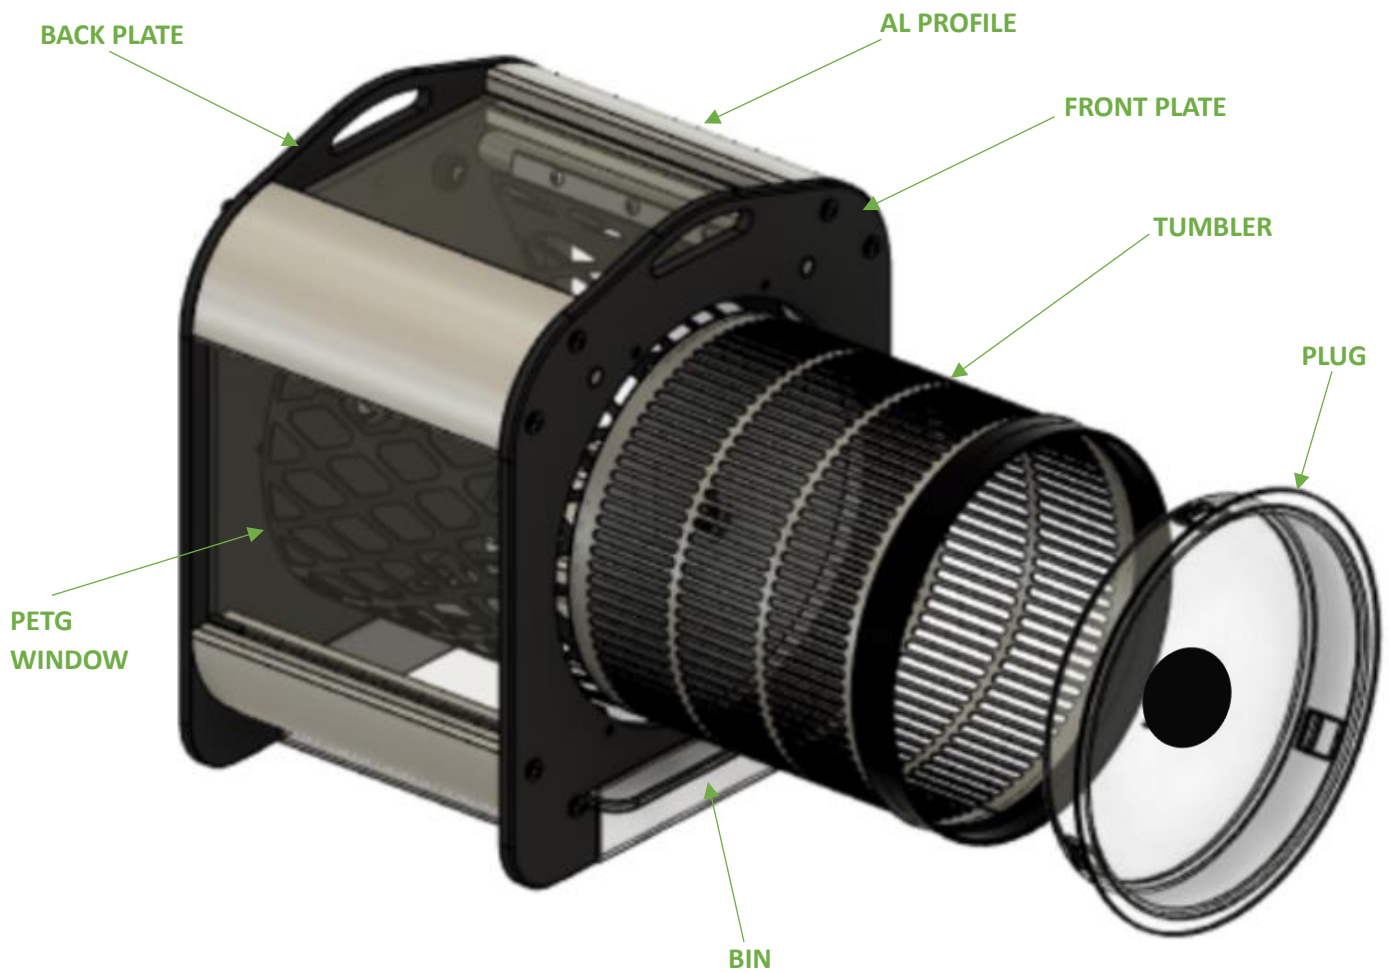


Fig. 1

MACHINE OVERVIEW

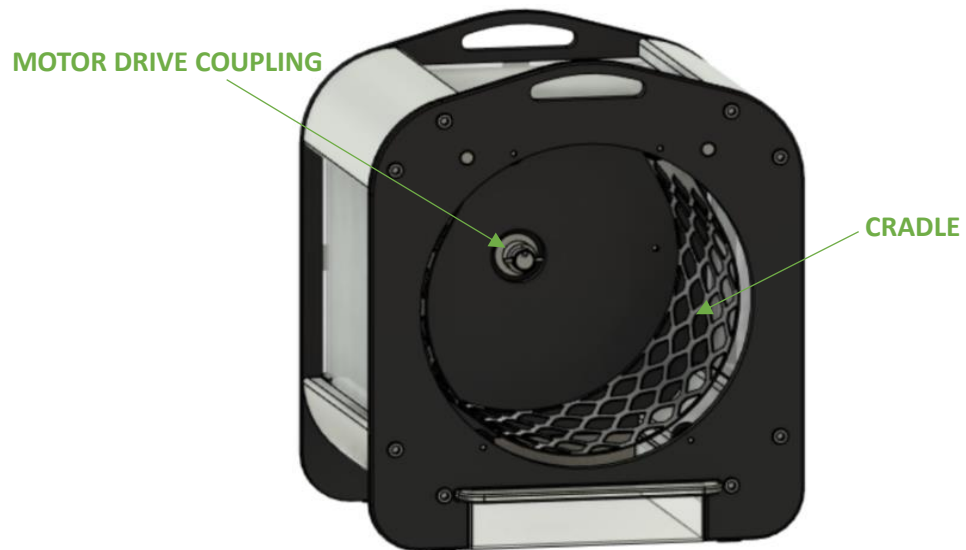


Fig. 2

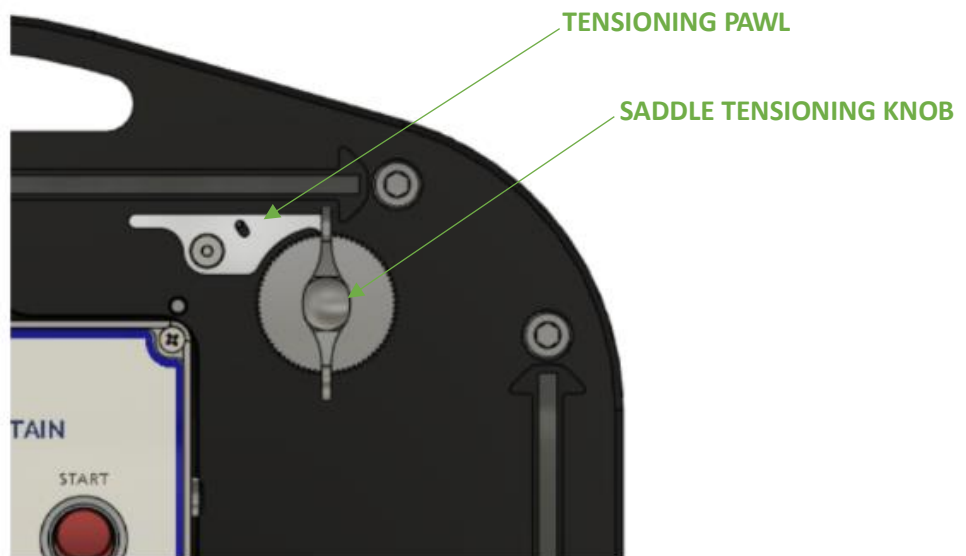


Fig. 3

MACHINE OVERVIEW

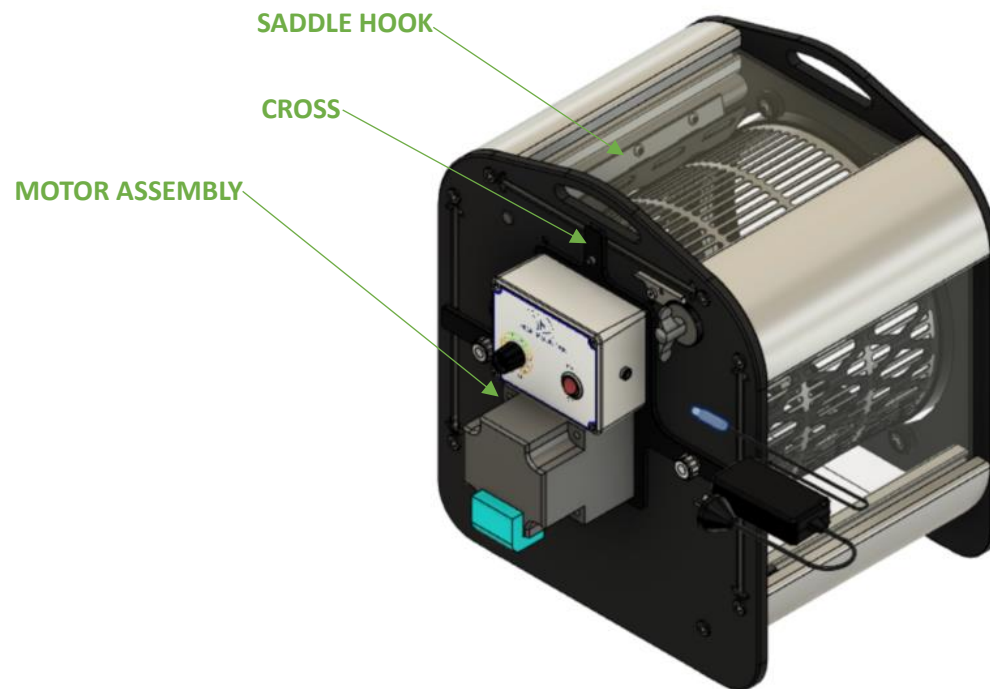


Fig. 4

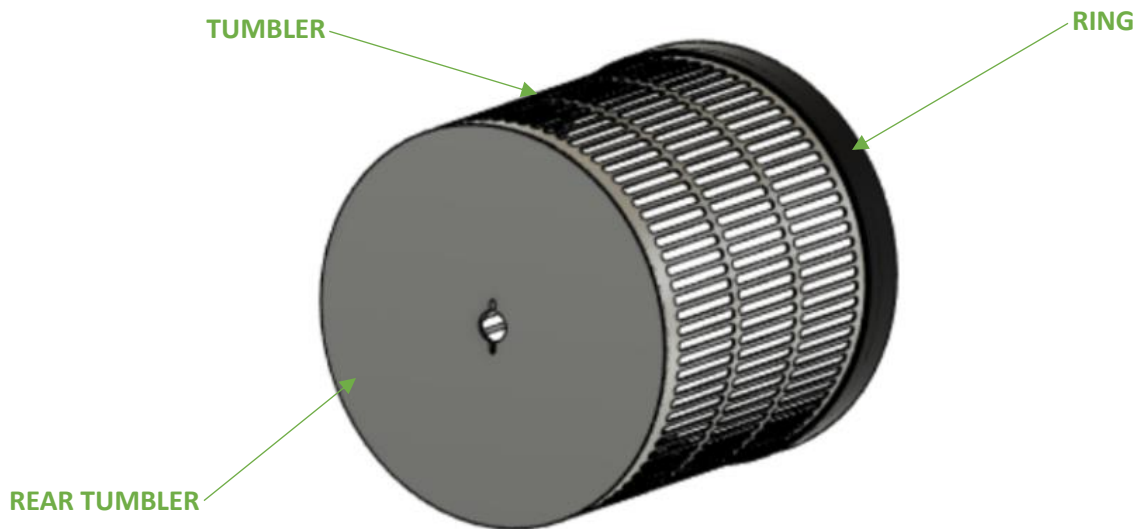


Fig. 5

MOTOR ASSEMBLY OVERVIEW

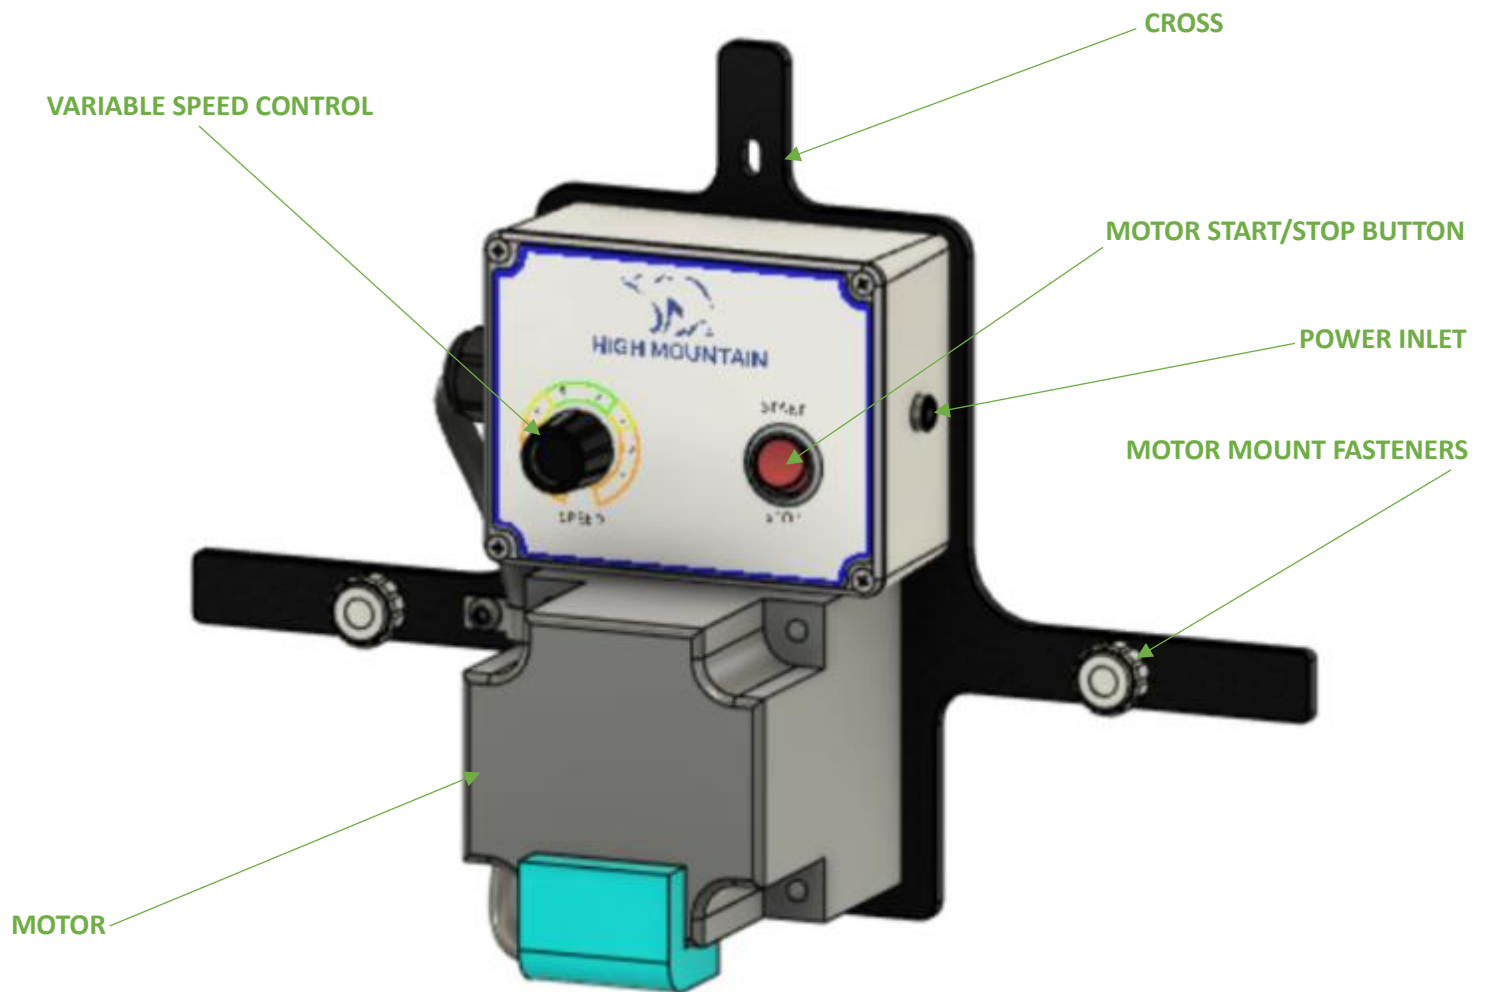


Fig. 6

Step 1: Secure Placement

1. Lifting by the handles on the sidewall, place the MINI Trimmer where it will operate. It is recommended to place the MINI Trimmer:
 - Indoors in a **dry**, well ventilated place.
Do not operate the MINI Trimmer in a wet environment!
 - On a flat, level surface
 - Near an outlet
 - With enough space to:
 - Tilt the machine for loading and unloading
 - Attach and remove the trim bin
 - Easily access the motor assembly and the tumbler plug.



WARNING

THE MINI TRIMMER IS HEAVY. USE PROPER LIFTING TECHNIQUE.



WARNING

THE MINI TRIMMER MUST BE PLACED ON A FLAT, LEVEL SURFACE.

Step 2: Ensure the Machine is Fully Assembled

1. Ensure the MINI Trimmer is fully assembled (see **Reassembly** on page 19). Pay particular attention to the following assembly aspects:
 - a. Ensure the motor assembly is securely attached to the MINI Trimmer rear plate (see step **3** on page 19).
 - b. Ensure the tumbler rear end cap is securely attached to the motor drive coupling (see step **5** on page 21).

OPERATION

Step 1: Inspect the Machine

The following inspections should be completed before each use of the MINI Trimmer. Before operating, ensure:

1. The following are installed:
 - Windows
 - Tumbler
 - Trim Bin
2. The motor assembly is securely attached to the MINI Trimmer rear plate.
3. The tumbler rear end cap is securely latched onto the motor drive coupling.
4. All components are completely dry from any previous cleaning.
5. There are no hazards in the trimming area.

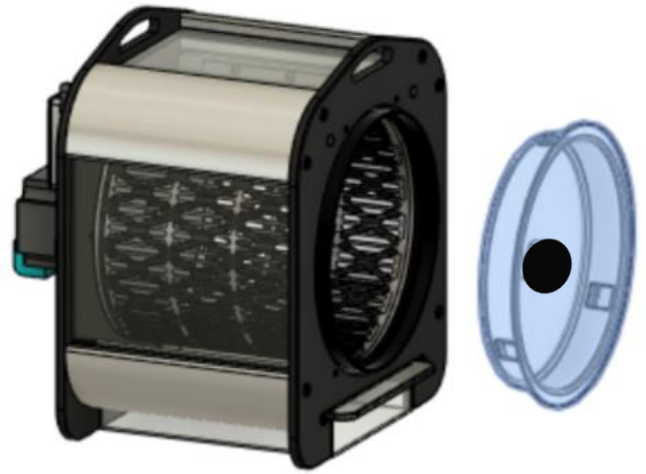


Fig. 7



CAUTION

WHEN TILTED BACKWARDS, THE MACHINE MAY MORE EASILY TIP OVER AND DAMAGE.

Step 2: Load the Machine

1. Pull out the tumbler plug (see Fig. 7).
2. **Carefully** tilt the machine backwards so it rests on the back of the bin rail at a 45° angle (see Fig. 8). **Support the machine while it is tilted.**
3. Load the tumbler with product (see **Recommended Product Load** on page 13).



Fig. 8

4. Tilt the machine back on its legs.
5. Push the tumbler plug into the open end of the tumbler until it clicks into place.

Step 3: Adjust the Cradle

1. Rotate the cradle tensioning knob clockwise (see Fig. 9) so the tumbler lightly touches the top roller. Then turn the knob one more click. Tightening the cradle further will place excess strain on the motor.



Fig. 9

Step 4: Connect to Power

1. The main switch is considered to be the power cord coming from the power supply.
2. The MINI Trimmer is powered by direct current, which is supplied by AC (mains) into a DC power supply. The mains power supply must have a rated voltage of 100-240V, 50/60Hz.
3. Plug the MINI Trimmer power cable into the DV socket on the motor assembly (see Fig. 10). **Ensure both ends of the power cable are dry before connecting!**
4. Plug the other end of the power cable into an outlet or extension cable.
5. MINI Trimmer is recommended to be powered only from a mains power adapter supplies by an authorized dealer.



CAUTION

DO NOT OVER-TIGHTEN THE CRADLE.

RECOMMENDED PRODUCT LOAD

The recommended amount of product to load is between $\frac{1}{2}$ and $\frac{2}{3}$ of the tumbler. Loading product outside of this range may result in a lower quality trim.

Step 5: Trim

1. Flip the power button to the on position
2. Turn the speed control knob to the desired speed.
3. When the desired trim level is achieved, flip the power button to the off position and wait for the motor to come to a complete stop (see **Recommended Trimming Time**).



Fig. 10

Step 6: Unload the Machine

1. Empty the tumbler in any of the following ways:
 - Unplug the power cord, remove the tumbler plug, and scoop out the product.
 - Unplug the power cord, remove the tumbler (see **Disassembly** on page 16), then pour out the product.
 - Securely prop up the back of the MINI Trimmer, remove the tumbler plug, start the motor and allow product to fall out.
2. Return the MINI Trimmer to a secure horizontal position.
3. Pull out the trim bin and empty it.
4. Clean the MINI Trimmer.



DANGER

**TO AVOID ELECTRIC SHOCK,
ENSURE THE POWER CABLE IS
DRY BEFORE CONNECTING IT.**



RECOMMENDED TRIMMING TIME

For the first trim of a new strain, after five minutes, stop the tumbler, remove the tumbler plug, and inspect the product. Repeat the inspection every two minutes afterwards until the desired trim level is achieved. Record this time for future trims of the same strain.



CAUTION

**THE MINI TRIMMER MUST
BE CLEANED AFTER EACH
USE. IF NOT, RESIDUE WILL
HARDEN, CAUSING REDUCED
PERFORMANCE AND EXTREMELY
DIFFICULT CLEANING.**

DISASSEMBLY

1. Ensure the motor has come to a complete stop and the MINI Trimmer is safely disconnected from power.
2. Pull out the trim bin (see Fig. 11).
3. Pull off the plug (see Fig. 12).
4. Remove the tumbler plug (see Fig. 12).
5. Lift the tensioning pawl while holding the saddle tensioning knob in place; then slowly turn the tensioning knob counter-clockwise to release tension on the saddle (see Fig. 13).
6. Twist the tumbler counter-clockwise to unlatch it from the motor drive coupling (see Fig. 14), then pull it gently off the motor drive coupling (see Fig. 15).
7. Pull out the tumbler fully, and **gently** place it aside (see Fig. 16).

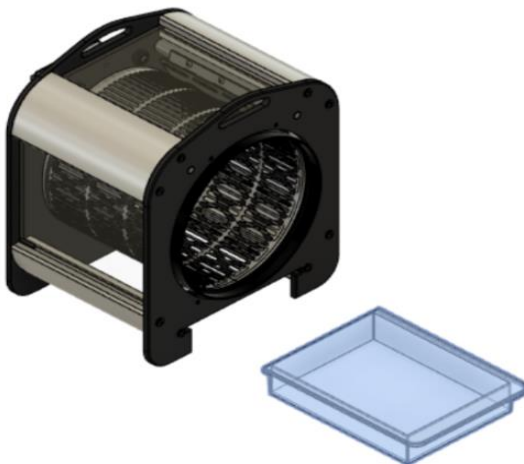


Fig. 11



Fig. 12

DISASSEMBLY

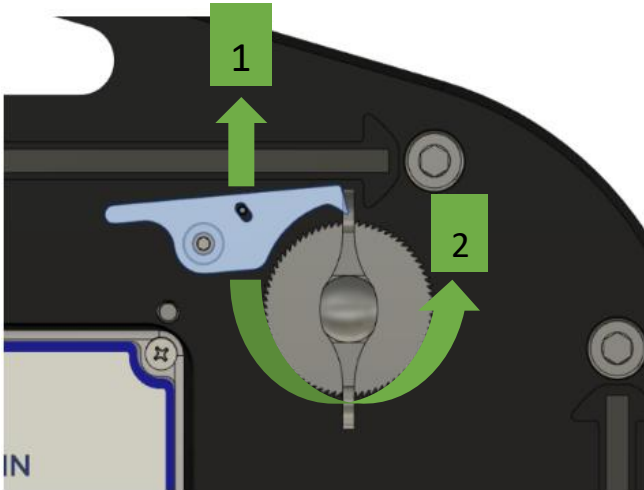


Fig. 13

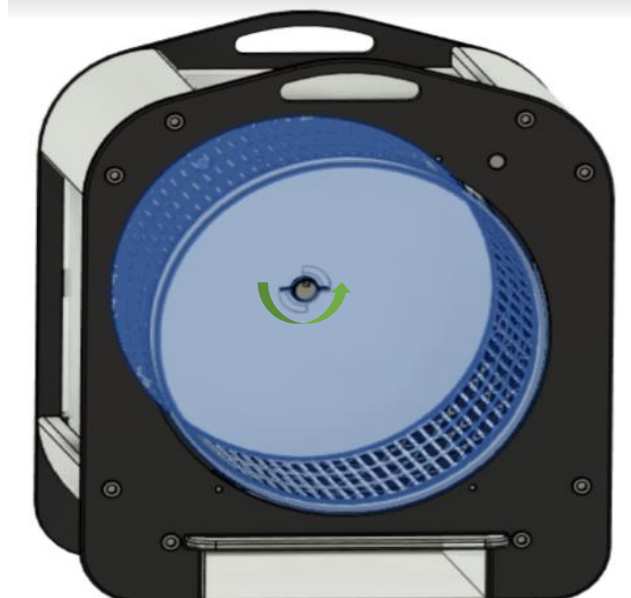


Fig. 14

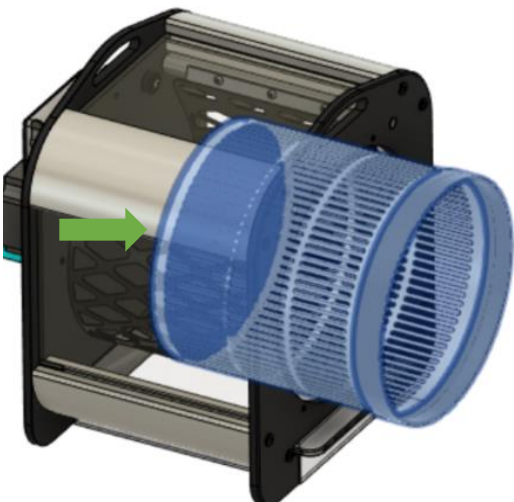


Fig. 15

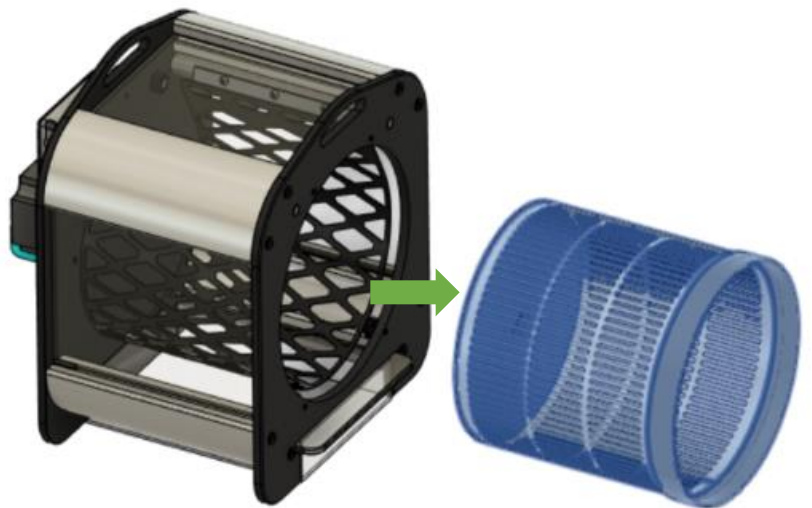


Fig. 16

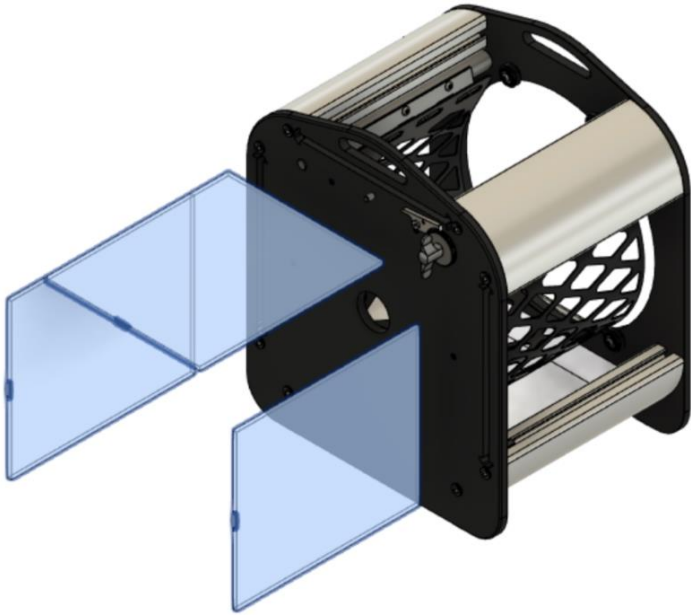


Fig. 17

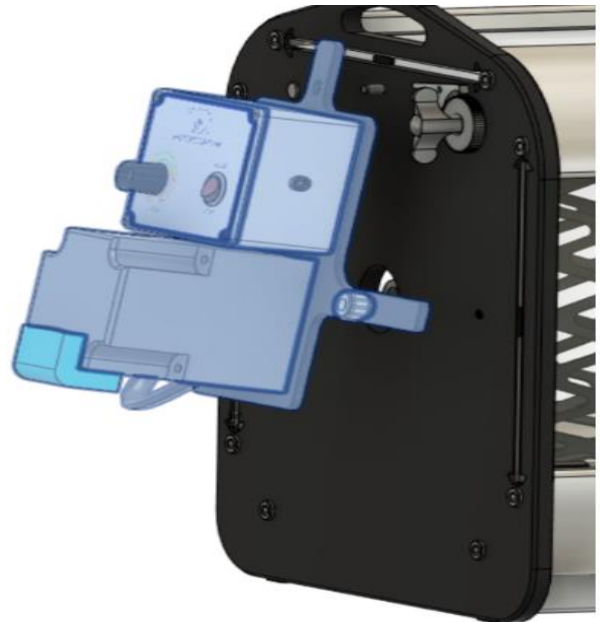


Fig. 18

8. Before mounting the motor assembly insert the PETG Windows into the holes in the rear plate (see Fig. 17).
9. Rotate the bottom of the motor assembly away from the back plate and then lift up motor assembly and screw it to the rear plate (see Fig.18).
10. Unhook the cradle from the both sets of cradle hooks (see Fig.19).

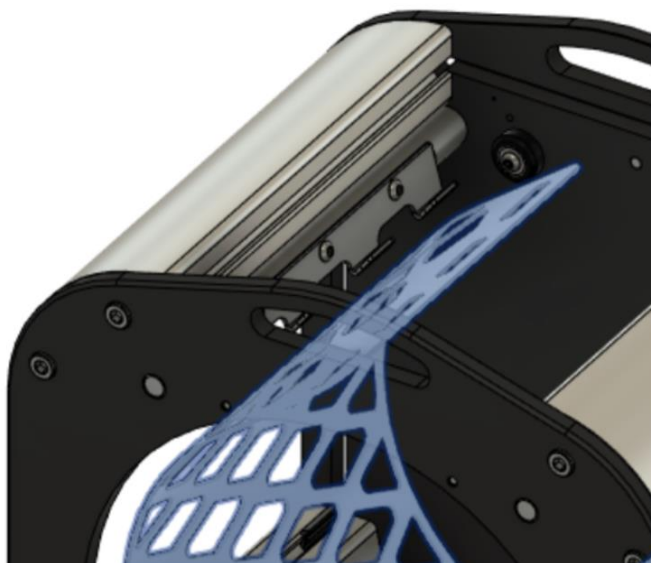


Fig. 19

1. Ensure the MINI Trimmer is unplugged and remains unplugged until it is fully assembled.
2. Hook the cradle onto both sets of cradle hooks (see Fig's 20 and 21).
3. Connect the motor assembly:
 - a. Remove the screw and disconnect the motor assembly from the rear plate (see Fig.22).
 - b. Ensure the motor mounting plate is flush against the rear plate
4. Insert the tumbler (see Fig. 23).

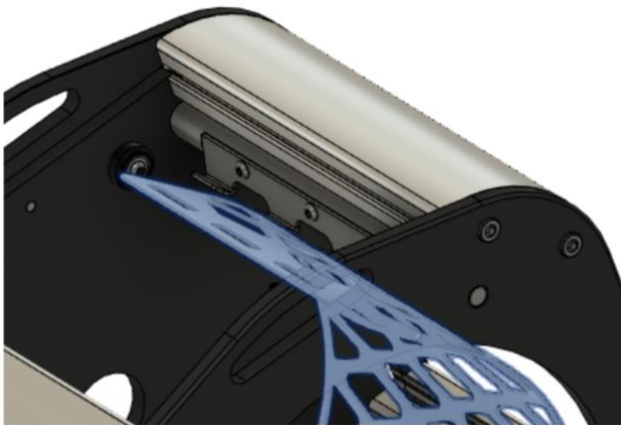


Fig. 20

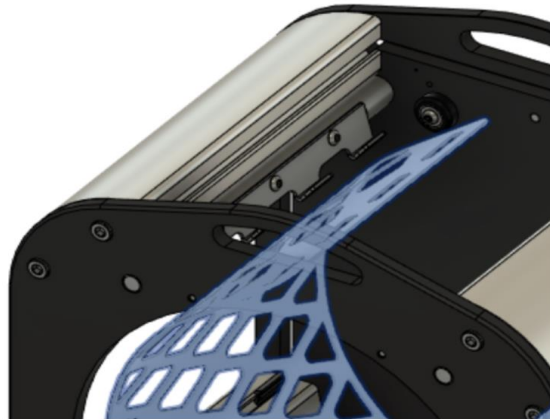


Fig. 21

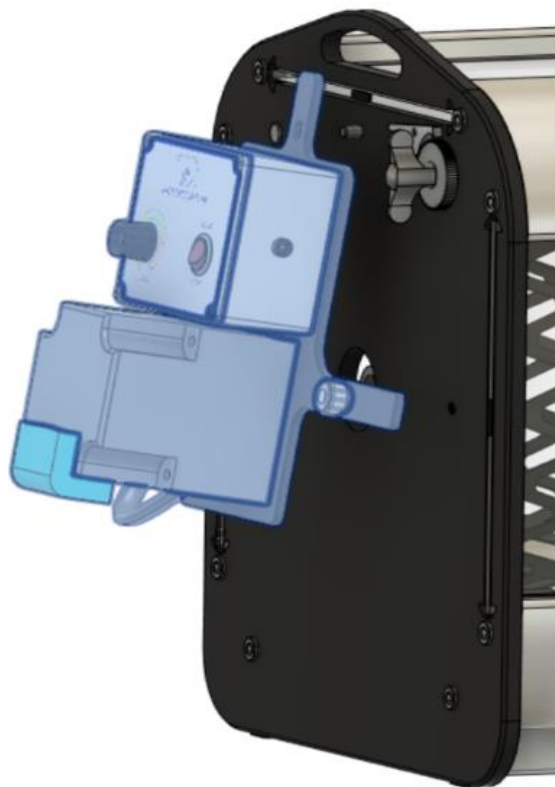


Fig. 22

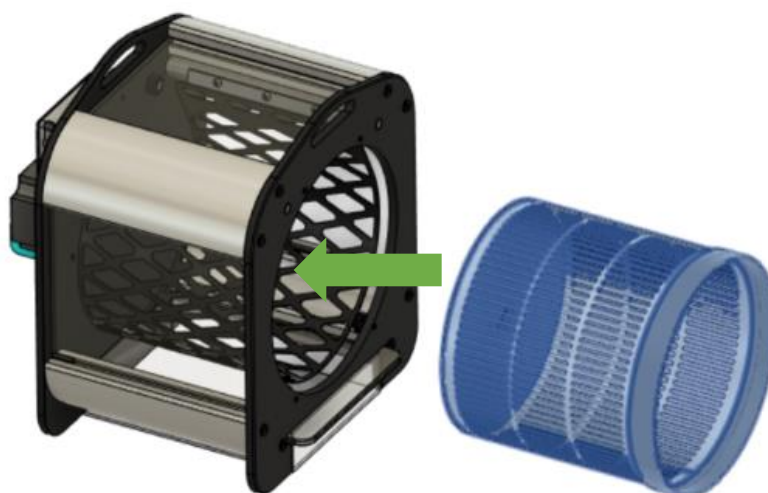


Fig. 23



Fig. 24

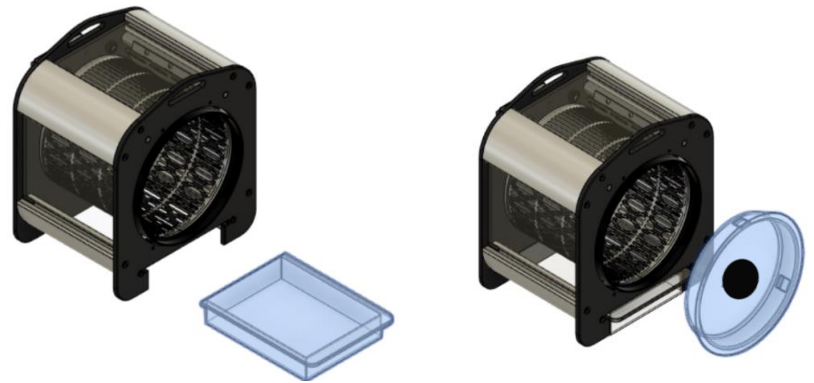


Fig. 25

5. Connect the tumbler to the motor:
 - a. Place a hand in the tumbler and latch the tumbler rear end cap onto the motor drive coupling.
 - b. Twist the tumbler 90° clockwise to secure the tumbler onto the motor drive coupling (see Fig. 24).
6. Push the tumbler plug into the open end of the plug until it clicks into place (see Fig. 25).
7. Slide the trim bin onto the bin rails under the MINI Trimmer until it locks into place (see Fig. 25).

INSPECTIONS

To ensure optimal performance of the MINI Trimmer, the following inspections should be made on a weekly basis:

1. Ensure the motor has come to a complete stop and the MINI Trimmer is safely disconnected from power.
2. Fully disassemble the MINI Trimmer (see **Disassembly** on page 16).
3. Inspect the tumbler for signs of wear.
4. Inspect the rollers for signs of wear.
5. Inspect the saddle for signs of wear.

If any component of the MINI Trimmer appears to be wearing out, it should be replaced (see **Spare Parts and Accessories** on page 31).

1. Ensure the motor has come to a complete stop and the MINI Trimmer is safely disconnected from power.
2. Fully disassemble the MINI Trimmer (see **Disassembly** on page 16).
3. Place the motor assembly safely aside **where it will not get wet.**
4. Remove any large, easy-to-remove pieces of product from all components.
5. Spray all components, except for the motor assembly, with a foaming detergent. Do not use any caustic detergents.
6. Allow the detergent to sit for five minutes.
7. Repeat steps 5 and 6 as necessary*.
8. Rinse / spray wash components except for the motor assembly.
9. Dry all components with soft towel.
10. Spray all components, except for the motor assembly, with isopropyl alcohol or another sanitizer.
11. Allow the sanitizer to dry. **All components must be completely dry before reassembly!**
12. Reassemble the MINI Trimmer (see **Reassembly** on page 19).



DANGER

TO AVOID ELECTRIC SHOCK, DO NOT CLEAN THE MINI TRIMMER WITH THE MOTOR ASSEMBLY ATTACHED.



CAUTION

DO NOT USE CAUSTIC SUBSTANCES TO CLEAN THE MINI TRIMMER.



DANGER

SOME SANITIZERS ARE FLAMMABLE. ENSURE THE SANITIZER HAS COMPLETELY DRIED BEFORE REASSEMBLY!

* With the motor assembly safely removed and placed aside, all other components of the MINI Trimmer (including the main structure) can be soaked in a large tub to help loosen product residue.

STORAGE

When not in use, the MINI Trimmer should be stored using the following guidelines to ensure the longevity of the machine:

- Before storage, clean the MINI Trimmer (see **Cleaning** on page 23).
- Before storage, ensure the machine is dry.
- Store the machine in a dry space.
- Store the machine in a safe space where it will not be knocked or inadvertently interfered with.
- Keep the machine out of reach of children and other unauthorized persons.



CAUTION

THE MINI TRIMMER MUST BE
CLEANED BEFORE STORAGE.
IF NOT, RESIDUE WILL
HARDEN, CAUSING REDUCED
PERFORMANCE AND EXTREMELY
DIFFICULT CLEANING.

If any problems not listed in this section arise, or any troubleshooting solutions do not solve the problem, contact eLOC8 technical support for assistance (see **Contact Us** on page 32).

The Tumbler Won't Spin

Possible Causes

- The cradle is too tight.
- The tumbler is not latched onto the motor drive coupling.

Solution:

1. Raise the tensioning pawl to loosen the saddle. Then tighten the cradle again to a lesser tension than before.
2. If the tumbler still does not spin, ensure the tumbler is latched onto the drive wheel:
 - a. Ensure the motor has come to a complete stop and the MINI Trimmer is safely disconnected from power.
 - b. Remove the tumbler plug.
 - c. Latch the tumbler rear end cap onto the motor drive coupling (see step **5** on page 21).

The Control Box Won't Come Off

Possible Causes

- The tumbler is still latched onto the motor drive coupling.

Solution:

1. Detach the tumbler from the motor drive coupling (see steps **5** and **6** on page 16).

Trim Quality is Poor

Possible Causes

- The tumbler is not appropriately filled.
- The cradle is not tight enough.
- The moisture content of the product is too high.

Solution:

1. Ensure the tumbler is no less than $\frac{1}{2}$ full and no more than $\frac{2}{3}$ full.
2. If the tumbler is appropriately filled, tighten the cradle tensioning knob. Do not over tighten the knob as this will put excess stress on the motor.
3. If tightening the cradle does not improve trim quality, ensure the product has a moisture content of 8-10% before trimming.

WARRANTY INFORMATION

High Mountain Trimmers will repair or replace any parts proven defective in material or workmanship without charge for a period of one year.

The warranty period will begin on the date the machine is purchased by the initial purchaser. The MINI Trimmer warranty defects can be remedied at any authorized service dealer or directly by High Mountain trimmers.

Any original parts deemed to be defective will be replaced free of charge. High Mountain Trimmers reserves the right to use any manufacturer approved replacement parts for warranty repair.

If warranty repair is required, please contact us at **sales@highmountaintrimmers.com** and provide the following information:

- Model and serial number (located on the rear plate)
- Proof of purchase date
- Copy of the original Warranty Registration Card (unless registration was completed online)
- Details of the defect or problem (including photos and/or video).

Pending approval from High Mountain Trimmers, the machine or defective part must then be returned to for analysis and replacement.

Do not return the machine to the place of purchase for repair or warranty claims unless you have been authorized by High Mountain Trimmers to do so.

The place of purchase can only sell replacement parts and will not repair warranty issues unless it is noted as an authorized repair dealer and has been authorized to work on your machine.

You may be denied warranty coverage if your machine has failed due to:

- Abuse
- Accidental damage
- Improper maintenance
- Improper electrical connection


WARRANTY INFORMATION

- Neglect
- Normal wear
- Unapproved modifications including the use of unapproved replacement parts.

High Mountain Trimmers assumes no risk and shall be subject to no liability for damages or loss resulting from the specific use or application made of the product. In no event will High Mountain Trimmers be liable for any special, incidental, or consequential damages (including loss of use, loss of profit, and claims of third parties) however caused, whether by negligence of the manufacturer or otherwise. If you have any questions regarding your warranty rights and responsibilities, please contact eLOC8.

Specifications

Product Part Number	0502 MINI Trimmer
Certifications	CE, RoHS
Height	16"/40.6cm
Length	10,5"/26.6cm
Width	14"/35.5cm
Tumbler Diameter	10"/24.5cm
Tumbler Slot Width	0.188"/0.48cm
Total Weight	26lbs/12kg
Weight without Motor Assembly	22lbs/10kg
Circuit Breaker	13/15A
Connector Plug	IEC C13 to Various
Power Inlet	DC BARREL PLUG 5.5MM X 2.5MM
Current Draw	0.78A @240V, 1.43A @120V
Power Supply	Input: 1PH, 100-240VAC, 50/60HZ, 2A. Output: 24VDC, 5A
Tumbler Motor	120W, 24VDC
Tumbler Speed	30-50RPM
Sound Rating	55-62dBA

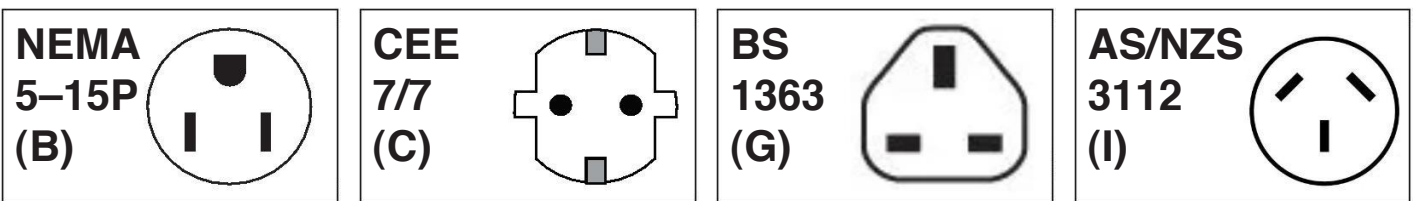

Spare Parts

Item	Product number
Motor assembly	0502_0802
PetG_Plate	0502_0113
Power Cord (NA, EU, UK, AU)	0502_Cord
DC Power Inverter	0502_Inverter
Cradle	0502_0107
Bin	0502_0102
Tumbler assembly	0502_0804
Tumbler Plug	0502_0801
Cross	0502_0116
Overlay Bear electronic box	0502_0301

eLOC8 technical support is available between 8 a.m. and 4 p.m. European Standard Time Five days a week at:

- **Sales@highmountaintrimmers.com**

