mdn.
DIGITAL

MDN Printer Service User Manual

Application version: 1.1.0 · 25.10.2026

Madena Digital SRL
service@mdndigital.ro · printer.mdndigital.ro

1. About the application
2. System requirements
3. Installation
4. Activating the licence
5. Finding printers
6. The printer sheet
7. Resetting the waste ink counter (Epson)
8. Temporary unlock and restoring a backup
9. The Service tab: tools for technicians
10. Canon printers: the service assistant
11. Brother printers: the service guides
12. Customer history and PDF reports
13. Troubleshooting
14. Data, privacy and uninstallation
15. Support

1. About the application

MDN Printer Service reads the status of inkjet printers and resets the waste ink pad counter on compatible Epson models. For Canon and Brother printers it provides step-by-step service guides and, for Canon, an assistant that automatically detects when the printer enters service mode.

The waste ink pad absorbs the ink expelled when the print head is cleaned. When the counter reaches the limit set by the manufacturer, the printer locks itself to prevent leaks. Resetting the counter is appropriate **only after the pad has been replaced or cleaned**, or after an external waste ink tank has been fitted.

---

2. System requirements

- Windows 10 or Windows 11, 64-bit; macOS 12 or later (Apple Silicon or Intel processor); 64-bit Linux (for example, Ubuntu 22.04, Debian 12, Fedora 38 or later).
- The printer connected by USB cable or on the same network as the computer.
- The printer driver installed (no additional drivers are required).
- An internet connection for activating the licence and for its weekly check.

---

3. Installation

Windows

1. Download the file `MDN-Printer-Service-Setup.exe` from printer.mdndigital.ro.
2. Open the file. If Windows displays the message “Windows protected your PC”, select “More info”, then “Run anyway”.
3. Read and accept the Licence Agreement, choose the installation folder and complete the installation.
4. Start the application from the Start menu or from the desktop shortcut.

macOS

1. Download the DMG file that matches your Mac: “Apple Silicon” for M1, M2, M3 and M4 processors, or “Intel” for older models. The processor is shown in the Apple menu, under “About This Mac”.
2. Open the DMG file and drag the MDN Printer Service icon into the Applications folder.
3. On first launch, macOS may display a message stating that the application comes from an unidentified developer. Open System Settings, Privacy & Security, then click “Open Anyway” next to MDN Printer Service and confirm.
4. If macOS asks for access to the local network, allow it: this is required to find Wi-Fi printers.

Linux

1. Download the `.AppImage` file from printer.mdndigital.ro.
2. In the file manager, open Properties, the Permissions tab, and tick “Allow executing file as program”. Then start the application by double-clicking it.
3. For printers connected by USB, open Settings in the application and click “Allow USB access”. The system asks for the administrator password once only. Then reconnect the printer cable.

Updating the application

On start-up, the application checks whether a new version has been released. If so, a green bar appears at the top with the release notes and the **Download and install** button: the application downloads the installer for your system to the Downloads folder, verifies the integrity of the file and opens it. On Windows, the application closes and the installer updates it; on macOS, drag the application to Applications and choose “Replace”; on Linux, start the new AppImage file. The licence, history and settings are kept. You can also check manually in Settings, Updates section.

---

4. Activating the licence

Without a licence, you can identify the printer and read the pad levels. Backup, reset, temporary unlock, PDF reports and the Canon assistant require activation.


1. Order a licence at printer.mdndigital.ro. Once payment has been confirmed, you will receive the activation key by e-mail.
2. In the application, open **Settings**, section **License**.
3. Enter the key and click **Activate**.

A key is valid for one computer only. The application checks the licence online approximately once a week; between checks it also works without an internet connection. To move the licence to another computer, write to us at service@mdndigital.ro and state the computer ID shown in Settings.

---

5. Finding printers

On start-up, the application automatically searches for printers connected by USB and those on the local network. The list shows the connection, the status and what the application can do for each model: full reset, temporary unlock only or service guide.

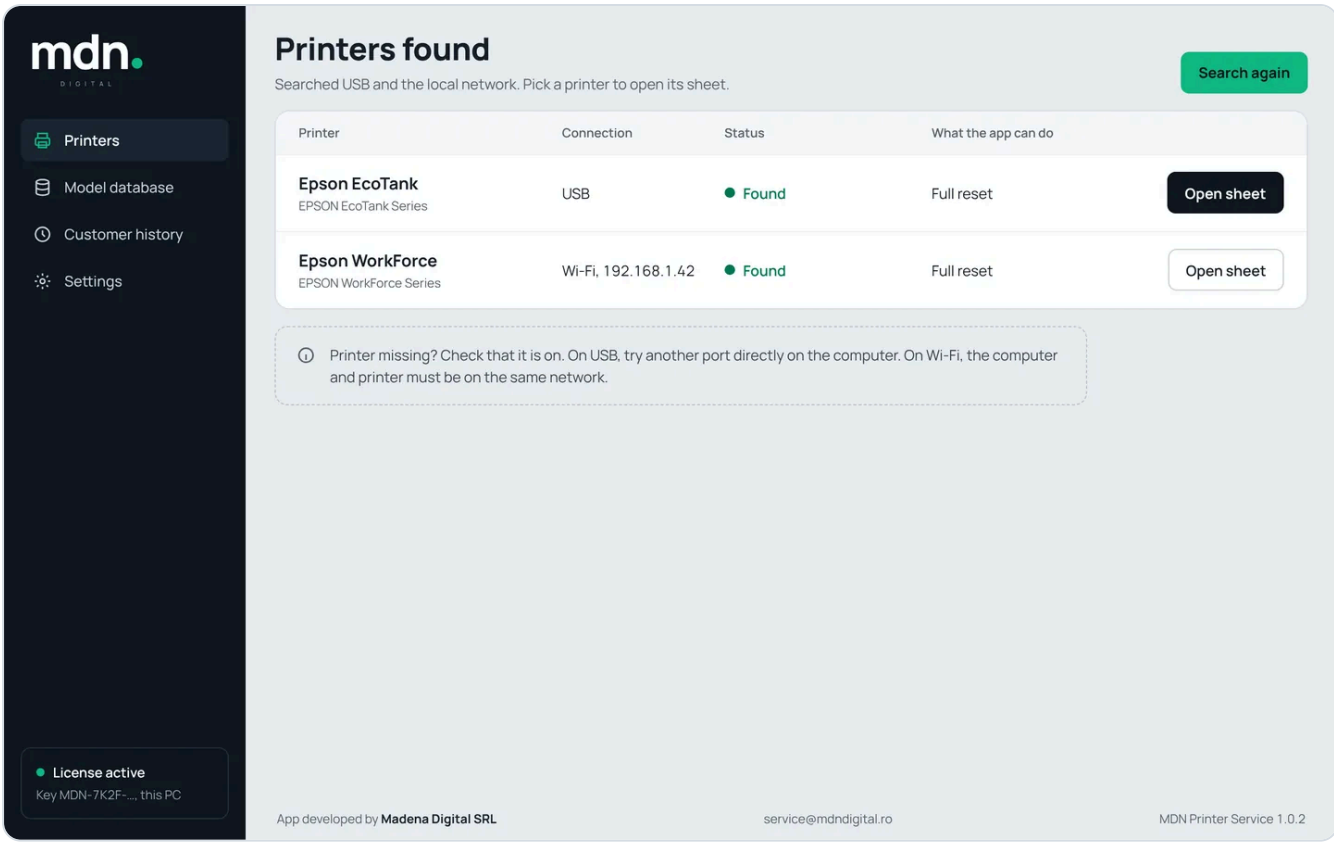


If the printer does not appear, check that it is switched on, use a USB port connected directly to the computer (not a hub) or, for Wi-Fi, check that the printer and the computer are on the same network. Then click **Search again**.

---

6. The printer sheet

Click **Open sheet** for an Epson printer. The sheet displays the model, the serial number, the pad levels (main and borderless), the lock threshold, the probable state of the LEDs and the tabs:

- **Overview**: general data, firmware, IP address.
- **Counters**: pages printed, scans, first use.
- **Errors**: stored error codes and warnings.
- **Memory and backup**: saved backups and restoring.
- **Service**: separate counters, maintenance, print head and cartridge information, memory tools (see chapter 9).
- **History**: the jobs carried out on this printer.

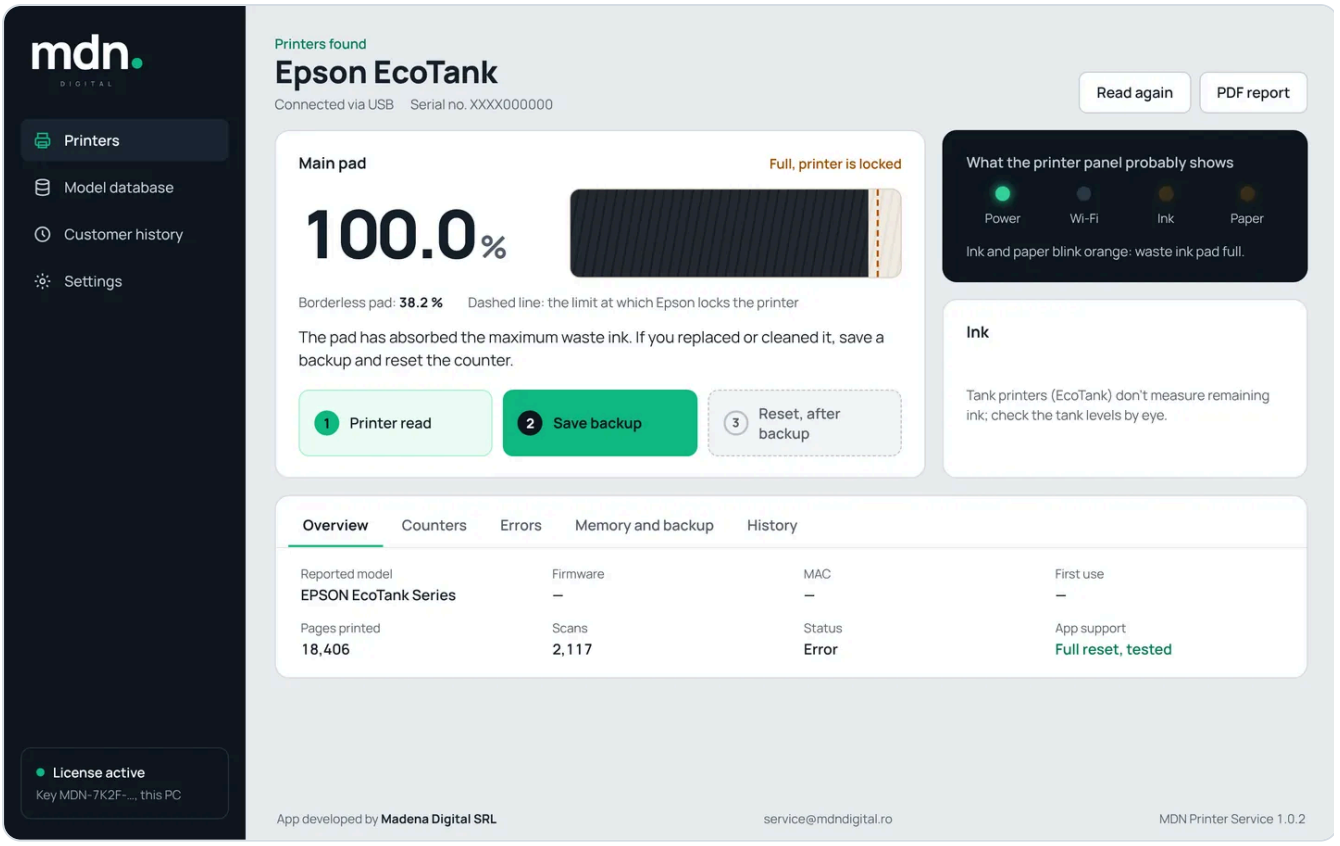


Some Epson models (for example L15150, L6550, the EcoTank Pro and WorkForce Pro series) have no internal pad: waste ink collects in a replaceable **maintenance box**. For these models, the sheet shows the state of the box ("not full", "nearly full", "full") and explains that no reset is needed: a full box is replaced with a new one.

7. Resetting the waste ink counter (Epson)

> **Important:** replace or clean the waste ink pad, or fit an external waste ink tank, before resetting. Resetting without this intervention may cause ink leaks and damage to the printer.

1. Open the printer sheet and check the pad levels.
2. Click **Save backup**. The backup contains the original values from the printer's memory and is saved in Documents, MDN Printer Service, Backup. Resetting remains unavailable until the backup has been saved.
3. Click **Reset counters**, optionally fill in the customer details, and confirm. Do not switch off the printer or disconnect the cable during the operation.
4. The application re-reads the counters and confirms the value 0%.
5. Switch off the printer using the power button, wait 10 seconds and switch it on again. After restarting, only the power LED should remain lit.

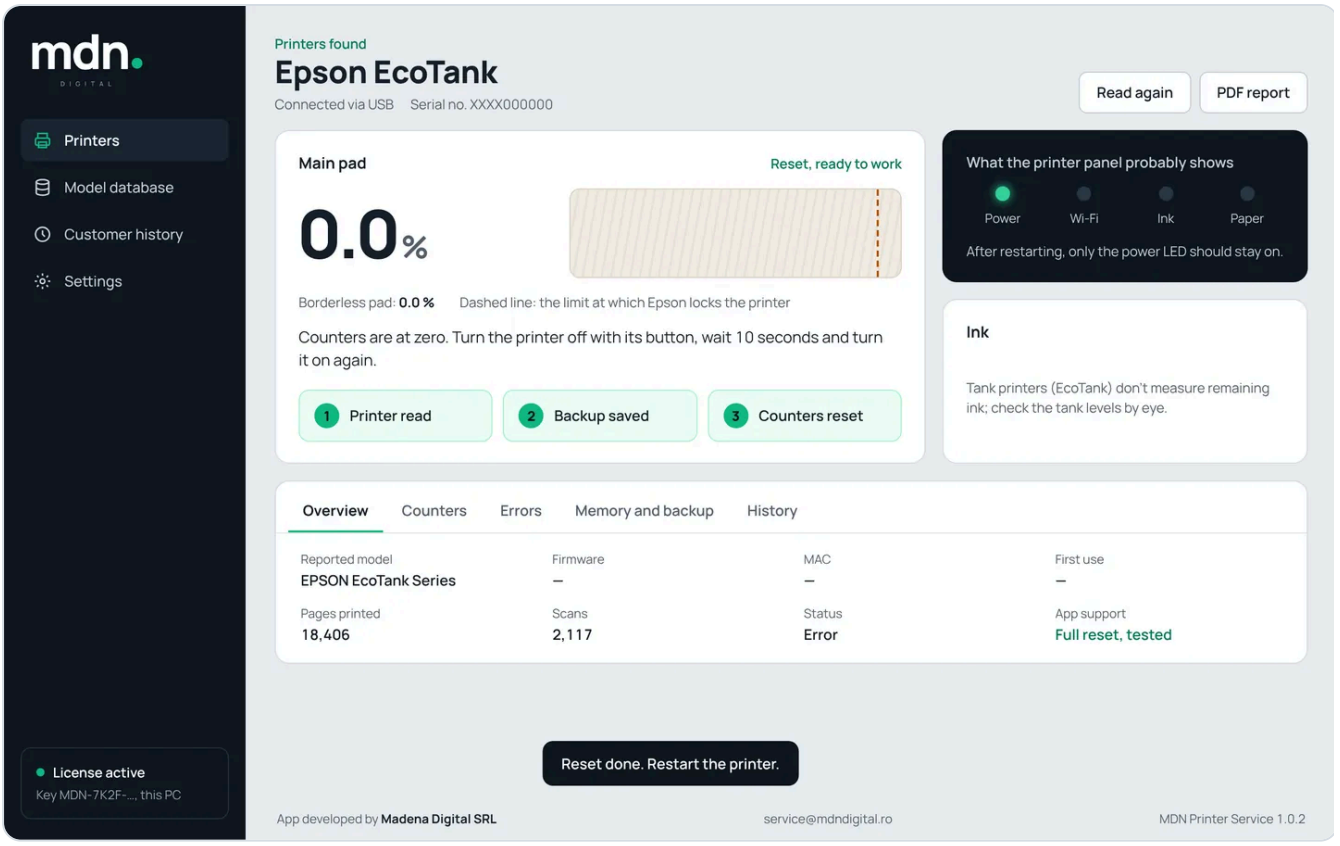

Models marked “not yet tested” have parameters taken from a service database and have not yet been tested by us on a real unit. The backup allows you to return to the original values at any time.

---

8. Temporary unlock and restoring a backup

Temporary unlock is available for Epson models that are not included in the full reset database. The printer can print for a period of time, while the counters remain unchanged. The function is located in the **Memory and backup** tab.

Restoring returns the counters to the values from a previous backup: the **Memory and backup** tab, the **Restore from backup** button, then choose the desired file.

---

9. The Service tab: tools for technicians

The **Service** tab in the sheet of an Epson printer brings together the service functions. Reading is free of charge; operations that write to the printer require an active licence.

Separate counters

The list shows each counter known for the model (main pad, borderless pad for printing without margins, a third pad on some models), with its level as a percentage. The **Reset** button next to a counter resets only that counter to zero. As with the full reset, the button becomes active once the backup has been saved, and the operation is recorded in the history.

Maintenance

For network-connected printers (Wi-Fi or network cable), the application can send **Nozzle check**, **Colour test page**, **Head cleaning** and **Power cleaning**. Power cleaning uses a lot of ink and fills the pad faster; use it only if the nozzle check shows missing lines after a normal cleaning. For printers connected by USB, use the Epson driver utility for these operations.

Information and automatic power-off

The **Information** section shows, where the model provides them, the print head ID, the cartridges and how many times each ink has been replaced. On models that support it, you can set after how many minutes the printer switches itself off (**Automatic power-off**, 0 = never).

Advanced

> **Caution:** the advanced functions work directly with the printer's memory. Reading and comparing are safe. Writing to the wrong address can lock the printer; use the editor only if you know the exact address and value.

- **Memory export**: reads the chosen address range and saves it in Documents, MDN Printer Service, Backup, Memorie.
- **Memory comparison**: choose two saved files (for example before and after the printer displays an error) and click **Compare**. The application shows the addresses that have changed, with the old and the new value. This is how the counter addresses of new models can be identified.
- **Memory editor**: **Read** displays 16 addresses starting from the chosen one; **Write** sets a value (0–255) at an address, after two confirmations. The old value is recorded in the history.
- **Access key detection**: for models that are not in the database, the application tries all possible read keys (this may take a few minutes) and remembers the one found. Nothing is written to the printer.

Some printers with recent firmware block access to the memory. On these printers, advanced reads return no values; temporary unlock remains available.

---


10. Canon printers: the service assistant

On Canon printers, the counter is reset from the printer's service mode, using a service program. The application **does not write to the memory of Canon printers** and does not include the service program; the assistant guides you and documents the intervention.

On Canon G models with a maintenance cartridge (for example G1420, G1430), there is no counter to reset: the maintenance cartridge is replaced, as described in the guide.

1. Open **Model database**, search for the model and click **Start the Canon assistant**.

2. **Preparation**: confirm that the pad has been replaced or cleaned and that the printer is connected by USB. The assistant records the printer's USB identifier in normal mode.
3. **Service mode**: follow the button sequence step by step; for steps that involve waiting, you can start the timer. When the printer reconnects over USB with a different identifier, the assistant displays "Service mode was detected automatically". If detection is not possible, you can confirm manually.
4. **Reset**: carry out the reset in the service program and tick the steps as you complete them.
5. **Completion**: restart the printer. Optionally, click **Open maintenance** to open the Canon driver window (cleaning, nozzle check, alignment). Fill in the customer details and click **Save and generate the report**.

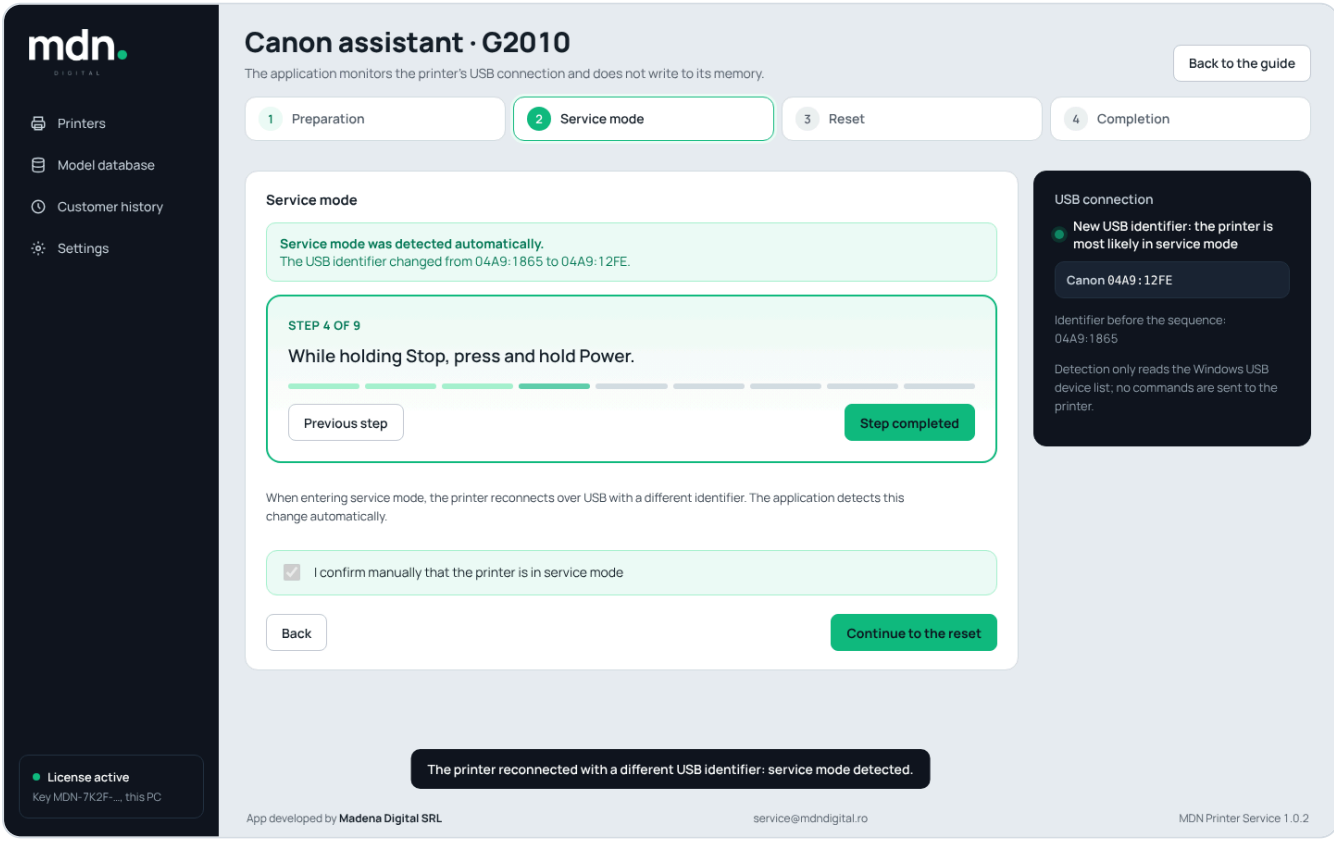

The assistant and the detailed steps of the guides require an active licence. Detection only reads the operating system's list of USB devices and does not send any commands to the printer. Use the service program version indicated in the guide: an unsuitable version may permanently lock the printer's service mode.

11. Brother printers: the service guides

For Brother, the application displays the procedure from the printer's maintenance menu, step by step, with the error codes, sources and warnings. The procedure is carried out directly from the printer's control panel. Error codes and warnings are available free of charge; the detailed steps of the Canon and Brother procedures are available with an active licence and are downloaded automatically in the application's language. When finished, click **Done, save to history**; the guide can also be printed.

12. Customer history and PDF reports

Each intervention is saved in **Customer history**, with the date, the customer, the printer, the pad level before and after, and the type of job. From the history you can open the PDF report and the corresponding backup, or edit the customer details. The report contains spaces for the signatures of the technician and the customer.

Reports are saved in Documents, MDN Printer Service, Rapoarte. Both folders can be opened from **Settings**.

13. Troubleshooting

Situation	Solution
The printer does not appear in the list	Check the power supply and the cable, use a direct USB port, then click “Search again”. For Wi-Fi, check that the printer and the computer are on the same network.
“The printer isn’t answering”	Close other programs that use the printer (the driver’s status monitor), restart the printer and re-read the sheet.
“The printer refused the memory write”	Use “Temporary unlock” or send us the model and firmware for verification.
“Can’t reach the activation server”	Check the internet connection and the firewall; the address used is licente.mdndigital.ro.
“This key is already used on another computer”	The key is active on another computer. Write to us to arrange a transfer.
The LEDs keep flashing after the reset	Restart the printer using the power button. If the error persists, check the Errors tab; there may be another cause (paper, ink, print head).
The buttons under “Maintenance” are inactive	Maintenance commands only work for network printers. Connect the printer to Wi-Fi or use the Epson driver utility.
The sheet shows “Maintenance box”	The model has no pad to reset; when the box is full, replace it with a new one (genuine Epson part).
Reads in the Service tab remain empty	The printer’s firmware blocks access to the memory or the model is not in the database. Try “Access key detection”; if no key is found, use temporary unlock.
The Canon assistant does not detect service mode	Use a direct USB cable and repeat the button sequence. If the printer has nevertheless entered service mode (according to the LEDs), confirm manually.

14. Data, privacy and uninstallation

Customers, history, reports and backups remain exclusively on your computer. The application communicates only with the licence server and with the printer.mdndigital.ro website (to check for new versions), in accordance with the Privacy Policy published on the website.

To uninstall: on Windows, go to Settings, Apps, MDN Printer Service; on macOS, move the application from the Applications folder to the Trash; on Linux, delete the AppImage file. The folders in Documents (backups and reports) are kept; delete them manually if you no longer need them.

15. Support

For questions or problems, write to us at service@mdndigital.ro. Please state the printer model, the application version and, where applicable, the error message displayed.