



MASJID BOARD

Complete Setup & User Manual

WHAT'S INSIDE

1. **Main TV** — Language, pairing code
2. **Admin Remote** — Pairing, PIN, Settings
 - a. **Settings Reference**
 - b. **PIN Reset**
3. **Link TV** — Connecting a second screen
4. **Musalli** — Live prayer times mode

Pairing the TV with the Admin Remote

Follow Steps 1–9 once, when setting up a new TV for the first time.

1 Switch Language (Urdu / English)

Before anything else, tap the language toggle in the top-right corner of this home screen to switch between Urdu and English — whichever you're more comfortable with.



Pairing the TV with the Admin Remote

2 Click "Main TV" on the TV Device

On the TV itself, open the app and you'll land on this role picker. Select **Main TV** to start the board on this screen.



Pairing the TV with the Admin Remote

3 Note Down the Remote Control Code

Once the board loads, an 8-digit code appears in the bottom-left corner. Write it down — you'll enter it on your phone in Step 6.




⚠ Important: This code is only ever generated on the **TV device** itself. It won't appear on your phone — you'll type this same code *into* the Admin Remote in Step 6, not look for it there.

Connect the Admin Remote (Mobile App)

These steps happen on your phone, in the mobile app.

4 Open the Mobile App

On your phone, find and tap the **Masjid Board** app icon on your home screen.

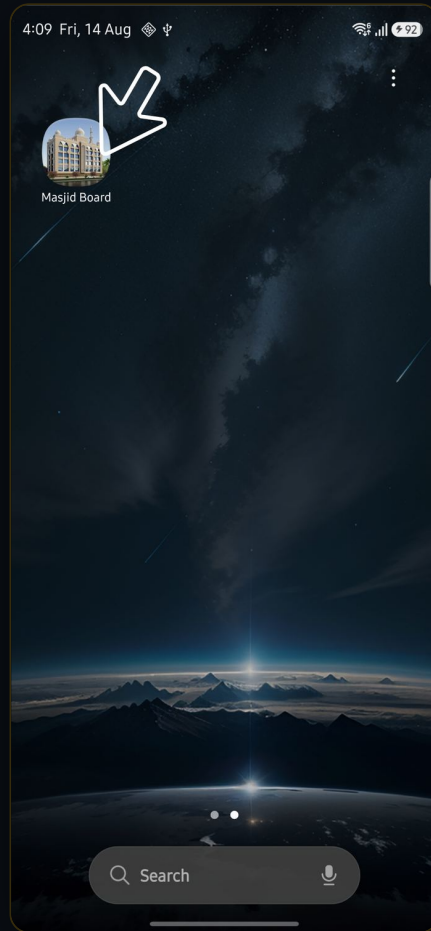

Connect the Admin Remote (Mobile App)

5 Click "Admin Remote"

On the same role-picker screen (now on your phone), choose the **Imam** card — this is the Admin Remote Control role.



Connect the Admin Remote (Mobile App)

6 Enter the Remote Control Code

Type in the 8-digit code you noted down from the TV in Step 3.



Masjid Board

Admin / Imam Remote

Enter the Mosque's 8-digit Master Code

□

□

□

□

|

□

□

□

□

0 / 8 — digits

Connect

Connect the Admin Remote (Mobile App)

7 Set PIN

Once the code is entered, create a 4-digit Admin PIN. You'll need this PIN any time you (or someone else) tries to make changes to the TV.

<

Masjid Board

Admin / Imam Remote

Enter the Mosque's 8-digit Master Code

66792783

8 / 8 — digits

First time setup — create a 4-digit PIN

.

.

.

.

0 / 4 — digits

Confirm PIN

Connect the Admin Remote (Mobile App)

8 Save Name


Give this TV a name (e.g. your mosque's name) so it's easy to identify later.



Open Settings

9 Click Settings

After saving the name, the mosque board will open on your mobile. Tap the  gear icon in the top-right corner to open the Control Panel.

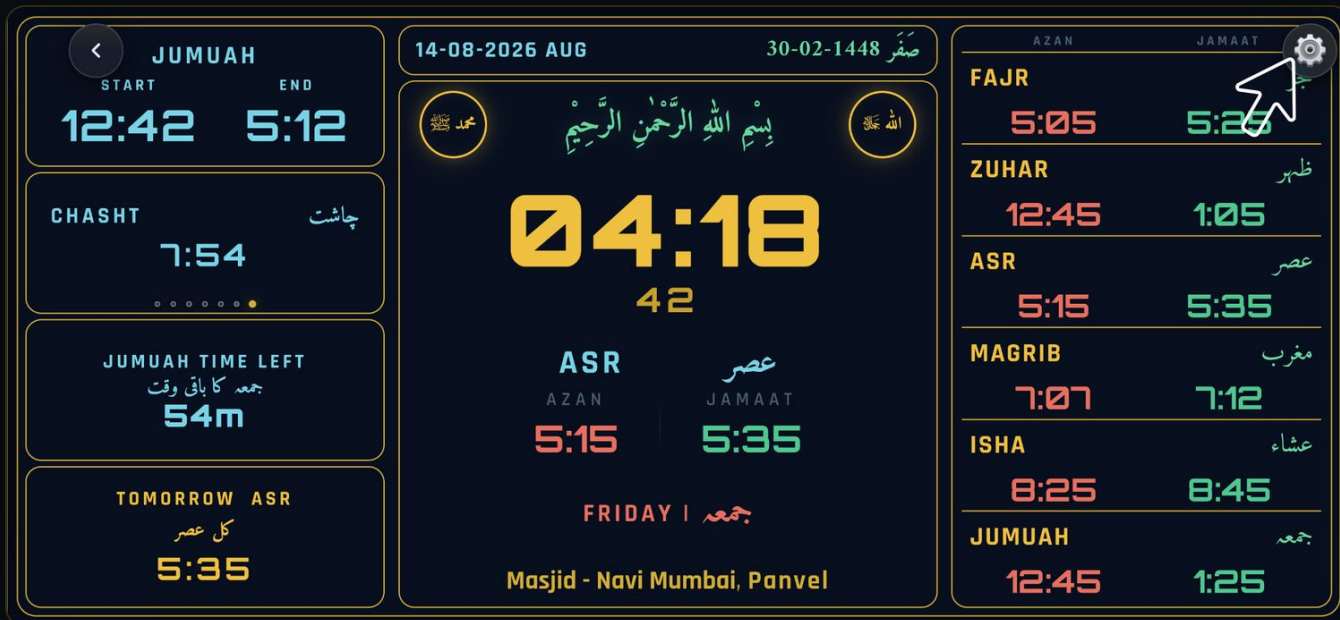

The screenshot displays the Masjid Board interface with the following sections:


- Top Left:** JUMUAH START 12:42, END 5:12. CHASHT 7:54. JUMUAH TIME LEFT 54m. TOMORROW ASR 5:35.
- Top Center:** 14-08-2026 AUG, 30-02-1448 صَفَر. Central display shows 04:18 with 42 below it. Below this, ASR 5:15 and JAMAAT 5:35 are shown. At the bottom, FRIDAY | جمعہ and Masjid - Navi Mumbai, Panvel are displayed.
- Top Right:** AZAN and JAMAAT headers. A gear icon is in the top right corner, with a white arrow pointing to it. Below the headers, a table lists prayer times:

Prayer	AZAN	JAMAAT
FAJR	5:05	5:25
ZUHAR	12:45	1:05
ASR	5:15	5:35
MAGRIB	7:07	7:12
ISHA	8:25	8:45
JUMUAH	12:45	1:25

 We recommend making changes from the **Admin Remote** (your phone) rather than directly on the Main TV, to avoid conflicts. The Control Panel itself looks and works the same either way — every screenshot in this manual is from that same panel.

Switch Panel Language


Before anything else, you can switch the Control Panel itself between Urdu and English.

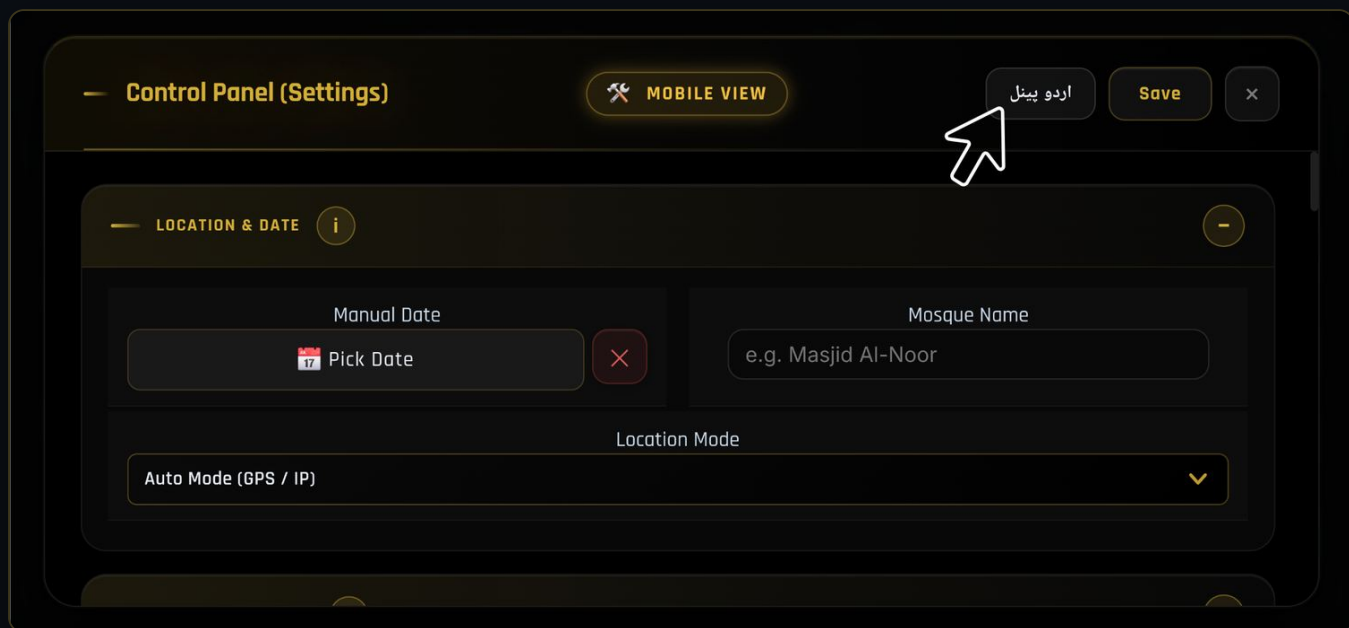

Tap the language toggle in the top-right corner of the Control Panel (next to **Save**) to switch every label and field in Settings between Urdu and English. This only changes the Settings panel's own language — it's separate from the board's own bilingual display.

Location & Date

Controls where the board gets prayer times from, and lets you override today's date.

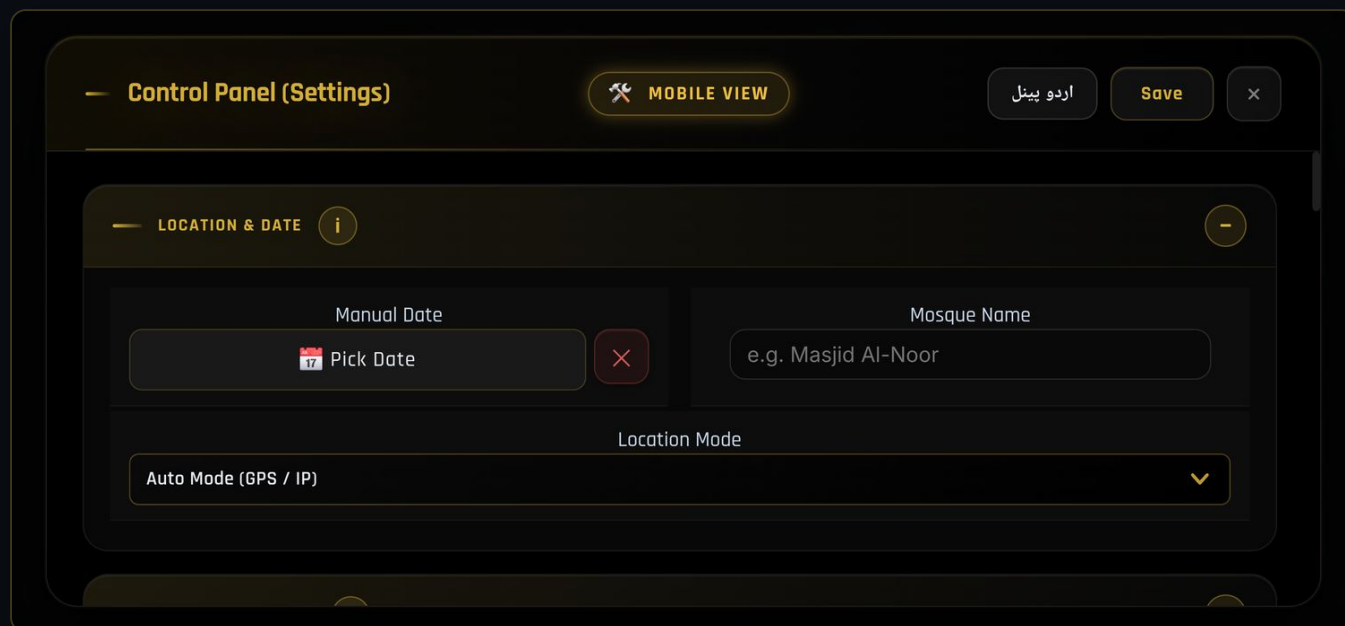

Manual Date — Overrides today's date on the board. Useful for testing, or on days the auto-detected date is wrong. Tap "Pick Date" to open the date picker, or the × to clear it and return to the real date.


Mosque Name — The name shown on the board. This name will also be shown in the nearby-mosques list in Musalli mode.

Location Mode

- **Auto** — Uses GPS/IP to detect location automatically.
- **Search City** — Lets you type a city name instead.
- **Latitude/Longitude** — Lets you enter exact coordinates for precise prayer time calculation.

General Settings

Core board behaviour: layout style, Fiqh, Hijri date, and prayer-related timing rules.

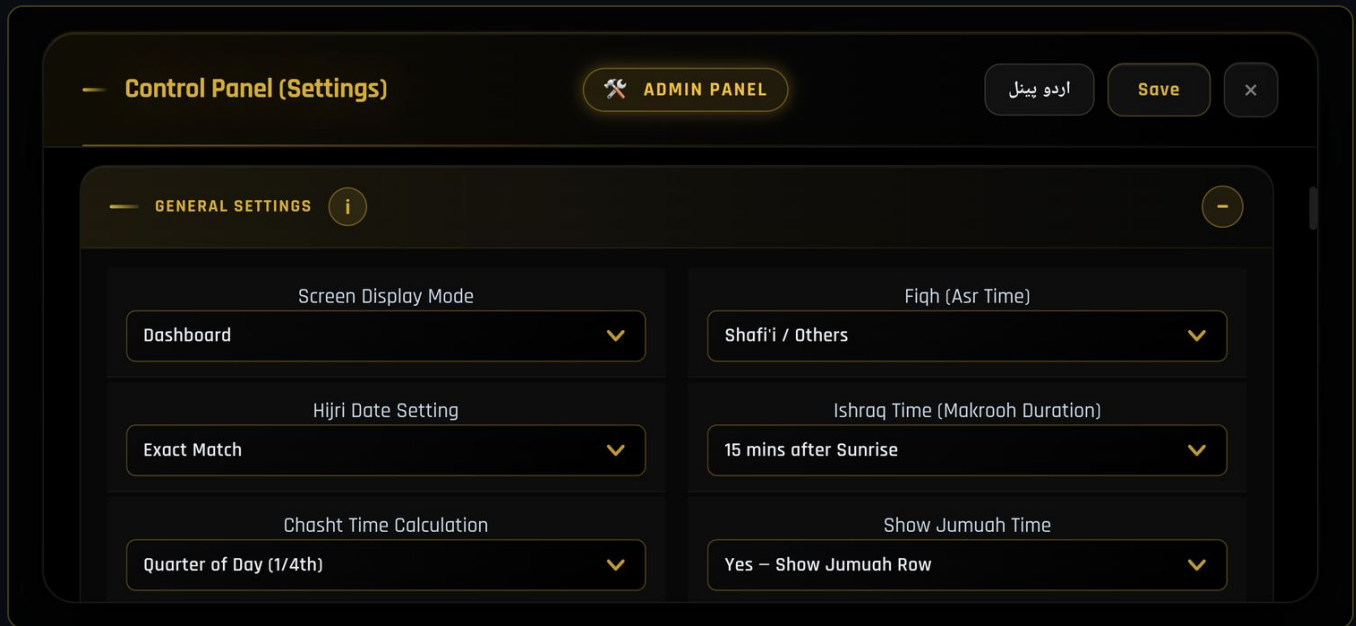

Screen Display Mode — Choose whether the TV shows the full Classic layout or the compact Dashboard layout. Panel Style and Rotation options only apply depending on this choice and how the TV is mounted.



- **Classic** — The original full-panel layout.
- **Dashboard** — The compact layout with a rotating "sliding" side box.
- **Hadees Dashboard** — Replaces the right-hand column with a rotating Quran/Hadees display.

Fiqh (Asr Time) — Hanafi and Shafi'i use different shadow-length rules to calculate Asr, which can shift Asr time by up to an hour. Pick whichever your mosque follows.

- **Shafi'i / Others** — Asr begins once a shadow equals the object's own length.
- **Hanafi** — Asr begins once a shadow equals twice the object's own length (later Asr time).

General Settings (continued)

Hijri Date Setting — Fine-tune the Hijri (Islamic) calendar date if the calculated value doesn't match local moon sighting or your mosque's convention.

- **Exact Match** — Uses the astronomically calculated Hijri date as-is.
- **-2 / -1 Days** — Shows the Hijri date 1 or 2 days earlier than calculated.
- **+1 / +2 Days** — Shows the Hijri date 1 or 2 days later than calculated.

Ishraq Time (Makrooh Duration) — Sets how long the Makrooh (disliked) window after sunrise lasts, before Ishraq/Chasht time begins.

- **15 mins after Sunrise**
- **20 mins after Sunrise**

Chasht Time Calculation — Fine-tune the Chasht time window if the calculated value doesn't match your mosque's convention.

- **Quarter of Day (1/4th)** — Chasht begins a quarter of the way between sunrise and Zuhr.
- **Half of Day (Middle)** — Chasht begins halfway between sunrise and Zuhr.

Show Jumuah Time — Toggles whether the Jumuah row appears in the prayer list.


- **Yes — Show Jumuah Row**
- **No — Hide Jumuah Row**

Magrib Delay (Lag by 1 Day) — Whether Magrib's azan time is applied a day late — useful for mosques that follow the previous day's calculated Magrib.

- **Off** — Magrib uses today's calculated time.
- **On** — Magrib uses yesterday's calculated time.

Dashboard Order

Only applies when Screen Display Mode is set to Dashboard.

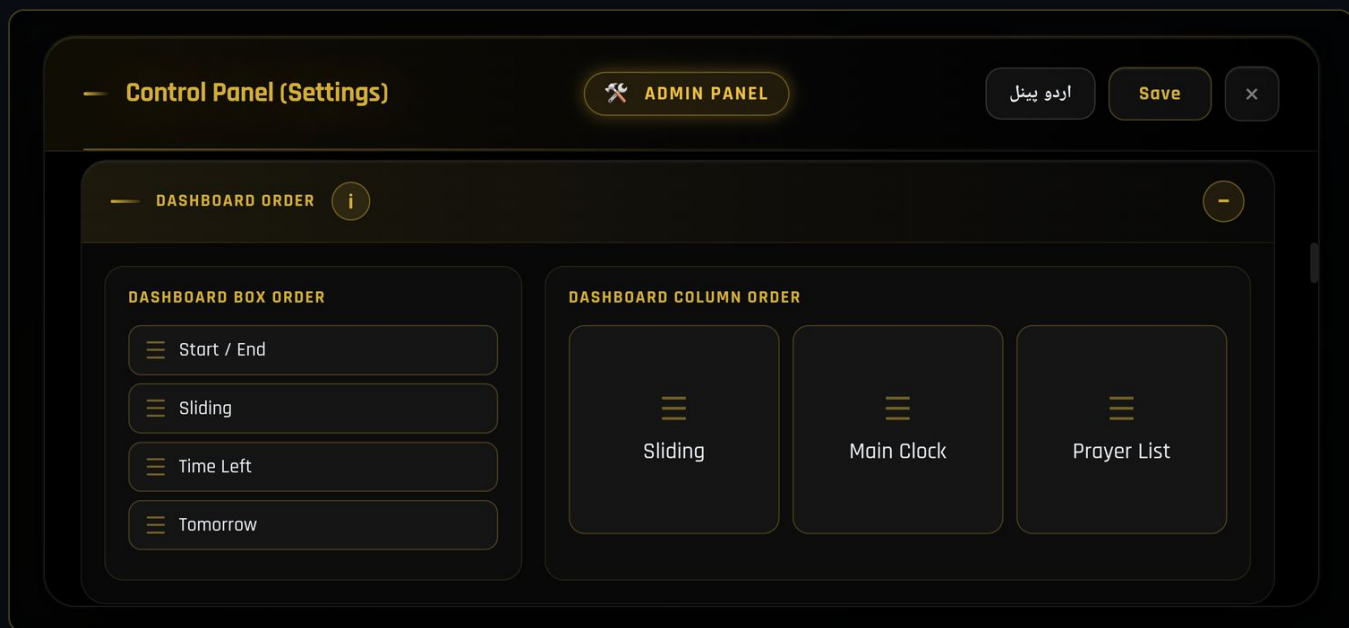


Dashboard Box Order — Drag items up/down to set the top-to-bottom order of the small side boxes (Start/End, Sliding, Time Left, Tomorrow).

Dashboard Column Order — Drag items to set the left-to-right order of the main columns (Sliding, Main Clock, Prayer List).

Hadees Dashboard

Only visible when Screen Display Mode is set to "Hadees Dashboard". Controls which two side boxes appear, and language/order of both.

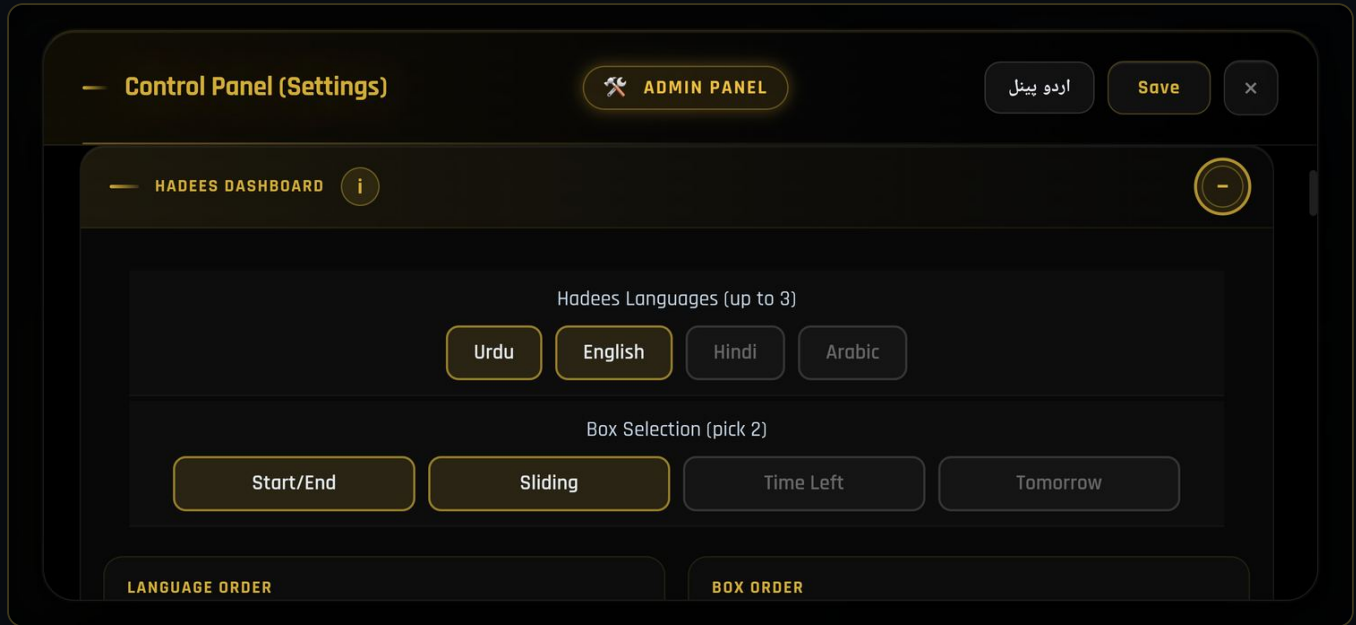

Hadees Languages (up to 3) — Choose up to 3 of Urdu, Roman Urdu, English, Hindi, Arabic to display on the Hadees panel.

Box Selection (pick 2) — Choose exactly two of Start/End, Sliding, Time Left, Tomorrow to show alongside the Hadees panel.

Language Order — The order your chosen languages appear in on the Hadees panel.

Box Order — Top-to-bottom order of your two chosen boxes.

Additional Jumuah & Eid Jamaats

For mosques holding more than one Jumuah or Eid Jamaat.

The screenshot shows the 'Control Panel (Settings)' interface. At the top, there's a 'Control Panel (Settings)' header and an 'ADMIN PANEL' tab. Below this, the 'ADDITIONAL JUMUAH & EID JAMAATS' section is expanded. It contains two main sections: 'EID TIMES' and 'ADDITIONAL JUMUAH'. The 'EID TIMES' section has a table with one row: 'EID' with a time of '7:00 AM'. The 'ADDITIONAL JUMUAH' section has a table with two columns: 'AZAN (OPTIONAL)' and 'JAMAAT'. Both sections have '+' and '-' buttons for adding and removing rows.

Eid Times — Eid 1 is shown by default. Its × hides it from the board without deleting it, and ⇐ brings it back. Use + to add extra Eid Jamaats (Eid 2, Eid 3, ...) for mosques with more than one Eid time; their × removes that row permanently.

Additional Jumuah — The main Jumuah time is set in the Prayer Timings table further down; this section is only for mosques holding more than one Jumuah Jamaat. Use + to add an extra row with an optional Azan time and a required Jamaat time, and × to remove that row.

Prayer Timings & Fixed Modes

The core prayer time rules — how Azan/Jamaat times are calculated, or fixed manually, for each prayer.

The screenshot shows the 'Control Panel (Settings)' with the 'ADMIN PANEL' tab selected. The 'PRAYER TIMINGS & FIXED MODES' section is active. It contains a table with columns: PRAYER, MODE, AUTO: AZAN, AUTO: JAMAAT, and FIXED / BEFORE SUNRISE.

PRAYER	MODE	AUTO: AZAN	AUTO: JAMAAT	FIXED / BEFORE SUNRISE
FAJR	Auto	+1 min Next 5 mins	20 mins after Next 5 mins	Jamaat (from Sunrise): 30 mins before Azan (from Jamaat): 20 mins before
ZUHAR	Auto	+1 min	20 mins after	1:30 PM

Mode — **Auto** works out Azan and Jamaat automatically from today's calculated prayer time. **Fixed** locks Azan and Jamaat to the same clock time every day, ignoring the calculated time.

Auto: Azan (2 dropdowns) — The first sets how many minutes before/after the calculated prayer time the Azan is called; the second optionally rounds that Azan time to the next 5 minutes.

Auto: Jamaat (2 dropdowns) — The first sets how many minutes after Azan the Jamaat (congregation) starts; the second optionally rounds that Jamaat time to the next 5 minutes.

Fixed / Before Sunrise — For Fajr this sets Jamaat a fixed number of minutes before sunrise, and Azan a fixed number of minutes before that Jamaat. For other prayers, Fixed lets you pick one exact Jamaat clock time, with Azan set a number of minutes before it.

Worked Examples

Using the exact Fajr settings shown a few pages back, with illustrative raw calculated times.

Suppose today's raw, astronomically calculated Fajr time is **5:03 AM**, and calculated sunrise is **6:19 AM**. (Your real numbers will differ by location and date — this is just to illustrate the maths.)

Fajr — If Mode = Auto (Azan: "+1 min" → "Next 5 mins" · Jamaat: "20 mins after" → "Next 5 mins"):

- Raw Fajr time: **5:03 AM**
- +1 min → 5:04 AM, rounded up to the next 5 minutes → **Azan = 5:05 AM**
- 20 mins after Azan (5:05) → 5:25 AM, already on a 5-minute mark → **Jamaat = 5:25 AM**

Fajr — If Mode = Fixed (Jamaat: "30 mins before" sunrise · Azan: "20 mins before" Jamaat):

- Calculated sunrise: **6:19 AM**
- 30 mins before sunrise → 5:49 AM, rounded down to the nearest 5 minutes → **Jamaat = 5:45 AM**
- 20 mins before Jamaat (5:45), no further rounding → **Azan = 5:25 AM**

Zuhr (or Asr/Magrib/Isha/Jumuah) — Fixed Mode — Fajr is the only prayer measured from sunrise; every other prayer's Fixed mode is simpler: you pick one exact Jamaat clock time directly, and Azan is a fixed number of minutes before it. **Neither value is rounded.**

- Fixed Jamaat time set directly: **1:30 PM**
- Azan gap set to "15 mins before": 1:30 PM – 15 mins → **Azan = 1:15 PM**

⚠ Fixed-mode Fajr Jamaat is always rounded **down** to the nearest 5 minutes after the "before sunrise" gap is subtracted — so it isn't simply sunrise minus the gap. Azan is then calculated from that already-rounded Jamaat, with no rounding of its own. Every other prayer's Fixed mode has no rounding at all — Jamaat and Azan are used exactly as entered.

Scheduled Changes

Schedule a future change to a prayer's Azan/Jamaat settings — e.g. an earlier Fajr for Ramadan, or a one-off change for a single day.

The screenshot shows the 'Control Panel (Settings)' interface. At the top, there's a navigation bar with 'ADMIN PANEL' and buttons for 'اردو بینل', 'Save', and a close button. Below this is the 'SCHEDULED CHANGES' section, which includes a 'Select Prayer' dropdown menu currently set to 'Fajr'. Below the dropdown is a table with columns for 'MODE', 'AUTO: AZAN', 'AUTO: JAMAAT', and 'FIXED / BEFORE SUNRISE'. The 'MODE' column has a dropdown set to 'Auto'. The 'AUTO: AZAN' column has two options: '+1 min' and 'Next 5 mins'. The 'AUTO: JAMAAT' column has two options: '20 mins after' and 'Next 5 mins'. The 'FIXED / BEFORE SUNRISE' column has two sections: 'Jamaat (from Sunrise):' with '30 mins before' and 'Azan (from Jamaat):' with '20 mins before'. There are also buttons for 'Ardo Binil', 'Save', and a close button.

MODE	AUTO: AZAN	AUTO: JAMAAT	FIXED / BEFORE SUNRISE
Auto	+1 min Next 5 mins	20 mins after Next 5 mins	Jamaat (from Sunrise): 30 mins before Azan (from Jamaat): 20 mins before

Select Prayer — Choose which prayer this scheduled change applies to (Fajr, Zuhar, Asr, Magrib, or Isha).

Mode / Auto / Fixed row — Configure the new Azan/Jamaat settings for that prayer, exactly like the main Prayer Timings table above.

Date of Change — The date this change should take effect.

Nature of Change — 3 Examples

Each type controls when the change starts and whether/when it reverts automatically.

Temporary (one day only) — Applies only on the date chosen, then reverts automatically the next day.

 **Example:** Your mosque holds a special Isha Jamaat 30 minutes later on the 27th night of Ramadan only. Select **Isha**, set the new Fixed time, pick that one date as the **Date of Change**, and choose **Temporary**. The board uses the new Isha time only that night, then automatically reverts the next day.

Range (between dates) — Applies between the start date and an End Date you pick, then reverts automatically after.


 **Example:** To shift Fajr Jamaat 20 minutes earlier for the whole of Ramadan, select **Fajr**, set the new Fixed/Auto timing, pick the first day of Ramadan as the **Date of Change**, choose **Range**, and set the **End Date** to the last day of Ramadan. The board automatically reverts to your normal Fajr settings the day after Ramadan ends.

Permanent — Applies from that date onward until changed again manually.

 **Example:** Your mosque is moving Zuhr Jamaat 10 minutes later starting next Monday, for good. Select **Zuhar**, set the new time, pick next Monday as the **Date of Change**, and choose **Permanent**. From that Monday onward the new time stays in effect indefinitely — it will not revert on its own.

Linked TVs

Connect additional screens that share this mosque's prayer times.

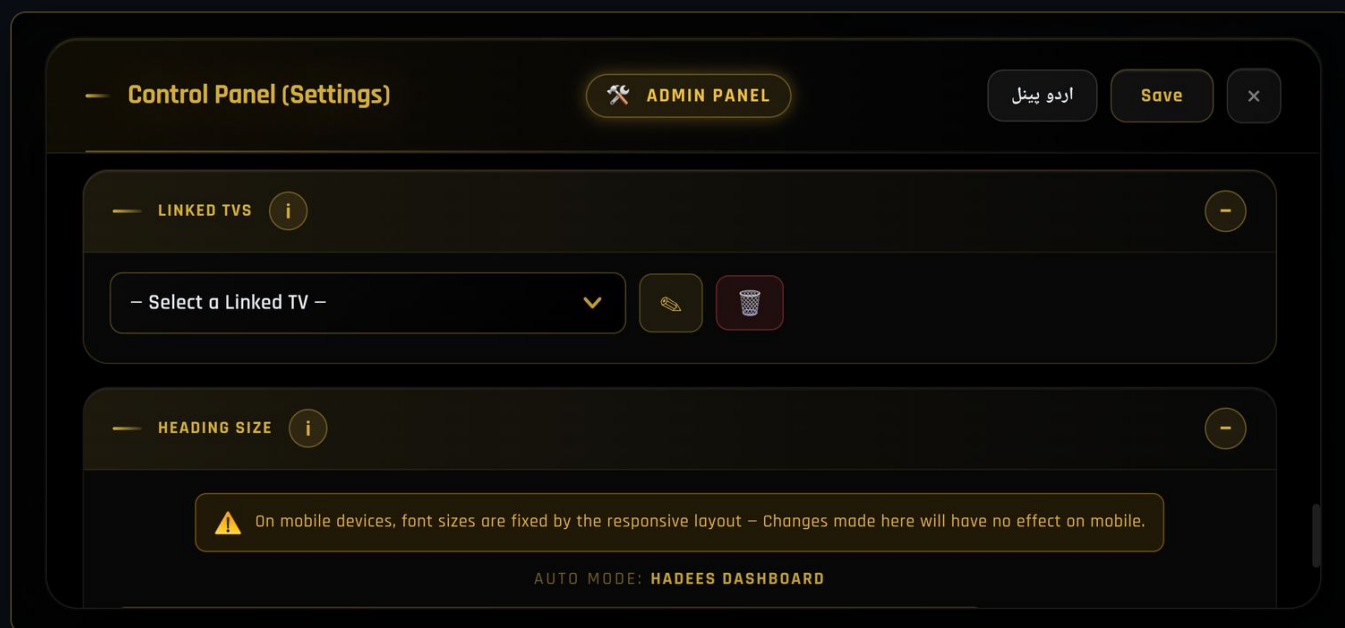

A Linked TV is a second screen that always shows this mosque's prayer times, but can otherwise look completely different from the Main TV.

— **Select a Linked TV** — dropdown — Choose a paired Linked TV to start editing it. Once selected, the **Heading Size** and **Advanced Colors** sections below switch to editing that TV instead of the Main TV — use "Back to Main TV" to switch back.

Rename — Rename the selected Linked TV.

Delete — Delete / unlink the selected TV. It will stop syncing and go back to showing its own pairing screen.


✓ **What CAN be different per Linked TV:** Screen Display Mode (Classic/Dashboard/Hadees Dashboard), Heading Size, and every Advanced Colors setting — each linked screen can look completely different from the Main TV and from each other.

🔒 **What CANNOT be changed per Linked TV:** Prayer timings, Fiqh, Hijri offset, Jumuah/Eid times, and every other setting on the earlier pages — these are the mosque's actual timetable, so a Linked TV always shows the exact same Azan/Jamaat times as the Main TV. Only the Main TV's Prayer Timings table can change them, for every screen at once.

🔗 See "Linking a Second TV" at the end of this manual for the full step-by-step pairing walkthrough.

Heading Size


Resize individual text elements on the TV screen only (mobile always uses its own fixed sizing).

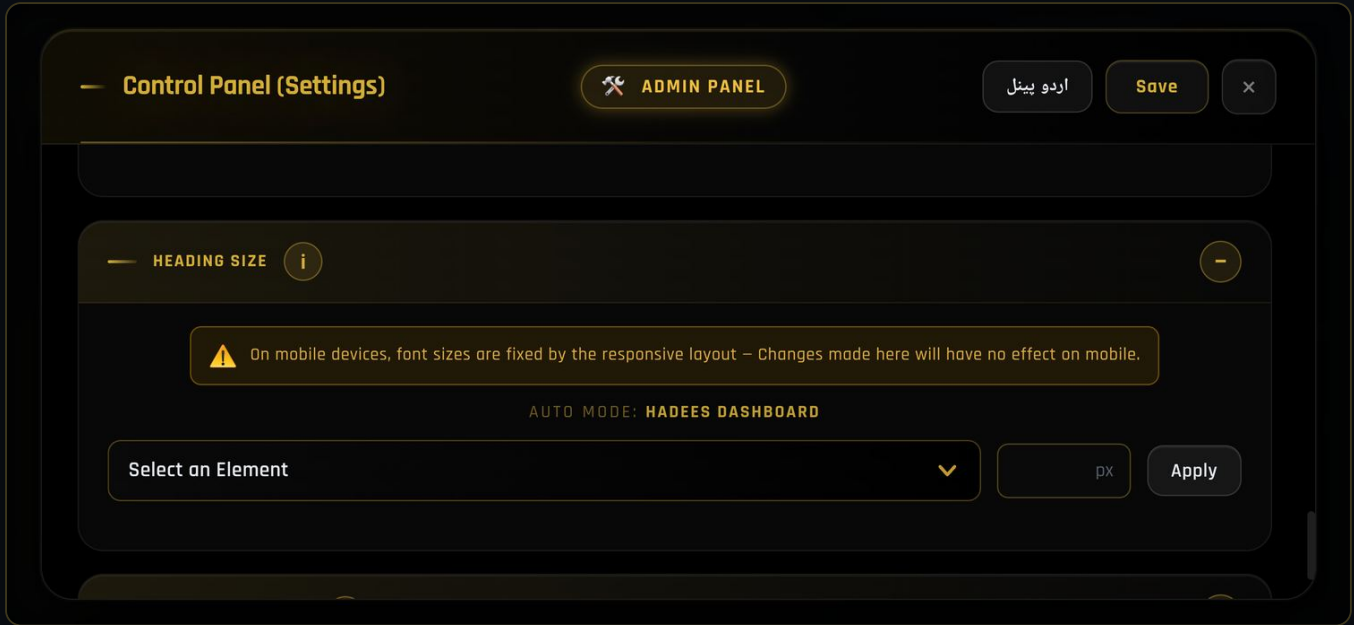

Select an element from the dropdown (e.g. clock, prayer names, dates), type a size in pixels, and press **Apply**.

Advanced Colors

Fine-grained color control over almost every element on the board.

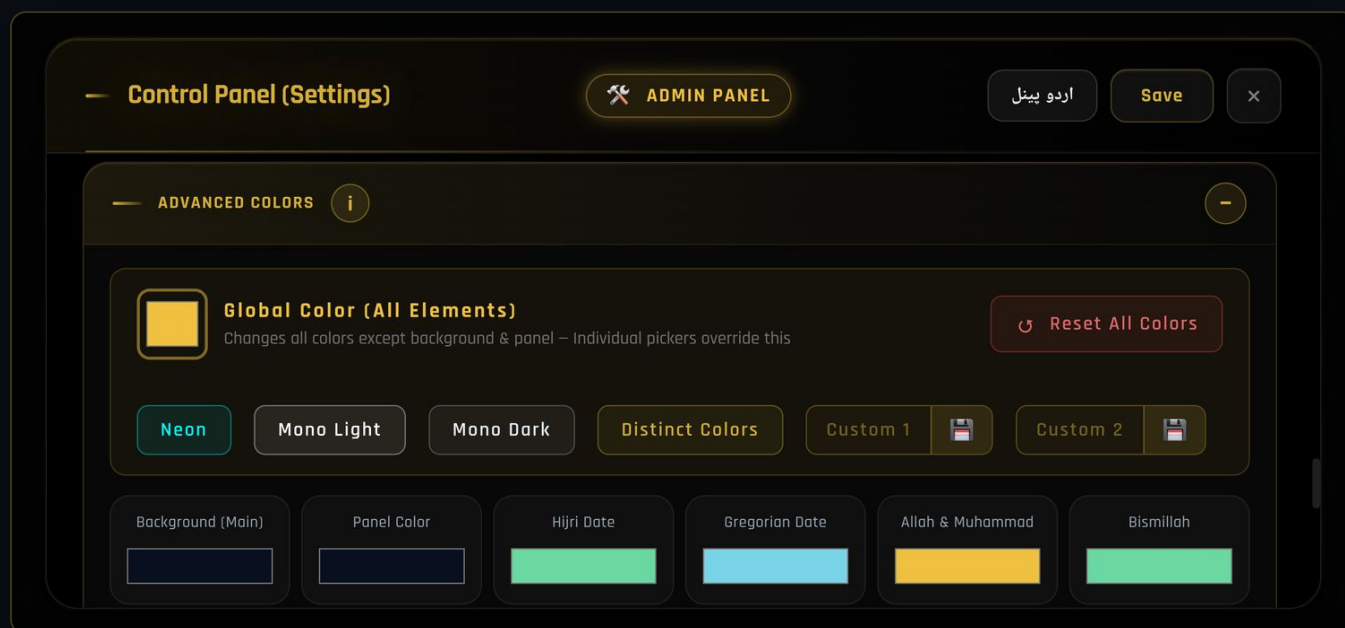

Presets — Neon, Mono Light, Mono Dark, Distinct Colors, or your own saved Custom 1 / Custom 2.

Global Color — Changes all elements at once (except Background & Panel); any individual picker below overrides this for that one element.


Individual pickers — Every labelled swatch (Main Clock Color, Prayer List names, Azan/Jamaat times, Hadees Title/Text, etc.) can be set independently.

Resetting a Forgotten PIN

If the Admin PIN is forgotten, it can be reset right from the Admin Remote — the Main TV has to approve the request before a new PIN can be set.


1 Tap "Forgot PIN?"

On the Admin PIN screen, enter the Mosque's 8-digit Master Code as usual, then tap **Forgot PIN?** next to the PIN field instead of typing a PIN.

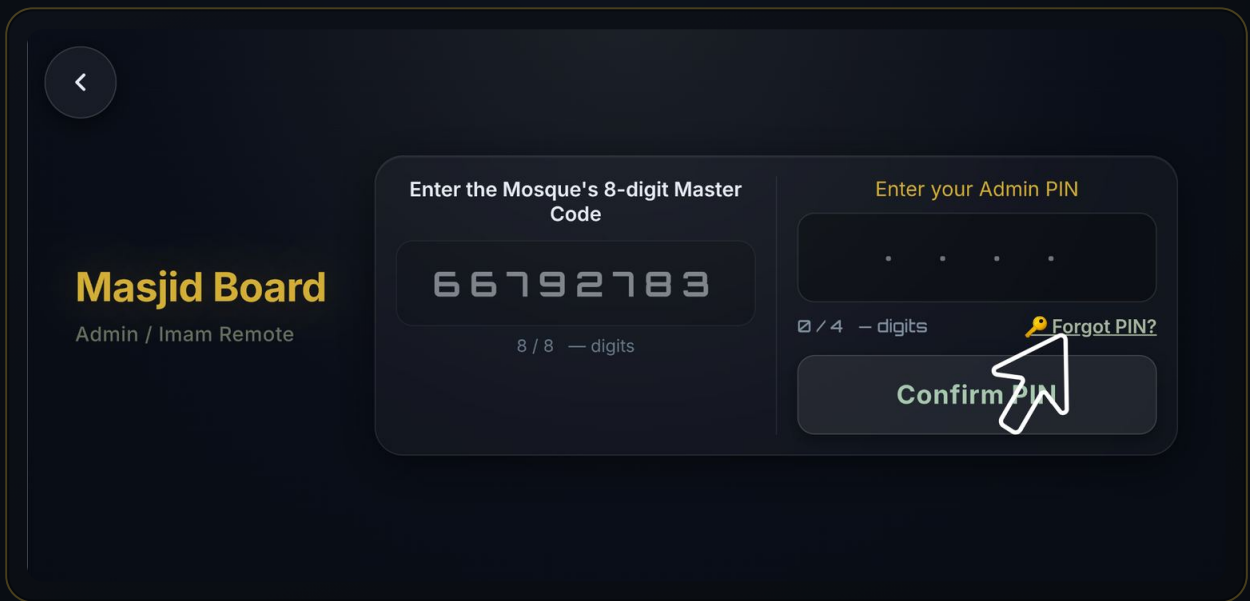

2 Wait for Main TV Approval


A reset request is sent to the Main TV. The Admin Remote shows a countdown while it waits for a response — tap **Cancel** at any time to withdraw the request.

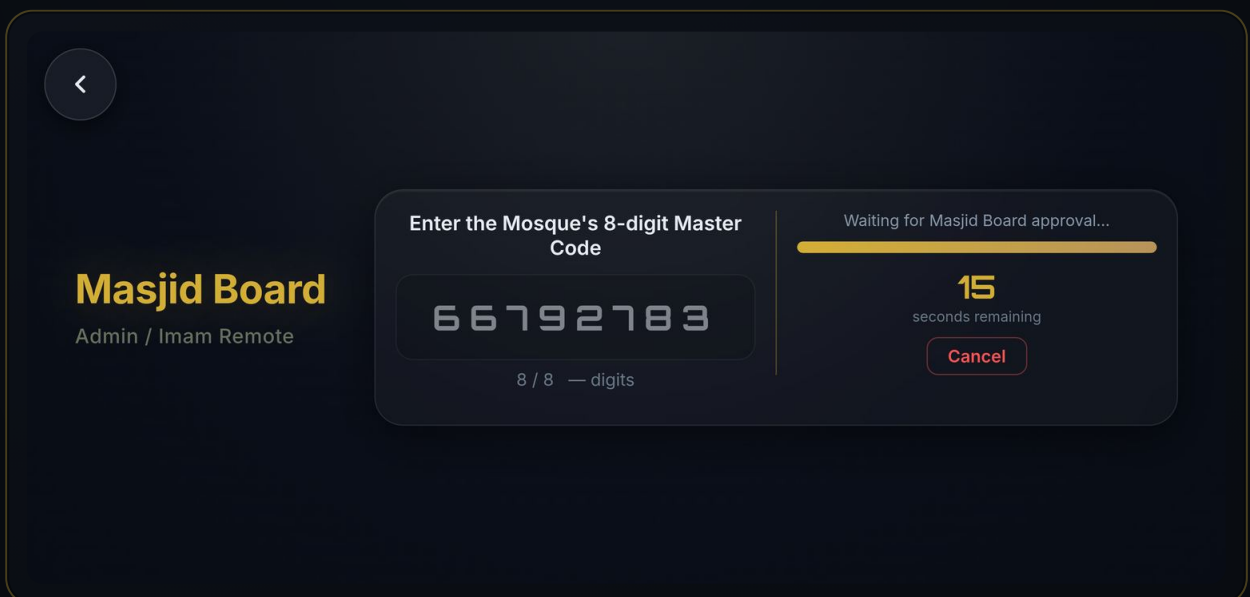

RESETTING A FORGOTTEN PIN (CONTINUED)


3 Accept the Request on the Main TV

On the Main TV itself, a popup appears asking whether to approve or reject the PIN reset, with its own countdown. Tap **Accept** before it runs out.

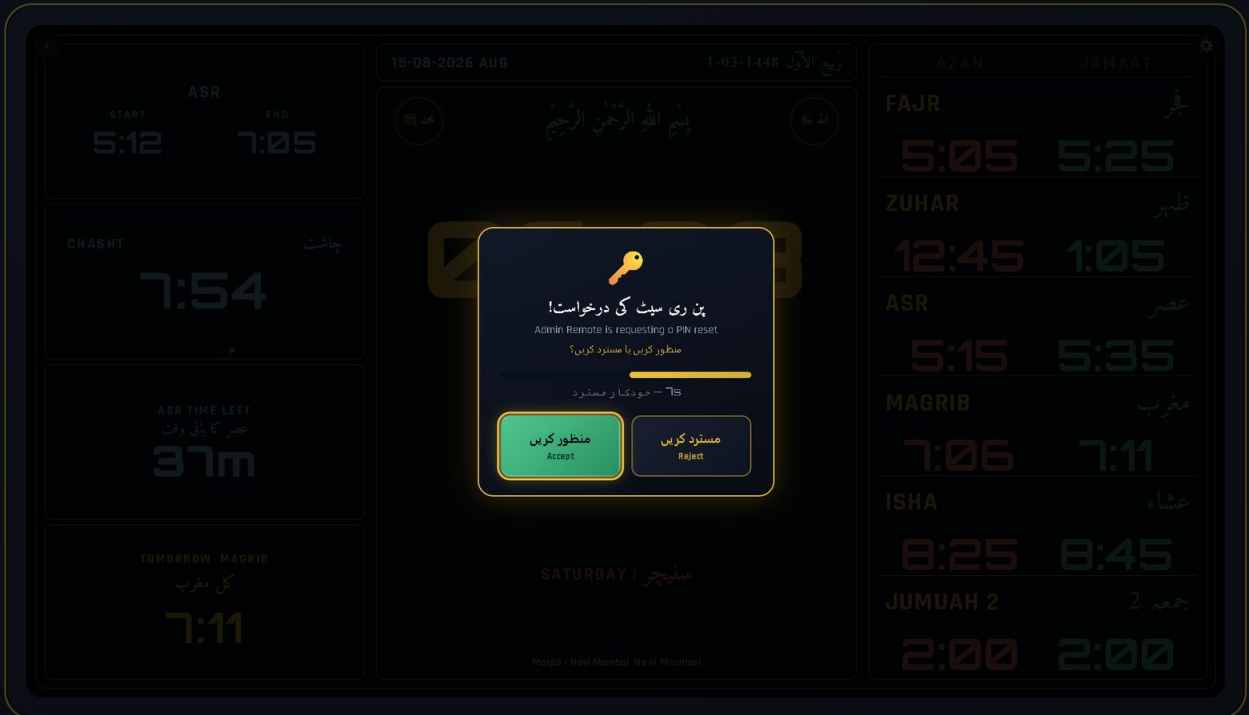

4 Approval Received

Once accepted on the Main TV, the Admin Remote confirms the request was approved. Tap **OK** to continue.

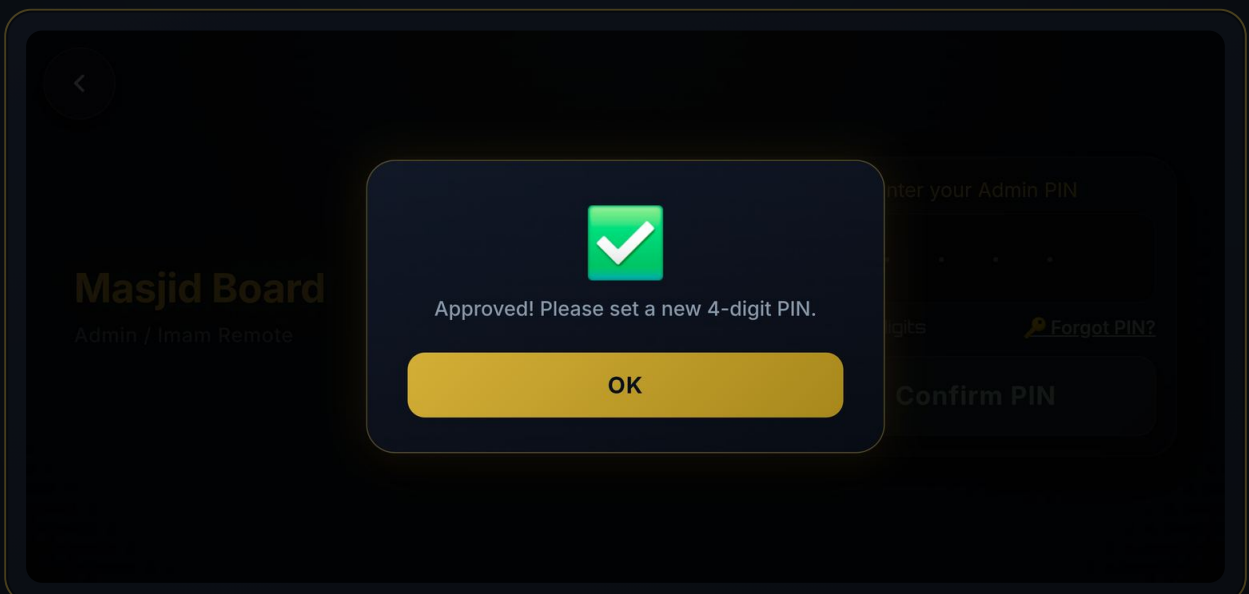

RESETTING A FORGOTTEN PIN (CONTINUED)

5

Create the New PIN

Enter a new 4-digit Admin PIN and tap **Confirm PIN**. This replaces the old PIN immediately — use it for all future admin sign-ins.

The screenshot shows the 'Masjid Board Admin / Imam Remote' interface. On the left, there is a back arrow icon. The main content area is divided into two sections. The left section is titled 'Enter the Mosque's 8-digit Master Code' and displays the code '66792783' with a status '8 / 8 — digits'. The right section is titled 'Create a new 4-digit PIN' and features a PIN input field with four dots, a status '0 / 4 — digits', and a 'Confirm PIN' button.

⚠ Important: The reset request can only be approved from the Main TV, so someone needs to be at the TV when it's sent. If no one accepts it before the countdown ends, simply tap **Forgot PIN?** again on the Admin Remote to retry.

Linking a Second TV

If you have more than one TV, you can link them together so every screen shares the same prayer times.

1 Click "Link TV" on the TV Device


On the second TV, open the app and you'll land on the same role picker used when setting up the Main TV. This time, select **Link TV** instead of Main TV.



LINKING A SECOND TV (CONTINUED)

2 Enter the Main TV's Remote Control Code

On the Link Secondary TV screen, type the Main TV's 8-digit Remote Control Code (the same code noted down in Step 3 of Main TV pairing), then tap **Connect**.

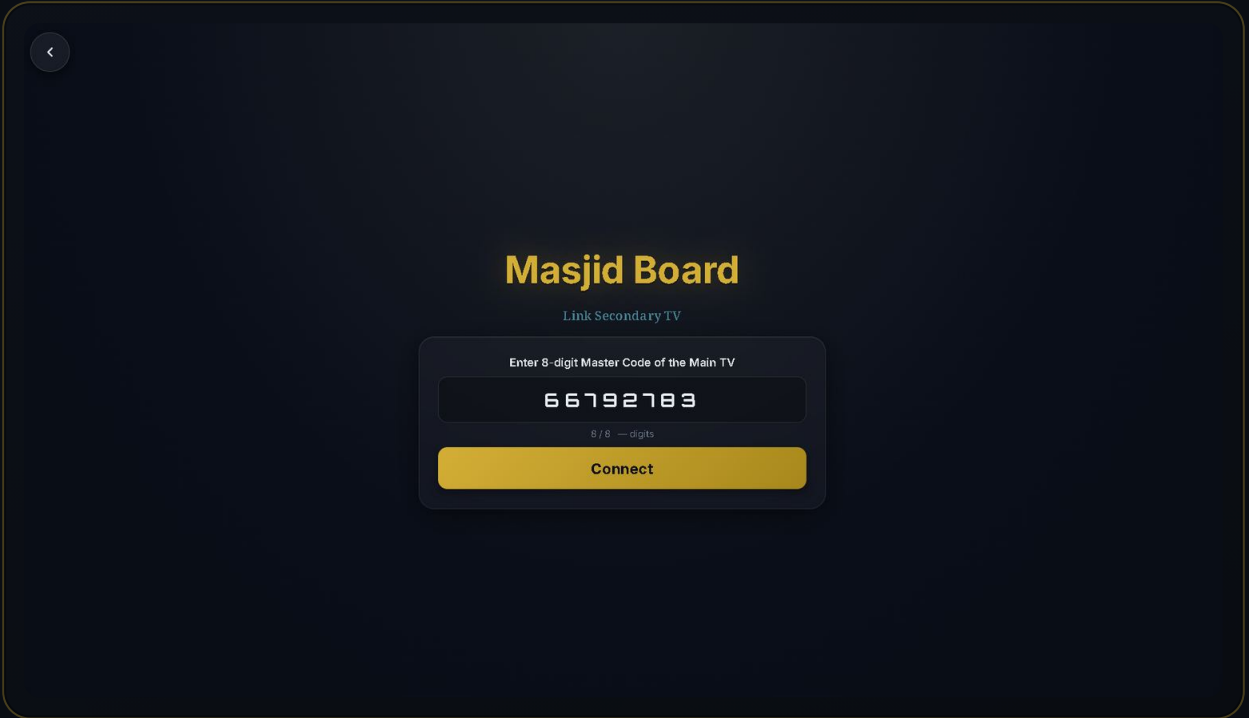**3 Enter the Imam's PIN**


Enter the Main TV's Admin PIN to authorize the link, then tap **Confirm PIN**.



LINKING A SECOND TV (CONTINUED)


4 Choose a Layout

Same as Main TV mirrors whatever layout the Main TV is set to. This is just a starting point — the layout, heading size, and colors can be changed for this screen alone at any time from the Admin Remote's **Linked TVs** settings.

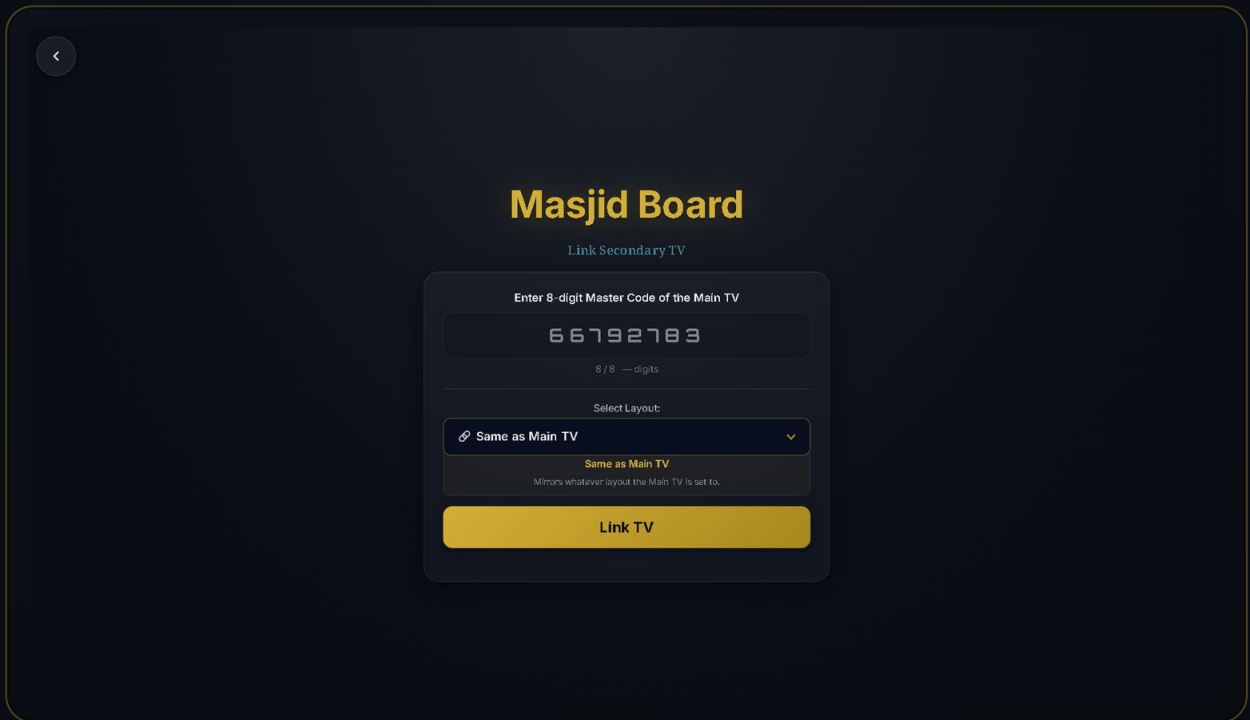

5 Name the Linked TV

Give this screen a name — e.g. the hall or room it's in — so it's easy to tell apart later, then tap **Save**.


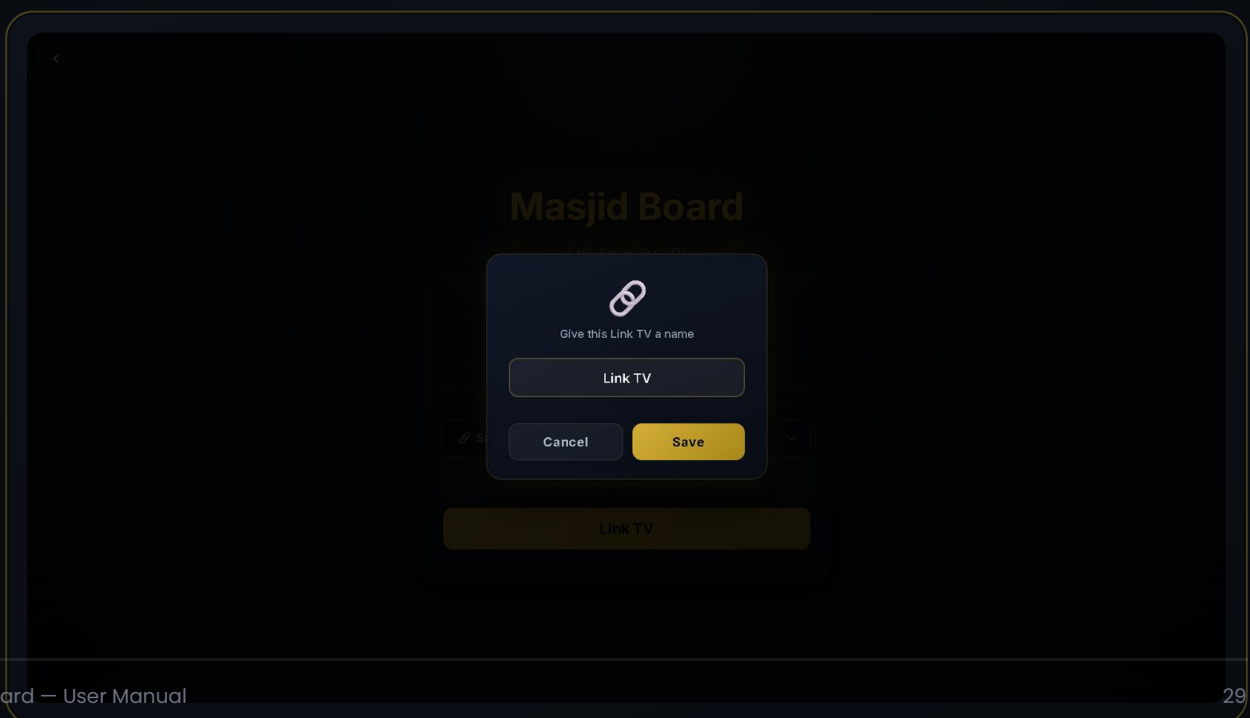


LINKING A SECOND TV (CONTINUED)

6

Note the Linked TV's Code

Once linked, this screen shows its own code in the bottom-left corner — the Main TV's Remote Control Code with **-1** appended (**-2**, **-3**, ... for additional screens).

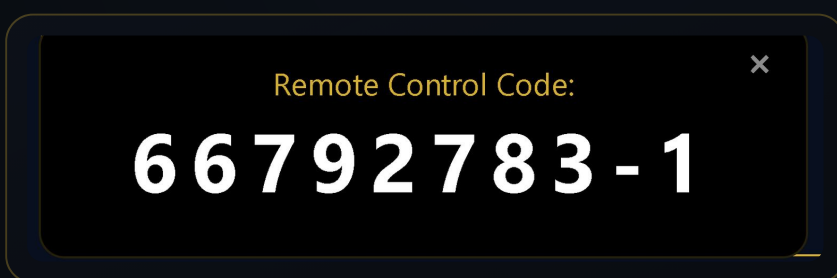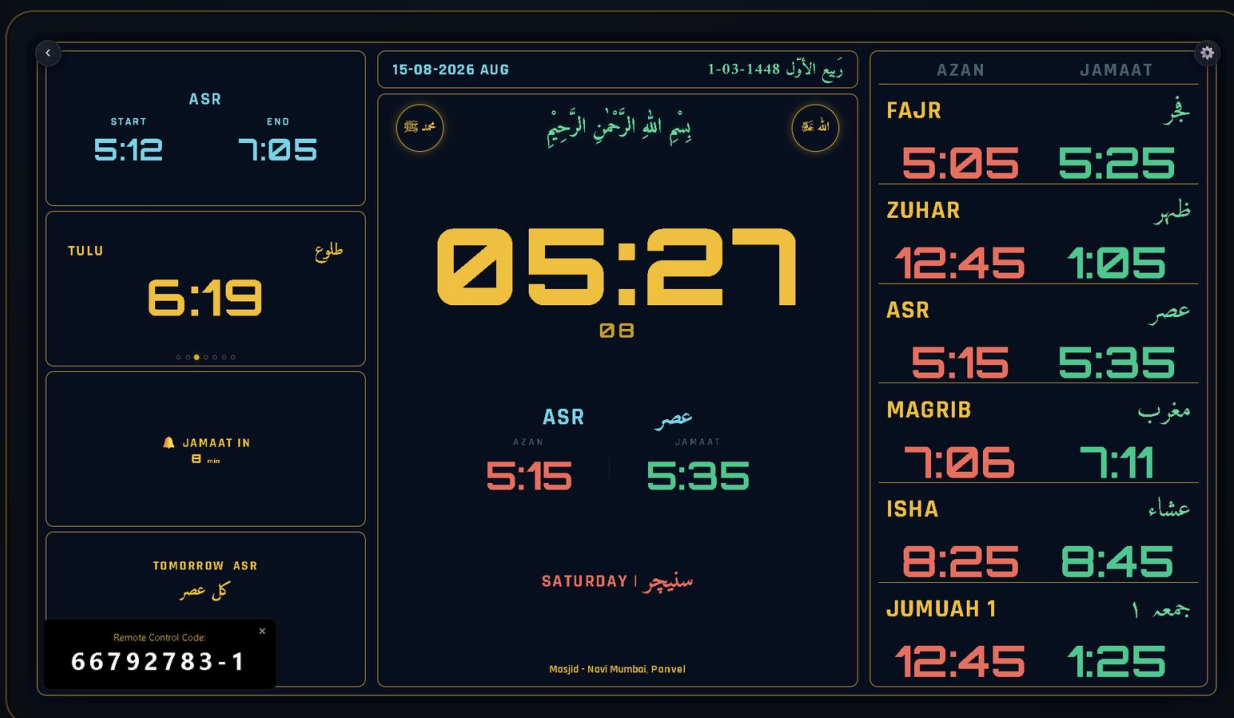

Tip: This code — not the screen's name — is what identifies it in the Admin Remote's **Linked TVs** dropdown (Settings → Linked TVs), so it's worth noting down if you're managing more than one linked screen.

Musalli — Live Prayer Times View

Musalli mode turns any phone or tablet into a live, read-only display of a mosque's prayer times — ideal for worshippers who just want to check timings, with no admin access.


1 Tap "Musalli" on the Role Picker

On the role-picker screen, select **Musalli** — this is the read-only Worshipper view, separate from the Admin Remote.



2 Enter the Mosque's Code

Type the mosque's 8-digit code and tap **Connect**. Don't have the code? Tap **Nearby Mosques** to find and connect to a mosque using Masjid Board near you instead.

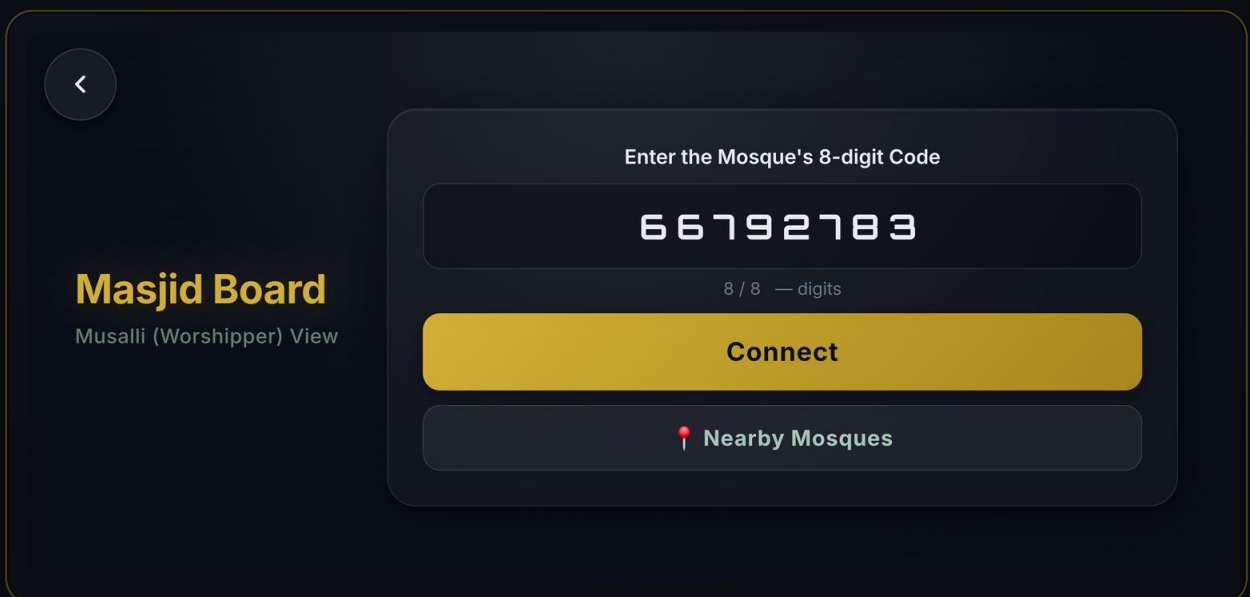


MUSALLI — LIVE PRAYER TIMES VIEW (CONTINUED)

3

Name the Mosque

Give the mosque a name so it's easy to recognize later, then tap **Save**.

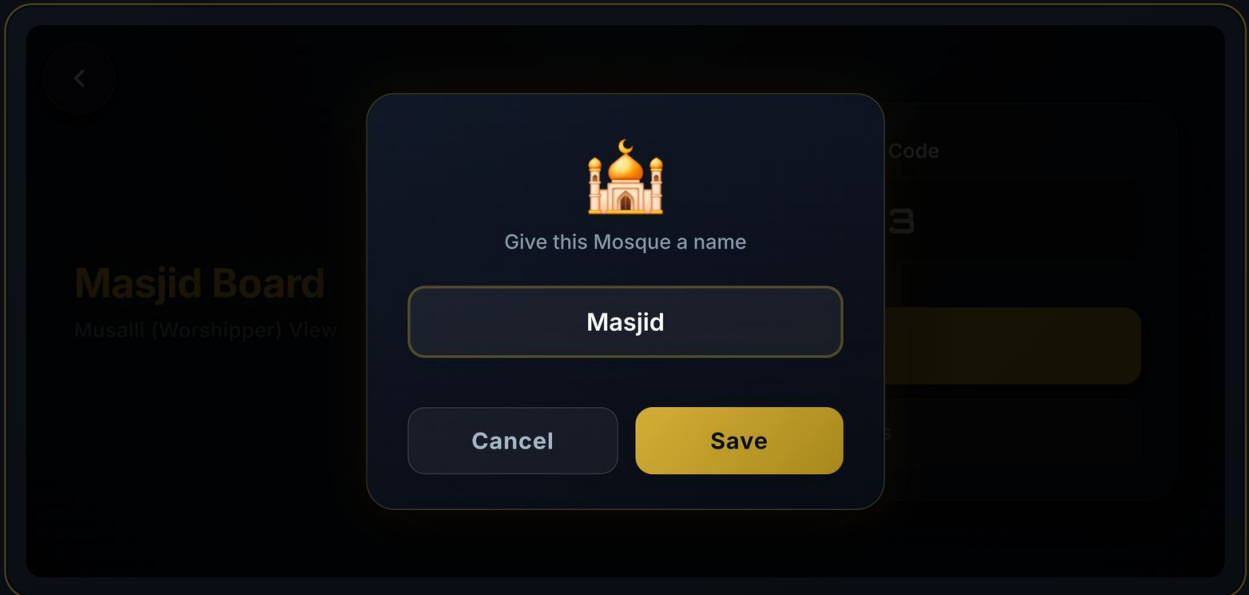

4

View Live Prayer Times

The board now mirrors the mosque's Main TV live — full prayer schedule, Jumuah, and countdowns, updating in real time.



Read-only: There's no settings gear icon in Musalli view — worshippers can see everything the Main TV shows, but can't change any settings.