



**HP 14 Laptop PC (Intel)
HP 14g Laptop PC
HP 14q Laptop PC**

Maintenance and Service Guide

© Copyright 2017 HP Development Company,
L.P.

AMD is a trademark of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Intel, Celeron, and Pentium are trademarks of Intel Corporation in the U.S. and other countries. Microsoft and Windows are U.S. registered trademarks of the Microsoft group of companies.

The following applies to HP systems with Intel Skylake or next-generation silicon chip-based system shipping with Windows 7 or Windows 10 Pro systems downgraded to Windows 7 Professional: This version of Windows running with the processor or chipsets used in this system has limited support from Microsoft. For more information about Microsoft's support, please see Microsoft's Support Lifecycle FAQ at <https://support.microsoft.com/lifecycle>

In accordance with Microsoft's support policy, HP does not support the Windows 8 or Windows 7 operating system on products configured with Intel and AMD 7th generation and forward processors or provide any Windows 8 or Windows 7 drivers on <http://www.support.hp.com>.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Second Edition: August 2017

First Edition: April 2017

Document Part Number: 924970-002

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions of Windows. This computer may require upgraded and/or separately purchased hardware, drivers, and/or software to take full advantage of Windows functionality. See

<http://www.microsoft.com> for details.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a refund subject to the refund policy of your place of purchase.

For any further information or to request a full refund of the computer, please contact your local point of sale (the seller).

Safety warning notice

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

Table of contents

1 Product description	1
2 Getting to know your computer	11
Right side	11
Left side	12
Display	13
Keyboard area	14
TouchPad	14
Lights	15
Button	16
Special keys	17
Action keys	18
Bottom	19
Labels	20
3 Illustrated parts catalog	21
Computer major components	21
Display assembly subcomponents	25
Mass storage devices	27
Cables	28
Miscellaneous parts	29
4 Removal and replacement procedures preliminary requirements	31
Tools required	31
Service considerations	31
Plastic parts	31
Cables and connectors	31
Drive handling	32
Grounding guidelines	32
Electrostatic discharge damage	32
Packaging and transporting guidelines	33
Workstation guidelines	33
5 Removal and replacement procedures for Customer Self-Repair parts	35
Component replacement procedures	35
Battery	36

Optical drive	38
6 Removal and replacement procedures for Authorized Service Provider parts	41
Component replacement procedures	41
Display subcomponents (bezel, panel, camera)	41
Bottom cover	45
WLAN module	47
Memory module	49
Hard drive	51
M.2 solid-state drive adapter bracket	54
Solid-state drive (SSD)	55
Fan	56
TouchPad button board	58
Heat sink assembly	59
Speakers	63
USB board	65
System board	66
RTC battery	68
Display assembly	69
Power connector cable	78
Power button board	79
Top cover/keyboard	80
7 Using Setup Utility (BIOS)	81
Starting Setup Utility (BIOS)	81
Updating Setup Utility (BIOS)	81
Determining the BIOS version	81
Downloading a BIOS update	82
8 Backing up, restoring, and recovering	83
Creating recovery media and backups	83
Creating HP Recovery media (select products only)	83
Using Windows tools	84
Restore and recovery	85
Recovering using HP Recovery Manager	85
What you need to know before you get started	85
Using the HP Recovery partition (select products only)	86
Using HP Recovery media to recover	86
Changing the computer boot order	87
Removing the HP Recovery partition (select products only)	87

9 Using HP PC Hardware Diagnostics (UEFI)	89
Downloading HP PC Hardware Diagnostics (UEFI) to a USB device	89
10 Specifications	91
Computer specifications	91
35.6-cm (14.0-in) display specifications	92
Hard drive specifications	93
M.2 solid-state drive specifications	94
DVD±RW SuperMulti DL Drive specifications	95
11 Power cord set requirements	97
Requirements for all countries	97
Requirements for specific countries and regions	98
12 Recycling	101
Index	103

1 Product description

HP 14 Laptop PC, model numbers: 14-bs0xx, 14-bs5xx

HP 14g Laptop PC, model numbers: 14g-br0xx

HP 14q Laptop PC, model numbers: 14q-bu0xx

Category	Description	7th gen Disc (4 GB)	7th gen Disc (2 GB)	7th gen UMA	6th gen Disc	6th gen UMA	Pen/Cel UMA eMMC	Pen/Cel UMA HDD
Product name	HP 14 Laptop PC (Intel) * Model numbers: 14-bs0xx * Model numbers: 14-bs5xx	√	√	√	√	√	√	√
	HP 14g Laptop PC * Model numbers: 14g-br0xx	√	√	√	√	√	√	√
	HP 14q Laptop PC * Model numbers: 14q-bu0xx	√	√	√	√	√	√	√
Processor	7th generation Intel® Core™ processors	√	√	√	√	√		
	Intel Core i7-7500U (2.7-GHz, turbo up to 3.5 GHz, 4-MB L3 cache, 2133-MHz, dual, 15W)	√	√					
	Intel Core i5-7200U (2.5-GHz, turbo up to 3.1 GHz, 3-MB L3 cache, 2133-MHz, dual, 15W)	√	√	√				
	6th generation Intel Core processors				√	√		
	Intel Core i3-6006U (2.0-GHz, 3-MB L3 cache, 2133-MHz, dual, 15W)				√	√		
	Intel Pentium® and Celeron® processors						√	√
	Intel Pentium N3710 (1.6-GHz, turbo up to 2.56 GHz, 2-MB L2 cache, 1600-MHz, quad, 6W)						√	√
	Intel Celeron N3060 (1.6-GHz, turbo up to 2.48 GHz, 2-MB L2 cache, 1600-MHz, dual, 6W)						√	√
Graphics	Internal graphics	√	√	√	√	√	√	√
	Intel HD Graphics 620	√	√	√				
	Intel HD Graphics 520				√	√		
	Intel HD Graphics 405						√	√
	Intel HD Graphics 400						√	√
	Switchable discrete graphics	√	√		√			
	AMD Radeon™ M520 R17M-M1-30 with 4096 MB of dedicated video memory	√						

Category	Description	7th gen Disc (4 GB)	7th gen Disc (2 GB)	7th gen UMA	6th gen Disc	6th gen UMA	Pen/Cel UMA eMMC	Pen/Cel UMA HDD
	AMD Radeon M520 R17M-M1-30 with 2048 MB of dedicated video memory			✓		✓		
	Support HD Decode, DX12, and HDMI	✓	✓	✓	✓	✓	✓	✓
Panel	35.6-cm (14.0-in), high-definition (HD), white light-emitting diode (WLED), SVA, BrightView (1366×768) display, slim-flat 3.0 mm, eDP; typical brightness: 220 nits	✓	✓	✓	✓	✓	✓	✓
	35.6-cm (14.0-in), high-definition (HD), white light-emitting diode (WLED), SVA, Anti glare (1366×768) display, slim-flat 3.0 mm, eDP; typical brightness: 220 nits	✓	✓	✓	✓	✓	✓	✓
	35.6-cm (14.0-in), full high-definition (FHD), white light-emitting diode (WLED), SVA, Anti glare (1920×1080) display, slim-flat 3.0 mm, eDP; typical brightness: 220 nits	✓	✓	✓	✓	✓	✓	✓
	35.6-cm (14.0-in), full high-definition (FHD), white light-emitting diode (WLED), SVA, BrightView (1920×1080) display, slim-flat 3.0 mm, eDP; typical brightness: 220 nits	✓	✓	✓	✓	✓	✓	✓
Memory	Two non-customer-accessible/upgradable memory module slots (Core processors):	✓	✓	✓	✓	✓		
	Supports up to 16 GB of system RAM in the following configurations:	✓	✓	✓	✓	✓		
	DDR4-2133 dual channel support (DDR4-2400 bridge to DDR4-2133)	✓	✓	✓	✓	✓		
	• 16384-MB total system memory (8192×2)	✓	✓	✓	✓	✓		
	• 12288-MB total system memory (8192×1) + (4096×1)	✓	✓	✓	✓	✓		
	• 8192-MB total system memory (8192×1) or (4096×2)	✓	✓	✓	✓	✓		
	• 6144-MB total system memory (4096×1) + (2048×1)	✓	✓	✓	✓	✓		
	• 4096-MB total system memory (4096×1)	✓	✓	✓	✓	✓		
	One non-customer-accessible/upgradable memory module slot (Pentium/Celeron processors):						✓	✓
	DDR3L-1600 single channel support						✓	✓
	Supports up to 8 GB of system RAM in the following configurations:						✓	✓
	• 8192-MB total system memory (8192×1)						✓	✓
	• 4096-MB total system memory (4096×1)						✓	✓

Category	Description	7th gen Disc (4 GB)	7th gen Disc (2 GB)	7th gen UMA	6th gen Disc	6th gen UMA	Pen/Cel UMA eMMC	Pen/Cel UMA HDD
	<ul style="list-style-type: none"> 2048-MB total system memory (2048×1) 							✓
Hard drives	Supports 6.35-cm (2.5-in) SATA hard drives in 9.5-mm (.37-in) and 7.0-mm (.28-in) thicknesses	✓	✓	✓	✓	✓		✓
	Support for SSD + HDD	✓	✓	✓	✓	✓		✓
	Support for m.2 SATA SSD	✓	✓	✓	✓	✓		✓
	Single hard drive configurations:	✓	✓	✓	✓	✓		✓
	<ul style="list-style-type: none"> 1-TB, 5400 rpm, 9.5 mm or 7.0 mm 500-GB, 5400 rpm, 7.0-mm 	✓	✓	✓	✓	✓		✓
	M.2 SATA-3 configurations (value):	✓	✓	✓	✓	✓		✓
	<ul style="list-style-type: none"> 256 GB 128 GB 	✓	✓	✓	✓	✓		✓
	M.2 SATA-3 configurations (TLC):	✓	✓	✓	✓	✓		✓
	<ul style="list-style-type: none"> 512 GB 256 GB 128 GB 	✓	✓	✓	✓	✓		✓
	Dual storage configurations:	✓	✓	✓	✓	✓		
	<ul style="list-style-type: none"> 256 GB Value SSD + 1 TB HDD 128 GB Value SSD + 1 TB HDD 	✓	✓	✓	✓	✓		
	eMMC configuration:	✓	✓	✓	✓	✓	✓	✓
	<ul style="list-style-type: none"> 128 GB 64 GB 32 GB 	✓	✓	✓	✓	✓	✓	✓
Optical drive	Fixed, serial ATA, 9.0-mm tray load	✓	✓	✓	✓	✓	✓	✓
	DVD+/-RW Double-Layer writer	✓	✓	✓	✓	✓		✓
	Supports zero power optical drive	✓	✓	✓	✓	✓	✓	✓
	Supports M-disc	✓	✓	✓	✓	✓	✓	✓
	Supports configuration without optical drive	✓	✓	✓	✓	✓	✓	✓
Camera/mic	HP TrueVision HD camera - activity LED, USB 2.0, HD BSI sensor, f2.0, 720p by 30 frames per second	✓	✓	✓	✓	✓	✓	✓
	HP Camera – VGA camera, indicator LED, USB 2.0, f2.4, 480p by 30 frames per second	✓	✓	✓	✓	✓	✓	✓
	Single digital microphone	✓	✓	✓	✓	✓	✓	✓
	Supports HP Noise Cancellation	✓	✓	✓	✓	✓	✓	✓

Category	Description	7th gen Disc (4 GB)	7th gen Disc (2 GB)	7th gen UMA	6th gen Disc	6th gen UMA	Pen/Cel UMA eMMC	Pen/Cel UMA HDD
	Supports WDR (Wide Dynamic Range)	✓	✓	✓	✓	✓	✓	✓
Audio	Dual speakers	✓	✓	✓	✓	✓	✓	✓
	HP Audio Control	✓	✓	✓	✓	✓	✓	✓
Ethernet	Integrated 10/100/1000 network interface card (NIC)	✓	✓	✓	✓	✓	✓	✓
Wireless Network	Integrated wireless options with single antenna (M.2/PCIe):	✓	✓	✓	✓	✓	✓	✓
	Compatible with Miracast-certified devices	✓	✓	✓	✓	✓	✓	✓
	Support for the following WLAN formats:	✓	✓	✓	✓	✓	✓	✓
	<ul style="list-style-type: none"> Realtek RTL8188EE 802.11 bgn 1x1 WiFi Adapter Realtek RTL8723DE 802.11 bgn 1x1 WiFi + BT 4.2 Combo Adapter Realtek RTL8723BE-VB 802.11b/g/n 1x1 Wi-Fi + BT4.0 Combo Adapter 	✓	✓	✓	✓	✓	✓	✓
	Integrated wireless options with dual antennas (M.2/PCIe):	✓	✓	✓	✓	✓	✓	✓
	Compatible with Miracast-certified devices	✓	✓	✓	✓	✓	✓	✓
	Support for the following WLAN formats:	✓	✓	✓	✓	✓	✓	✓
	<ul style="list-style-type: none"> Intel Dual Band Wireless-AC 3168 802.11 ac 1x1 WiFi + BT 4.2 Combo (non-vPro) Intel Dual Band Wireless-AC 7265 802.11AC 2x2 WiFi + BT 4.2 Combo Adapter (non-vPro) 	✓	✓	✓	✓	✓	✓	✓
External media card	HP Multi-Format Digital Media Reader	✓	✓	✓	✓	✓	✓	✓
	Support SD/SDHC/SDXC	✓	✓	✓	✓	✓	✓	✓
	Push-pull insertion/removal	✓	✓	✓	✓	✓	✓	✓
Internal Card	One M.2 slot for SSD	✓	✓	✓	✓	✓	✓	✓
	One M.2 slot for WLAN	✓	✓	✓	✓	✓	✓	✓
Ports	VGA (Dsub 15 pin) supporting 1920 × 1200 @ 60Hz	✓	✓	✓	✓	✓	✓	✓
	HDMI version 1.4b supporting 1920×1080 @ 60Hz	✓	✓	✓	✓	✓	✓	✓
	Hot Plug/unplug and auto detect for correct output to wide-aspect vs. standard aspect video	✓	✓	✓	✓	✓	✓	✓
	RJ-45 (Ethernet)	✓	✓	✓	✓	✓	✓	✓
	USB 3.0 (2 ports; left side)	✓	✓	✓	✓	✓	✓	✓

Category	Description	7th gen Disc (4 GB)	7th gen Disc (2 GB)	7th gen UMA	6th gen Disc	6th gen UMA	Pen/Cel UMA eMMC	Pen/Cel UMA HDD
	USB 2.0 (1 right side)	✓	✓	✓	✓	✓	✓	✓
	AC Smart Pin adapter plug	✓	✓	✓	✓	✓	✓	✓
	Headphone/line out and microphone/line in combo jack	✓	✓	✓	✓	✓	✓	✓
Keyboard /pointing devices	Full-size textured, island style keyboard	✓	✓	✓	✓	✓	✓	✓
	TouchPad with multi-touch gestures enabled	✓	✓	✓	✓	✓	✓	✓
	TouchPad taps enabled by default	✓	✓	✓	✓	✓	✓	✓
	TouchPad supports Modern Trackpad Gestures	✓	✓	✓	✓	✓	✓	✓
Power	AC adapters	✓	✓	✓	✓	✓	✓	✓
	65-W EM	✓	✓	✓	✓	✓	✓	✓
	65-W	✓	✓		✓			
	45-W			✓		✓	✓	✓
	1 meter power cord	✓	✓	✓	✓	✓	✓	✓
	Batteries	✓	✓	✓	✓	✓	✓	✓
	4-cell, 41-Whr Li-ion battery	✓	✓	✓	✓	✓	✓	✓
	3-cell, 31-Whr Li-ion battery			✓		✓	✓	✓
Security	fTPM 2.0	✓	✓	✓	✓	✓	✓	✓
	Kensington Security Lock	✓	✓	✓	✓	✓	✓	✓
Operating system	Preinstalled	✓	✓	✓	✓	✓	✓	✓
	Windows 10	✓	✓	✓	✓	✓	✓	✓
	Windows 10 Professional	✓	✓	✓	✓	✓	✓	✓
	For Developed Market (ML):	✓	✓	✓	✓	✓	✓	✓
	Windows 10 Home ML	✓	✓	✓	✓	✓		✓
	Windows 10 Home Plus ML	✓	✓	✓	✓	✓		
	Windows 10 Home Value NB ML Compact						✓	
	Windows 10 Home Entry NB ML Compact						✓	
	For Emerging Market (EM/SL):	✓	✓	✓	✓	✓	✓	✓
	Windows 10 Home EM/SL	✓	✓	✓	✓	✓		✓
	Windows 10 Home Plus EM/SL	✓	✓	✓	✓	✓		
	Windows 10 Home Value NB EM/SL						✓	✓
	Windows 10 Home Value NB Select Geo EM/SL						✓	✓
	Windows 10 Home Entry NB EM/SL Compact						✓	

Category	Description	7th gen Disc (4 GB)	7th gen Disc (2 GB)	7th gen UMA	6th gen Disc	6th gen UMA	Pen/Cel UMA eMMC	Pen/Cel UMA HDD
	For China Market:	✓	✓	✓	✓	✓		✓
	CPPP Windows 10 Home High End China Language Edition	✓	✓	✓	✓	✓		
	CPPP Windows 10 Home China Language Edition	✓	✓	✓	✓	✓		✓
	For APJ SEAP Market (EM/SL):	✓	✓	✓	✓	✓	✓	✓
	SEAP Windows 10 Home EM/SL	✓	✓	✓	✓	✓		✓
	SEAP Windows 10 Home Plus	✓	✓	✓	✓	✓		
	SEAP Windows 10 Home Value Notebook						✓	✓
	Ubuntu Standard			✓		✓		✓
	FreeDOS 2.0	✓	✓	✓	✓	✓		✓
Service	End-user replaceable parts	✓	✓	✓	✓	✓	✓	✓
	AC adapter	✓	✓	✓	✓	✓	✓	✓
	Battery	✓	✓	✓	✓	✓	✓	✓
	Optical drive	✓	✓	✓	✓	✓	✓	✓

HP 14 Laptop PC, model numbers: 14-bs1xx, 14-bs6xx

HP 14g Laptop PC, model numbers: 14g-br1xx

HP 14q Laptop PC, model numbers: 14q-bu1xx

Category	Description
Product name	HP 14 Laptop PC (Intel) * Model numbers: 14-bs1xx, 14-bs6xx
	HP 14g Laptop PC * Model numbers: 14g-br1xx
	HP 14q Laptop PC * Model numbers: 14q-bu1xx
Processor	8th generation Intel® Core™ processor
	Intel Core i5-8250U (1.6-GHz, turbo up to 3.4 GHz, 6-MB L3 cache, 2400-MHz, quad, 15W)
Graphics	Internal graphics
	Intel UHD Graphics 620
	Switchable discrete graphics
	AMD Radeon M520 R17M-M1-30 with 2048 MB of dedicated video memory
	Supports HD Decode, DX12, and HDMI

Category	Description
Panel	<p>35.6-cm (14.0-in), high-definition (HD), white light-emitting diode (WLED), BrightView (1366×768) display, slim-flat 3.0 mm, eDP; typical brightness: 220 nits</p>
	<p>35.6-cm (14.0-in), high-definition (HD), white light-emitting diode (WLED), Anti glare (1366×768) display, slim-flat 3.0 mm, eDP; typical brightness: 220 nits</p>
	<p>35.6-cm (14.0-in), full high-definition (FHD), white light-emitting diode (WLED), Anti glare (1920×1080) display, slim-flat 3.0 mm, eDP; typical brightness: 220 nits</p>
	<p>35.6-cm (14.0-in), full high-definition (FHD), white light-emitting diode (WLED), BrightView (1920×1080) display, slim-flat 3.0 mm, eDP; typical brightness: 220 nits</p>
Memory	<p>Two non-customer-accessible/upgradable memory module slots (Core processors):</p>
	<p>Supports up to 16 GB of system RAM in the following configurations:</p>
	<p>DDR4-2400 dual channel support</p>
	<ul style="list-style-type: none"> ● 16384-MB total system memory (8192×2) ● 12288-MB total system memory (8192×1) + (4096×1) ● 8192-MB total system memory (8192×1) or (4096×2) ● 6144-MB total system memory (4096×1) + (2048×1) ● 4096-MB total system memory (4096×1)
Hard drives	<p>Supports 6.35-cm (2.5-in) SATA hard drives in 9.5-mm (.37-in) and 7.0-mm (.28-in) thicknesses</p>
	<p>Support for SSD + HDD</p>
	<p>Support for m.2 SATA SSD</p>
	<p>Single hard drive configurations:</p>
	<ul style="list-style-type: none"> ● 1-TB, 5400 rpm, 9.5 mm or 7.0 mm ● 500-GB, 5400 rpm, 7.0-mm
	<p>M.2 SATA-3 configurations (TLC):</p>
	<ul style="list-style-type: none"> ● 512 GB ● 256 GB ● 128 GB
	<p>Dual storage configurations:</p>
	<ul style="list-style-type: none"> ● 256 GB TLC SSD + 1 TB HDD ● 128 GB TLC SSD + 1 TB HDD
	<p>eMMC configuration:</p>
	<ul style="list-style-type: none"> ● 128 GB
Optical drive	<p>Fixed, serial ATA, 9.0-mm tray load</p>
	<p>DVD+/-RW Double-Layer writer</p>
	<p>Supports zero power optical drive</p>
	<p>Supports M-disc</p>


Category	Description
	Supports configuration without optical drive
Camera/ mic	<p>HP TrueVision HD camera - activity LED, USB 2.0, HD BSI sensor, f2.0, 720p by 30 frames per second</p> <p>HP Camera – VGA camera, indicator LED, USB 2.0, f2.4, 480p by 30 frames per second</p> <p>Single digital microphone</p> <p>Supports HP Noise Cancellation</p> <p>Supports WDR (Wide Dynamic Range)</p>
Audio	<p>Dual speakers</p> <p>HP Audio Control</p>
Ethernet	Integrated 10/100/1000 network interface card (NIC)
Wireless Network	<p>Compatible with Miracast-certified devices</p> <p>Integrated wireless options with single antenna (M.2/PCIe):</p> <p>Support for the following WLAN formats:</p> <ul style="list-style-type: none"> • Realtek RTL 8188EE 802.11 bgn 1x1 WiFi Adapter • Realtek RTL8723DE 802.11 bgn 1x1 WiFi + BT 4.2 Combo Adapter • Realtek RTL8723BE-VB 802.11b/g/n 1x1 Wi-Fi + BT4.0 Combo Adapter <p>Integrated wireless options with dual antennas (M.2/PCIe):</p> <p>Support for the following WLAN formats:</p> <ul style="list-style-type: none"> • Intel Dual Band Wireless-AC 3168 802.11 ac 1x1 WiFi + BT 4.2 Combo (non-vPro) • Intel Dual Band Wireless-AC 7265 802.11AC 2x2 WiFi + BT 4.2 Combo Adapter (non-vPro)
External media card	HP Multi-Format Digital Media Reader
	Supports SD/SDHC/SDXC
	Push-pull insertion/removal
Internal Card	<p>One M.2 slot for SSD</p> <p>One M.2 slot for WLAN</p>
Ports	<p>VGA (Dsub 15 pin) supporting 1920 × 1200 @ 60Hz</p> <p>HDMI version 1.4b supporting 1920×1080 @ 60Hz</p> <p>Hot Plug/unplug and auto detect for correct output to wide-aspect vs. standard aspect video</p> <p>RJ-45 (Ethernet)</p> <p>USB 3.0 (2 ports; left side)</p> <p>USB 2.0 (1 right side)</p> <p>AC Smart Pin adapter plug</p> <p>Headphone/line out and microphone/line in combo jack</p>
Keyboard/pointing devices	<p>Full-size textured, island style keyboard</p> <p>TouchPad with multi-touch gestures enabled, taps enabled by default</p>

Category	Description
	TouchPad supports Modern Trackpad Gestures
Power	<p>AC adapters</p> <p>65-W EM</p> <p>65-W</p> <p>1 meter power cord</p> <p>Battery (cylindrical)</p> <p>4-cell, 41-Whr Li-ion battery</p>
Security	<p>fTPM 2.0</p> <p>Kensington Security Lock</p>
Operating system	<p>Preinstalled</p> <p>Windows 10</p> <p>Windows 10 Professional</p> <p>For Developed Market (ML):</p> <p>Windows 10 Home ML</p> <p>Windows 10 Home Plus ML</p> <p>For Emerging Market (EM/SL):</p> <p>Windows 10 Home EM/SL</p> <p>Windows 10 Home Plus EM/SL</p> <p>For China Market:</p> <p>CPPP Windows 10 Home High End China Language Edition</p> <p>CPPP Windows 10 Home China Language Edition</p> <p>For APJ SEAP Market (EM/SL):</p> <p>Windows 10 Home EM/SL</p> <p>Windows 10 Home Plus</p> <p>FreeDOS 2.0</p>
Service	<p>End-user replaceable parts</p> <p>AC adapter</p> <p>Battery</p> <p>Optical drive</p>

2 Getting to know your computer


Your computer features top-rated components. This chapter provides details about your components, where they're located, and how they work.

Right side

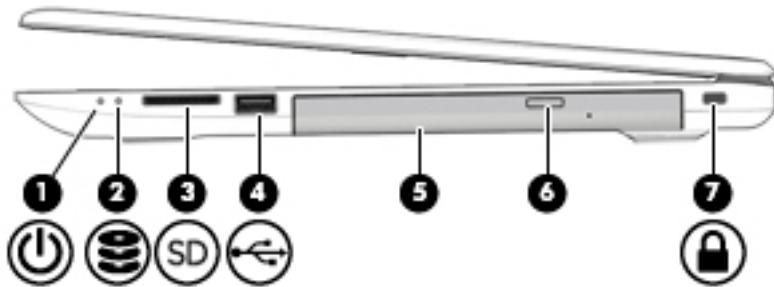


Component	Description
(1)	Power light <ul style="list-style-type: none">On: The computer is on.Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components.Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power.
(2)	Drive light <ul style="list-style-type: none">Blinking white: The hard drive is being accessed.
(3)	Memory card reader Reads optional memory cards that enable you to store, manage, share, or access information. To insert a card: <ol style="list-style-type: none">Hold the card label-side up, with connectors facing the computer.Insert the card into the memory card reader, and then press in on the card until it is firmly seated. To remove a card: Pull the card out of the memory card reader.
(4)	USB 2.0 port Connects a USB device, such as a cell phone, camera, activity tracker, or smartwatch, and provides data transfer.
(5)	Optical drive (select products only) Depending on your computer model, reads an optical disc or reads and writes to an optical disc.
(6)	Optical drive eject button (select products only) Releases the optical drive disc tray.
(7)	Security cable slot Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.

Left side

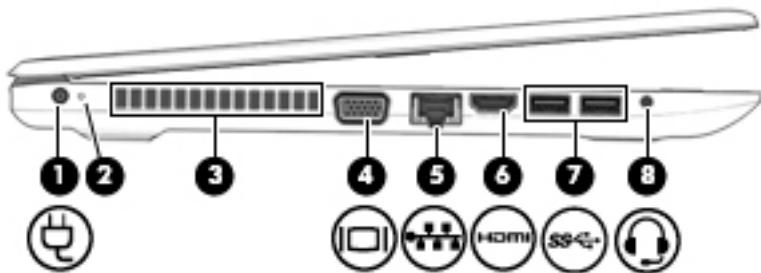

Component	Description
(1)	Power connector Connects an AC adapter.
(2)	AC adapter and battery light <ul style="list-style-type: none">White: The AC adapter is connected and the battery is fully charged.Blinking white: The AC adapter is disconnected and the battery has reached a low battery level.Amber: The AC adapter is connected and the battery is charging.Off: The battery is not charging.
(3)	Vent Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4)	External monitor port (select products only) Connects an external VGA monitor or projector.
(5)	RJ-45 (network) jack/status lights Connects a network cable. <ul style="list-style-type: none">White: The network is connected.Amber: Activity is occurring on the network.
(6)	HDMI port Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High-Definition Multimedia Interface (HDMI) device.
(7)	USB 3.x SuperSpeed ports (2) Connect a USB device, such as a cell phone, camera, activity tracker, or smartwatch, and provide high-speed data transfer.
(8)	Audio-out (headphone)/Audio-in (microphone) combo jack Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i> . To access this guide: <ul style="list-style-type: none">Select the Start button, select HP Help and Support, and then select HP Documentation. NOTE: When a device is connected to the jack, the computer speakers are disabled.

Display

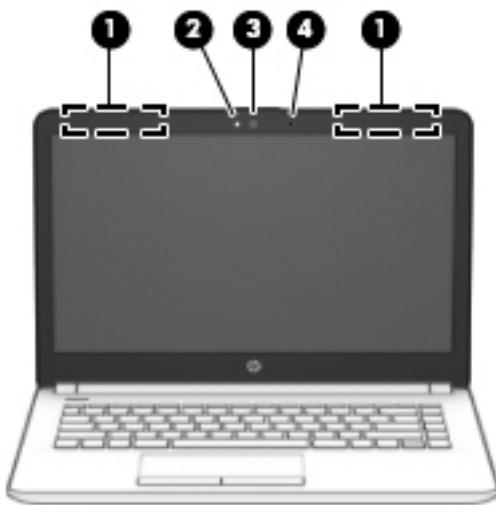

Component	Description
(1) WLAN antennas*	Send and receive wireless signals to communicate with wireless local area networks (WLANS).
(2) Camera light	On: One or more cameras are in use.
(3) Camera	Allows you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows, instead of a password logon. NOTE: Camera functions vary depending on the camera hardware and software installed on your product.
(4) Internal microphone	Records sound.

*The antennas are not visible from the outside of the computer, and antenna location varies. For optimal transmission, keep the areas immediately around the antennas free from obstructions.


For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- ▲ Select the **Start** button, select **HP Help and Support**, and then select **HP Documentation**.


Keyboard area

TouchPad

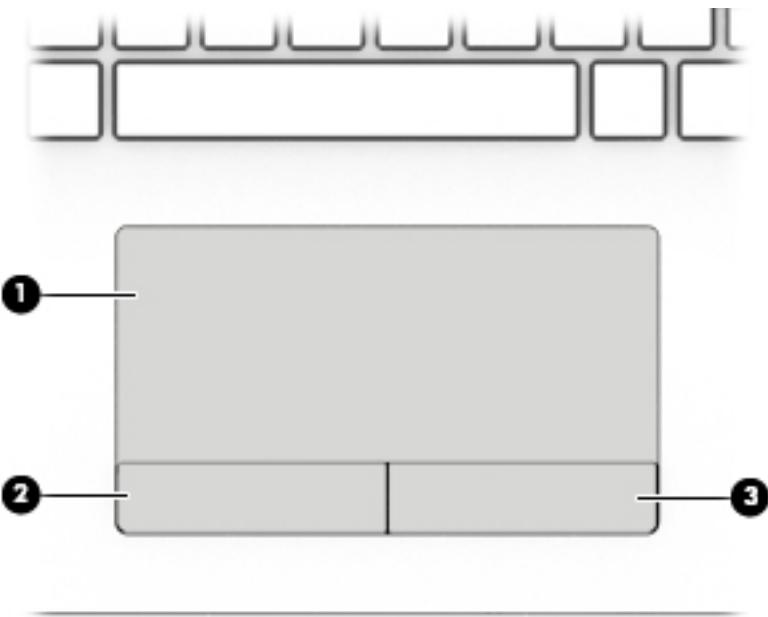

Component	Description
(1) TouchPad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2) Left TouchPad button	Functions like the left button on an external mouse.
(3) Right TouchPad button	Functions like the right button on an external mouse.

Lights

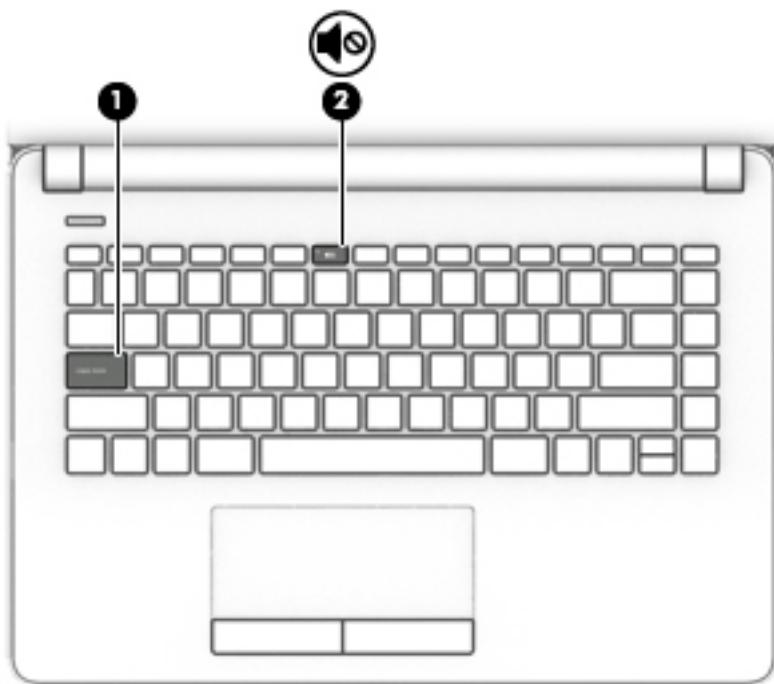


Component	Description
(1)	Caps lock light On: Caps lock is on, which switches the key input to all capital letters.
(2)	Mute light • Amber: Computer sound is off. • Off: Computer sound is on.

Button



Component	Description
Power button	<ul style="list-style-type: none">When the computer is off, press the button to turn on the computer.When the computer is on, press the button briefly to initiate Sleep.When the computer is in the Sleep state, press the button briefly to exit Sleep.When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>CAUTION: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, see your power options:</p> <p style="text-align: center;">▲ Right-click the Power icon  , and then select Power Options.</p>

Special keys

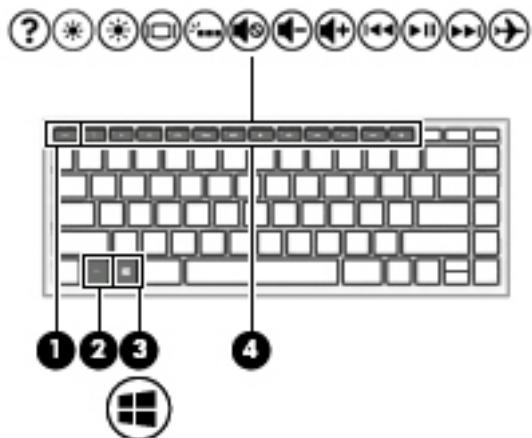

Component	Description
(1) esc key	Displays system information when pressed in combination with the fn key.
(2) fn key	Executes specific functions when pressed in combination with another key.
(3) Windows key	Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu.
(4) Action keys	Execute frequently used system functions. NOTE: On select products, the f5 action key turns the keyboard backlight feature off or on.


Action keys

An action key performs the function indicated by the icon on the key. To determine which keys are on your product, see [Special keys on page 17](#).

- ▲ To use an action key, press and hold the key.

Icon	Description
?	Opens the HP Support Assistant app.
☀	Decreases the screen brightness incrementally as long as you hold down the key.
☀	Increases the screen brightness incrementally as long as you hold down the key.
☰	Switches the screen image between display devices connected to the system. For example, if a monitor is connected to the computer, repeatedly pressing this key alternates the screen image from the computer display to the monitor display to a simultaneous display on both the computer and the monitor.
✖	Turns the keyboard backlight off or on. NOTE: To conserve battery power, turn off this feature.
🔇	Mutes or restores speaker sound.
🔉	Decreases speaker volume incrementally while you hold down the key.
🔊	Increases speaker volume incrementally while you hold down the key.
⏮	Plays the previous track of an audio CD or the previous section of a DVD or a Blu-ray Disc (BD).
▶⏸	Starts, pauses, or resumes playback of an audio CD, a DVD, or a BD.
⏭	Plays the next track of an audio CD or the next section of a DVD or a BD.
✈	Turns the airplane mode and wireless feature on or off. NOTE: The airplane mode key is also referred to as the wireless button. NOTE: A wireless network must be set up before a wireless connection is possible.

Bottom

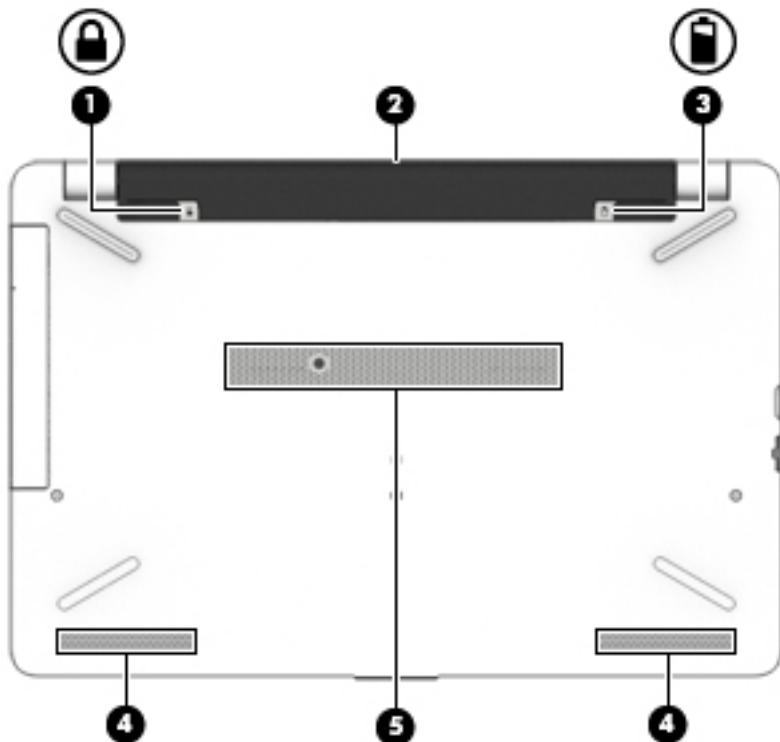

Component	Description
(1)	Battery lock Locks the battery in the battery bay.
(2)	Battery bay Holds the battery.
(3)	Battery release latch Releases the battery.
(4)	Speakers (2) Produce sound.
(5)	Vent Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.


Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

IMPORTANT: Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, or on the back of the display.


- Service label—Provides important information to identify your computer. When contacting support, you will probably be asked for the serial number, and possibly for the product number or the model number. Locate these numbers before you contact support.

Your service label will resemble one of the examples below. Refer to the illustration that most closely matches the service label on your computer.

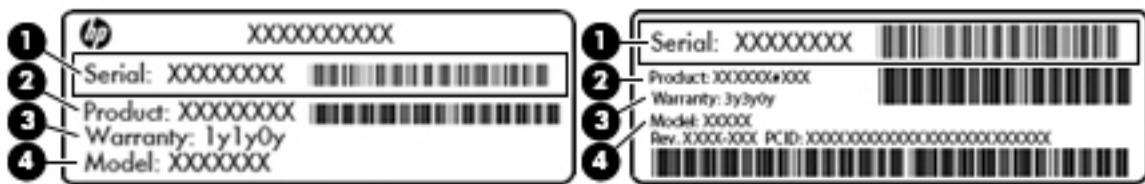

Component

- (1) Serial number
- (2) Product number
- (3) Warranty period
- (4) Model number (select products only)

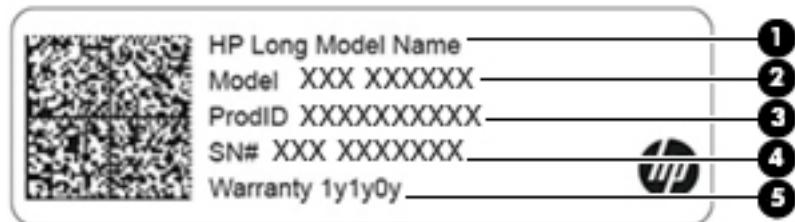

Component


- (1) HP product name (select products only)
- (2) Model name (select products only)
- (3) Product number
- (4) Serial number
- (5) Warranty period

- Regulatory label(s)—Provide(s) regulatory information about the computer.
- Wireless certification label(s)—Provide(s) information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

3 Illustrated parts catalog

Computer major components

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

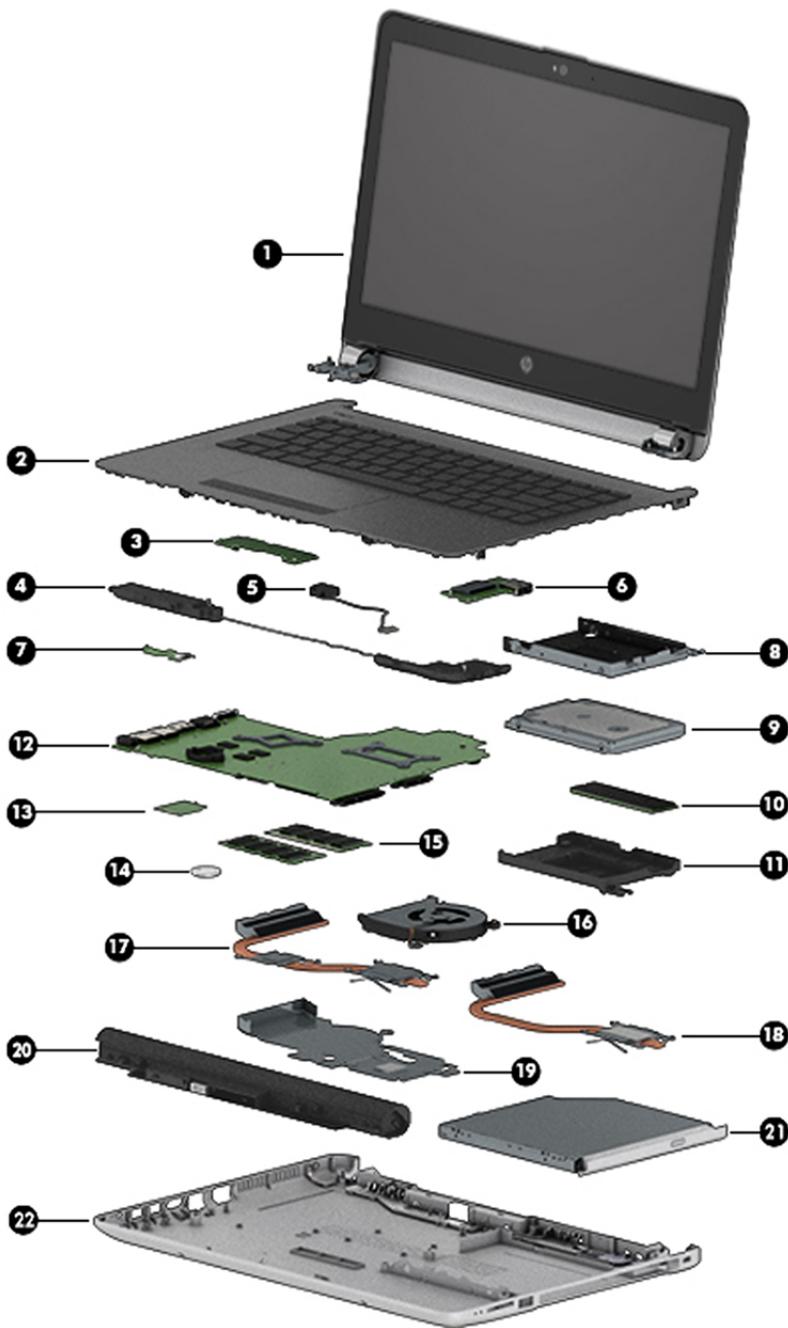


Item	Component	Spare part number
(1)	Display assembly NOTE: For display assembly spare part information, see Display assembly subcomponents on page 25 .	not spared
(2)	Top cover/keyboard NOTE: For a detailed list of keyboard country codes, see Top cover/keyboard on page 80 .	
	Jet black	925307-xxx
	Snow white	925308-xxx
	Smoke gray	925309-xxx
(3)	TouchPad button board	925365-001
(4)	Speakers (includes left and right speakers and cable)	925376-001
(5)	Power connector cable	938292-001
(6)	USB board For use in models with Intel Pentium or Celeron processors	925363-001
	For use in models with Intel Core processors	925364-001
(7)	Power button board	925366-001
(8)	Hard drive bracket	925354-001
(9)	Hard drive , 2.5 inch (does not include bracket, connector board, or cable) 1-TB, 5400-rpm 500-GB, 5400-rpm eMMC module , 128 GB (not illustrated)	778192-005 778186-005 942826-001
(10)	Solid-state drive , M.2 NOTE: Mylar for use with solid-state drives is available using spare part number 930980-001.	
	512 GB	763008-015
	256 GB	865902-011
	128 GB	827560-040
(11)	Solid-state drive bracket	925355-001
(12)	System board (includes replacement thermal materials) All system boards use the following part numbers: xxxxxx-001: Non-Windows operating systems xxxxxx-601: Windows 10 operating system For use in models with discrete graphics memory	
	• Intel Core i7-7500U processor and 4 GB of discrete graphics memory	925428-xx1
	• Intel Core i7-7500U processor and 2 GB of discrete graphics memory	925429-xx1
	• Intel Core i5-8250U processor and 2 GB of discrete graphics memory	941656-xx1

Item	Component	Spare part number
	• Intel Core i5-7200U processor and 4 GB of discrete graphics memory	925430-xx1
	• Intel Core i5-7200U processor and 2 GB of discrete graphics memory	925431-xx1
	• Intel Core i3-6006U processor and 2 GB of discrete graphics memory	925432-xx1
For use in models with UMA graphics memory:		
	• Intel Core i5-7200U processor	925422-xx1
	• Intel Core i3-6006U processor	925423-xx1
	• Intel Pentium N3710 processor	925424-xx1
	• Intel Celeron N3060 processor	925425-xx1
	• Intel Celeron N3060 processor with 64 GB of eMMC memory	925427-xx1
	• Intel Celeron N3060 processor with 32 GB of eMMC memory	925426-xx1
(13)	WLAN module	
	Intel Dual Band Wireless-AC 7265 802.11AC 2x2 WiFi + BT 4.2 Combo Adapter (non-vPro)	901229-855
	Realtek RTL8723DE 802.11 bgn 1x1 WiFi + BT 4.2 Combo Adapter	927230-855
	Realtek RTL 8188EE 802.11 bgn 1x1 WiFi Adapter	927235-855
	Intel Dual Band Wireless-AC 3168 802.11 ac 1x1 WiFi + BT 4.2 Combo Adapter	863934-855
(14)	RTC battery	746439-001
(15)	Memory module	
	PC3L-1600; for use in models with Intel Pentium and Celeron processors	
	• 8-GB	693374-005
	• 4 GB	691740-005
	• 2 GB	691739-005
	DDR4-2400; for use in models with 6th and 7th generation Intel Core processors	
	• 8-GB	862398-855
	• 4 GB	862397-855
	• 2 GB	864271-855
(16)	Fan	925352-001
	Heat sink assembly (includes replacement thermal materials)	
(17)	For use in models with discrete graphics memory	925351-001
(18)	For use in models with UMA graphics memory and Intel Core processors	925348-001
(19)	For use in models with UMA graphics and Intel Pentium or Celeron processors	925347-001
(20)	Battery	
	4-cell, 41-Whr, 2.8-Ah Li-ion battery	919701-850
	3-cell, 31-Whr, 2.8-Ah Li-ion battery	919700-850
(21)	Optical drive (DVD+/-RW Double-Layer SuperMulti)	920417-001

Item	Component	Spare part number
(22)	Bottom cover	
For use in models with an optical drive:		
	• Pike/natural silver	925326-001
	• Silk gold	925327-001
	• Smoke gray	925324-001
	• Marine blue	925325-001
	• Snow white	925323-001
	• Empress red	925657-001
	• Jack black	925322-001
For use in models without an optical drive:		
	• Pike/natural silver	925332-001
	• Silk gold	925333-001
	• Smoke gray	925330-001
	• Marine blue	925331-001
	• Jack black	925328-001
	• Snow white	925329-001
	• Empress red	925334-001


Display assembly subcomponents

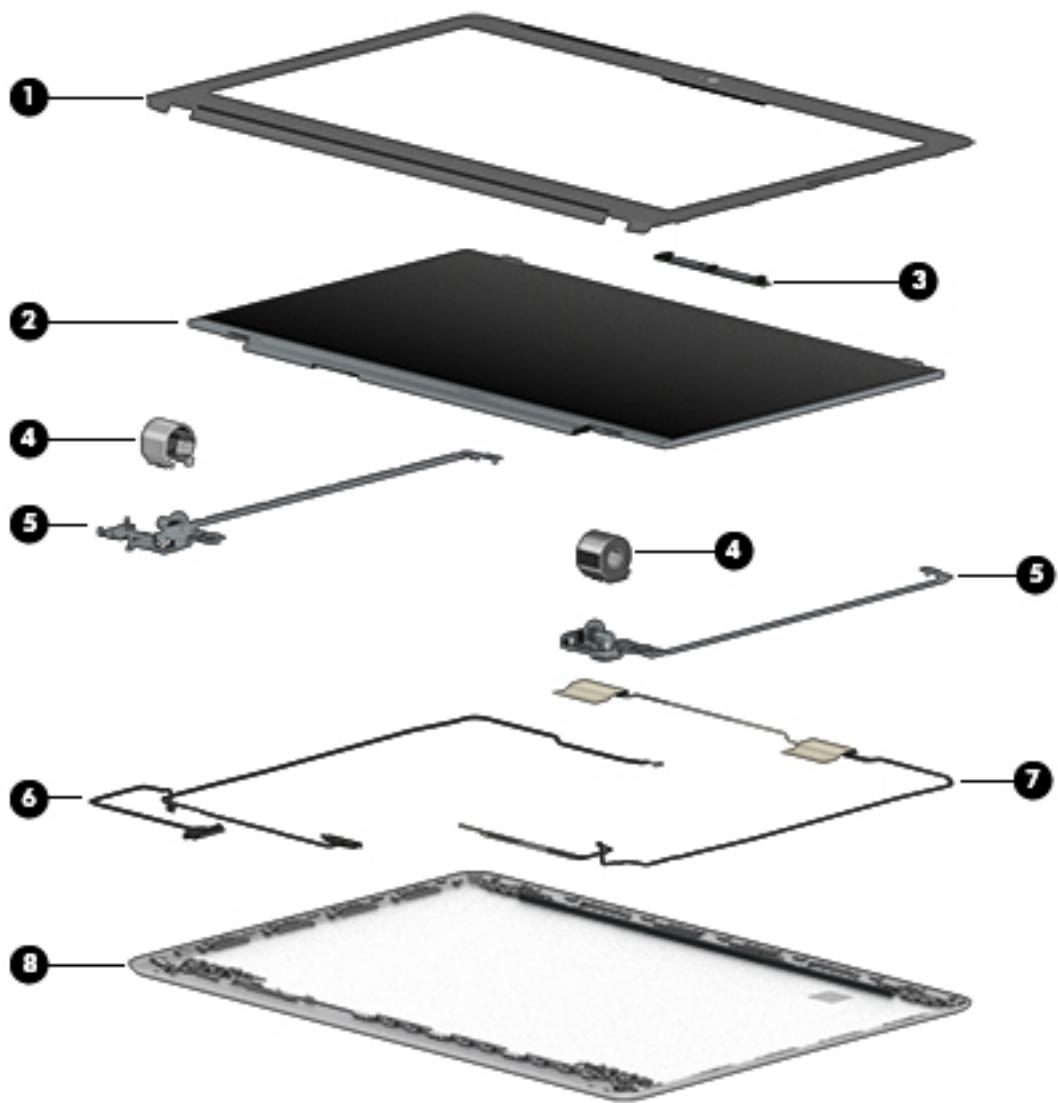

Item	Component	Spare part number
(1)	Display bezel	925335-001
(2)	Raw display panel (35.6-cm [14.0-in])	
	FHD, anti glare	821816-007
	FHD, BrightView	847660-006
	HD, anti glare	916357-002
	HD, BrightView	847664-006
(3)	Camera/microphone module	
	HD	919471-001
	VGA	919472-001

Item	Component	Spare part number
(4)	Hinge covers	
	Right, jack black	925357-001
	Left, jack black	925358-001
	Right, jack black	925359-001
	Left, jack black	925360-001
	Right, textured black	925361-001
	Left, textured black	925362-001
(5)	Hinge Kit (left and right)	925356-001
(6)	Display cable (includes display panel cable and camera/microphone cable)	925342-001
(7)	Antenna (includes wireless antenna cable and transceiver)	925314-001
(8)	Display enclosure:	
	Pike/natural silver	925319-001
	Silk gold	925320-001
	Smoke gray	925317-001
	Marine blue	925318-001
	Jack black	925315-001
	Snow white	925316-001
	Empress red	925321-001
	Converter board (not illustrated)	905711-001

Mass storage devices

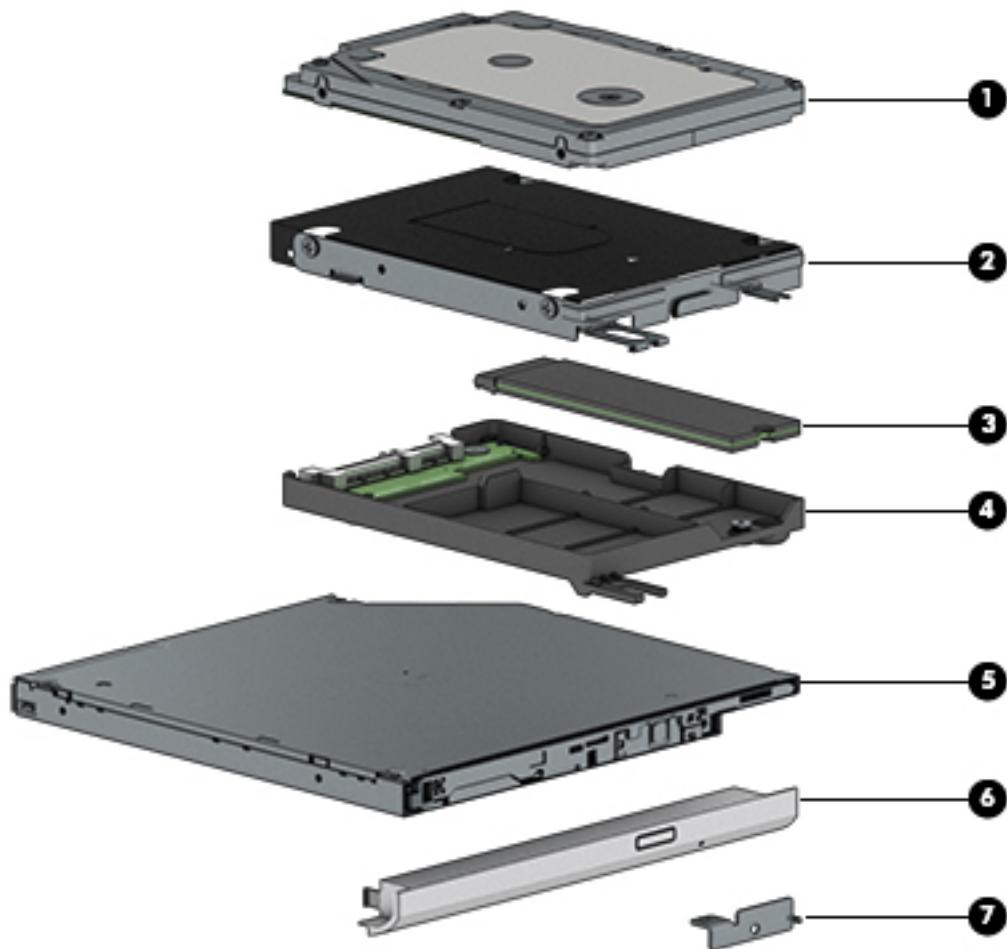

Item	Component	Spare part number
(1)	Hard drive , SATA; does not include brackets, connector board, or cable):	
	1-TB, 5400-rpm	778192-005
	500-GB, 5400-rpm	778186-005
(2)	Hard drive bracket	925354-001
	eMMC module , 128 GB (not illustrated)	942826-001
(3)	Solid-state drive , M.2	
	NOTE: Mylar for use with solid-state drives is available using spare part number 930980-001.	
	512 GB	763008-015
	256 GB	865902-011
	128 GB	827560-040
(4)	Solid-state drive bracket	925355-001
(5)	Optical drive (DVD+/-RW Double-Layer SuperMulti)	920417-001

Item	Component	Spare part number
(6)	Optical drive bezel	
	Jack black	925336-001
	Snow white	925337-001
	Smoke gray	925338-001
	Marine blue	925339-001
	Pike/natural silver	925340-001
	Silk gold	925341-001
	Empress red	925658-001
(7)	Optical drive bracket	925353-001

Cables



Item	Component	Spare part number
(1)	USB board cable	925343-001
(2)	TouchPad button board cable	925344-001
(3)	TouchPad cable	925346-001
(4)	Power button board cable	925345-001

Miscellaneous parts

Component	Spare part number
HP Smart AC adapter (4.5 mm, non-PFC):	
90-W	710413-001
65-W	710412-001
65-W, for use in Argentina	710340-850
65-W, EM, for use in India and the People's Republic of China	913691-850
45-W	741553-850
45-W, for use in Argentina	741553-852
Power cord:	
For use in Argentina	920688-003
For use in Australia	920688-011
For use in Denmark	920688-007
For use in Europe	920688-005
For use in India	920688-016
For use in Israel	920688-008
For use in Italy	920688-002
For use in Japan	920688-017
For use in North America	920688-001
For use in the People's Republic of China	920688-014
For use in South Africa	920688-010
For use in South Korea	920688-013
For use in Switzerland	920688-009
For use in Taiwan	920688-015
For use in Thailand	920688-012
For use in the United Kingdom	920688-006
Power adapter , for use in Japan	226768-001
Screw Kit	925375-001
Rubber Feet Kit:	
Ash silver	925370-001
Marine blue	925371-001
Pike/natural silver	925372-001
Silk gold	925373-001
Empress red	925374-001

4 Removal and replacement procedures preliminary requirements

Tools required

You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screwdriver
- Magnetic screwdriver
- Phillips P0 and P1 screwdrivers

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.

 **NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts

 **CAUTION:** Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

Cables and connectors

 **CAUTION:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Drive handling

⚠ CAUTION: Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing a diskette drive or optical drive, be sure that a diskette or disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive, an optical drive, or a diskette drive, place it in a static-proof bag.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

Grounding guidelines

Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

⚠ CAUTION: To prevent damage to the computer when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

⚠ CAUTION: A product can be degraded by as little as 700 V.

Event	Typical electrostatic voltage levels		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or non-conductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm $\pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

Material	Use	Voltage protection level
Antistatic plastics	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V

5 Removal and replacement procedures for Customer Self-Repair parts

 **CAUTION:** The Customer Self-Repair program is not available in all locations. Installing a part not supported by the Customer Self-Repair program may void your warranty. Check your warranty to determine if Customer Self-Repair is supported in your location.

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Component replacement procedures

 **NOTE:** Please read and follow the procedures described here to access and replace Customer Self-Repair parts successfully.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Labels on page 20](#) for details.

This chapter provides removal and replacement procedures for Customer Self-Repair parts.

There are as many as 2 screws that must be removed, replaced, or loosened when servicing Customer Self-Repair parts. Make special note of each screw size and location during removal and replacement.

Battery

Description	Spare part number
4-cell, 41-Whr, 2.8-Ah Li-ion battery	919701-850
3-cell, 31-Whr, 2.8-Ah Li-ion battery	919700-850


Before disassembling the computer, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.


To remove the battery:

1. Position the computer upside down on a flat surface.
2. Lift the computer a few inches off the surface **(1)**.
3. While holding the computer, slide the battery lock latch **(2)** to unlock the battery.
4. While pressing on the outside edge of the battery release latch **(3)**, slide the latch **(4)** to release the battery, and then remove the battery from the computer **(5)**.

 **NOTE:** The battery release latch automatically returns to its original position.

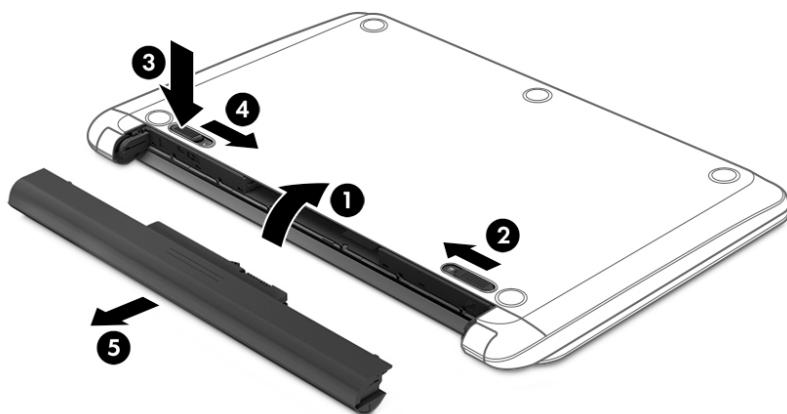

To replace the battery, **align the battery so it is parallel to the rear of the computer**, and then push the battery into the battery bay until it snaps into place **(1)**. Slide the battery lock latch **(2)** to lock the battery.

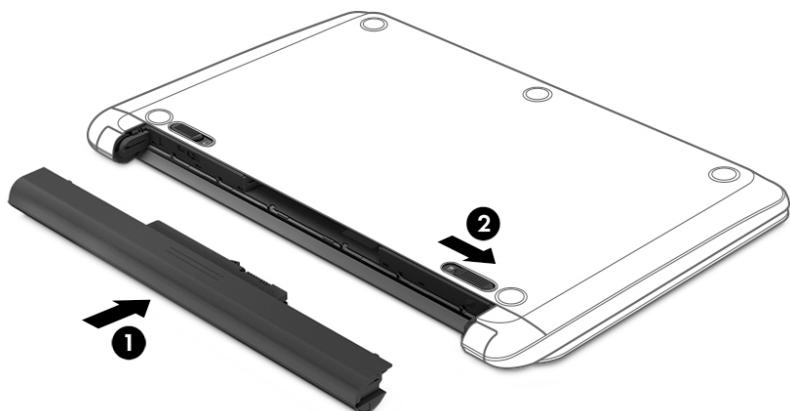

Optical drive


Description	Spare part number
DVD+/-RW Double-Layer SuperMulti Drive	920417-001
Optical drive bracket	925353-001
Optical drive bezel	
Snow white	925337-001
Smoke gray	925338-001
Marine blue	925339-001
Pike/natural silver	925340-001
Silk gold	925341-001
Empress red	925658-001
Jack black	925336-001

Before removing the optical drive, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).

To remove the optical drive:


1. Remove the Phillips PM2.5×6.0 screw (1) that secures the optical drive to the computer.
2. Remove the optical drive (2) by sliding it out of the optical drive bay.

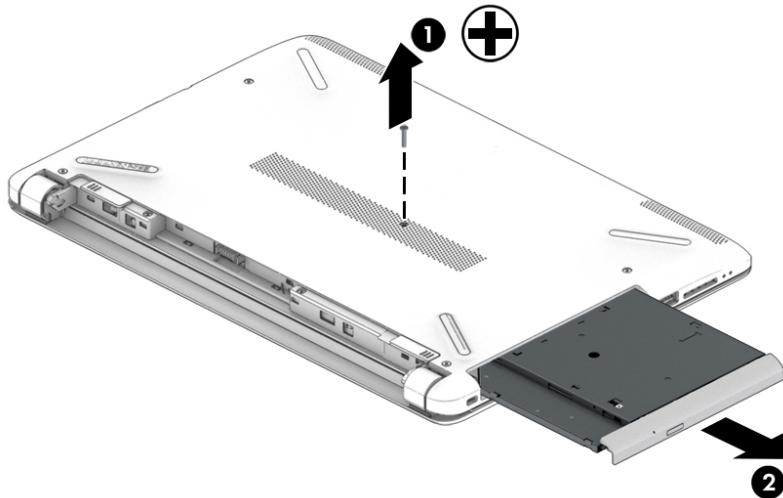

3. If it is necessary to remove the optical drive bezel, insert a paper clip into the release hole **(1)** to disengage the bezel. Press the tab **(2)** to release the bezel from the drive. Rotate the side of the bezel **(3)**, and then remove it **(4)**.

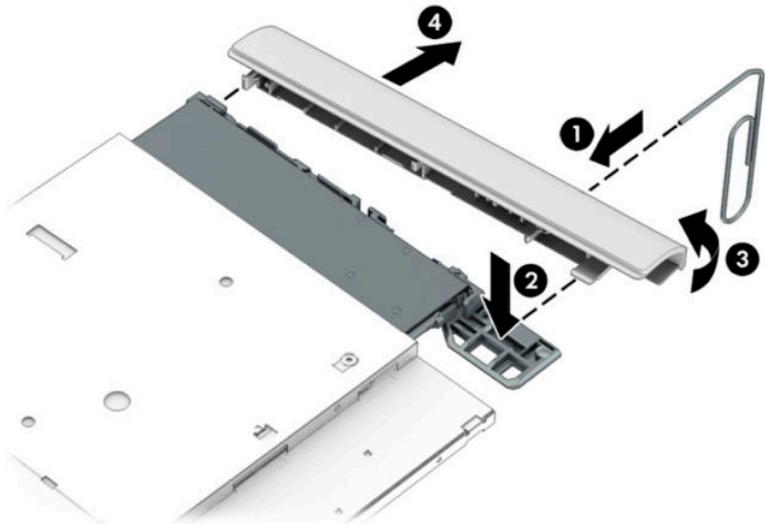

4. If it is necessary to replace the bracket on the rear of the optical drive, remove the Phillips PM2.0×2.5 screw **(1)** that secures the bracket to the drive, and then remove the bracket **(2)**.

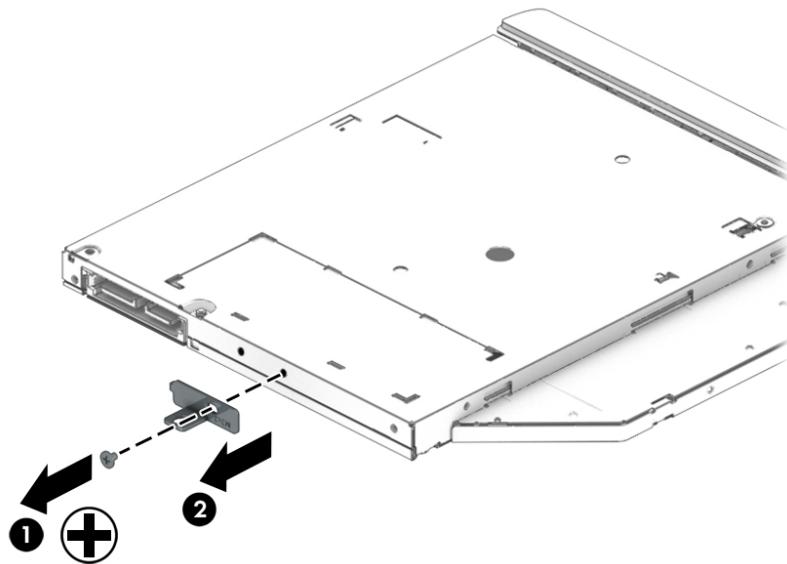

Reverse this procedure to reassemble and install the optical drive.

6 Removal and replacement procedures for Authorized Service Provider parts

 **CAUTION:** Components described in this chapter should only be accessed by an authorized service provider. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Component replacement procedures

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Labels on page 20](#) for details.

This chapter provides removal and replacement procedures for Authorized Service Provider only parts.

There are as many as 53 screws that must be removed, replaced, or loosened when servicing Authorized Service Provider only parts. Make special note of each screw size and location during removal and replacement.

Display subcomponents (bezel, panel, camera)

 **NOTE:** Display assemblies are spared at the subcomponent level only.

This section illustrates how to remove the display bezel, display panel, and camera module without removing the display from the computer. The [Display assembly on page 69](#) section illustrates removing all display subcomponents.

To remove the display assembly subcomponents, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.

Remove the display assembly subcomponents:


1. Open the computer as far as it will open.
2. To remove the display bezel:
 - a. Flex the inside of the top edge **(1)**, the left and right edges **(2)**, and the bottom edge **(3)** of the display bezel until the bezel disengages from the display enclosure.

 **NOTE:** When removing the bezel from the bottom of the display **(3)**, be careful not to peel the Mylar from the bottom of the display panel.

- b. Remove the display bezel (4).

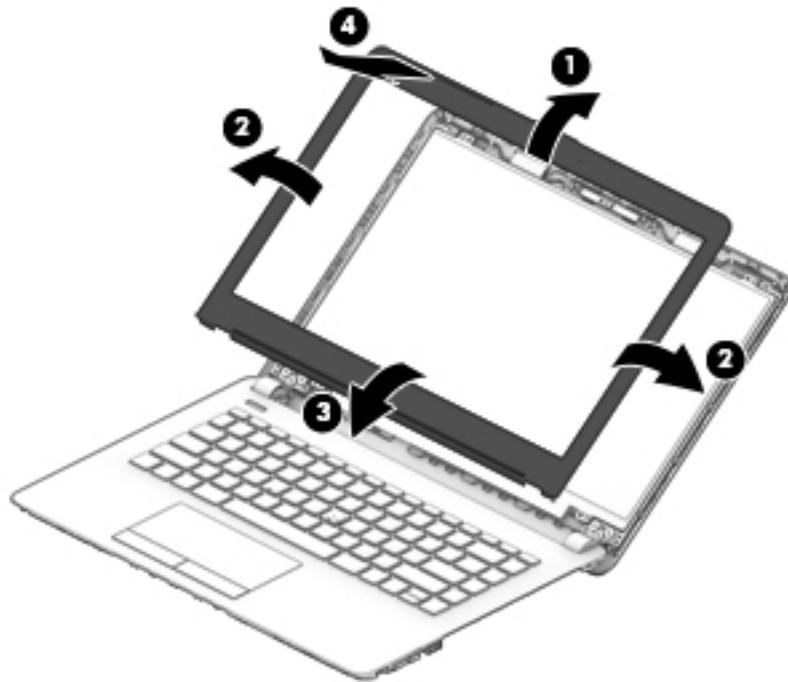


3. To remove the camera/microphone module:
- Position the display assembly with the top edge toward you.
 - Pry up to disengage the camera/microphone module from the adhesive that secures it to the display (1).
 - Disconnect the cable (2) from the module.

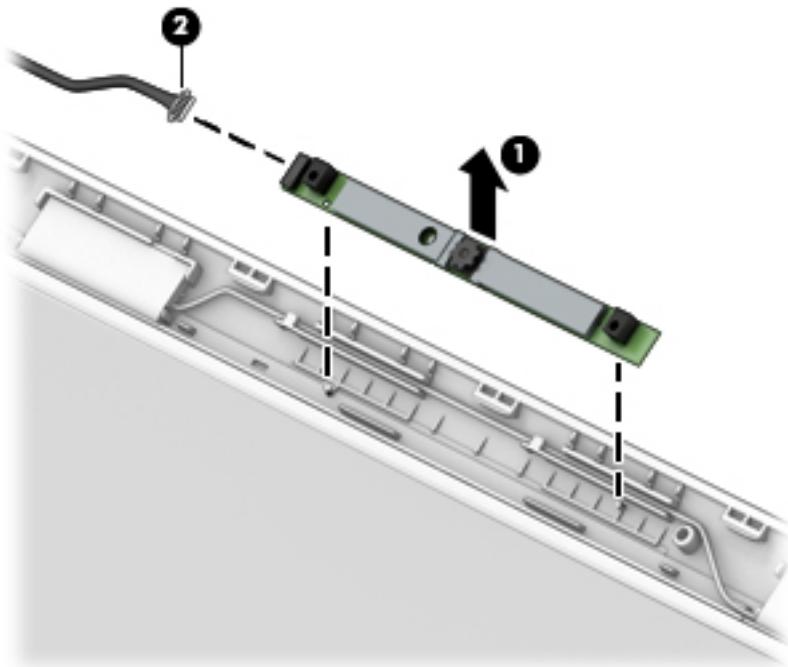


4. To remove the display panel:

- a. Remove the four Phillips PM2.0×3.0 screws **(1)** that secure the display panel to the top of the enclosure.
- b. Rotate the display panel onto the keyboard **(2)** to gain access to the display cable connection on the back of the panel.

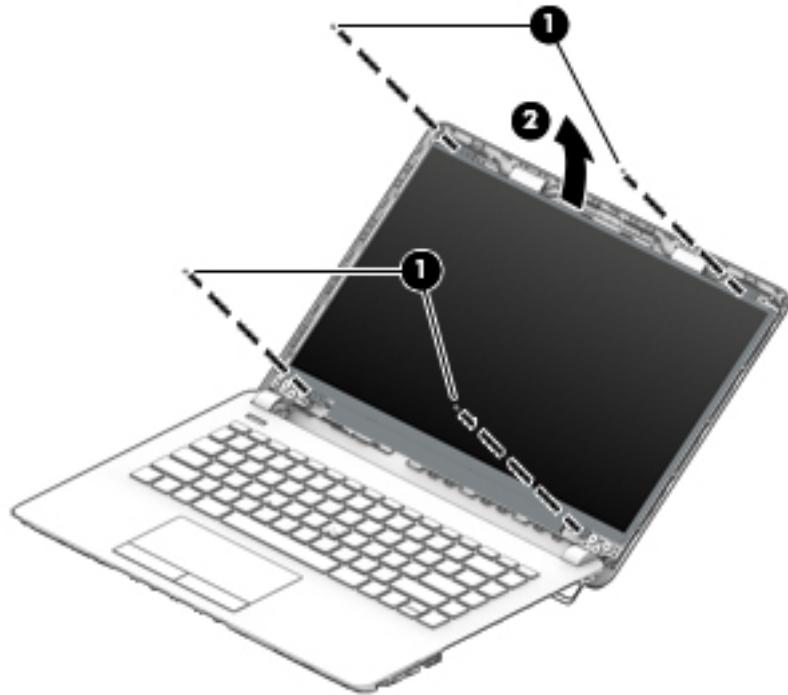

- c. On the back of the display panel, release the adhesive strip that secures the display panel cable to the display panel, and then disconnect the cable **(1)**.

- d. Remove the display panel from the computer **(2)**.

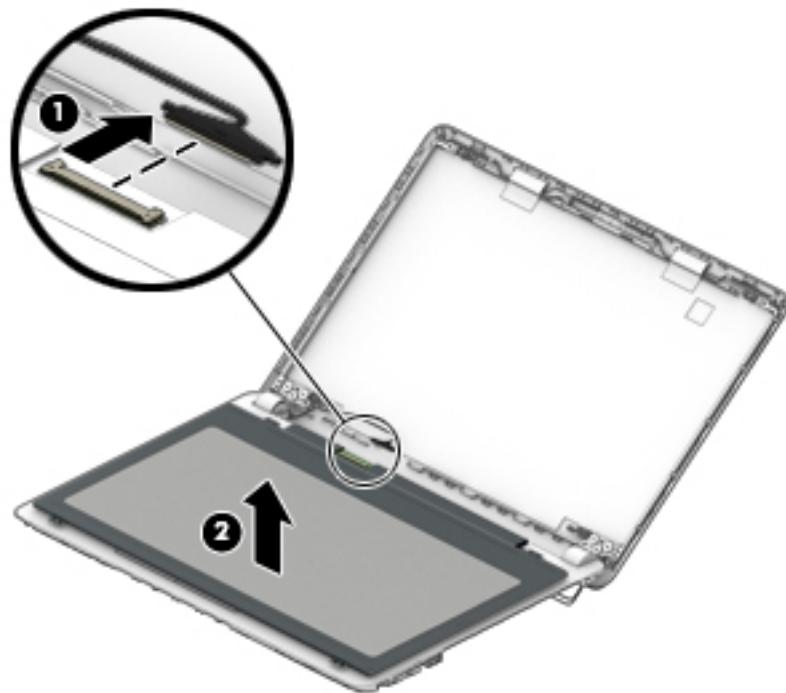

Reverse this procedure to reassemble and install the display assembly components.

Bottom cover

Description	Spare part number
Bottom cover for use in models with an optical drive:	
• Pike/natural silver	925326-001
• Silk gold	925327-001
• Smoke gray	925324-001
• Marine blue	925325-001
• Snow white	925323-001
• Empress red	925657-001
• Jack black	925322-001
Bottom cover for use in models without an optical drive:	
• Pike/natural silver	925332-001
• Silk gold	925333-001
• Smoke gray	925330-001
• Marine blue	925331-001
• Jack black	925328-001
• Snow white	925329-001
• Empress red	925334-001


Before removing the bottom cover, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).
5. Remove the optical drive (see [Optical drive on page 38](#)), if installed.


To remove the bottom cover:

1. Remove the 2 Phillips PM2.5×5.0 screws **(1)** that secure the bottom cover to the computer.

2. Remove the 6 Phillips PM2.5×12.0 screws (2) that secure the bottom cover to the computer.

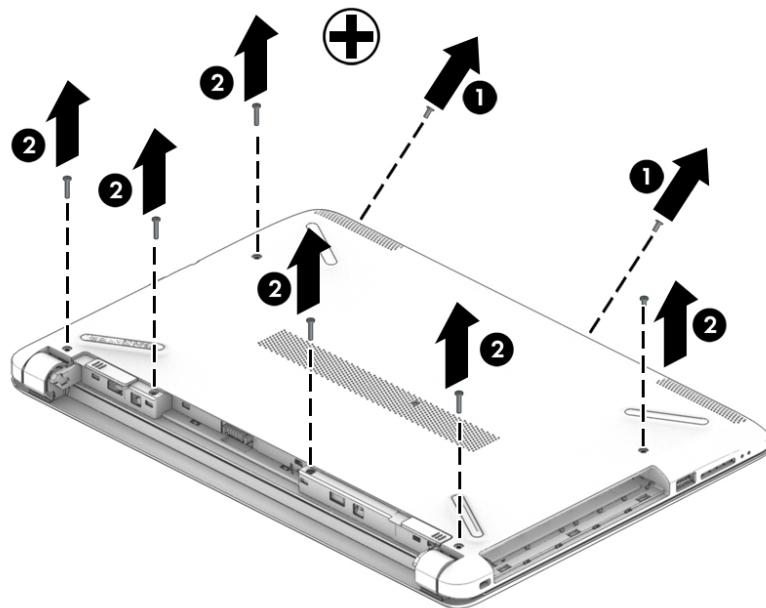

3. Use a plastic, non-marking tool (1) to pry the bottom cover from the computer (2).

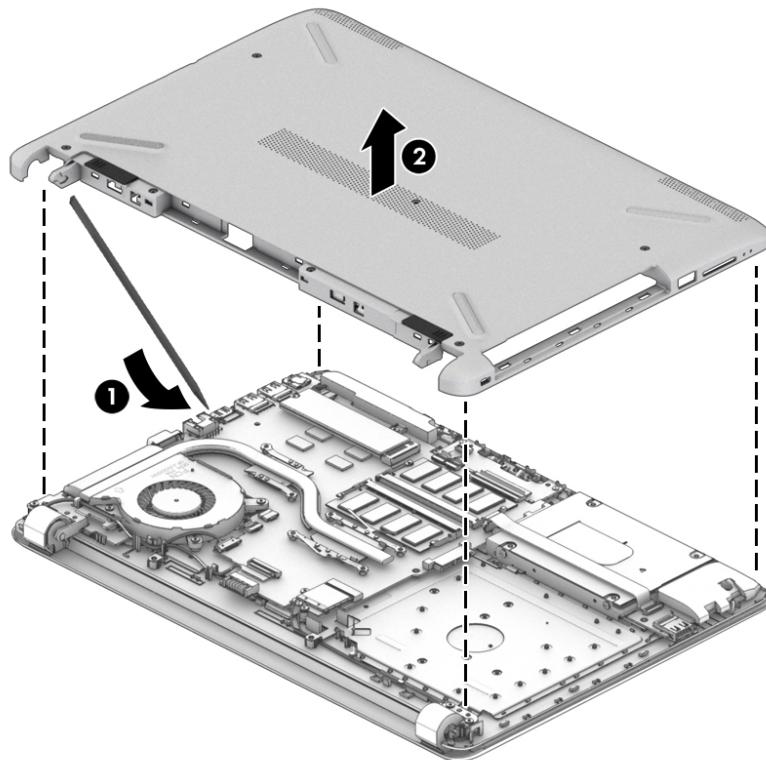

Reverse this procedure to install the bottom cover.

WLAN module

Description	Spare part number
Intel Dual Band Wireless-AC 7265 802.11AC 2x2 WiFi + BT 4.2 Combo Adapter (non-vPro)	901229-855
Realtek RTL8723DE 802.11 bgn 1x1 WiFi + BT 4.2 Combo Adapter	927230-855
Realtek RTL 8188EE 802.11 bgn 1x1 WiFi Adapter	927235-855
Intel Dual Band Wireless-AC 3168 802.11 ac 1x1 WiFi + BT 4.2 Combo Adapter	863934-855

 **CAUTION:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact support.


Before removing the WLAN module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).
5. Remove the optical drive (see [Optical drive on page 38](#)), if installed.
6. Remove the bottom cover (see [Bottom cover on page 45](#)).


To remove the WLAN module:

1. Disconnect the WLAN antenna cables **(1)** from the terminals on the WLAN module.
 **NOTE:** The WLAN antenna cable labeled “1” connects to the WLAN module “Main” terminal labeled “1”. The WLAN antenna cable labeled “2” connects to the WLAN module “Aux” terminal labeled “2” (if applicable).
2. Remove the Phillips PM2.0×3.0 screw **(2)** that secures the WLAN module to the system board. (The WLAN module tilts up.)

- Remove the WLAN module by pulling the module away from the slot at an angle **(3)**.

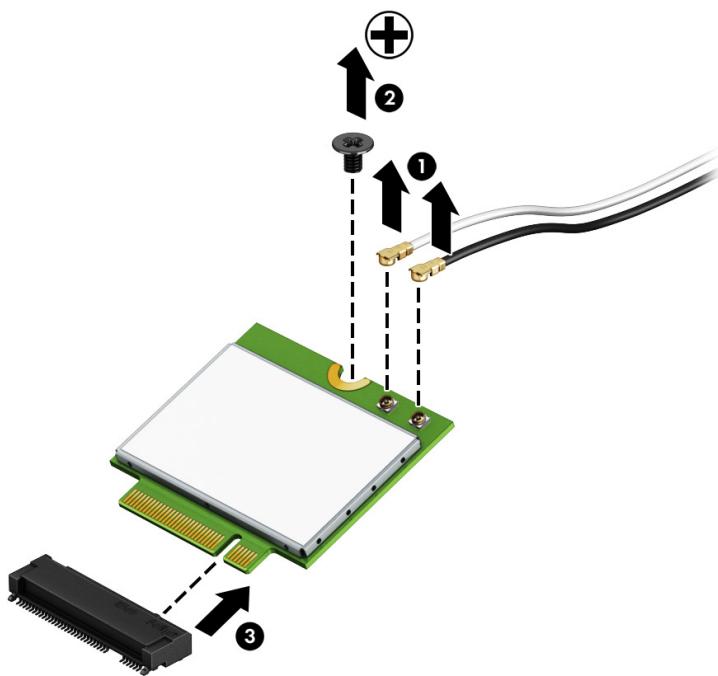

NOTE: If the WLAN antennas are not connected to the terminals on the WLAN module, the protective sleeves must be installed on the antenna connectors, as shown in the following illustration.

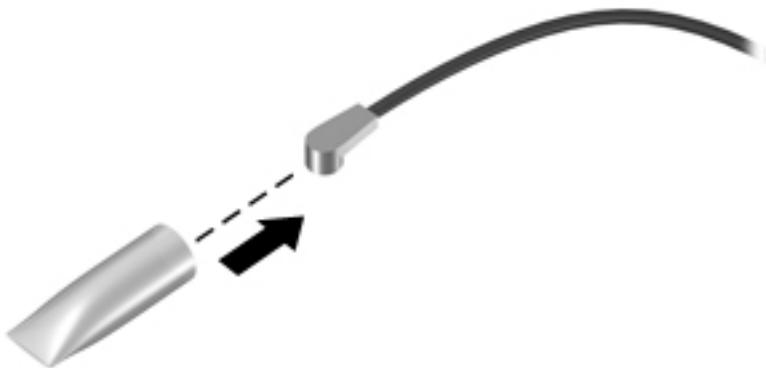

Reverse this procedure to install the WLAN module.

Memory module

Description	Spare part number
Memory module (PC3L-1600)	
For use in models with Intel Pentium and Celeron processors:	
8-GB	693374-005
4-GB	691740-005
2-GB	691739-005
Memory module (PC4-2400)	
For use in models with 6th and 7th generation Intel Core processors:	
8-GB	862398-855
4-GB	862397-855
2-GB	864271-855


Before removing a memory module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).
5. Remove the optical drive (see [Optical drive on page 38](#)), if installed.
6. Remove the bottom cover (see [Bottom cover on page 45](#)).

To remove a memory module:

1. Spread the retaining tabs **(1)** on each side of the memory module slot to release the memory module. (The memory module tilts up.)

- 2.** Remove the memory module **(2)** by pulling it away from the slot at an angle.

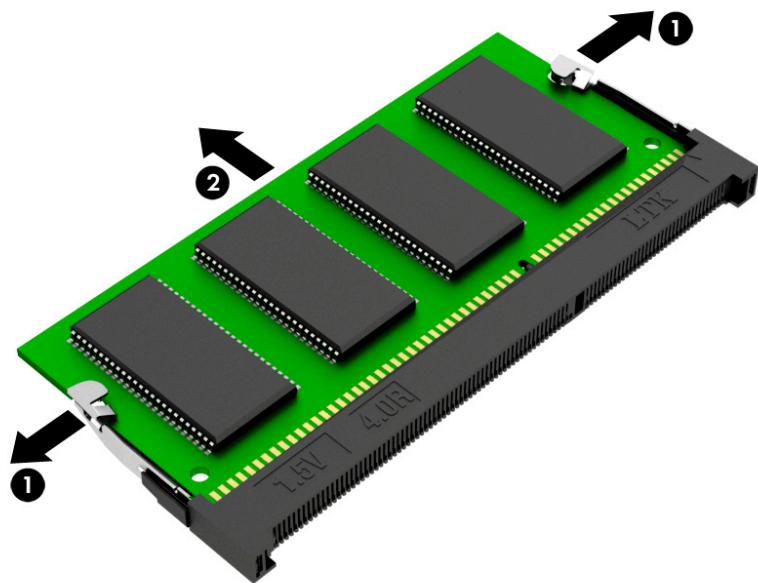

Reverse this procedure to install a memory module.

Hard drive

Three different SKUs related to storage are offered:

- Hard drive only
- M.2 solid-state drive only
- Hard drive and M.2 solid-state drive

For hard drive only models, install the hard drive into hard drive bay. For solid-state drive only models, install the solid-state drive into the solid-state drive adapter bracket, and then into the hard drive bay. For hard drive and solid-state drive models, install the hard drive into the hard drive bay and install the solid-state drive into the separate solid-state drive connector on the system board. System boards are offered with an additional M.2 solid-state drive connector for hard drive and solid-state drive models.



NOTE: The hard drive spare part kit does not include the hard drive bracket.

Description	Spare part number
Hard drives:	
1-TB, 5400-rpm	778192-005
500-GB, 5400-rpm	778186-005
Hard drive bracket	925354-001


Before removing the hard drive, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).
5. Remove the optical drive (see [Optical drive on page 38](#)), if installed.
6. Remove the bottom cover (see [Bottom cover on page 45](#)).

To remove the hard drive:


1. Remove the Phillips PM2.5×3.5 screw **(1)** that secures the hard drive assembly to the computer.

- 2.** Pull the hard drive assembly away from connector **(2)**, and the remove the hard drive assembly from the computer **(3)**.

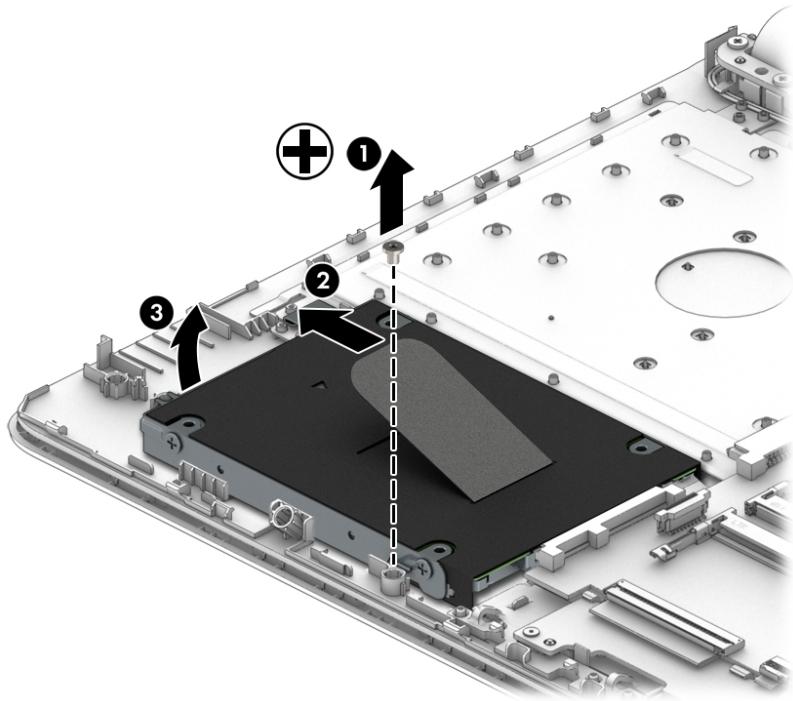

- 3.** To remove the hard drive bracket from the hard drive, remove the four Phillips PM3.0×3.0 screws **(1)** that secure the bracket to the hard drive.

4. Remove the hard drive bracket from the hard drive (2).

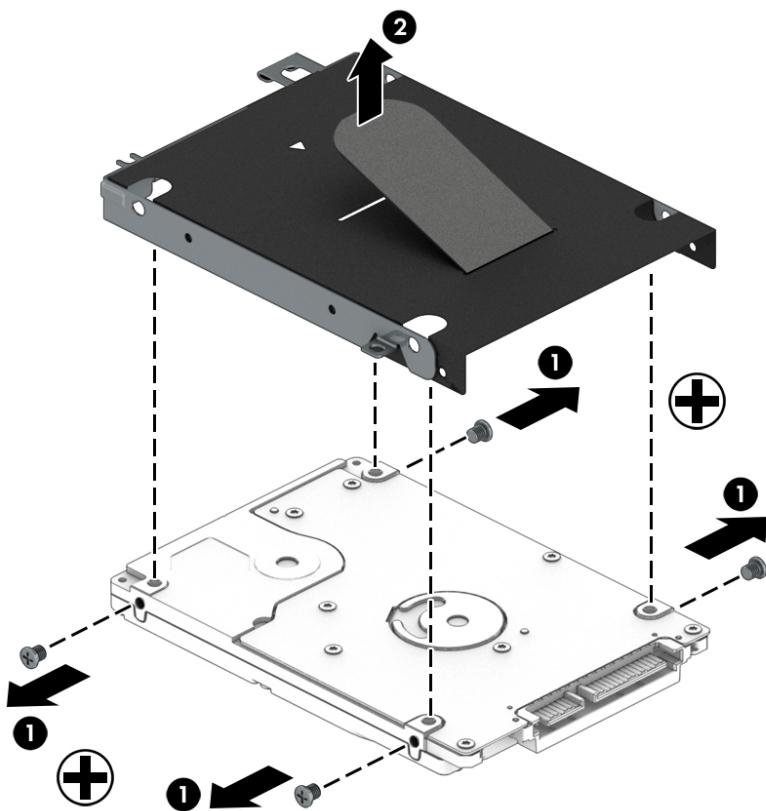

Reverse this procedure to reassemble and install the hard drive.

M.2 solid-state drive adapter bracket

Three different SKUs related to storage are offered:

- Hard drive only
- M.2 solid-state drive only
- Hard drive and M.2 solid-state drive

For hard drive only models, install the hard drive into hard drive bay. For solid-state drive only models, install the solid-state drive into the solid-state drive adapter bracket, and then into the hard drive bay. For hard drive and solid-state drive models, install the hard drive into the hard drive bay and install the solid-state drive into the separate solid-state drive connector on the system board. System boards are offered with an additional M.2 solid-state drive connector for hard drive and solid-state drive models.


Description	Spare part number
Solid-state drive adapter bracket	925355-001

Before removing the solid-state drive adapter bracket, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).
5. Remove the optical drive (see [Optical drive on page 38](#)), if installed.
6. Remove the bottom cover (see [Bottom cover on page 45](#)).

To remove the solid-state drive adapter bracket:

1. Remove the two Phillips PM2.0×3.0 screws **(1)** that secure the bracket to the computer.
2. Pull the bracket away from the connector **(2)**.
3. Lift the bracket out of the computer **(3)**

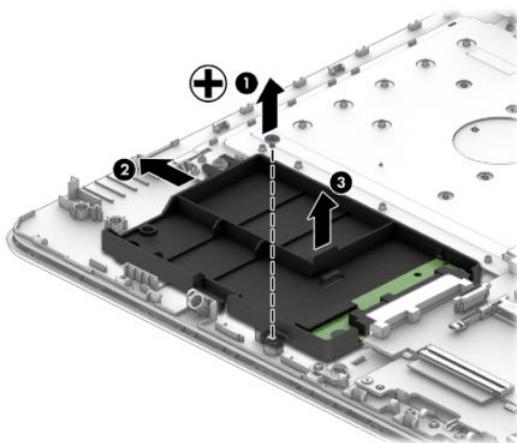

Reverse this procedure to reassemble and install the solid-state drive adapter bracket.

Solid-state drive (SSD)

Description	Spare part number
512 GB solid-state drive	763008-015
256 GB solid-state drive	865902-011
128 GB solid-state drive	827560-040
Mylar for use with solid-state drives	930980-001


Before removing the solid-state drive, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).
5. Remove the optical drive (see [Optical drive on page 38](#)), if installed.
6. Remove the bottom cover (see [Bottom cover on page 45](#)).

Remove the solid-state drive:

1. Remove the Phillips PM2.0×2.0 screw **(1)** that secures the drive to the system board.
2. Remove the drive **(2)** by pulling it away from the connector.

 **NOTE:** Solid-state drives are designed with notches to prevent incorrect insertion.

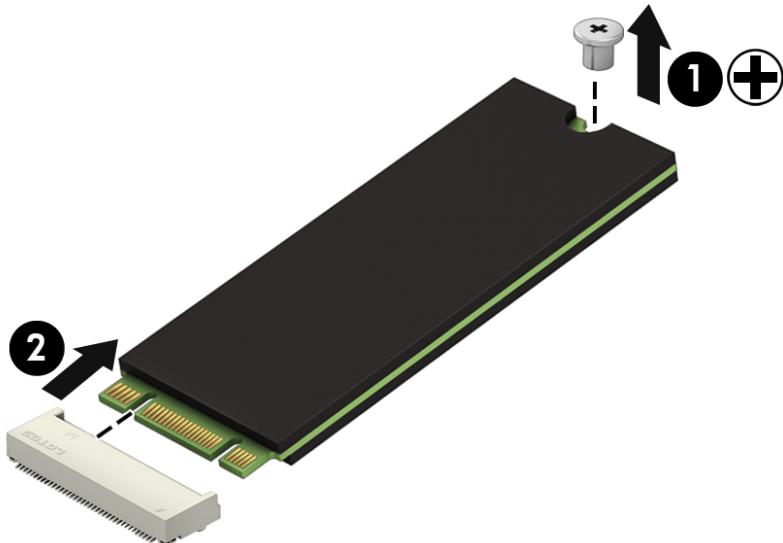

Reverse this procedure to reassemble and install the solid-state drive.

Fan

Description	Spare part number
Fan	925352-001

 **NOTE:** To properly ventilate the computer, allow at least **7.6 cm** (3.0 in) of clearance on the left side of the computer. The computer uses an electric fan for ventilation. The fan is controlled by a temperature sensor and is designed to turn on automatically when high temperature conditions exist. These conditions are affected by high external temperatures, system power consumption, power management/battery conservation configurations, battery fast charging, and software requirements. Exhaust air is displaced through the ventilation grill located on the left side of the computer.


Before removing the fan/heat sink assembly, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).
5. Remove the optical drive (see [Optical drive on page 38](#)), if installed.
6. Remove the bottom cover (see [Bottom cover on page 45](#)).

To remove the fan:

1. Remove the three Phillips PM2.0×5.0 screws **(1)** that secure the fan to the computer.
2. Disconnect the fan cable **(2)** from the system board.

3. Remove the fan from the computer **(3)**.

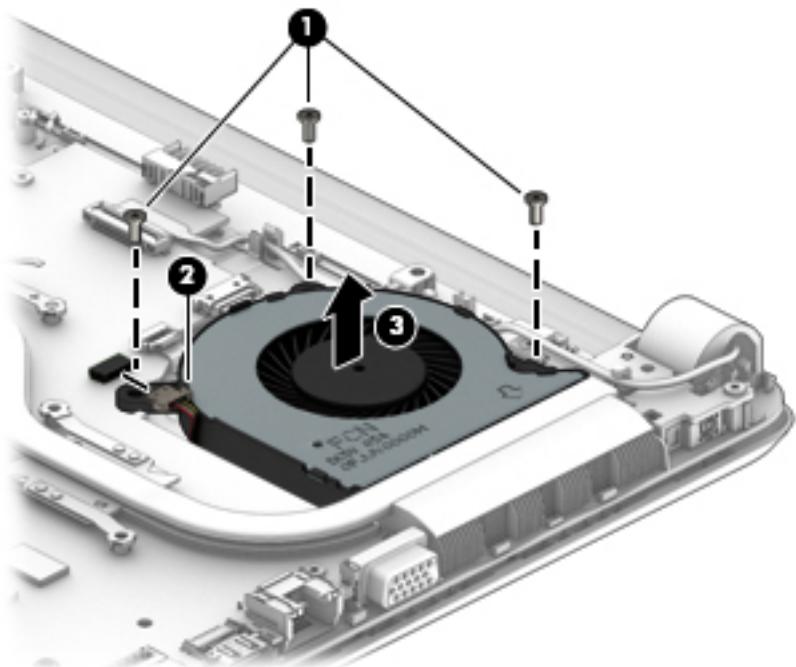

Reverse this procedure to install the fan.

TouchPad button board


Description	Spare part number
TouchPad button board	925365-001
TouchPad button board cable	925344-001
TouchPad cable	925346-001

Before removing the TouchPad button board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).
5. Remove the optical drive (see [Optical drive on page 38](#)), if installed.
6. Remove the bottom cover (see [Bottom cover on page 45](#)).

To remove the TouchPad button board:

1. Disconnect the cable from the TouchPad button board (1).
2. Remove the two Phillips PM2.0×3.0 screws (2) that secure the TouchPad button board to the computer.
3. Lift the bottom of the board upward, and then remove it from the computer (3).

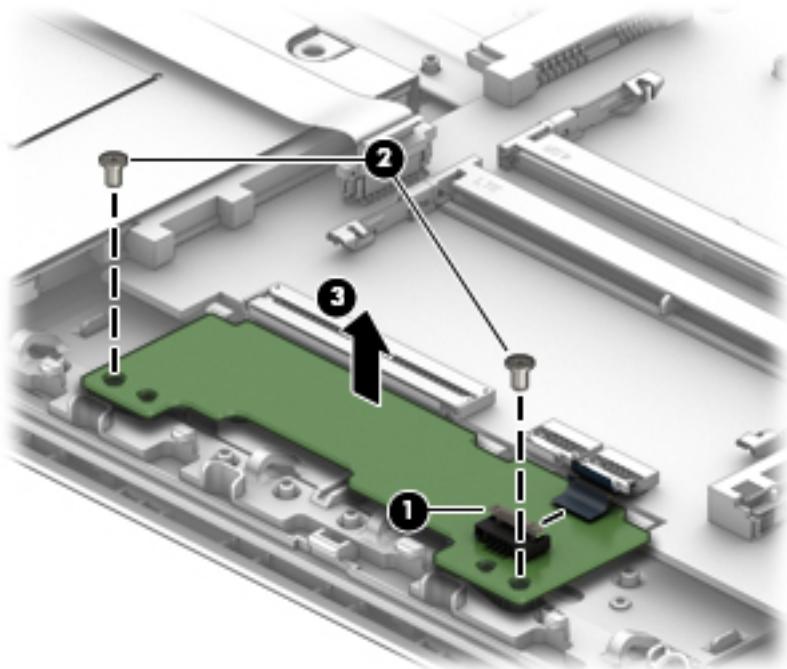

Reverse this procedure to install the TouchPad button board.

Heat sink assembly



NOTE: The heat sink assembly spare part kit includes replacement thermal materials.

Description	Spare part number
Heat sink for use in models with UMA graphics and Intel Pentium or Celeron processors	925347-001
Heat sink for use in models with UMA graphics memory and Intel Core processors	925348-001
Heat sink for use in models with discrete graphics memory	925351-001



NOTE: To properly ventilate the computer, allow at least **7.6 cm** (3.0 in) of clearance on the left side of the computer. The computer uses an electric fan for ventilation. The fan is controlled by a temperature sensor and is designed to turn on automatically when high temperature conditions exist. These conditions are affected by high external temperatures, system power consumption, power management/battery conservation configurations, battery fast charging, and software requirements. Exhaust air is displaced through the ventilation grill located on the left side of the computer.

Before removing the heat sink assembly, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).
5. Remove the optical drive (see [Optical drive on page 38](#)), if installed.
6. Remove the bottom cover (see [Bottom cover on page 45](#)).


To remove the heat sink assembly:

1. Refer to the following heat sink removal image that matches your computer.
2. In the order indicated on the heat sink, remove the screws that secure the heat sink assembly to the system board.
3. Remove the heat sink assembly from the system board.




NOTE: Heat sink appearance may vary.

Figure 6-1 Discrete graphics

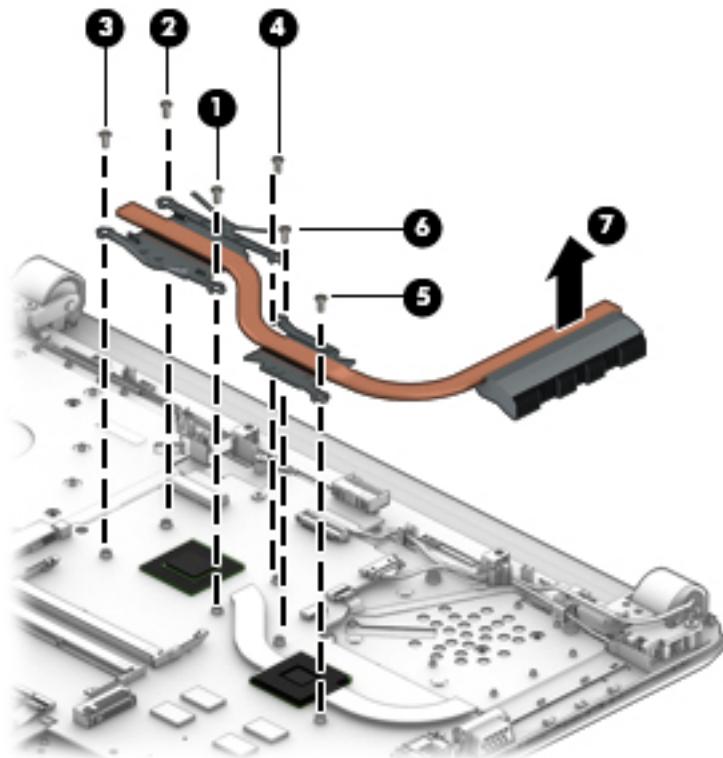


- **Discrete graphics** Thermal paste is used on the processor and associated heat sink area **(1)(2)**, as well as the graphics chip and associated heat sink area **(3)(4)**.

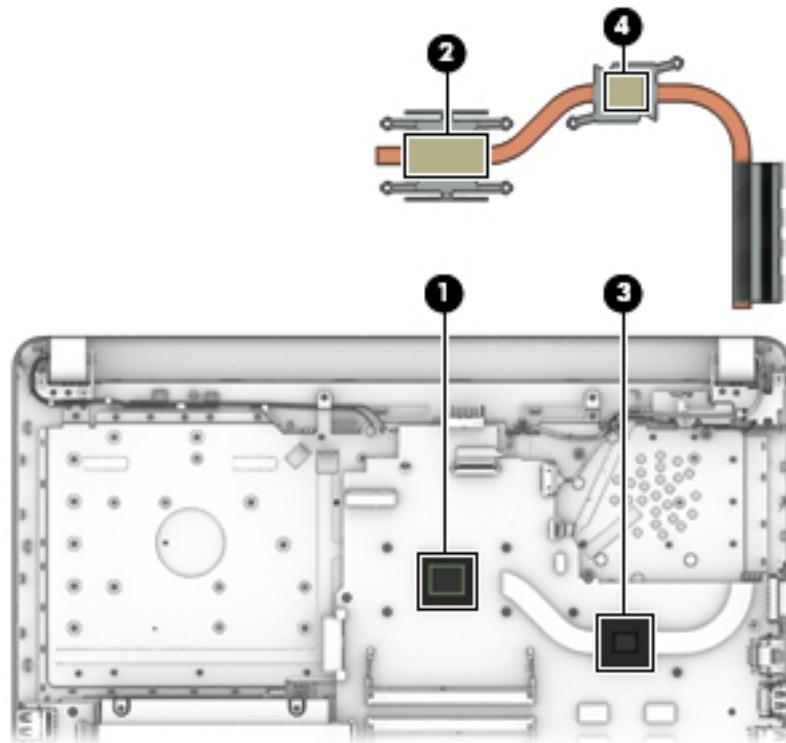


4.

Figure 6-2 UMA graphics

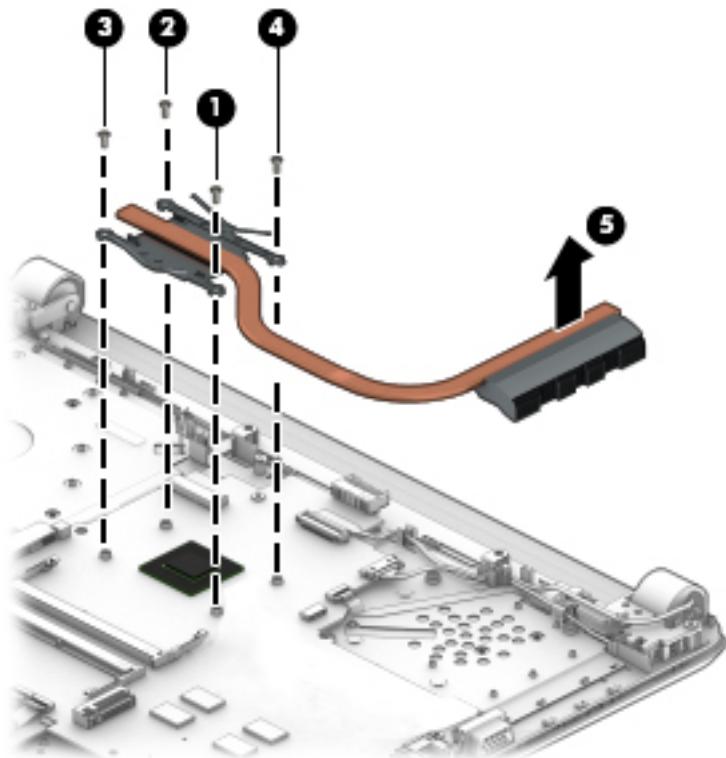


- **UMA graphics** Thermal paste is used on the heat sink (**1**) and the processor (**2**).

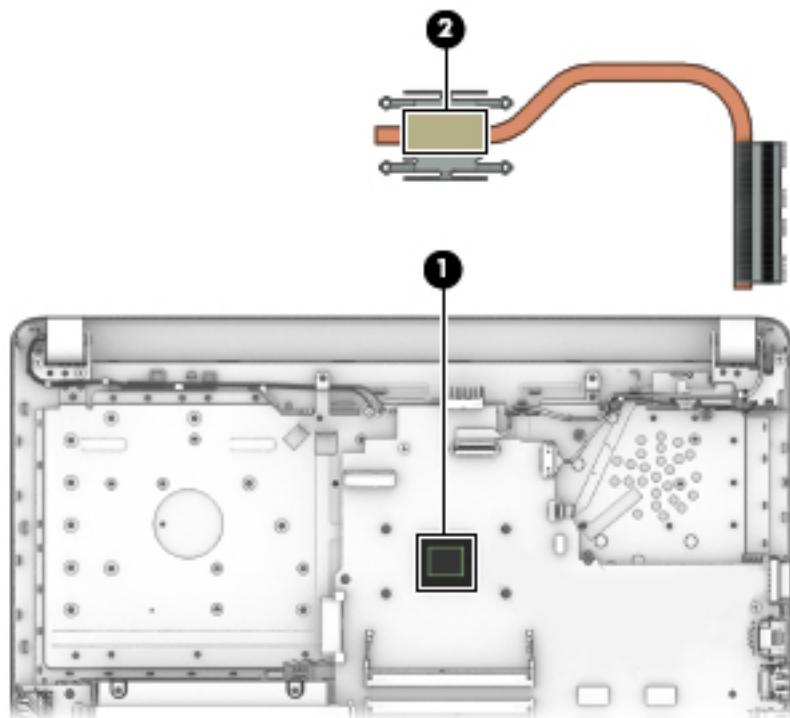


5.

Figure 6-3 UMA graphics (fanless)

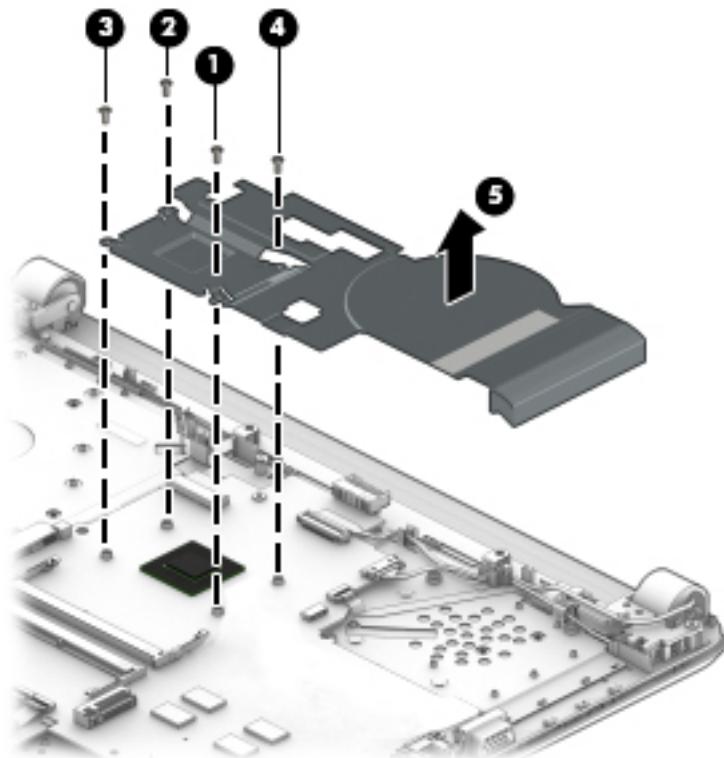

- **UMA graphics (fanless)** Thermal paste is used on the heat sink (1) and the processor (2).

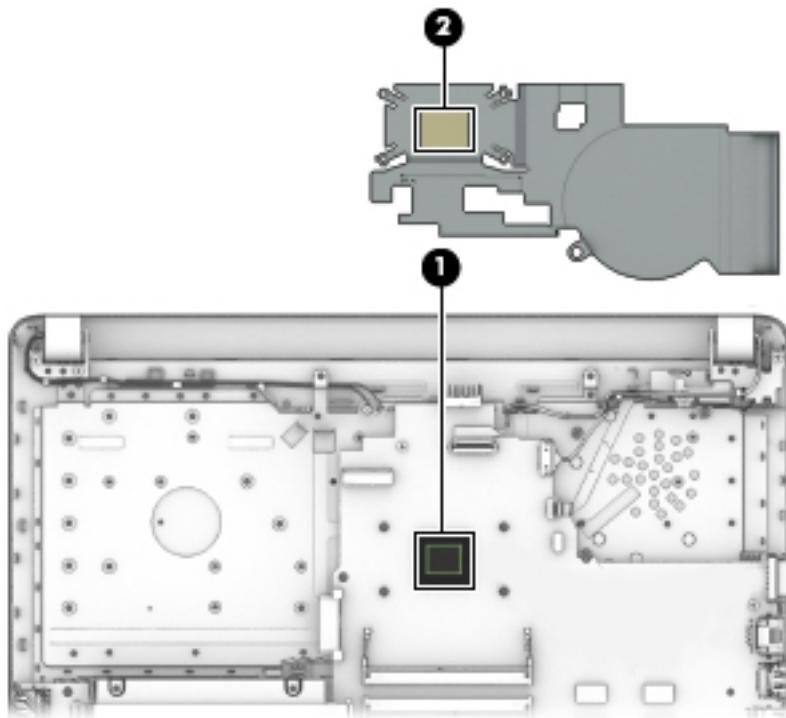

Reverse this procedure to reassemble and install the heat sink assembly.

Speakers

Description	Spare part number
Speakers (includes left and right speakers and cable)	925376-001


Before removing the speakers, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).
5. Remove the optical drive (see [Optical drive on page 38](#)), if installed.
6. Remove the bottom cover (see [Bottom cover on page 45](#)).

To remove the speakers:

1. Disconnect the speaker cable from the system board **(1)**.
2. Remove the cable from its routing path along the bottom of the computer **(2)**.
3. Remove the 2 Phillips PM2.5×3.0 screws **(3)** that secure the speakers to the computer.

4. Lift up and remove the speakers from the computer (4).

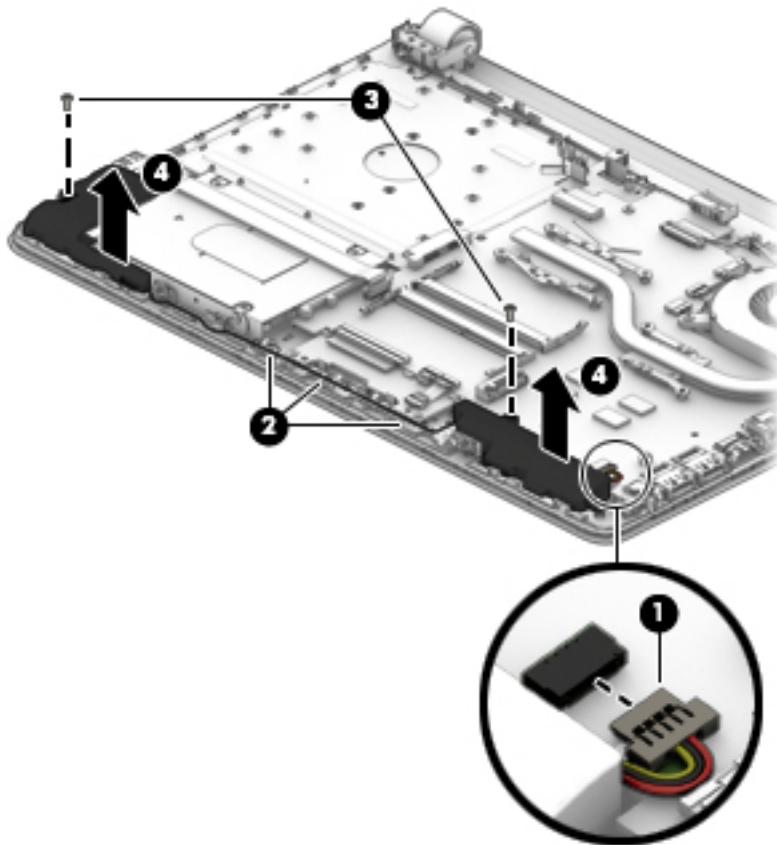

Reverse this procedure to install the speakers.

USB board


Description	Spare part number
USB board for use in models with Intel Pentium or Celeron processors	925363-001
USB board for use in models with Intel Core processors	925364-001
USB board cable	925343-001

Before removing the USB board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).
5. Remove the optical drive (see [Optical drive on page 38](#)), if installed.
6. Remove the bottom cover (see [Bottom cover on page 45](#)).
7. Remove the speakers (see [Speakers on page 63](#)).

To remove the USB board:

1. Disconnect the cable from the connector on the USB board (1).
2. Remove the Phillips PM2.5×5.0 screw (2) that secures the board to the computer.
3. Remove the USB board from the computer (3).

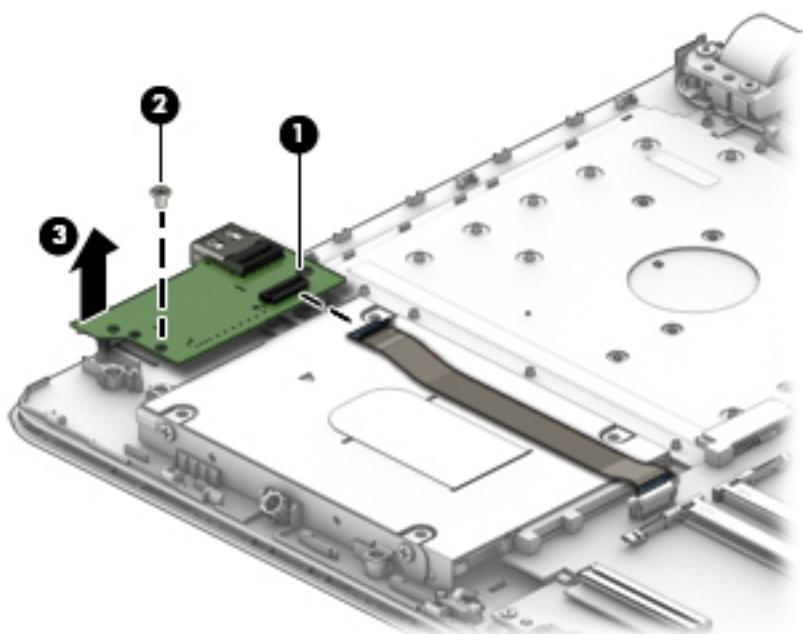

Reverse this procedure to install the USB board.

System board



NOTE: The system board spare part kit includes replacement thermal materials.


Description	Spare part number
System board (includes replacement thermal materials):	
All system boards use the following part numbers:	
xxxxxx-001: Non-Windows operating systems	
xxxxxx-601: Windows 10 operating system	
For use in models with discrete graphics memory:	
• Intel Core i7-7500U processor and 4 GB of discrete graphics memory	925428-xx1
• Intel Core i7-7500U processor and 2 GB of discrete graphics memory	925429-xx1
• Intel Core i5-8250U processor and 2 GB of discrete graphics memory	941656-xx1
• Intel Core i5-7200U processor and 4 GB of discrete graphics memory	925430-xx1
• Intel Core i5-7200U processor and 2 GB of discrete graphics memory	925431-xx1
• Intel Core i3-6006U processor and 2 GB of discrete graphics memory	925432-xx1
For use in models with UMA graphics memory:	
• Intel Core i5-7200U processor	925422-xx1
• Intel Core i3-6006U processor	925423-xx1
• Intel Pentium N3710 processor	925424-xx1
• Intel Celeron N3060 processor	925425-xx1
• Intel Celeron N3060 processor with 64 GB of eMMC memory	925427-xx1
• Intel Celeron N3060 processor with 32 GB of eMMC memory	925426-xx1

Before removing the system board, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).
5. Remove the optical drive (see [Optical drive on page 38](#)), if installed.
6. Remove the bottom cover (see [Bottom cover on page 45](#)).
7. Remove the WLAN module (see [WLAN module on page 47](#)).
8. Remove the memory module (see [Memory module on page 49](#)).
9. Remove the solid-state drive (see [Solid-state drive \(SSD\) on page 55](#)).

To remove the system board:

1. Position the computer upright, and then disconnect the following cables from the system board:
 - (1): USB board cable
 - (2): Display cable
 - (3): Power connector cable
 - (4): Power button board cable
 - (5): TouchPad cable
 - (6): TouchPad button board cable
 - (7): Keyboard cable

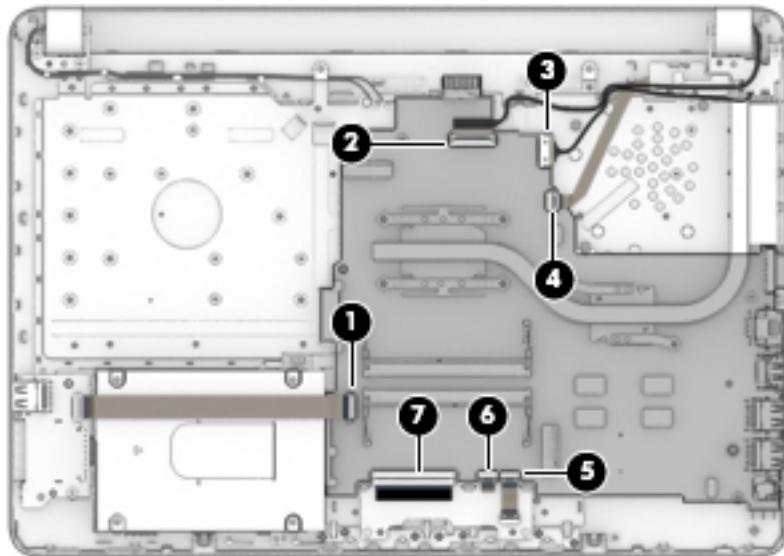

2. Remove the three Phillips PM2.5×3.5 screws (1) that secure the system board to the computer.
3. Rotate the side of the board upward (2), and then lift the system board out of the computer (3).

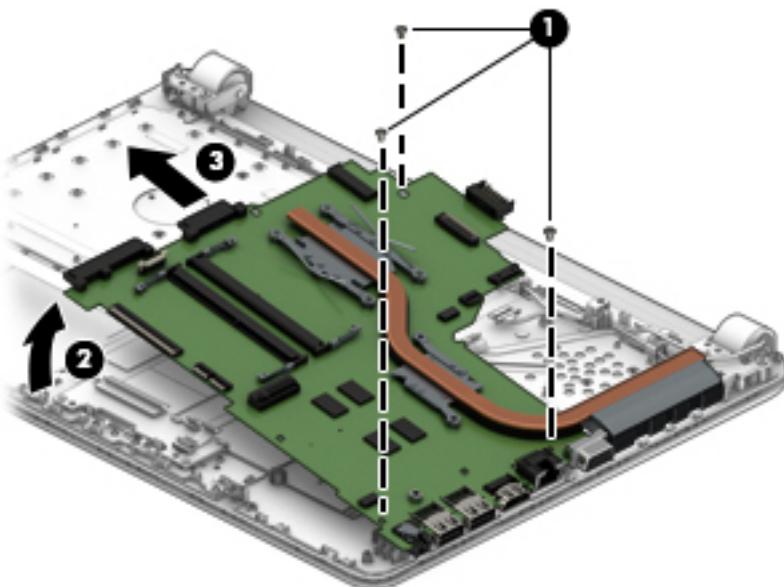

Reverse this procedure to install the system board.

RTC battery


Description	Spare part number
RTC battery	746439-001

Before removing the RTC battery, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).
5. Remove the optical drive (see [Optical drive on page 38](#)), if installed.
6. Remove the bottom cover (see [Bottom cover on page 45](#)).
7. Remove the system board (see [System board on page 66](#)).

To remove the RTC battery:

1. Position the system board upside down.
2. Using a thin tool, disengage the battery from the socket **(1)**, and then remove the battery **(2)**.

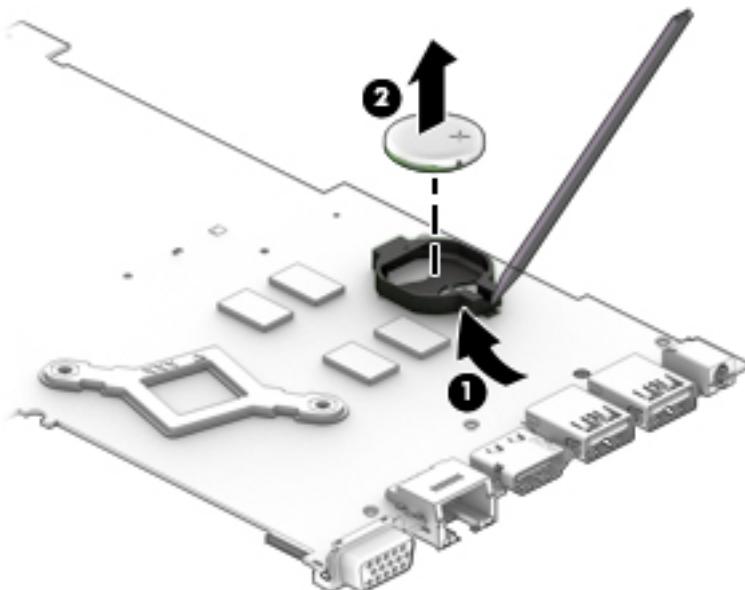

Reverse this procedure to install the RTC battery.

Display assembly


This section describes removing the display assembly and disassembling display subcomponents. You must remove the display from the computer to disassemble certain display subcomponents. You can remove the bezel, camera, and raw display panel without removing the display. See [Display subcomponents \(bezel, panel, camera\) on page 41](#) for more information.

Before removing the display assembly, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).
5. Remove the optical drive (see [Optical drive on page 38](#)), if installed.
6. Remove the bottom cover (see [Bottom cover on page 45](#)).


To remove the display assembly:

1. Disconnect the display panel cable from the system board (1), and then remove the cable from the routing path in the computer (2).
2. Remove the antenna cables from the WLAN module (3), and then remove the cables from their routing path in the computer (4).

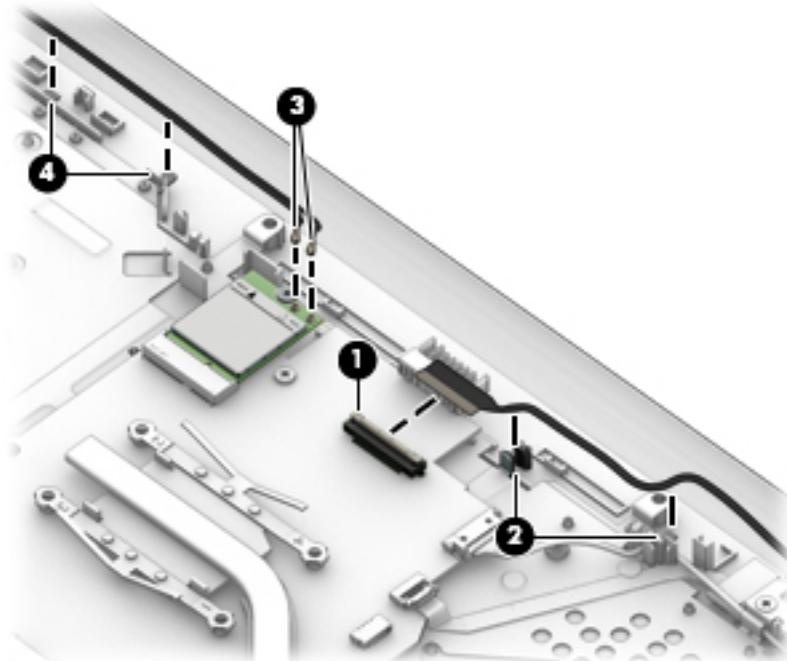

3. Remove the four Phillips PM2.5×5.0 screws (1) (two from each hinge) that secure the display assembly to the computer.
4. Lift the display to bend the hinges upward (2).

5. Separate the display from the computer (3).

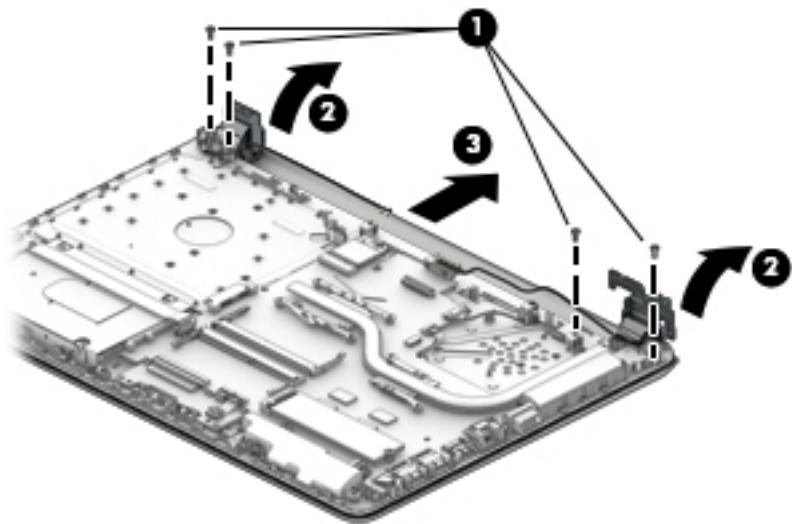

If it is necessary to replace any of the display assembly subcomponents:


1. To remove the display bezel:

- a. Flex the inside of the top edge (1), the left and right edges (2), and the bottom edge (3) of the display bezel until the bezel disengages from the display enclosure.


NOTE: When removing the bezel from the bottom of the display (3), be careful not to peel the Mylar from the bottom of the display panel.

- b. Remove the display bezel (4).

NOTE: The display will not be connected to the computer as shown in the following image.

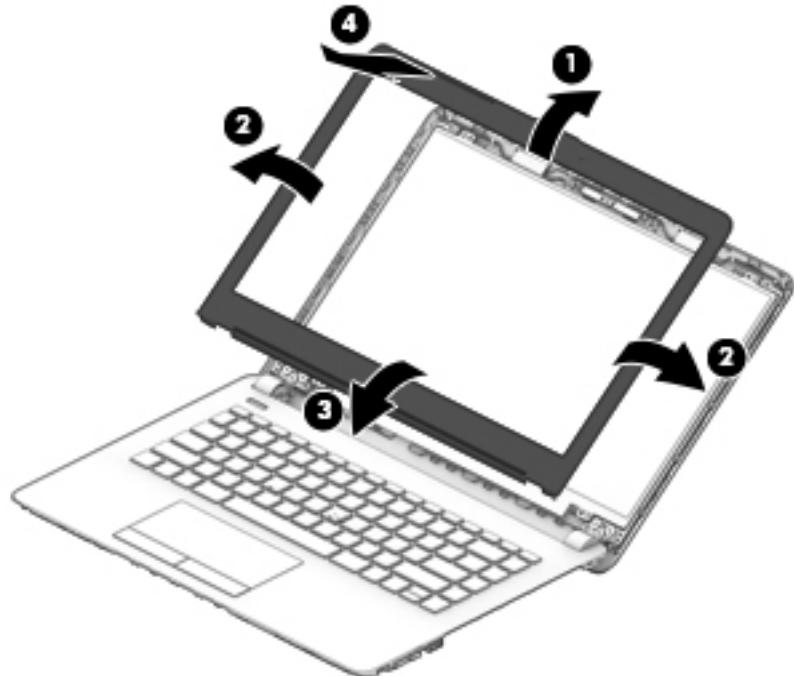

- 2.** To remove the camera/microphone module:
 - a. Position the display assembly with the top edge toward you.
 - b. Pry up to disengage the camera/microphone module from the adhesive that secures it to the display **(1)**.
 - c. Disconnect the cable **(2)** from the module.

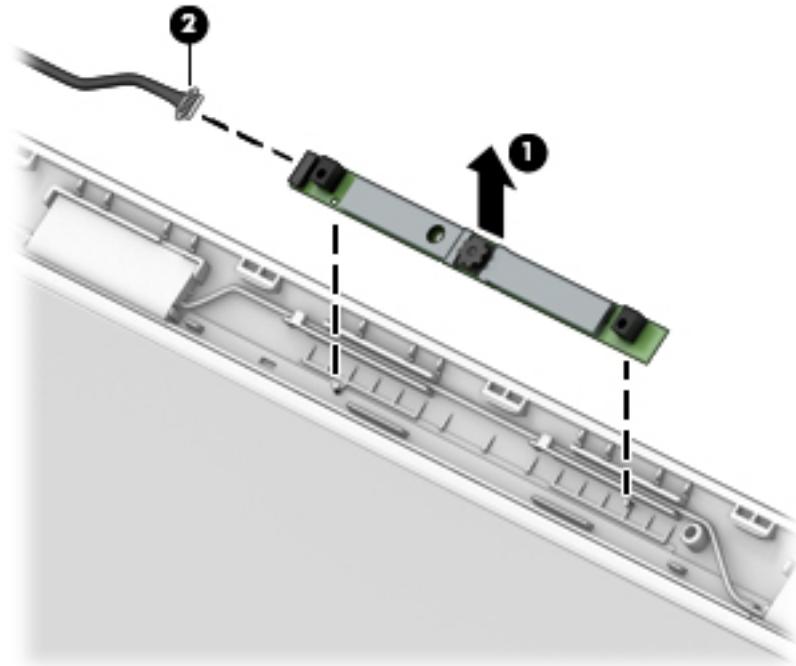


- 3.** To remove the display panel:
 - a. Remove the four Phillips PM2.0×3.0 screws **(1)** that secure the display panel to the top of the enclosure.

- b.** Rotate the display panel onto the keyboard **(2)** to gain access to the display cable connection on the back of the panel.




NOTE: The display will not be connected to the computer as shown in the following image.

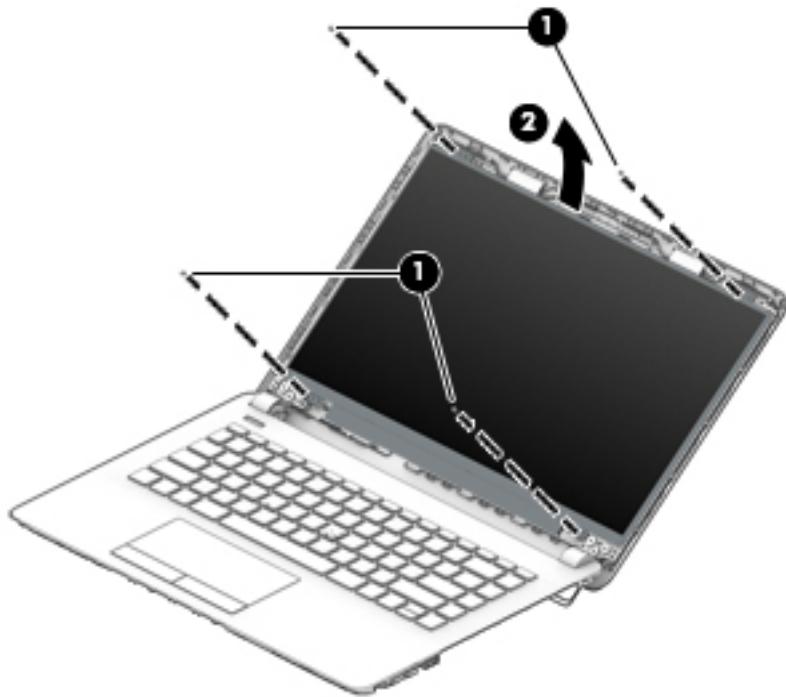

- c.** On the back of the display panel, release the adhesive strip that secures the display panel cable to the display panel, and then disconnect the cable **(1)**.

- d. Remove the display panel from the computer **(2)**.


 **NOTE:** The display will not be connected to the computer as shown in the following image.

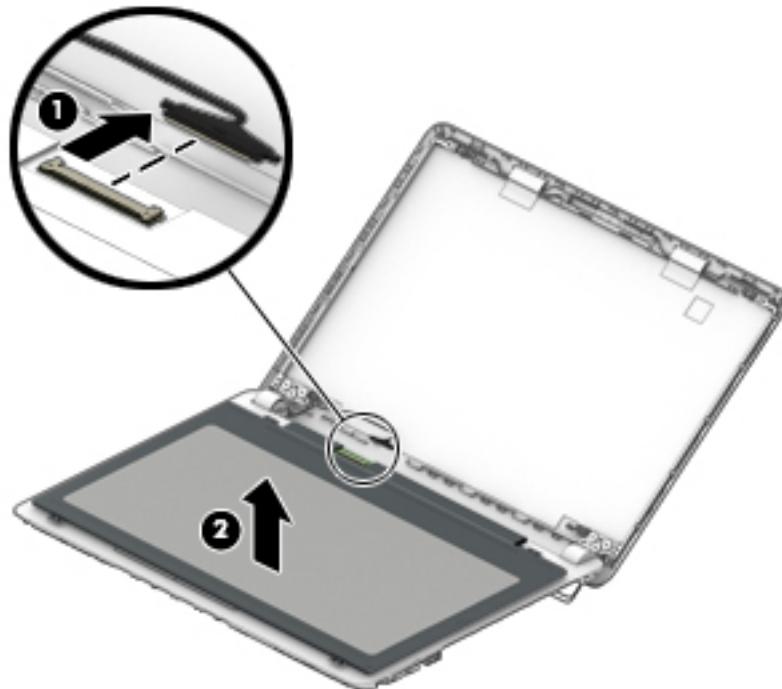


4. To remove the display hinges:

- a. Pull either side of each hinge cap to disengage it from the enclosure **(1)**.

- b. Remove the caps from the hinges (2).

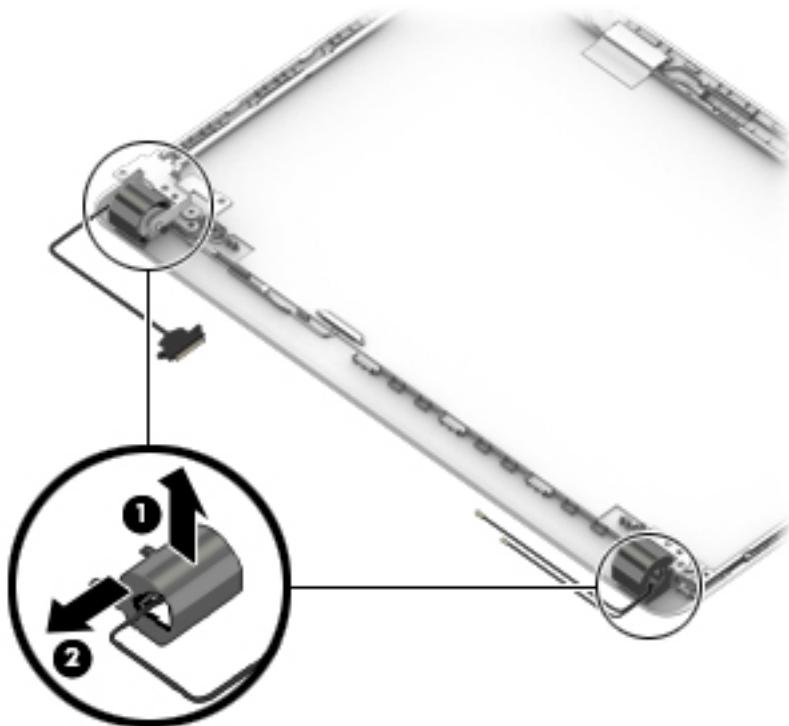


- c. Remove the two Phillips PM2.0×3.0 screws (1), and then lift the top display hinge (2) off the display.

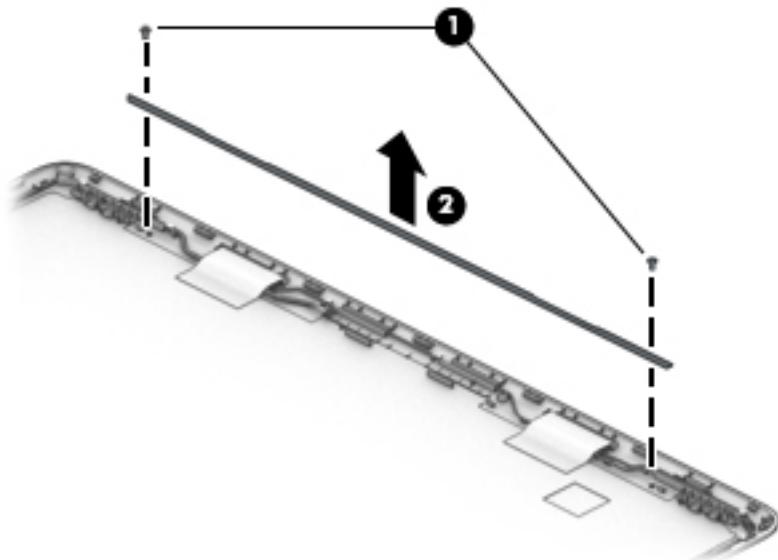


- d. Remove the three broadhead Phillips PM2.5×3.0 screws (1) and the PM2.0×3.0 screw (2) that secure each hinge to the display enclosure.


e. Remove the display hinges (3).

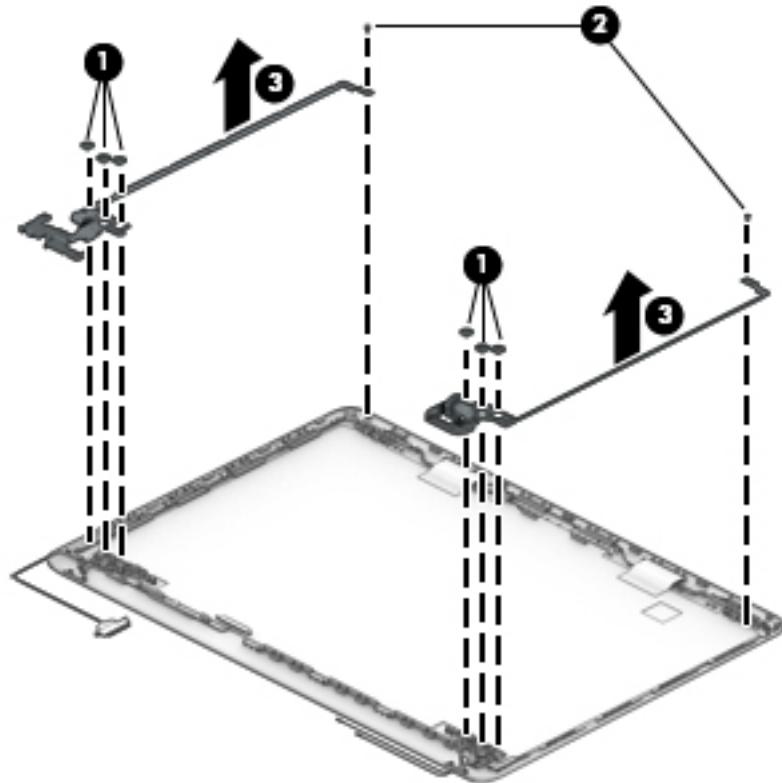


5. To remove the wireless antennas and cables, release the cables from the clips built into the side of the display enclosure (1), and then remove the antennas and cables (2)(3).

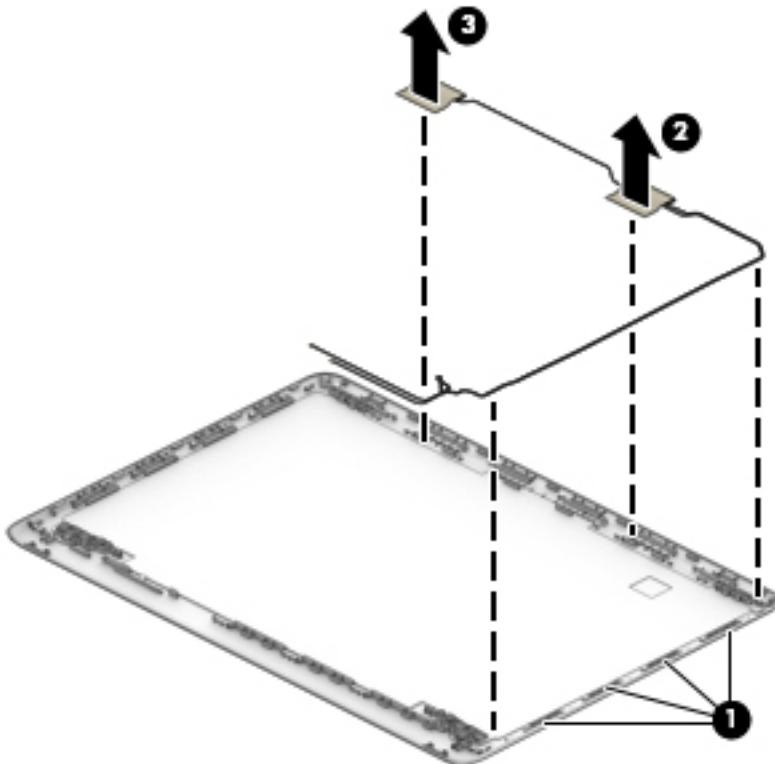

6. To remove the display/camera cable, remove the cable from the clips built into the side of the display enclosure **(1)**, and then remove the cable from the display enclosure **(2)**.

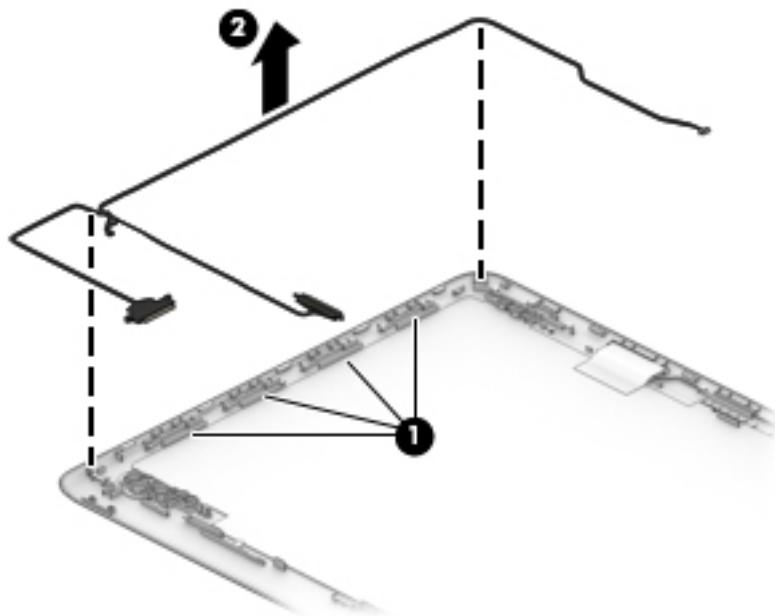

- 7.** Use the following image to determine proper cable routing around the hinges.

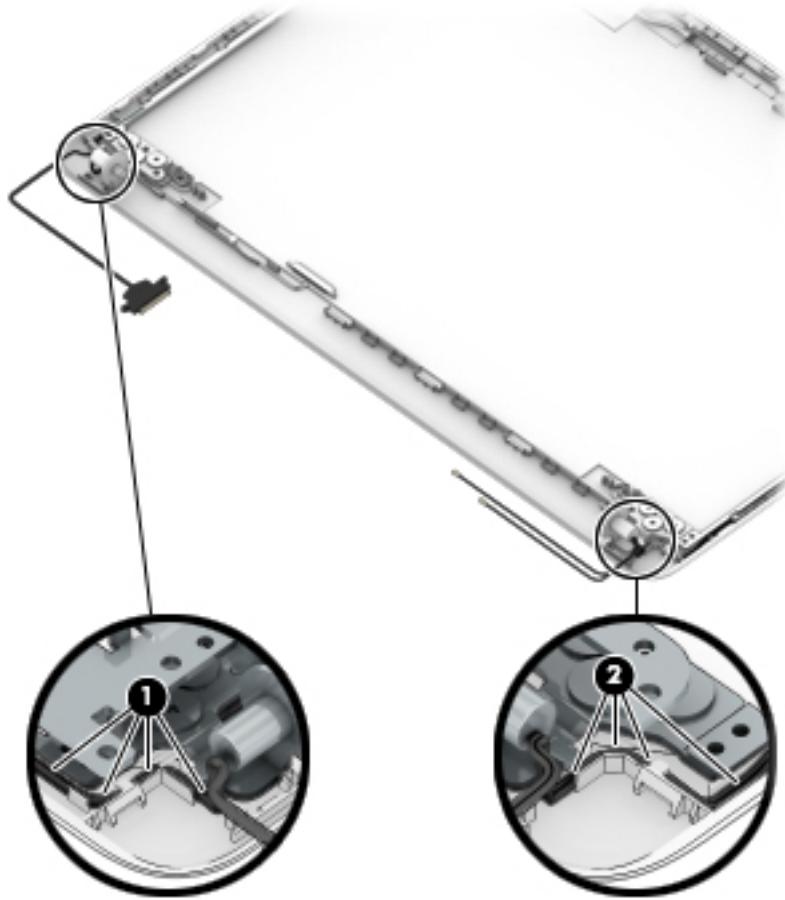

- 8.** If replacing the display enclosure, be sure that the subcomponents (including the camera/microphone module, the antenna receivers, and all associated cables and hardware) are transferred to the new enclosure.

Reverse this procedure to reassemble and install the display assembly.

Power connector cable


Description	Spare part number
Power connector cable	938292-001

Before removing the power connector cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).
5. Remove the optical drive (see [Optical drive on page 38](#)), if installed.
6. Remove the bottom cover (see [Bottom cover on page 45](#)).
7. Remove the display (see [Display assembly on page 69](#)).

To remove the power connector cable:

1. Disconnect the power connector cable from the system board (1).
2. Use a tool to disengage the connector from the computer (2), and then remove the power connector cable (3).

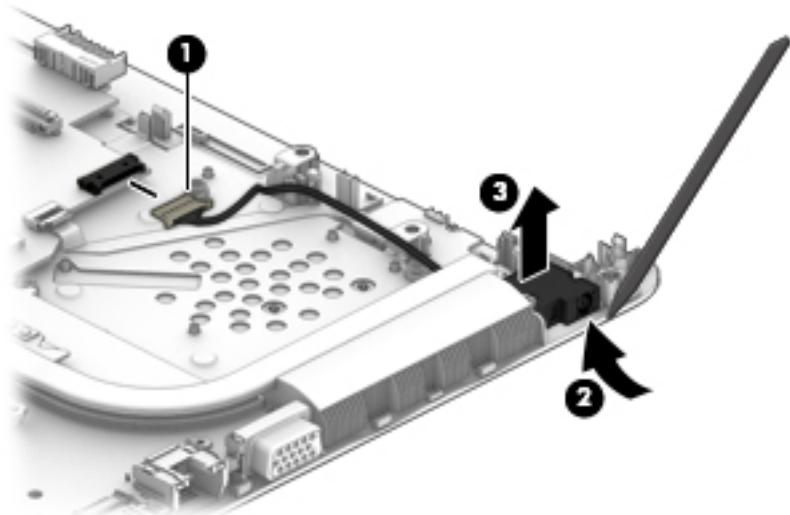

Reverse this procedure to install the power connector cable.

Power button board


Description	Spare part number
Power button board	925366-001
Power button board cable	925345-001

Before removing the power button board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 36](#)).
5. Remove the optical drive (see [Optical drive on page 38](#)), if installed.
6. Remove the bottom cover (see [Bottom cover on page 45](#)).
7. Remove the display (see [Display assembly on page 69](#)).

To remove the power button board:

1. Remove the Phillips PM2.0×3.0 screw (1) that secures the power button board to the computer.
2. Rotate the bottom of the board upward (2).
3. Disconnect the cable from the power button board (3).
4. Remove the power button board from the computer (4).

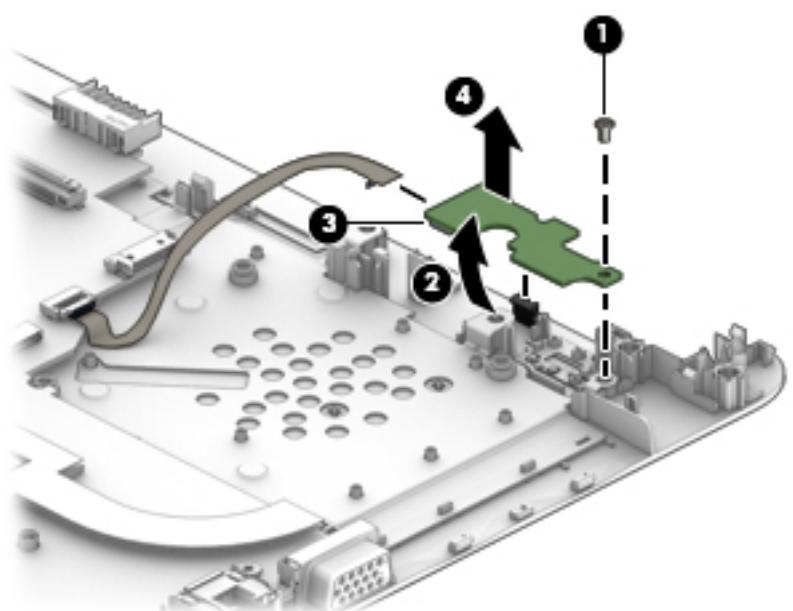

Reverse this procedure to install the power button board and cable.

Top cover/keyboard

The top cover/keyboard spare part remains after all other spare parts have been removed.

The top cover/keyboard spare part kit includes the keyboard and keyboard cable.

In this section, the first table provides the main spare part number for the top cover/keyboard. The second table provides the country codes.



NOTE: All top cover/keyboard spare part kits include TouchPad.

Description	Spare part number
Jet black	925307-xxx
Snow white	925308-xxx
Smoke gray	925309-xxx

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	Israel	-BB1	Slovenia	-BA1
Bulgaria	-261	Italy	-061	South Korea	-AD1
English/French Canada	-DB1	Latin America	-161	Spain	-071
Czech Republic and Slovakia	-FL1	Japan	-291	Switzerland	-BG1
Denmark, Finland, and Norway	-DH1	The Netherlands	-B31	Taiwan	-AB1
France	-051	Portugal	-131	Thailand	-281
Germany	-041	Romania	-271	Turkey	-141
Greece	-151	Russia	-251	United Kingdom	-031
Hungary	-211	Saudi Arabia	-171	United States	-001

7 Using Setup Utility (BIOS)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** To start Setup Utility on convertible computers, your computer must be in notebook mode and you must use the keyboard attached to your notebook.

Starting Setup Utility (BIOS)

 **CAUTION:** Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

- ▲ Turn on or restart the computer, quickly press **esc**, and then press **f10**.

Updating Setup Utility (BIOS)

Updated versions of Setup Utility (BIOS) may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Setup Utility (BIOS), first determine the BIOS version on your computer.

To reveal the BIOS version information (also known as *ROM date* and *System BIOS*), use one of these options.

- HP Support Assistant
 1. Type **support** in the taskbar search box, and then select the **HP Support Assistant** app.
– or –
Click the question mark icon in the taskbar.
 2. Select **My PC**, and then select **Specifications**.
- Setup Utility (BIOS)
 1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 81](#)).
 2. Select **Main**, select **System Information**, and then make note of the BIOS version.
 3. Select **Exit**, select **No**, and then follow the on-screen instructions.

To check for later BIOS versions, see [Downloading a BIOS update on page 82](#).

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

- Do not disconnect power from the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

 **NOTE:** If your computer is connected to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

1. Type **support** in the taskbar search box, and then select the **HP Support Assistant** app.

– or –

Click the question mark icon in the taskbar.

2. Click **Updates**, and then click **Check for updates and messages**.

3. Follow the on-screen instructions.

4. At the download area, follow these steps:

- a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS version, make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
- b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

BIOS installation procedures vary. Follow any instructions that appear on the screen after the download is complete. If no instructions appear, follow these steps:

1. Type **file** in the taskbar search box, and then select **File Explorer**.
 2. Click your hard drive designation. The hard drive designation is typically Local Disk (C:).
 3. Using the hard drive path you recorded earlier, open the folder that contains the update.
 4. Double-click the file that has an .exe extension (for example, *filename.exe*).
- The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

8 Backing up, restoring, and recovering

This chapter provides information about the following processes. The information in the chapter is standard procedure for most products.

- Creating recovery media and backups
- Restoring and recovering your system

For additional information, refer to the HP Support Assistant app.

- ▲ Type **support** in the taskbar search box, and then select the **HP Support Assistant** app.
 - or –
 - Select the question mark icon in the taskbar.

 **IMPORTANT:** If you will be performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.

IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Creating recovery media and backups

The following methods of creating recovery media and backups are available on select products only. Choose the available method according to your computer model.

- Use HP Recovery Manager to create HP Recovery media after you successfully set up the computer. This step creates a backup of the HP Recovery partition on the computer. The backup can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced. For information on creating recovery media, see [Creating HP Recovery media \(select products only\) on page 83](#). For information on the recovery options that are available using the recovery media, see [Using Windows tools on page 84](#).
- Use Windows tools to create system restore points and create backups of personal information.

For more information, see [Recovering using HP Recovery Manager on page 85](#).

 **NOTE:** If storage is 32 GB or less, Microsoft System Restore is disabled by default.

- On select products, use the HP Cloud Recovery Download Tool to create a bootable USB drive for your HP recovery media. Go to <https://support.hp.com/us-en/document/c05115630?openCLC=true>, select your country or region, and follow the on-screen instructions.

Creating HP Recovery media (select products only)

If possible, check for the presence of the Recovery partition and the Windows partition. Right-click the **Start** menu, select **File Explorer**, and then select **This PC**.

- If your computer does not list the Windows partition and the Recovery partition, you can obtain recovery media for your system from support. You can find contact information on the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.

You can use Windows tools to create system restore points and create backups of personal information, see [Using Windows tools on page 84](#).

- If your computer does list the Recovery partition and the Windows partition, you can use HP Recovery Manager to create recovery media after you successfully set up the computer. HP Recovery media can be used to perform system recovery if the hard drive becomes corrupted. System recovery reinstalls the original operating system and software programs that were installed at the factory and then configures the settings for the programs. HP Recovery media can also be used to customize the system or restore the factory image if you replace the hard drive.
 - Only one set of recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
 - HP Recovery Manager examines the computer and determines the required storage capacity for the media that will be required.
 - To create recovery discs, your computer must have an optical drive with DVD writer capability, and you must use only high-quality blank DVD-R, DVD+R, DVD-R DL, or DVD+R DL discs. Do not use rewritable discs such as CD±RW, DVD±RW, double-layer DVD±RW, or BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software. Or, instead, you can use a high-quality blank USB flash drive.
 - If your computer does not include an integrated optical drive with DVD writer capability, but you would like to create DVD recovery media, you can use an external optical drive (purchased separately) to create recovery discs. If you use an external optical drive, it must be connected directly to a USB port on the computer; the drive cannot be connected to a USB port on an external device, such as a USB hub. If you cannot create DVD media yourself, you can obtain recovery discs for your computer from HP. You can find contact information on the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.
 - Be sure that the computer is connected to AC power before you begin creating the recovery media.
 - The creation process can take an hour or more. Do not interrupt the creation process.
 - If necessary, you can exit the program before you have finished creating all of the recovery DVDs. HP Recovery Manager will finish burning the current DVD. The next time you start HP Recovery Manager, you will be prompted to continue.

To create HP Recovery media:



IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

1. Type **recovery** in the taskbar search box, and then select **HP Recovery Manager**.
2. Select **Create recovery media**, and then follow the on-screen instructions.

If you ever need to recover the system, see [Recovering using HP Recovery Manager on page 85](#).

Using Windows tools

You can create recovery media, system restore points, and backups of personal information using Windows tools.



NOTE: If storage is 32 GB or less, Microsoft System Restore is disabled by default.

For more information and steps, see the Get help app.

- ▲ Select the **Start** button, and then select the **Get Help** app.



NOTE: You must be connected to the Internet to access the Get help app.

Restore and recovery

There are several options for recovering your system. Choose the method that best matches your situation and level of expertise:



IMPORTANT: Not all methods are available on all products.

- Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state. For more information see the Get help app.
 - ▲ Select the **Start** button, and then select the **Get Help** app.
- If you need to correct a problem with a preinstalled application or driver, use the Reinstall drivers and/or applications option (select products only) of HP Recovery Manager to reinstall the individual application or driver.
 - ▲ Type `recovery` in the taskbar search box, select **HP Recovery Manager**, select **Reinstall drivers and/or applications**, and then follow the on-screen instructions.
- If you want to recover the Windows partition to original factory content, you can choose the System Recovery option from the HP Recovery partition (select products only) or use the HP Recovery media. For more information, see [Recovering using HP Recovery Manager on page 85](#). If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 83](#).
- On select products, if you want to recover the computer's original factory partition and content, or if you have replaced the hard drive, you can use the Factory Reset option of HP Recovery media. For more information, see [Recovering using HP Recovery Manager on page 85](#).
- On select products, if you want to remove the Recovery partition to reclaim hard drive space, HP Recovery Manager offers the Remove Recovery Partition option.

For more information, see [Removing the HP Recovery partition \(select products only\) on page 87](#).

Recovering using HP Recovery Manager

HP Recovery Manager software allows you to recover the computer to its original factory state by using the HP Recovery media that you either created or that you obtained from HP, or by using the HP Recovery partition (select products only). If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 83](#).

What you need to know before you get started

- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the media provided by the manufacturer.
- **IMPORTANT:** Recovery through HP Recovery Manager should be used as a final attempt to correct computer issues.
- HP Recovery media must be used if the computer hard drive fails. If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 83](#).

- To use the Factory Reset option (select products only), you must use HP Recovery media. If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 83](#).
- If your computer does not allow the creation of HP Recovery media or if the HP Recovery media does not work, you can obtain recovery media for your system from support. You can find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.



IMPORTANT: HP Recovery Manager does not automatically provide backups of your personal data. Before beginning recovery, back up any personal data you want to retain.

Using HP Recovery media, you can choose from one of the following recovery options:



NOTE: Only the options available for your computer display when you start the recovery process.

- System Recovery—Reinstalls the original operating system, and then configures the settings for the programs that were installed at the factory.
- Factory Reset—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

The HP Recovery partition (select products only) allows System Recovery only.

Using the HP Recovery partition (select products only)

The HP Recovery partition allows you to perform a system recovery without the need for recovery discs or a recovery USB flash drive. This type of recovery can be used only if the hard drive is still working.

To start HP Recovery Manager from the HP Recovery partition:



IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps (select products only).

1. Type **recovery** in the taskbar search box, select **HP Recovery Manager**, and then select **Windows Recovery Environment**.

– or –

For computers or tablets with keyboards attached, press **f11** while the computer boots, or press and hold **f11** as you press the power button.

For tablets without keyboards:

- Turn on or restart the tablet, and then quickly hold down the volume up button; then select **f11**.

– or –

- Turn on or restart the tablet, and then quickly hold down the volume down button; then select **f11**.

2. Select **Troubleshoot** from the boot options menu.

3. Select **Recovery Manager**, and then follow the on-screen instructions.

Using HP Recovery media to recover

You can use HP Recovery media to recover the original system. This method can be used if your system does not have an HP Recovery partition or if the hard drive is not working properly.

1. If possible, back up all personal files.
 2. Insert the HP Recovery media, and then restart the computer.
-
-  **NOTE:** If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order on page 87](#).
3. Follow the on-screen instructions.

Changing the computer boot order

If your computer does not restart in HP Recovery Manager, you can change the computer boot order, which is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection to an optical drive or a USB flash drive.

To change the boot order:

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

1. Insert the HP Recovery media.
2. Access the system **Startup** menu.

For computers or tablets with keyboards attached:

▲ Turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.

For tablets without keyboards:

▲ Turn on or restart the tablet, and then quickly hold down the volume up button; then select **f9**.

– or –

Turn on or restart the tablet, and then quickly hold down the volume down button; then select **f9**.

3. Select the optical drive or USB flash drive from which you want to boot.
4. Follow the on-screen instructions.

Removing the HP Recovery partition (select products only)

HP Recovery Manager software allows you to remove the HP Recovery partition to free up hard drive space.

 **IMPORTANT:** After you remove the HP Recovery partition, you will not be able to perform System Recovery or create HP Recovery media from the HP Recovery partition. So before you remove the Recovery partition, create HP Recovery media; see [Creating HP Recovery media \(select products only\) on page 83](#).

 **NOTE:** The Remove Recovery Partition option is only available on products that support this function.

Follow these steps to remove the HP Recovery partition:

1. Type **recovery** in the taskbar search box, and then select **HP Recovery Manager**.
2. Select **Remove Recovery Partition**, and then follow the on-screen instructions.

9 Using HP PC Hardware Diagnostics (UEFI)

HP PC Hardware Diagnostics is a Unified Extensible Firmware Interface (UEFI) that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

When HP PC Hardware Diagnostics (UEFI) detects a failure that requires hardware replacement, a 24-digit Failure ID code is generated. This ID code can then be provided to support to help determine how to correct the problem.

 **NOTE:** To start diagnostics on a convertible computer, your computer must be in notebook mode and you must use the keyboard attached.

To start HP PC Hardware Diagnostics (UEFI), follow these steps:

1. Turn on or restart the computer, and quickly press **esc**.
2. Press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB drive
 **NOTE:** To download the HP PC Hardware Diagnostics (UEFI) tool to a USB drive, see [Downloading HP PC Hardware Diagnostics \(UEFI\) to a USB device on page 89](#).
 - b. Hard drive
 - c. BIOS
3. When the diagnostic tool opens, select the type of diagnostic test you want to run, and then follow the on-screen instructions.

 **NOTE:** If you need to stop a diagnostic test, press **esc**.

Downloading HP PC Hardware Diagnostics (UEFI) to a USB device

 **NOTE:** The HP PC Hardware Diagnostics (UEFI) download instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are offered.

There are two options to download HP PC Hardware Diagnostics to a USB device.

Download the latest UEFI version

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. In the HP PC Hardware Diagnostics section, select the **Download** link, and then select **Run**.

Download any version of UEFI for a specific product

1. Go to <http://www.hp.com/support>.
2. Select **Get software and drivers**.

3. Enter the product name or number.
– or –
Select **Identify now** to let HP automatically detect your product.
4. Select your computer, and then select your operating system.
5. In the **Diagnostic** section, follow the on-screen instructions to select and download the UEFI version you want.

Additional BIOS crisis recovery tool

HP provides a BIOS crisis recovery tool through the HP PC Hardware Diagnostics 3-in-1 USB key. This tool can be used by HP authorized service providers to recover systems that have failed due to a corrupted BIOS. For more information about using the 3-in-1 USB key for BIOS crisis recovery, go to <http://www.hp.com/go/techcenter/pcdiags>. Additional information is included in the web-based training offered by HP University. See the modules that cover HP PC Hardware Diagnostics (UEFI).

10 Specifications

Computer specifications

	Metric	U.S.
Dimensions		
Depth	240.0 mm	9.45 in
Width	340.0 mm	13.39 in
Height	23.7 mm	0.93 in
Weight		
HDD configurations, 3 cell battery	1853 g	4.09 lb
HDD configurations, 4 cell battery	1900 g	4.19 lb
Input power		
Operating voltage and current	19.5 V dc @ 3.33 A – 65 W	
	19.5 V dc @ 2.31 A – 45 W	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft
NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

35.6-cm (14.0-in) display specifications

	Metric	U.S.
Active diagonal size	35.6-cm	14.0-in
Resolution	1366x768 (HD)	1920x1080 (FHD)
	1920x1080 (FHD)	
Surface treatment	BrightView	Anti glare
	Anti glare	
Brightness	220 nits	
Viewing angle	SVA (HD displays)	UWVA (FHD displays)
	UWVA (FHD displays)	
Backlight	WLED	
Graphics adapter	eDP	
Thickness	3.0 mm	

Hard drive specifications

	1-TB*	500-GB*
Dimensions		
Height	7.0 mm or 9.5 mm	7.0 mm
Length	100.4 mm	100.6 mm
Width	69.9 mm	70.1 mm
Weight	107.0 g	92.0 g
Interface type		
	SATA	SATA
Transfer rate		
Synchronous (maximum)	300 MB/sec	300 MB/sec
Security	ATA security	ATA security
Seek times (typical read, including setting)		
Single track	2.0 ms	3 ms
Average (read/write)	12 ms	13 ms
Maximum	22 ms	24 ms
Logical blocks		
	1,953,525,168	1,048,576,000
Disk rotational speed		
	5400 rpm	5400 rpm
Operating temperature		
*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less.		
NOTE: Certain restrictions and exclusions apply. Contact technical support for details.		

M.2 solid-state drive specifications

	128-GB*	256-GB*	512-GB*
Dimensions			
Height	1 mm	1 mm	1 mm
Length	50.8 mm	50.8 mm	50.8 mm
Width	28.9 mm	28.9 mm	28.9 mm
Weight	< 10 g	< 10 g	< 10 g
Interface type			
	SATA-3 (6 Gbps)	SATA-3 (6 Gbps)	SATA-3 (6 Gbps)
Transfer rate			
Sequential Read	Up to 520 MB/s	Up to 540 MB/s	Up to 530 MB/s
Random Read	Up to 60K IOPs	Up to 85K IOPs	Up to 97K IOPs
Sequential Write	Up to 160 MB/s	Up to 280 MB/s	Up to 515 MB/s
Random Write	Up to 34K IOPs	Up to 67K IOPs	Up to 88K IOPs
Ready time, Maximum (to not busy)	1.0 s	1.0 s	1.0 s
Access times			
Logical	0.1 ms	0.1	0.1
Total logical sectors	250,069,680	500,118,192	1,000,215,216
Operating temperature			
Operating	0° to 70°C (32°F to 158°F)	0° to 70°C (32°F to 158°F)	0° to 70°C (32°F to 158°F)
Non-operating	-40° to 95°C (-40°F to 203°F)	-55° to 90°C (-67°F to 194°F)	-40° to 85°C (-40°F to 185°F)
*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less.			
NOTE: Certain restrictions and exclusions apply. Contact technical support for details.			

DVD±RW SuperMulti DL Drive specifications

Component	Value	
Applicable disc	Read: CD-DA, CD+(E)G, CD-MIDI, CD-TEXT, CD-ROM, CD-ROM XA, MIXED MODE CD, CD-I, CD-I Bridge (Photo-CD, Video CD), Multisession CD (Photo-CD, CD-EXTRA, Portfolio, CD-R, CD-RW), CD-R, CD-RW, DVD-ROM (DVD-5, DVD-9, DVD-10, DVD-18), DVD-R, DVD-RW, DVD+R, DVD+RW, DVD-RAM	Write: CD-R and CD-RW DVD+R, DVD+RW, DVD-R, DVD-RW, DVD-RAM
Center hole diameter	1.5 cm (0.59 in)	
Disc diameter		
Standard disc	12 cm (4.72 in)	
Mini disc	8 cm (3.15 in)	
Disc thickness	1.2 mm (0.047 in)	
Track pitch	0.74 µm	
Access time	CD	DVD
Random	< 175 ms	< 230 ms
Full stroke	< 285 ms	< 335 ms
Audio output level	Line-out, 0.7 Vrms	
Cache buffer	2 MB	
Data transfer rate		
24X CD-ROM	3,600 KB/sec	
8X DVD-ROM	10,800 KB/sec	
24X CD-R	3,600 KB/sec	
16X CD-RW	2,400 KB/sec	
8X DVD+R	10,800 KB/sec	
4X DVD+RW	5,400 KB/sec	
8X DVD-R	10,800 KB/sec	
4X DVD-RW	5,400 KB/sec	
2.4X DVD+R(9)	2,700 KB/sec	
5X DVD-RAM	6,750 KB/sec	
Transfer mode	Multiword DMA Mode	
Startup time	< 15 seconds	
Stop time	< 6 seconds	

11 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts ac, or from 220 to 240 volts ac.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries and regions must meet the requirements of the country or region where the computer is used.

Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least **1.5 m** (5.0 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 or 250 V ac, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
India	ISI	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
The Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
The People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
The United Kingdom	ASTA	1
The United States	UL	2

1. The flexible cord must be Type H05VV-F, 3-conductor, 0.75mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V ac) or NEMA 6-15P (15 A, 250 V ac) configuration. CSA or C-UL mark. UL file number must be on each element.

Country/region	Accredited agency	Applicable note number
<p>3. The appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, 3-conductor, 0.75mm² or 1.25mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V ac) configuration.</p> <p>4. The flexible cord must be Type RVV, 3-conductor, 0.75mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.</p> <p>5. The flexible cord must be Type H05VV-F 3X0.75mm² conductor size. KTL logo and individual approval number must be on each element. Corset approval number and logo must be printed on a flag label.</p> <p>6. The flexible cord must be Type HVCTF 3X1.25mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.</p> <p>7. For 127 V ac, the flexible cord must be Type SVT or SJT 3 x 18 AWG, with plug NEMA 5-15P (15 A, 125 V ac), with UL and CSA or C-UL marks. For 240 V ac, the flexible cord must be Type H05VV-F 3X0.75/1.00mm² conductor size, with plug BS 1363/A with BSI or ASTA marks.</p>		

12 Recycling

When a non-rechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP Web site at <http://www.hp.com/recycle>.

Index

A

AC adapter and battery light, identifying 12
action keys
 identifying 17
 using 18
airplane mode key 18
antenna
 illustrated 26
antennas
 removing 75, 76
audio, product description 4, 8
audio-out (headphone)/audio-in (microphone) combo jack, identifying 12

B

backups 83
battery
 illustrated 23
 removing 36
battery cover, identifying 19
battery lock, identifying 19
BIOS
 determining version 81
 downloading an update 82
 starting the Setup Utility 81
 updating 81
Bluetooth label 20
boot order
 changing 87
bottom 20
bottom cover
 illustrated 24
 removing 45
buttons
 left TouchPad 14
 optical drive eject 11
 power 16
 right TouchPad 14

C

cables
 illustrated 28
cables, service considerations 31

camera

 identifying 13
camera light, identifying 13
camera/microphone cable
 illustrated 26
 removing 42, 71, 73

camera/microphone module

 illustrated 25
 removing 42, 71
caps lock light, identifying 15

components

 bottom 19
 display 13
 left side 12
 right side 11

computer major components,
 illustrated 21

computer specifications 91

connector, power 12

connectors, service considerations
 31

D

display assembly

 illustrated 22
 removing 69

display assembly subcomponents

 illustrated 25
 removing 69

display bezel

 illustrated 25
 removing 41, 70

display cable

 illustrated 26
 removing 73

display enclosure

 illustrated 26
 removing 77

display panel

 illustrated 25
 product description 2, 7
 removing 42, 71, 73

display specifications

display subcomponents

 removal 41
 spare part numbers 41
drive light, identifying 11
DVD±RW SuperMulti DL Drive
 specifications 95

E

electrostatic discharge 32

eMMC

 spare part number 22, 27

equipment guidelines 34

esc key, identifying 17

Ethernet, product description 4, 8

external media cards 4, 8

external monitor port
 identifying 12

F

fan

 illustrated 23
 removing 56

fn key, identifying 17

G

graphics, product description 1, 6

grounding guidelines 32

guidelines

 equipment 34
 grounding 32
 packaging 33
 transporting 33
 workstation 33

H

hard drive

 illustrated 22, 27
 precautions 32
 product description 3, 7
 removing 51
 specifications 93

hard drive bracket

 illustrated 22, 27

hard drive brackets

 removing 52

- hard drive connector board
removing 51
- HDMI port
identifying 12
- heat sink assembly
illustrated 23
removing 23, 59
- hinge cover
illustrated 26
- hinges
illustrated 26
removing 42, 71, 73
- HP PC Hardware Diagnostics (UEFI)
using 89
- HP Recovery Manager
correcting boot problems 87
starting 86
- HP Recovery media
creating 83
recovery 86
- HP Recovery partition
recovery 86
removing 87
- I**
- internal card
product description 4, 8
- internal microphones, identifying 13
- J**
- jacks
audio-out (headphone)/audio-in (microphone) 12
network 12
RJ-45 (network) 12
- K**
- keyboard
illustrated 22
product description 5, 8
- keys
action 17
airplane mode 18
esc 17
fn 17
Windows 17
- L**
- labels
Bluetooth 20
- regulatory 20
serial number 20
service 20
wireless certification 20
WLAN 20
- latches
battery release 19
- lights
AC adapter and battery light 12
caps lock 15
drive 11
mute 15
power 11
RJ-45 (network) status 12
- M**
- M.2 solid-state drive
specifications 94
- M.2 solid-state drive adapter bracket
removing 54
- mass storage devices
illustrated 27
precautions 32
- memory card reader, identifying 11
- memory card, identifying 11
- memory module
illustrated 23
product description 2, 7
removing 49
- microphone 3, 8
- minimized image recovery 86
- minimized image, creating 85
- model name 1, 6
- mute light, identifying 15
- N**
- network jack, identifying 12
- O**
- operating system 5, 9
- optical drive
illustrated 23, 27
precautions 32
product description 3, 7
removing 38
specifications 95
- optical drive bezel
illustrated 28
- optical drive bracket
illustrated 28
- optical drive eject button,
identifying 11
- optical drive rear bracket
removing 39
- optical drive, identifying 11
- original system recovery 85
- P**
- packaging guidelines 33
- plastic parts, service
considerations 31
- pointing device 5, 8
- ports
external monitor 12
HDMI 12
product description 4, 8
USB 2.0 11
USB 3.x SuperSpeed 12
- power button board
illustrated 22
removing 79
- power button board cable
illustrated 28
- power button, identifying 16
- power connector cable
illustrated 22
removing 78
- power connector, identifying 12
- power cord
requirements for all countries 97
requirements for specific countries and regions 98
set requirements 97
- power lights, identifying 11
- power requirements 5, 9
- processor
product description 1, 6
- product description
audio 4, 8
display panel 2, 7
Ethernet 4, 8
external media cards 4, 8
graphics 1, 6
hard drive 3, 7
internal card 4, 8
keyboard 5, 8
memory module 2, 7
microphone 3, 8
operating system 5, 9

- optical drive 3, 7
 pointing device 5, 8
 ports 4, 8
 power requirements 5, 9
 processor 1, 6
 product name 1, 6
 security 5, 9
 serviceability 6, 9
 video 3, 8
 wireless 4, 8
- product name 1, 6
 product name and number,
 computer 20
- R**
- recover
 options 85
 recovery
 discs 84, 86
 HP Recovery Manager 85
 media 86
 starting 86
 supported discs 84
 system 85
 USB flash drive 86
 using HP Recovery media 84
 recovery media
 creating 83
 creating using HP Recovery
 Manager 84
 recovery partition
 removing 87
 regulatory information
 regulatory label 20
 wireless certification labels 20
 removal/replacement
 preliminaries 31
 procedures 35, 41
 RJ-45 (network) jack, identifying 12
 RJ-45 (network) status lights,
 identifying 12
 RTC battery
 illustrated 23
 removing 68
- S**
- security cable slot, identifying 11
 security, product description 5, 9
 serial number, computer 20
- service considerations
 cables 31
 connectors 31
 plastic parts 31
 service labels, locating 20
 serviceability, product description
 6, 9
 slots
 memory card reader 11
 security cable 11
 solid-state drive
 illustrated 27
 removal 55
 spare part number 22, 27, 55
 solid-state drive bracket
 illustrated 22, 27
 speakers
 illustrated 22
 removing 63
 speakers, identifying 19
 special keys, using 17
 specifications
 computer 91
 display 92
 DVD±RW SuperMulti DL Drive 95
 hard drive 93
 M.2 solid-state drive 94
 optical drive 95
 supported discs, recovery 84
 system board
 removing 66
 spare part number 22, 66
 system recovery 85
 system restore point
 creating 84
 system restore point, creating 83
- T**
- tools required 31
 top cover/keyboard
 removing 80
 TouchPad
 buttons 14
 TouchPad button board
 removing 58
 spare part number 22, 58
 TouchPad button board cable
 illustrated 28
 TouchPad cable
 illustrated 28
- TouchPad zone, identifying 14
 transporting guidelines 33
 traveling with the computer 20
- U**
- USB 2.0 port, identifying 11
 USB 3.x SuperSpeed port,
 identifying 12
 USB board
 removing 65
 spare part number 22
 USB board cable
 illustrated 28
- V**
- vents, identifying 12, 19
 video, product description 3, 8
- W**
- Windows
 system restore point 83, 84
 Windows key, identifying 17
 Windows tools
 using 84
 wireless antenna
 illustrated 26
 wireless antennas
 removing 75, 76
 wireless certification label 20
 wireless, product description 4, 8
 WLAN antennas, identifying 13
 WLAN device 20
 WLAN label 20
 WLAN module
 illustrated 23
 removing 47
 workstation guidelines 33

