



INSTALLATION INSTRUCTIONS

VirtualGlove Installation Guide

Install, pair, and play with the VirtualGlove Controller and RetroPie.

2026 EDITION / IAIN BENNETT / MIT LICENSE

Install VirtualGlove with one script on the **VirtualGlove Controller (Arduino UNO Q)** and one on a supported RetroArch console. The scripts prepare the software and startup helpers; you finish by pairing the devices, positioning the camera, and testing a game.

Choose **Setup -> Matrix attract mode** to keep the idle animation On, Dim it, or turn it Off except for faint connection pixels. This does not change game displays, T, L, or gesture recognition. The setting saves without a tracker restart.

For an existing installation, this update changes controller transport on both computers. Stop controller output, update both to matching software, then start and test input. Mixed old/new versions do not deliver input with the default settings. See [signed controller transport and upgrades](#) for staged upgrades and rollback.

Install stable release v0.4.2

Stable release **v0.4.2** retains Programs 1-14, the Ready-to-Play guide, and the live joystick dead-zone camera grid. It adds source-accurate rapid-fire defaults and live Dashboard overrides, removes retired protocol and pre-0.4.1 compatibility paths, avoids repeated configuration and camera scans during Dashboard polling, and reduces the installed documentation footprint. Close games and stop controller output, then run the matching command on each device.

On the VirtualGlove Controller:

```
SH
cd /home/arduino
curl -fLO \
  https://github.com/mathan416/VirtualGlove/releases/download/v0.4.2/install-uno-q.sh
bash install-uno-q.sh --version v0.4.2
```

On RetroPie:

```
SH
curl -fLO \
  https://github.com/mathan416/VirtualGlove/releases/download/v0.4.2/install-retropie.sh \
  && bash install-retropie.sh --version v0.4.2
```

Verify both report [v0.4.2](#), then follow the pairing/first-game checks below. Existing hand settings and pairing files are preserved. The Controller installer also updates the matrix firmware. Review [coordinated transport upgrades and rollback](#) before replacing an older installation.

v0.5.0 console support under development

VirtualGlove 0.5.0 adds Recalbox 10.x, Batocera 38+, and LaunchBox on Windows x86-64 while retaining RetroPie. Each console has a separate release installer so the package can validate the intended operating system before changing it:

Console	Installer	Persistent VirtualGlove location	Game detection
RetroPie	install-retropie.sh	<code>/opt/virtualglove-src</code> and <code>/etc/virtualglove</code>	RetroPie runcommand hooks
Recalbox 10.x	install-recalbox.sh	<code>/recalbox/share/system/virtualglove</code>	bounded RetroArch process monitor

Console	Installer	Persistent VirtualGlove location	Game detection
Batocera 38+	install-batocera.sh	<code>/userdata/system/virtualglove</code>	supported gameStart / gameStop script events
LaunchBox	launchbox/install-launchbox.ps1	<code>%LOCALAPPDATA%\VirtualGlove</code>	LaunchBox RetroArch wrapper

Recalbox, Batocera, and LaunchBox publish VirtualGlove as keyboard input mapped into RetroArch Player 1. The existing physical Player 1 joystick stays assigned and usable at the same time. Their installers change only the eight managed Player 1 keyboard bindings; Player 2 and unrelated RetroArch settings are preserved.

Programs 1-14, A-I, Bad Street Brawler, and Super Glove Ball can use the standard FCEUmm joystick path. Recalbox, Batocera, and LaunchBox also support native Super Glove Ball through a separately named Nestopia (VirtualGlove) core. Each core must be built with its target system's own toolchain and load-checked on that target; neither replaces stock Nestopia. FCEUmm remains the reversible fallback. The ROM-free native calibration display remains RetroPie-only.

All three platforms use the same authenticated controller transport and game registry as RetroPie. Their receiver, registry, token, launcher settings, logs, and startup integration stay in persistent storage rather than the read-only system image. Updates preserve the token, launcher destination, game registry, ROMs, saves, and controller configuration.

After installing, the Setup page offers console-specific one-time-code commands. On Recalbox run:

```
SH
sh /recalbox/share/system/virtualglove/recalbox/virtualglove-service pair
```

On Batocera run:

```
SH
/userdata/system/services/VirtualGlove pair
```

On LaunchBox run the PowerShell command shown by Setup. It invokes `%LOCALAPPDATA%\VirtualGlove\launchbox\virtualglove-pair.ps1`. LaunchBox uses one-time-code pairing only; the Controller never requests a Windows password.

SSH password pairing also recognizes the Linux console systems automatically; use their normal [root](#) SSH account. SSH pairing is not offered for LaunchBox. No console password is retained by the Controller. Physical validation on the target hardware remains required before v0.5.0 is published.

Recalbox native Super Glove Ball

Recalbox 10.1 has seven build targets. Native cores are never shared across these targets merely because two machines use the same broad CPU family.

Recalbox target	Typical hardware	Core ABI	VirtualGlove package status
rpizero2	Raspberry Pi Zero 2 and compatible image variants	32-bit ARM	Included and load-tested
rpi3	Raspberry Pi 3 family	32-bit ARM	Included; load-tested on Pi 3, exact rpi3 image pending

Recalbox target	Typical hardware	Core ABI	VirtualGlove package status
rpi4_64	Raspberry Pi 4/400 and CM4	ARM64	Validation pending
rpi5_64	Raspberry Pi 5	ARM64	Validation pending
rg353x	Anbernic RG353 family	ARM64	Validation pending
odroidgo2	ODROID Go Advance/Super	ARM64	Validation pending
x86_64	PCs and Steam Deck	x86-64	Validation pending

The package manifest records the Recalbox target and version together with the ELF class and machine identity. The installer requires all four to agree with the local machine before it will expose the native core. This permits a release to carry multiple Recalbox versions for the same hardware target safely.

The release package includes independently built Recalbox 10.1 [rpizero2](#) and [rpi3](#) ARM32 cores. Both load and report [Nestopia PowerGlove](#) on the available Raspberry Pi 3 running the [rpizero2](#) image; validation on an image that reports [rpi3](#) remains outstanding. Normal Recalbox installation verifies size, SHA-256, exact target/version and ARM ELF identity, libretro API, and core name before exposing a core through the reversible runtime overlay. Machines without a packaged target/version core still install normally and use FCEUmm.

Maintainers can reproduce a target build with the matching official Recalbox source checkout on a Linux Docker host:

```
SH
scripts/build-recalbox-nestopia-powerglove.sh /path/to/recalbox rpizero2
```

Build all seven targets supplied by one exact Recalbox release tree with:

```
SH
scripts/build-recalbox-native-matrix.sh /path/to/recalbox
```

Public images may be on different releases. Build those targets separately from their exact tagged source tree and merge the resulting target/version entry only after target-side validation.

The builder emits [nestopia_powerglove_libretro.so](#) and a matching [manifest.json](#). To test a newly built core before promoting it into a future release, copy both to the appropriate architecture package directory. The manual target installer remains available for development validation:

```
SH
sh /recalbox/share/system/virtualglove/scripts/install-recalbox-nestopia-powerglove.sh \
/path/to/nestopia_powerglove_libretro.so \
"/recalbox/share/roms/nas/Super Glove Ball (USA).7z"
```

The installer refuses to run while RetroArch is active, checks the release manifest, and loads the library on Recalbox before installation. A runtime overlay exposes the separate core in the read-only core directory and a temporary system list advertises it to EmulationStation. EmulationStation restarts only when that runtime view first appears or changes. The exact-ROM [.recalbox.conf](#) sidecar selects [nestopia_powerglove](#); unrelated ROMs and settings retain their current cores. On installation and startup, VirtualGlove finds exact Super Glove Ball ROM filenames from the installed registry and creates the per-ROM selection only when that ROM has no existing core choice. Upgrades never replace an existing selection. To return only that ROM to joystick mode:

```
SH
python3 /recalbox/share/system/virtualglove/scripts/configure-recalbox-super-glove-ball-core.py \
--rom "/recalbox/share/roms/nes/Super Glove Ball (USA).7z" \
--mode fceumm --apply
```

Batocera native Super Glove Ball

Batocera's operating-system core directories are read-only, and its cores are architecture-specific. Build Nestopia (VirtualGlove) from a Batocera source checkout matching the target image:

```
SH
scripts/build-batocera-nestopia-powerglove.sh /path/to/batocera.linux TARGET
```

Use Batocera's target name, such as [bcm2711](#) for Raspberry Pi 4 or [bcm2712](#) for Raspberry Pi 5. The builder initializes only Batocera's stock Nestopia package and then compiles VirtualGlove's pinned, patched source with that exact cross-compiler and sysroot. Copy the resulting [nestopia_powerglove_libretro.so](#) to the Batocera system, then run as root:

```
SH
/userdata/system/virtualglove/scripts/install-batocera-nestopia-powerglove.sh \
/path/to/nestopia_powerglove_libretro.so \
"/userdata/roms/nes/Super Glove Ball (USA).nes"
```

The installer first loads the core and checks its libretro ABI. It then places it atomically in persistent storage, exposes it under the separate [nestopia_powerglove](#) name through reversible overlay mounts, and changes only that exact ROM's Batocera core selection. Stock Nestopia and FCEUmm remain unchanged. To return the ROM to joystick mode:

```
SH
python3 /userdata/system/virtualglove/scripts/configure-batocera-super-glove-ball-core.py \
--rom "/userdata/roms/nes/Super Glove Ball (USA).nes" --mode fceumm --apply
```

LaunchBox on Windows x86-64

LaunchBox remains the frontend and 64-bit RetroArch remains the emulator. Install 64-bit Python 3 with its [py](#) launcher, place the matching FCEUmm core in RetroArch, and connect to the Internet for the one-time isolated Python dependency installation, then run:

```
POWERSHELL
powershell -ExecutionPolicy Bypass -File .\launchbox\install-launchbox.ps1 `
-LaunchBoxRoot "C:\LaunchBox" -RetroArchRoot "C:\RetroArch"
```

The installer uses the current user's Local AppData folder and preserves an existing token, game registry, and Controller address. A fresh installation uses [virtualglove.local](#); pass [-ControllerHost](#) when the Controller has a different name or fixed address. Configure a LaunchBox emulator whose application path is [%LOCALAPPDATA%\VirtualGlove\launchbox\virtualglove-launchbox.cmd](#), associate it with Nintendo Entertainment System, and pass only the ROM path.

The wrapper exact-matches the ROM registry. Ordinary games launch with FCEUmm; Super Glove Ball launches with the separately named Windows x86-64 [nestopia_powerglove_libretro.dll](#). It keeps an authenticated game lease alive only while that exact RetroArch process runs. Unregistered games still launch with FCEUmm but do not enable gestures.

For standard FCEUmm games, VirtualGlove injects arrow, X, Z, Enter, and Right Shift keys into RetroArch Player 1. RetroArch's normal XInput/autoconfiguration remains enabled, so the physical Player 1 joypad works at the same time. Keys are emitted only while [retroarch.exe](#) is foreground and are released when focus moves elsewhere. Native Super Glove Ball instead selects the emulated Power Glove peripheral; its physical-joypad behavior is not claimed until it is validated on Windows. The receiver runs in the signed-in user's desktop session; it is not installed as a Windows service.

Maintainers build the Windows core through the manually dispatched [launchbox-native-core.yml](#) workflow or in a MinGW64 environment with:

```
SH
bash scripts/build-launchbox-nestopia-powerglove.sh
```

The build applies the common native-glove patch followed by a Windows-only memory-mapping and monotonic-clock portability patch. The verifier requires a PE32+ AMD64 DLL carrying the [Nestopia PowerGlove](#) identity. Import the reviewed DLL and its generated complete corresponding source archive under [native/launchbox/x86_64/](#) before building release packages.

VirtualGlove 0.4.1 is the oldest supported in-place upgrade. The installer preserves current [/etc/virtualglove](#) pairing, game-registry, and Controller settings, but no longer imports pre-0.4.1 [/etc/powerglove](#) installations. Unsupported older data is left untouched for manual recovery. A fresh installation creates only [virtualglove-*](#) runtime names. Install both devices from the same release; signed protocol version 2 does not fall back to the retired unsigned transport.

1. Prepare your devices

You need a provisioned VirtualGlove Controller, a supported RetroArch console, a UVC USB camera, a powered USB hub, and a physical controller for RetroArch setup. Put both devices on the same trusted local network with internet access. Supply your own games; no ROMs or BIOS files are included.

For a new Controller, use Arduino App Lab to complete board setup and networking. Record the console's hostname and the UNO Q's current App Lab address. The VirtualGlove installer will offer the Controller's permanent friendly name. Connect the camera through the powered hub. You do not need to import VirtualGlove through App Lab, install Arduino build tools, or build a ZIP. The release contains a verified precompiled Matrix image; the installer checks it and loads it using the UNO Q's factory flashing tools.

Open a terminal on each device, either locally or over SSH. For the Controller:

```
SH
ssh arduino@UNO-Q-NAME.local
```

For this initial connection, use the UNO Q name or IP address shown by App Lab. It may still have its factory name. Use your normal account; the scripts request your sudo password when administrator access is needed. They do not store it. Close games before installing. Leave the devices powered and connected while installation runs; first setup can take several minutes.

The commands below automatically select the latest published stable release from GitHub. You do not need to enter a release tag or set shell variables. Run both installers during the same setup session and compare the reported release names; if a new release appeared between runs, rerun the older installation. Development prereleases are available separately in the technical reference. The latest release must include the installer assets before these commands work.

2. Run the VirtualGlove Controller installer

Run this single line in the Controller terminal:

```
SH
cd /home/arduino
curl -fLO \
  https://github.com/mathan416/VirtualGlove/releases/latest/download/install-uno-q.sh
bash install-uno-q.sh
```

The Controller terminal may open in `/`, where a normal user cannot save files. The command first moves to the Arduino user's writable home directory so the installer can be downloaded safely.

The script verifies its download, installs VirtualGlove, and configures automatic startup. It also installs:

- the precompiled Matrix firmware and early-start hourglass;
- the Shutdown button's system helper;
- guarded camera recovery;
- `uhubctl` for hubs that advertise safe per-port power control.

On a fresh Controller, the installer shows the current board name and suggests **virtualglove**. Press Enter to use `virtualglove.local`, or enter a different short name such as `games-room`. Confirm the displayed `.local` address before installation continues. The installer checks for a visible name conflict on the current LAN and stops safely if another device is already using it.

This question appears only for a first installation. An update never changes an established hostname. A non-interactive installation also keeps the existing board name unless `--hostname NAME` is supplied explicitly.

The terminal connection used for installation can remain open after the rename. For future browser and SSH connections, use the chosen `.local` name or one of the IP addresses printed at the end of installation.

Camera recovery is standard and is not presented as an optional prompt. The camera may be connected after installation, and no separate helper command is needed. Updates preserve pairing, calibration, and personal tuning. They back up and replace the supplied `config/profiles.json` baseline so current shared recognition defaults take effect. The installer never copies a maintainer's neutral-hand coordinates because those measurements depend on the player's camera, distance, and position.

During an update, a pending Dashboard shutdown request stops setup before host helpers are installed. Complete or clear that shutdown request, bring the Controller back online, and rerun the same installer.

If the script reports a failure, stop and follow its message. If `curl` is missing, install it with `sudo apt-get install curl ca-certificates`, then retry. The installer checks compatibility before changing the application.

The ordinary installer also includes first-setup and maintenance support: camera recovery, pairing and health checks, the optional calibration dot and its read-only report, aggregate vision status, movement-reach tools, and emulator configuration. Research replays, protocol traces, soak tests, GPU experiments, and benchmark drivers remain in the source repository and separate Engineering Tools download. They are not needed to install, calibrate, play, back up a hand setup, or update the system.

Checkpoint: Open the Dashboard address printed by the installer, normally `http://virtualglove.local:8088/dashboard`, in your browser. Dashboard should load. With gestures off, a closed camera is normal. Open **Play** or **Glove Academy** to check that your camera view and whole hand appear, then return to Dashboard with controller transmission stopped.

For a first setup, keep the camera choices simple:

- Leave **Camera** on Automatic unless more than one camera is connected.
- Leave **Camera reader** on Recommended - OpenCV.
- Leave frame rate and exposure on Automatic.
- If movement is delayed or tracking drops, run **Find the best camera settings** in Setup. Pixel Pal compares only choices supported by that camera and does not save a recommendation until you accept it.

Direct V4L2, manual exposure, gain, and buffer comparisons are advanced tools, not required setup steps. The [Camera Guide](#) explains what they change in plain language and how to stop or recover a camera test safely.

Camera

Camera

Automatic — choose the connected

Camera frame rate

30 fps

Camera buffers

1 buffer — lowest queue depth

Camera reader

Recommended — OpenCV

Exposure behavior

Automatic — fixed frame rate

Hand or glove (diagnostic label)

Bare hand

Camera is delivering 30 fps. Reader: -; automatic fixed-rate exposure unavailable.

- Automatic and OpenCV are the recommended starting point and work when the camera is connected later.
- Direct V4L2 remains available for engineering comparisons and falls back safely when unsupported.
- Manual exposure is optional, camera-dependent, and restored to automatic when tracking closes.

[Open the Camera guide](#) for compatibility, exposure, lighting, and troubleshooting.

Save camera settings



Find the best camera settings

Pixel Pal can compare safe settings for this camera. Keep one hand visible and follow the short movement cues. No video or images are saved.

Start camera test

Camera test cancelled
Your original camera settings are restored. You can start a new test.

Pixel Pal recommends OpenCV recommended. Your previous settings are still active until you choose Use recommended settings.

Advanced camera settings with Automatic, a discovered camera, and optional manual exposure

3. Install the console

Choose the one subsection for your console. Install the same published version on the Controller and console, and close RetroArch first. Repeating the same installer updates VirtualGlove while preserving pairing, the Controller destination, game registry, ROMs, saves, and unrelated controller settings.

RetroPie

Run in the RetroPie terminal as the normal RetroPie user:

```
SH
curl -fLO \
  https://github.com/mathan416/VirtualGlove/releases/latest/download/install-retropie.sh \
  && bash install-retropie.sh
```

Older RetroPie images: Raspberry Pi OS Buster's Raspbian packages moved to the legacy archive. The installer detects the obsolete repository and stops before changing VirtualGlove. Follow [Buster package source moved](#), run `sudo apt-get update`, then rerun the same installer. A current RetroPie image is preferable because Buster no longer receives normal security support.

For a new installation, the script asks for your Controller hostname or IP address. Enter the `.local` name printed by the Controller installer—normally `virtualglove.local`. There are no placeholders to replace in the command. An upgrade that finds `/etc/virtualglove/launcher.json` preserves that destination and does not ask for it again. Pre-0.4.1 `/etc/powerglove` settings are no longer imported automatically.

The script installs the receiver, controller mapping, game-launch integration, and automatic startup. Existing cabinet hooks and controller assignments remain. It offers missing emulator installation through RetroPie Setup and checks registered games, including Bad Street Brawler's Glove Zap configuration.

Follow any emulator or game ACTION messages. Missing games do not prevent the base installation. If asked to launch and exit FCEUmm once, do that and rerun the installer. If you use another emulator, the installer asks before selecting FCEUmm for Bad Street Brawler.

If a registered Super Glove Ball ROM is present, the installer also offers the optional `lr-nestopia-powerglove` core. Accepting installs Git and the standard build tools, downloads the pinned GPLv2 Nestopia source, applies the included patch, builds on that RetroPie, and registers a second emulator entry. It does not change the ROM's saved emulator: FCEUmm remains selected until you choose `lr-nestopia-powerglove` from RetroPie's per-ROM launch menu. Declining is safe and leaves the tested joystick fallback unchanged. The build needs internet access and may take several minutes; no ROM is read or copied by the build.

The installer separately offers **VirtualGlove Calibration Test**. Accept it to build the small project-owned `lr-powerglove-dot` core and add a ROM-free entry to RetroPie's **Ports** list. This choice is optional and can be accepted on a later installer run. It does not select an emulator for any NES game.

Checkpoint: The report confirms that receiver startup is configured. Pairing and live gameplay checks will still be listed as actions.

Recalbox 10.x

Download `install-recalbox.sh` from the same v0.5.0 release used on the Controller. Connect to Recalbox as `root`, then run:

```
SH
bash install-recalbox.sh --version VERSION --peer virtualglove.local
```

Replace `VERSION` with the published tag and `virtualglove.local` if the Controller has a different saved name or address. Do not add `sudo`; Recalbox's SSH session already runs as root. The installer places all managed files in `/recalbox/share/system/virtualglove`, adds a bounded startup/process monitor to the persistent `custom.sh`, and changes only VirtualGlove's eight Player 1 keyboard bindings. The physical Player 1 joystick remains enabled.

Run the same command without `--peer` for later updates. To check without changing anything:

```
SH
bash install-recalbox.sh --check
sh /recalbox/share/system/virtualglove/recalbox/virtualglove-service status
```

The available Raspberry Pi 3 running Recalbox 10.1's [rpizero2](#) image has passed FCEUmm play, native Super Glove Ball, simultaneous physical-joypad use, and reboot persistence. Other Recalbox targets require their own matching core and hardware validation.

Batocera 38 and newer

Download [install-batocera.sh](#) from the same v0.5.0 release used on the Controller. Connect to Batocera as [root](#), then run:

```
SH
bash install-batocera.sh --version VERSION --peer virtualglove.local
```

The installer stores managed files in [/userdata/system/virtualglove](#), enables Batocera's persistent **VirtualGlove** user service, and installs supported [gameStart/gameStop](#) lifecycle hooks. It changes only VirtualGlove's eight Player 1 keyboard bindings, leaving the physical Player 1 joypad enabled.

Run the same command without [--peer](#) for later updates. To check without changing anything:

```
SH
bash install-batocera.sh --check
batocera-services is-enabled VirtualGlove
/userdata/system/services/VirtualGlove status
```

Batocera hardware and native-core acceptance remain v0.5.0 release gates.

LaunchBox on Windows x86-64

Install 64-bit Python with its [py](#) launcher and 64-bit RetroArch with FCEUmm. Extract the matching VirtualGlove Windows package. In PowerShell, as the same Windows user who runs LaunchBox, run:

```
POWERSHELL
powershell -ExecutionPolicy Bypass -File .\launchbox\install-launchbox.ps1 `
  -LaunchBoxRoot "C:\LaunchBox" -RetroArchRoot "C:\RetroArch" `
  -ControllerHost "virtualglove.local"
```

Use the real folders and Controller name. The installer writes only to [%LOCALAPPDATA%\VirtualGlove](#), creates an isolated Python environment, and preserves its pairing key, registry, and Controller destination on updates. If Windows requests network permission, allow Private networks only.

In LaunchBox, add **VirtualGlove RetroArch** as an emulator. Set its application path to [%LOCALAPPDATA%\VirtualGlove\launchbox\virtualglove-launchbox.cmd](#), associate Nintendo Entertainment System, and pass only the ROM path. FCEUmm keeps RetroArch's physical XInput Player 1 controller while VirtualGlove adds keyboard controls to the same player. The receiver runs only in the signed-in desktop session.

4. Pair the devices

The **Controller status** panel at the top of Setup shows the four Off-mode checks in pixel order: app, console service, authenticated response, and Networking. Green means confirmed, red means disconnected or not confirmed, and grey means unknown. Networking reflects a physical Wi-Fi or Ethernet link, including USB dock Ethernet; it is independent of the console checks. These checks do not prove that the game received input.

Both pairing methods below require the six-digit approval PIN shown on the Controller matrix and the certificate-ID comparison. The selected console's one-time code or SSH password is an additional credential. A first visit may show a privacy warning because this is a private local Controller, not a public website.

Pairing gives both devices the same private token. Use the recommended one-time-code method after both installers finish.

1. Open the secure Setup address printed by the Controller installer, normally <https://virtualglove.local:8443/setup>. Under **Connection and startup**, first choose RetroPie, Recalbox, Batocera, or LaunchBox, then enter that console's hostname or IP address and select **Save connection**. Pairing remains unavailable until both are saved; unsaved edits must be saved first.
2. Continue to **Pair this Controller** in the same card, choose **One-time code (recommended)**, and select **Continue**. Use **Change** beside the saved console to edit its address before starting.
3. In **Confirm your Controller**, compare the **ID** on the physical matrix with the beginning of the browser certificate's SHA-256 fingerprint. Expand **How to compare the certificate** for guidance. If they differ, stop pairing.
4. If they match, check the confirmation box, enter the six-digit **Controller approval PIN** shown after **PN** on the matrix, and select **Continue**.
5. On the saved console, run the single command shown by Setup and leave it running. Enter its 20-character code in **Console one-time code**, then select **Pair with console** within five minutes. Setup shows only the command for the chosen platform: `sudo /opt/virtualglove/bin/virtualglove-pair` on RetroPie, `sh /recalbox/share/system/virtualglove/recalbox/virtualglove-service pair` on Recalbox, `/userdata/system/services/VirtualGlove pair` on Batocera, or the installed `virtualglove-pair.ps1` command on LaunchBox. This single-use code is separate from the Controller approval PIN. Confirm that the terminal belongs to the console named in Setup.
6. Selecting **Pair with console** brings **Pairing in progress** into view while the request runs, followed by **Pairing complete** or an error with retry instructions. Before changing its token, the console verifies that its detected platform matches the saved selection. On success, the receiver was restarted and answered an authenticated controller handshake using the newly installed token; you can open Dashboard when ready. Pairing does not arm controller output or prove that a game received input.

Optional: remove the browser privacy warning

After the Matrix ID matches the browser certificate, return to **Trust this Controller** and download the trust certificate. Install it as a trusted root on that phone or computer, then close and reopen the browser. This is required only once per browser device and survives ordinary VirtualGlove upgrades and website certificate renewals. Setup contains current instructions for Apple, Windows, and Android devices. Never install the certificate if the Matrix comparison does not match.

After pairing, always complete the game check below. **Pairing complete** proves that the receiver accepted the shared key; the game check proves that your own camera, Controller, network, receiver, emulator, and game work together.

Pair with RetroPie

Pair this Controller with your saved RetroPie console. Both methods use a physical confirmation on the Controller matrix.

Saved console: RETROPIE-NAME.local [Change](#)

1. Choose a method

2. Confirm your Controller

3. Pair with RetroPie

1. Choose a pairing method

How will you connect?

☒ One-time code (recommended)
Run a command on RetroPie and enter the code it displays.

☐ SSH password
Use your RetroPie username and password. SSH password login must be enabled.

Continue

Guided pairing starts with the saved console and a choice of one-time code or SSH password.

Pair with RetroPie

Pair this Controller with your saved RetroPie console. Both methods use a physical confirmation on the Controller matrix.

Saved console: RETROPIE-NAME.local

1. Choose a method

2. Confirm your Controller

3. Pair with RetroPie

RETROPIE-NAME.local · One-time code

Confirmation window: 120 seconds remaining. Console and method are fixed until it ends.

2. Confirm your Controller

The Controller matrix shows ID 1234ABCD, then a six-digit approval PIN. Compare the browser certificate with the physical matrix before entering that PIN.

► How to compare the certificate

☒ I compared the browser certificate fingerprint with the matrix ID and they match
Controller approval PIN

Six digits shown on the Controller matrix

Continue

Controller confirmation with certificate comparison, matrix approval PIN, and remaining time.

Pair with RetroPie

Pair this Controller with your saved RetroPie console. Both methods use a physical confirmation on the Controller matrix.

Saved console: RETROPIE-NAME.local

1. Choose a method

2. Confirm your Controller

3. Pair with RetroPie

RETROPIE-NAME.local · One-time code · Controller confirmation entered

Pairing in progress

Sending the pairing request to RetroPie. Keep this page open while we wait for its response.

SSH pairing can take a few minutes. Pairing does not start controller output.

Pairing in progress. Waiting for RetroPie...

Pairing in progress while the request waits for the selected console.

Pair with RetroPie

Pair this Controller with your saved RetroPie console. Both methods use a physical confirmation on the Controller matrix.

Saved console: RETROPIE-NAME.local [Change](#)

1. Choose a method

2. Confirm your Controller

3. Pair with RetroPie

RETROPIE-NAME.local · One-time code · Controller confirmation entered

Pairing complete

The RetroPie receiver was restarted. The matrix resumes its normal display; when idle, it follows your attract setting. Open Dashboard to start controller output when you are ready. Pairing does not verify that a game received input.



[Open Dashboard](#)

Pairing complete. The RetroPie receiver was restarted.

Pairing complete, with the next step on Dashboard.

The Controller confirmation window lasts two minutes. The console address and pairing method stay fixed during that window. If it expires, the PIN and password are cleared; select **Start a new confirmation**. You can change methods after the window ends. A submitted failure also requires fresh confirmation before retrying. Existing server PIN attempt limits still apply. If the window expires while you obtain a console code, repeat confirmation and obtain a new code if needed; neither credential has an unlimited lifetime.

Alternative: pair with your console password

Use this route only if the console accepts SSH password login. RetroPie normally uses [pi](#) and requires that account to run [sudo](#); Recalbox and Batocera normally use [root](#). LaunchBox uses one-time-code pairing only and never asks for a Windows password.

1. Save both the platform and console address in **Connection and startup**.
2. In **Choose a pairing method**, select **SSH password**, then **Continue**.
3. Complete the same certificate comparison and Controller approval PIN step.
4. In **Pair with your console**, enter the console username and password, then select **Pair with console**.
5. **Pairing in progress** stays visible while the request runs; SSH pairing can take a few minutes. Wait for **Pairing complete**, which includes an authenticated receiver-token check, then check the receiver service or open Dashboard. Errors are brought into view with retry instructions.

The password field is unavailable until certificate confirmation is complete. The password is used for pairing and is not saved by the Controller. Returning to **Review Controller confirmation**, a failure, expiry, or leaving the page clears it. If neither route works, use the [token-management reference](#).

When a submitted pairing attempt finishes, the matrix releases the approval PIN and resumes its normal display. When idle, the glove animation follows your On, Dim, or Off attract setting; active game and status displays still take priority.

Optional first-game check

Select **Get ready to play** on Setup or Dashboard. The guide helps you confirm the active player and console, practice safely, center the hand, and try the ten essential controls before launching a registered game. It saves progress per player without changing Glove Academy lessons. Each visit checks live readiness again. Finish practice explicitly before enabling game controls; **Ready to play** confirms the reported connection and game mode, not game-side input receipt. If you close the guide early, reopen it to resume or use **Leave guide - keep controls stopped** to exit the output pause explicitly.

Connection settings and recovery

Connection and startup saves the console platform, address, and startup game profile, then continues directly into secure pairing. Existing upgraded systems with an address and token keep operating, but must select and save their platform before pairing again. Port, camera, and pairing-key replacement are under **Advanced connection settings**. **Check console address** only checks name resolution. If loading fails, use **Reload saved settings**; if a save fails, correct or retry it without losing fields. Controller Start/Stop and shutdown are on **Dashboard**; Setup keeps the read-only tracking and output status indicators.

Use your console's [.local](#) name when possible. If that name stops resolving-or if DHCP changes a saved numeric address-VirtualGlove can look for the already paired console on the same local network. Only the secure greeting is broadcast; hand movements and button states are not. The console must prove that it has the existing pairing key before delivery resumes. Networks that isolate devices, separate them into VLANs, or block local broadcasts still require a working name, a current address, or a router DHCP reservation.

Connection saves restart tracking. The separate **Save attract mode** action changes only the idle matrix display. Hand setup, players, and backups are in **Glove Academy**. Existing private settings and calibration remain preserved through the normal installation/upgrade process; the four-pixel display needs its matching matrix firmware. Extending the fourth pixel to Ethernet only needs the updated Controller app and host sampler. Normal installation and Wi-Fi deployment also install its unprivileged host status sampler. Receiver changes take effect only after updating both the console and Controller.

5. Calibrate and test a game

1. On Dashboard, select a profile, wait for the camera, and show your hand. On first use, the app collects a neutral reference automatically. Use **Center hand** if your resting position produces unwanted movement or your camera/playing position changed. Hold a relaxed, open hand still at the intended center and distance until the button reports completion.
2. Select **Start controller**. This arms authenticated output; delivery begins only for an active registered game or intentional manual profile.
3. Verify the console receiver using its platform check above. On RetroPie, `grep -A8 -B2 'VirtualGlove' /proc/bus/input/devices` should show the **VirtualGlove** device. Recalbox, Batocera, and LaunchBox merge VirtualGlove keyboard bindings into RetroArch Player 1 instead of adding that Linux gamepad device.

For a visual calibration check, open **Ports -> VirtualGlove Calibration Test**. The utility selects native coordinate delivery only while it is open. The yellow dot should follow the hand; the green marker means the receiver has a fresh calibrated sample. A red X means tracking, calibration, pairing, or the sample's freshness is not ready. Adjust center or **Movement reach** on the Controller, then reopen or return to the test. Exit normally to release the test profile.

1. Use the physical controller to open RetroArch. On RetroPie, confirm the installed **VirtualGlove** Player 1 mapping. On Recalbox, Batocera, and LaunchBox, keep the physical Player 1 controller and the installer-managed keyboard bindings together.
2. Test D-pad, A, B, Start, and Select in a registered game, then confirm the physical joypad still works. Do not replace the entire RetroArch configuration to repair one binding.

For the first test, confirm the selected Program's control style rather than assuming every numeric profile uses ordinary hand-position movement:

Programs	What to expect
1, 2, 11, 12	Position-based D-pad with additional finger combinations; Program 2 also reports centering.
3, 5, 6, 8	Side movement plus push/pull depth controls.
4, 10	Finger and wrist poses replace ordinary positional steering.
7	Open-hand dodging/ducking plus positioned fist punches.
9	Make a fist once to arm Rad Racer controls; this Program has no rapid fire.
13	VirtualGlove supplies A/B while the merged physical Player 1 controller supplies movement.
14	Camera and VirtualGlove output intentionally stay off; use the physical Player 1 controller.

Rapid A/B defaults on only for explicitly documented pulsed buttons: Program 7 A, Program B A, Program H A/B, and Bad Street Brawler B. Every other profile defaults off. The registry retains Mattel's explicit off entries for Blaster Master, Double Dribble, Racket Attack, Ice Hockey, and Alpha Mission. Use the [complete Programs 1-14 gesture cards and official game index](#) when confirming a compound action.

An update preserves any Rapid A/B choices already saved for a registered game. Those choices continue to override its profile defaults. To adopt the corrected defaults for that game, launch it and choose **Use profile defaults** on Dashboard. Rapid A/B controls button repetition only; profile-owned fast turns, pulsed movement, turbo movement, and compound actions do not change.

Checkpoint: A gesture changes the intended control in the running game. Seeing the device name or a running service alone is not an end-to-end test. Bad Street Brawler's Glove Zap uses simultaneous Left + Right through the standard gamepad path. The RetroPie installer checks the game-specific FCEUmm option. Follow any remaining ACTION message and rerun the installer after resolving it. See [Glove Zap setup](#). No extra-trigger assignment or receiver change is required.

A calibration uses 24 geometrically valid hand observations. The Controller installer includes the validated MediaPipe Hands 0.10.35 ARM64 runtime and headless OpenCV 4.11; it does not download an older fallback or unused JAX components. MediaPipe's displayed score describes handedness certainty rather than position confidence, so it is not used as a false quality gate. Repeating calibration from the same position should give closely comparable center, scale, wrist, and jitter values, but natural landmark variation prevents an exact numeric match. Calibration is shared by every profile. Closing Dashboard after this check stops its 5 fps diagnostic preview work without stopping hand tracking or controller delivery.

For Super Glove Ball testing on RetroPie, enter the launch menu while starting the ROM and choose either [lr-fceumm](#) or [lr-nestopia-powerglove](#). Recalbox and Batocera use an exact-ROM selection for FCEUmm or their target-built Nestopia (VirtualGlove) core. The LaunchBox wrapper makes the same exact registry choice automatically. FCEUmm uses the ordinary D-pad and buttons for the whole session. The native core uses absolute X/Y/Z plus open-hand, fist, and index-point packets. Native movement uses **Latest coordinate** with MediaPipe Hands and the same saved center and reach. It validates the palm geometry and clamps it to that reach before mapping, so movement beyond an edge stays at the edge and a recovered hand normally starts from its first fresh coordinate. Latest holds only a contradictory or unusually distant non-forward reacquisition for one additional fresh result. Adjust native travel separately under **Glove Academy -> Tune gestures -> Movement reach**. Full-game cabinet play has confirmed grab/throw, index fire, and fist-plus-forward Power Punch. Continuous movement is playable, with further latency refinement still planned. Wrist rotation and remaining unused native packet fields stay neutral. Shared recognition remains available to every FCEUmm profile. A per-ROM selection is remembered, so choose FCEUmm again whenever you want the complete fallback.

Setup -> **Camera** offers Automatic, 30 fps, and 60 fps. Automatic is the 0.4.0 default: it tries the tested 30-fps path and then accepts the camera driver's usable rate if necessary. The active rate is shown while tracking runs. Other UVC cameras do not need to support both explicit rates. See the [Camera guide](#) before changing the reader, exposure, or gain. Dashboard's optional **Show statistics** switch is off by default; leave it off for the lightest gameplay page and enable it only when reading diagnostics. Controller transmission remains ahead of Dashboard housekeeping either way; opening the preview does not select a different MediaPipe preparation path.

6. Confirm startup and finish

- Launch a registered game and check the expected profile on Dashboard and the matrix.
- Exit the game and confirm that gestures turn off.
- Reboot both devices normally. Confirm that Dashboard returns and the matrix progresses through startup to the selected mode. The early-start helper is enabled automatically for this boot.
- Check that your saved tuning and calibration remain available.
- Select **Start controller** when ready and verify movement and buttons in the game.

The installers never reboot or request a shutdown automatically. They check that the Controller shutdown helper is ready. The tested Arduino UNO Q hardware restarts after a halt; a disconnected website or blank matrix is not proof that power can be removed.

Updates and checks

Updates keep an inventory of installed application files. After the first inventory is created, unchanged obsolete files are backed up and removed; your own changes are kept and reported. If an update is interrupted, follow its recovery instructions before trying again.

To update, repeat the same single-line commands on both machines. Each selects the latest published stable release. Changed managed files are backed up, and the installer prints their location. It asks before interrupting an active Controller session. Close RetroArch before updating the console. [config/profiles.json](#) is intentionally replaced; saved personal tuning remains in [data/gesture-tuning.json](#).

For checks only, use the script you already downloaded:

```
SH
# On the VirtualGlove Controller:
bash install-uno-q.sh --check
# On RetroPie:
bash install-retropie.sh --check
# On Recalbox (as root):
bash install-recalbox.sh --check
# On Batocera (as root):
bash install-batocera.sh --check
```

Checks do not download, install, restart, or change anything. They may request administrator access to inspect protected settings. LaunchBox does not have a separate system check mode: rerun its per-user installer after closing RetroArch, then complete the pairing and registered-game checks.

Report	Meaning
PASS	The named check succeeded.
FAIL	Resolve the problem before proceeding, then rerun the installer or checks.
ACTION	Complete the named step, such as pairing, adding games, or checking gameplay.

A successful technical installation can still report ACTION for the physical checks. Those checks need you and your cabinet.

If movement feels delayed after installation, use the [read-only latency baseline](#) before changing sensitivity or video settings. It separates Controller timing from the receiver, emulator, and display checks and does not enable controls.






For a specific version or a development prerelease, use the [technical installation reference](#). It also explains compatibility, package building, backups, and recovery.

If something does not work

- **Download fails:** confirm that the latest stable release includes installer assets, check internet access, and retry. A failed verification installs nothing.
- **Unsupported board software:** complete App Lab provisioning or use a compatible project release. Do not bypass the installer's compatibility check.
- **Website does not open:** try the Controller's current IP address instead of its hostname. Use HTTP on port 8088 and HTTPS on port 8443.
- **Camera missing:** open Glove Academy and wait for the camera view. The Controller host helper automatically enrolls the single UVC camera and its parent hub on first successful use, even if no camera was connected during installation. After enrollment it makes one guarded recovery attempt during a sustained outage. Supported hubs power-cycle only the camera port; non-networking hubs may use the identity-checked whole-hub fallback. Success requires a real camera frame, not merely a device returning to USB. If it remains missing, reconnect or power-cycle the camera and check the powered hub and cable. A network-bearing hub is never reset as a unit.
- **No controller in RetroArch:** finish pairing, select Start controller, and select VirtualGlove for Port 1 using your physical controller.
- **Partial installation:** correct the reported problem and rerun the same release. Keep the printed backup location for recovery.

For diagnostic commands or manual repair, use the [configuration reference](#).

Read the matrix and open the web pages

Display	See it	Meaning
Arduino boot logo		System startup, before the app display.
System heart		System startup is progressing.
Pulsing hourglass		VirtualGlove is starting.
Lightning and animated glove		Gestures are off. The revised animation requires updated matrix firmware.
Scanning L		Play or Glove Academy practice is active; controller output is paused.
Scanning T		Tune gestures is active; controller output is paused.
1-14	Numeric program code	The corresponding original Programs 1-14 profile is selected. Older firmware safely leaves this display blank.
A-I		The corresponding profile is selected; Program A is shown.
BS		Bad Street Brawler is selected.
GB		Super Glove Ball is selected.
Blank matrix		No LEDs are illuminated. Check board power and Dashboard; blank does not confirm shutdown.
Pulsing profile code		A calibrated hand is being tracked. Confirm controller output separately.
Blinking X		The app has requested an error display. Check Dashboard for the cause.

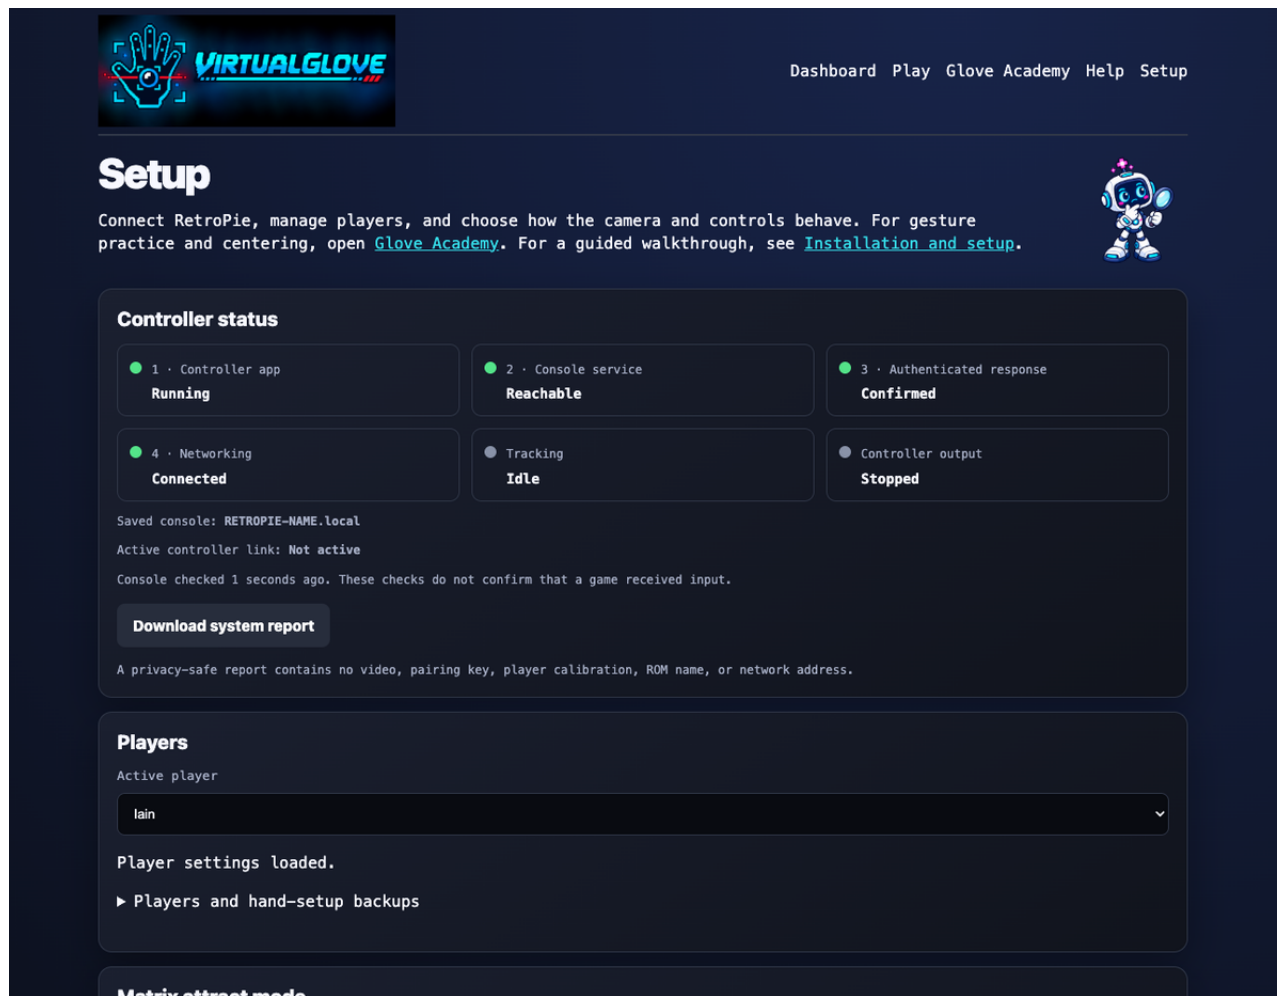
See the [Matrix display guide](#) for the complete animations and startup sequence. An animation does not prove that shutdown has finished.

Page	Address
Dashboard	http://UNO-Q-NAME.local:8088/dashboard
Play	http://UNO-Q-NAME.local:8088/play
Glove Academy	http://UNO-Q-NAME.local:8088/learn
Games (lower Setup section)	http://UNO-Q-NAME.local:8088/setup#games-section
Help and printable manuals	http://UNO-Q-NAME.local:8088/help
Connection settings	http://UNO-Q-NAME.local:8088/setup
Secure pairing	https://UNO-Q-NAME.local:8443/setup

Add and manage players in **Setup -> Players**. Choose the active player on Dashboard or in Glove Academy before practicing or playing. Progress and hand sensitivity persist across restarts and normal upgrades. Selecting a player immediately loads their sensitivity, progress, and saved center. Use **Center hand** for a new player or after moving the camera or changing playing position. Restoring a hand-setup backup requires centering unless you explicitly reuse its calibration with the same camera and playing positions. Backups include name, center-box size, personal and effective gesture sensitivity, source software identity, and calibration. VirtualGlove backup version 4 is the only supported portable format; older formats are rejected without changing the active player. The web footer reports exact software and running firmware identities; older firmware may report unavailable.

Choose each player in turn and select **Back up hand setup** to download a separate file named for that player, such as [alex-virtualglove-hand-setup.json](#). Your browser saves it on the computer, phone, or tablet you are using, usually in **Downloads** or the folder you choose. To restore, select the player you want to update, choose **Restore hand setup**, and pick that player's saved file from your device. Review it before confirming; restore updates the selected player, rather than adding a new one.

Completing all sixteen lessons replaces the lesson panel with the **Glove Master** award. **Start again** restores the lessons.



Setup connection settings and pairing; use HTTPS to enable pairing

Help serves the public manuals, illustrations, and PDFs locally. **This console** shows addresses derived from your current browser connection and public device settings. It never displays the token. The standalone Quick Reference is excluded from the public package; the live cabinet page supplies local details.

Play Checklist

1. Power the selected console and VirtualGlove Controller; leave the camera connected to the powered hub.
2. Open <http://UNO-Q-NAME.local:8088/dashboard>.
3. Select the active profile on the Dashboard, then confirm the expected profile and a detected hand. The saved startup profile remains on Setup.
4. On first use, or after changing your camera or playing position, select **Center hand** while holding a comfortable neutral pose. Otherwise reuse the saved calibration.
5. Select **Start controller** when you are ready to arm gesture control.
6. Launch a registered game and confirm its profile code on the matrix. Delivery begins only after RetroArch is running and its short initialization guard ends.
7. Select **Stop controller** before adjusting the camera or leaving the cabinet.
8. Read the shutdown limitation before disconnecting power. **Shutdown** requests a graceful halt, but the tested board restarts; an offline website is not proof that it is safe to unplug.

VirtualGlove remembers the player's explicit **Start controller** or **Stop controller** choice across Controller application and system restarts. A remembered Start means **armed**, not unconditional output: controls are sent only during a live registered RetroArch session or after an intentional manual Dashboard profile selection. A registered game renews its session while RetroArch is running, so an Controller application restart can reconnect automatically. Game exit, an unknown game, or an expired session releases all controls and stops delivery without changing the armed preference. **Stop controller** remains sticky until explicitly started again. Install the same release on both devices because this behavior uses a matching Controller worker and the selected console's game-session integration.

Vision and the dashboard keep running while output is unarmed or waiting for a game, so setup never generates surprise game inputs. **Shutdown** is different: it halts Linux on the Controller. The tested board automatically restarts; remaining halted is not guaranteed.

Fresh hardware acceptance test

Use this checklist for a new Controller and newly prepared supported console. It deliberately starts without relying on settings from the development machines.

1. Install the same release on both devices. The Controller camera may be absent during installation; connect it afterward if needed.
2. Run each available installer's final checks. Confirm the Controller website opens and the console receiver and game-session integration start normally.
3. Pair once from Setup. Confirm **Saved console**, **Console service**, and **Authenticated response**, then download the privacy-safe system report.
4. Create or rename Player 1, center the hand, set movement reach if desired, and complete a few Academy lessons. Restart the Controller and confirm those choices remain while controller output stays safely gated.
5. Launch one registered FCEUmm game and Super Glove Ball with the native core. Confirm Setup shows an active authenticated link; game play remains the final proof.
6. Restart the console receiver while the devices remain paired. Confirm the input link repairs without pairing again and stale input releases during the gap.

7. Change one device's DHCP address, or temporarily make its saved name unavailable, while both remain on the same ordinary LAN. Confirm signed discovery restores both controller delivery and the registered-game profile without changing the saved name.
8. Disconnect and reconnect the camera. Confirm the helper declares recovery only after the worker receives a frame; USB enumeration alone is insufficient.
9. Upgrade both devices with the same release again. Confirm the player, center, reach, personalization, camera choices, Academy progress, pairing, and game registry remain. Keep the printed installation backup until the next play session succeeds.

Setup's **Download system report** contains versions, camera/runtime choices, controller/profile state, and connection-check results. It contains no video, pairing key, player calibration, ROM name, or network address, so it is the preferred starting attachment when asking for help.

Optional latency diagnostics

Normal installation leaves timing traces off and does not install or select the separate diagnostic core. The [native test procedure](#) explains temporary process environments, same-architecture diagnostic builds, private local evidence, and restoration of the normal launch configuration. Video analysis dependencies belong in a temporary Mac environment. Capture the physical hand and cabinet screen together; deployment alone is not a latency test.

For a guided symptom check, see [Troubleshooting by symptom](#).