

CONTROLLER ROUTER

Technical Reference

Architecture, input leases, Matrix protocol, console routing, and reusable integration.

VIRTUALGLOVE / R.O.B. VISION / MAKER CONTROLLERS

Current source edition | 29 September 2026


Controller Router contains two related systems: a console input-routing library and a UNO Q service for app selection, input ownership, and Matrix display. This reference describes the current source rather than asserting that every published product release includes it.

Find a contract

Your task	Read
Add a controller source	[Input-engine API and custom sources](#input-engine-api-and-custom-sources)
Build an assignment editor	[Assignment API](#assignment-api-a-new-project)
Route a game launch	[RetroArch compatibility](#retroarch-compatibility-and-launch-routing) and [system policy](#per-system-routing-policy)
Add a UNO Q app	[Input leases](#game-selection-and-input-leases) and [Matrix protocol](#matrix-manifests-and-request-protocol)
Investigate a failure	[Display failure behavior](#display-timing-and-failure-behavior) and [validation limits](#verification-and-known-limitations)

Terms: a **source** is a physical or receiver-created input device; an **output** is a merged player device presented to RetroArch. A **session** is one running game. An input **lease** permits one UNO Q product to send input for a bounded time. Selecting a UNO Q product does not change console player assignments.

Architecture and responsibilities

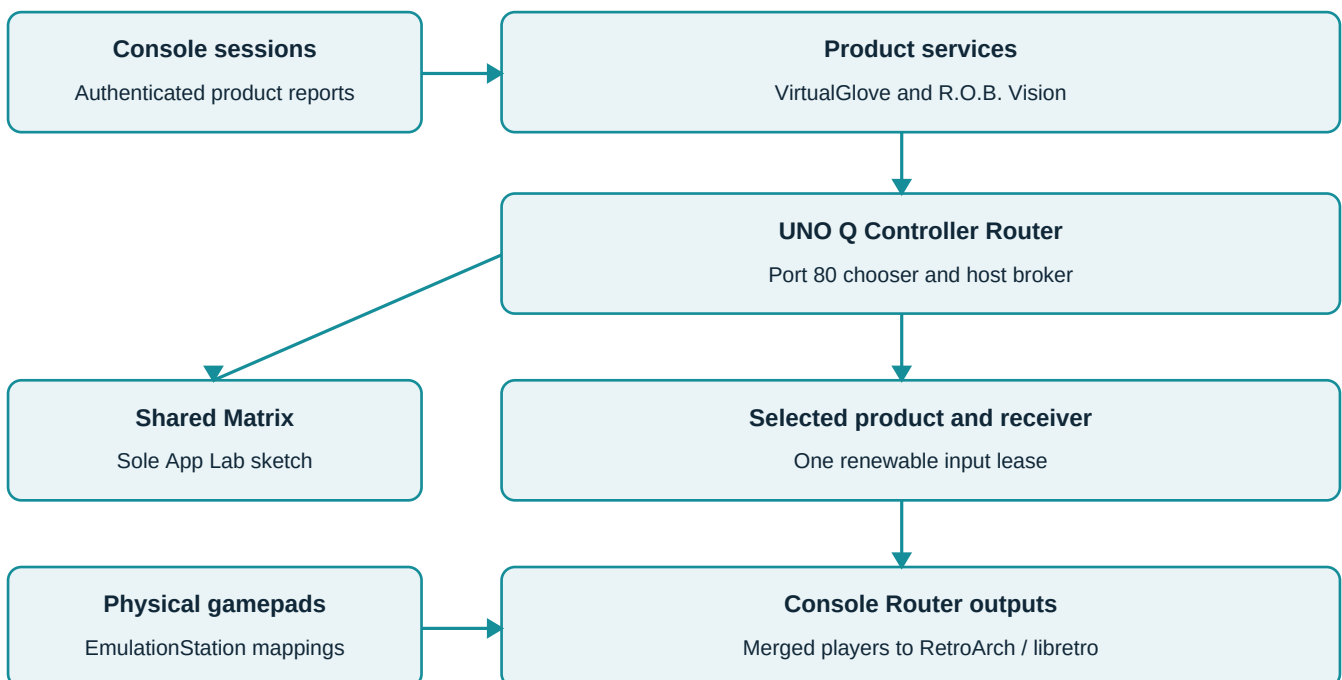

The diagram's session reports are the products' existing authenticated console notifications and heartbeats. Router reads the resulting local service state; the chooser does not infer game selection from which browser tab is open.

Component	Responsibility	Main source
Console engine	Import mappings, combine inputs, apply player outputs	router_shared/controller_router.py
Persistent writes	Atomic replacement and ownership preservation	router_shared/storage.py

Component	Responsibility	Main source
Device-index discovery	Translate Linux devices into RetroArch udev slots	router_shared/retroarch_udev.py
Source descriptors	Describe fixed virtual controller controls	router_shared/virtual_sources.py
UNO broker and selection	Read product state, serialize requests, grant leases	uno_portal/host/broker.py, concurrent.py
Product lifecycle	Start both Linux services	uno_portal/host/products.py
Display scheduler	Validate, schedule, deliver Matrix frames	uno_portal/host/display_runtime.py
Shared firmware	Render the 13 by 8 Matrix and idle animation	uno_portal/app/sketch/sketch.ino
Browser chooser	Show installed products and request selection	uno_portal/python/

Pairing protocols, ROM registries, and game-specific actions belong to the products. Router's shared Setup provides player and system controls by delegating to their authenticated console APIs. Buddy's Player 2 configuration is a R.O.B. Vision adapter responsibility; VirtualGlove chooses its gesture player in its own adapter.

Network and process boundaries

Port or endpoint	Purpose	Exposure
TCP 80	Router entry page and selection API	Trusted LAN
TCP 8100	VirtualGlove browser	Trusted LAN
TCP 8101	R.O.B. Vision browser	Trusted LAN
TCP 8443	VirtualGlove secure settings	Existing product service
TCP 8444	Router secure connection Setup	Same-origin HTTPS
TCP 55359	Console connection service	Pinned TLS
TCP 8766	R.O.B. Vision console API	Existing product service
TCP 8123	Shared Matrix health and frame delivery	UNO Q loopback
control.sock	Host broker requests	User-owned local Unix socket

The socket is `/run/user/1000/controller-router-portal/control.sock`. The port-80 web container forwards fixed requests through a private Compose bridge; it has no general shell-command API. Containers run as UID 1000 with read-only filesystems, dropped capabilities, and no new privileges.

The chooser exposes `GET /api/state` and `POST /api/select`. Selection requires JSON, a bounded request body, and a recognized app. Cross-site browser requests are rejected; same-host product origins on ports 8100 and 8101 are permitted for direct-visit selection. LAN browser selection has no user token and relies on the trusted-network deployment model. Console authentication remains in the products.

A single installed product is selected and opened by the entry page. With two, the chooser stays visible until a choice. With no products, it cannot redirect to a controller. Neither chooser path starts or stops product services.

Game selection and input leases

Router reads VirtualGlove's `/status` for `worker_running` and `game_session_active`. R.O.B. Vision's `/api/state` supplies `live_game_active`. These are product-managed session states, not unauthenticated claims accepted directly from the chooser.

1. Boot initializes selection to none and writes inactive leases.
2. Exactly one healthy live session selects its product automatically.
3. Previous leases are revoked before changing ownership. When replacing an owner, Router waits 800 ms for the receiver watchdog to neutralize old input.
4. The new owner receives a renewable lease and Matrix selection.
5. Ending a game-owned session revokes input and returns selection to neutral.
6. If both products report live games, Router revokes both leases and reports the conflict.
7. A failed selected service loses its ownership. Manual selection also requires healthy product and Matrix services and rejects a change during a live game.

Manual selection remains selected until another choice, service failure, or game reconciliation changes it; it is not a saved boot preference.

Each product data directory contains `controller-router-lease.json` and the `controller-router-required` marker. A lease has schema 1, the current Linux `boot_id`, an `active` boolean, and a monotonic `until` timestamp. The selected lease lasts two seconds. The heartbeat sleeps 250 ms between reconciliations; HTTP health requests and switching waits can lengthen that interval, so it is not a guaranteed 4 Hz schedule.

Managed products reject missing, malformed, revoked, expired, and previous-boot leases. Their receivers must release input when the product stops supplying it. Product watchdogs complete this boundary; reading an active lease alone is not enough to implement a new receiver safely.

R.O.B. Vision retains pending frame actions for up to 12 seconds while waiting for ownership and retries delivery approximately every 200 ms. It rejects stale or mismatched game/process actions. That queue is product behavior, not part of the generic Router API.

Matrix startup display

After the board's protected heart animation, the shared sketch animates an hourglass independently of Linux and the Bridge. The host acknowledges startup through authenticated POST /ready on the private Matrix service only after all installed product services report ready. Missing acknowledgement leaves the hourglass running. Valid product or pairing frames take precedence and end the loading state. Once startup is complete, expired frames return to the neutral Router animation rather than the hourglass.

Matrix manifests and request protocol

Apps are identified as `virtualglove` and `rob_vision`. Their animation manifests use schema 1 and must identify the same app. A manifest contains named animations, each with a boolean `loop` and a sequence of frames.

Field or bound	Accepted value
Animation count	1 to 64
Animation name	Up to 48 alphanumeric or underscore characters
Frames per animation	1 to 128
Frame duration ms	Integer, 50 to 5000
Frame rows	Eight strings, each 13 characters long
Pixel values	Characters 0 through 7; eight grayscale levels
Manifest file	At most 1 MB; symlinks rejected

Example of a complete single-frame manifest:

```
{
  "schema": 1,
  "app": "rob_vision",
  "animations": {
    "demo_dot": {
      "loop": true,
      "frames": [{
        "ms": 200,
        "rows": [
          "0000000000000", "0000000000000",
          "0000000000000", "00000007000000",
          "0000000000000", "0000000000000",
          "0000000000000", "0000000000000"
        ]
      }]
    }
  }
}
```

The local client sends newline-delimited JSON over the Unix socket. `uno_portal/client.py` bounds encoded requests to 1024 bytes and reads responses up to 4096 bytes. A named-animation request is wrapped as follows:

```
{
  "action": "display",
  "request": {
    "version": 1,
    "app": "rob_vision",
    "action": "play",
    "animation": "demo_dot"
  }
}
```

A product should use `display(app, action, **details)` rather than inventing its own transport. `lease(app)` queries current ownership. Display acceptance confirms validation and ownership; it does not by itself prove physical delivery. Matrix status includes a separate recent-delivery result and error.

Display timing and failure behavior

Action	Behavior
play	Play a manifest animation; identical refreshes keep its position
status	Show one to three supported characters
pairing	Cycle identity and six-digit PIN fragments
clear	Remove the app request and allow neutral firmware display

Status characters are restricted to 0123456789ABCDEFINP. Pairing needs a seven-character uppercase hexadecimal identity and six numeric PIN digits. The sequence is ID, three identity characters, three more, the final identity character, PN, and two three-digit PIN groups, each shown for 900 ms.

Only the selected app can submit a display. Pairing displays are rejected during a live game. Play and status requests expire after five seconds without refresh. Pairing display expires after 120 seconds. Clearing selection removes the pending request.

The scheduler checks frames every 50 ms. An unchanged frame is refreshed at least every 800 ms while a request is active. The firmware returns to its neutral animation after 1800 ms without a delivered frame. These are configured intervals; network and scheduler delays can affect actual display timing.

Console routing and persistent state

EmulationStation provides the authoritative physical-controller mappings. Router imports stable identities and maps buttons, axes, and hats into Player 1-4 state. Known fixed virtual pads can be described by a schema-1 source descriptor. A source descriptor describes controls; it does not assign a player.

The assignment document uses format version 2. It stores platform, players and their source mappings, the gesture player where applicable, and physical routing scope. The existing `virtualglove_player` field and `VirtualGlove Merged Player N` output names are retained for compatibility.

RouterStore returns inventory, a document revision, and backup availability. A save resolves source IDs against authoritative discovered or saved mappings, checks the revision, validates the result, and keeps the previous document for rollback. Reconfiguration is blocked while any Libreto game is active. Product Setup provides the web controls; the library provides storage and routing.

Platform	Default assignment document
RetroPie	<code>/etc/virtualglove/controller-router.json</code>
Batocera	<code>/userdata/system/virtualglove/data/controller-router.json</code>
Recalbox	<code>/recalbox/share/system/virtualglove/data/controller-router.json</code>

Product adapters can pass explicit configuration paths. Read the installed adapter and service before assuming a default. A `.previous` sibling stores the last assignment backup.

Router resolves merged outputs by their unique names and vendor/product IDs immediately before RetroArch executes. Its udev slot differs from Linux `jsN` numbering. `prepare-launch` waits up to five seconds and rejects missing or duplicate identities. It writes a temporary session file; runtime routing never edits saved `retroarch.cfg` files. Assignment changes save Router's own configuration and take effect on the next launch.

Atomic writes create a temporary sibling, flush and sync it, then replace the target. Existing permissions and ownership are retained; writes as root under `/opt/retropie/configs/` explicitly assign `pi:pi`. Product receivers and wrapped-game launchers must not separately rewrite those player assignments.

Assignment API: a new project

RouterStore is the local assignment API. Instantiate it with your configuration path, detected platform, and EmulationStation input file. Your authenticated web or CLI adapter calls `operate()`; clients do not write the assignment document directly.

```
from pathlib import Path
from router_shared.controller_router import RouterStore

store = RouterStore(
    Path("/var/lib/my-controller/controller-router.json"),
    "retropie",
    Path("/opt/retropie/configs/all/emulationstation/es_input.cfg"),
)
state = store.operate("read", {})
```

Read returns `config`, `revision`, `has_backup`, and `inventory`. Inventory supplies authoritative source IDs. A save proposal contains source IDs rather than accepting event mappings supplied by an untrusted browser.

```
proposal = {
    "players": [{"player": 1, "sources": [chosen_source_id]}],
    "virtualglove_player": None,
}
updated = store.operate("save", {
    "revision": state["revision"],
    "config": proposal,
})
```

Here `chosen_source_id` must come from the returned inventory. This intentionally minimal proposal assigns one source to Player 1. For an existing installation, construct the proposal from every current player's source IDs, changing only the requested assignment; otherwise omitted assignments are removed.

Operation	Payload	Result or failure
read, inventory	Empty object	Configuration, revision, inventory, system catalogue, backup flag
check	Optional <code>watch_ms</code>	Missing sources, enabled players, activity, safety result
save	revision, proposed config	Validated persisted state; rejects active game or stale revision
rollback	revision	Restored previous snapshot; rejects missing backup or active game

The store does not authenticate HTTP or start a Router process by itself. Supply an `activate` callback if a successful save must activate your service. Activation failure restores the prior assignment document. Platform files and the running input engine remain integration responsibilities.

Source: [RouterStore and operations](#).

Input-engine API and custom sources

ControllerRouterDevice owns the merged uinput outputs. Pass a complete saved configuration and explicit platform paths. Close it during service shutdown to neutralize outputs and release devices.

```
from pathlib import Path
from router_shared.controller_router import ControllerRouterDevice

engine = ControllerRouterDevice(
    config_path=Path("/var/lib/my-controller/controller-router.json"),
    retroarch_config=Path("/path/chosen/by/your/platform/adapter.cfg"),
    es_inputs=Path("/path/to/es_input.cfg"),
)
# Run your service event loop here.
# In its shutdown/finally handler:
engine.close()
```

These paths are illustrative and must be chosen by your installer. The input engine does not write saved RetroArch configuration. Install the session adapter to supply routing settings for each launch; test your integration with isolated configuration first. A Linux service needs access to its source devices and uinput; the assignment store alone does not create controllers.

For a fixed virtual gamepad, `configured_sources(path)` validates a schema-1 source descriptor. The file allows up to 16 sources and is limited to 65536 bytes. Each source has exactly `name`, `vendor`, `product`, and `mapping`; each mapping entry has `name`, `type`, `code`, `value`, and `evdev_code`. `Vendor/product` are four hexadecimal characters. Mapping types are `button`, `axis`, or `hat`. Use the Integration Guide's descriptor as a starting point.

For the existing gesture socket, the engine uses local Unix datagrams, not an authenticated network endpoint. `virtual_state()` accepts boolean D-pad values, boolean buttons `a`, `b`, `start`, `select`, `glove_zap`, and integer axes `x`, `y`, `z`, `roll` in -32767 through 32767. Datagram payloads are bounded to 8192 bytes. Virtual state has a 500 ms stale timeout.

The `virtualglove_player` configuration field chooses the gesture stream's player. Delivery is additionally gated by recognized joystick cores in the current engine. Native hand data takes a separate product path. To support arbitrary new game/core combinations, review and extend this gating with tests, or use the fixed uinput source path instead.

Sources: [input engine](#), [source descriptor validation](#), and [gesture state contract](#).

Product adapters as API examples

R.O.B. Vision: project policy around a shared store

`tools/controller_router_setup.py` discovers Buddy's fixed pad, retains existing assignments, and adds it to Player 2. `tools/game_registry.py` authenticates its console `/router` request, checks that Buddy remains on Player 2, and delegates the requested operation to `RouterStore.operate()`.

This is the pattern for a new project with a fixed player requirement: enforce the game-specific policy in the adapter while sharing inventory, revisions, storage, and rollback. Do not fork the engine simply to reserve a player.

The Matrix adapter uses the shared client under the product's vendored namespace:

```
from controller_router_portal.client import display

display("rob_vision", "play", animation="gyromite")
display("rob_vision", "clear")
```

These requests work only while R.O.B. Vision owns selection and its manifest defines the animation. Returning `accepted` is distinct from confirmed recent Matrix delivery.

Sources: [Buddy assignment policy](#), [authenticated Router endpoint](#), and [R.O.B. Vision Matrix calls](#).

VirtualGlove: authenticated transport around the same API

`src/virtualglove/controller_router.py` re-exports the shared engine for compatibility. Its `RouterService.exchange()` implements `virtualglove-inputs/1`, validates signed messages, consumes a one-use challenge with a 15-second expiry, then calls `store.operate()` and signs the response. `router_request()` handles the paired console exchange.

A new project should reuse `RouterStore` and supply its own authenticated transport rather than copying VirtualGlove's pairing assumptions. Bound requests, correlate responses, reject replay, and keep secrets out of returned inventory.

The display adapter uses the same client API:

```
from controller_router_portal.client import display

display("virtualglove", "play", animation=profile_animation_name)
display("virtualglove", "clear")
```

`profile_animation_name` is selected by VirtualGlove and must exist in its manifest. The adapter can also request a pairing identity and PIN; Router validates that display and rejects it during a live game.

Sources: [VirtualGlove API facade and authentication](#) and [VirtualGlove Matrix calls](#).

Packaging and extension

`router_shared` is a dependency-free Python console library. The wheel contains Python and license files, not CPU-specific binaries, so it does not need a separate wheel per processor architecture. `pyproject.toml` declares Python 3.10 or newer for that standalone package. UNO Q launcher assets are bundled separately; installing the wheel alone does not install App Lab firmware, services, or browser assets. Product emulator wrappers have their own architecture requirements.

The shared source is vendored into both products. To verify copies without changing them:

```
python3 scripts/sync.py --check --virtualglove /path/to/PowerGlove
```

To publish shared changes into local product checkouts:

```
python3 scripts/sync.py --virtualglove /path/to/PowerGlove
```

The R.O.B. Vision checkout defaults to the sibling `rob-vision`; use `--rob-vision` for another location. Sync includes `router_shared` and UNO portal assets. Do not edit product copies independently. Router owns device pairing; product game actions remain in their adapters.

A future controller can reuse the console library with a source descriptor, assignment adapter, receiver, and Setup interface. Adding a third UNO Q app also requires explicit changes to the portal's allowed-app lists, health endpoints, installer registration, and manifests. The current UNO portal is not a plugin discovery system.

Verification and known limitations

Run the shared repository tests:

```
python3 -m unittest discover -s tests
```

The suites exercise library storage and mappings, portal selection and browser protections, leases, shared display validation and scheduling, and installer behavior. Mocked tests verify contracts; live tests verify the device and emulator boundary.

For a release candidate, record both install orders, repeat upgrades, one-app redirects, two-app chooser behavior, no-selection reboot, automatic game selection, first input, exit, manual-switch rejection, service loss, display expiry, and pairing. Verify preserved registry and assignment data and RetroPie ownership. Test each product's supported consoles and emulator cores separately.

The live uinput reconnect regression passed on RetroArch 1.19.1 and the separate 1.20.0 test build. Physical wireless-controller endurance testing remains a release check. Keep merged outputs alive throughout a game; if the Router process loses them, report the failure and require relaunch. See `docs/ROUTING_VALIDATION.md` for the evidence and its limits.

One selected app owns a UNO Q game at a time. The current system does not combine VirtualGlove's gestures and Buddy's game input simultaneously. Console merging within the selected product and physical sources remains available. Pairing and platform-specific support are controlled by the products, not extended merely because this library recognizes a platform.

RetroArch compatibility and launch routing

`router_shared.launch` owns session routing. `router_shared.launch_install` registers the integration during installation or upgrade and backs up replaced files. Both products bundle the same modules.

Mode	Selection	Behaviour
Legacy udev	Installed RetroArch 1.19.1 and unknown builds	Resolve name plus VID/PID into the current udev slot immediately before execution.
Native reservations	RetroArch 1.20.0 or newer with both reservation keys present in the selected executable	Set each unique merged name as a strict reservation (<code>device_reservation_type = 2</code>), with VID/PID independently validated during discovery.

Reservation strings use the unique name. RetroArch treats a VID/PID-prefixed reservation as a match on VID/PID alone; combining that prefix with a name would not validate both fields. The adapter still sets the initial numeric slot for diagnostics and startup consistency. For native reservations, it seeds a complete permutation of all 16 initial indexes, preserving the configured merged outputs. RetroArch 1.20.0 can crash in its reservation allocator when duplicate initial indexes leave holes in its inverse map; the temporary permutation prevents that failure.

On RetroPie, the installer wraps existing RetroArch commands in `emulators.cfg`. Environment assignments, core arguments, ROM arguments, native hand-input options, cabinet hooks, and existing appended files remain in place. The adapter adds its temporary configuration last in the append chain. The selected executable remains unchanged. PSP and other ordinary Libretro games use the same path. If Router is not configured, the adapter passes the command through.

On Batocera, the installer validates the Libretro generator's final command boundary and installs a narrow module overlay. It adds the adapter after generation, before execution. Game-start hooks only report sessions: they run before configgen and cannot supply reliable final routing. Unsupported generator layouts stop installation rather than guessing at a patch. The overlay is reapplied at boot against the installed generator so upstream changes are retained.

The root-owned Router configuration stays private. A public runtime manifest at `/run/virtualglove/controller-router-launch.json` contains the schema, enabled output numbers, platform, physical routing scope, and selected system IDs; the unprivileged RetroPie adapter can use it without reading physical source settings or pairing credentials.

Wireless disconnects and recovery

Merged outputs persist while physical pads sleep, wake, disconnect, or reconnect. Router reconnects each source to its saved player and refreshes frontend mappings between games. It does not recreate the merged outputs during a live game. Idle assignment edits retain existing outputs, keep newly unassigned outputs neutral, and create only newly required players. Diagnostic logs include mode, name, VID/PID, event node, and launch slot.

The adapter forwards termination signals and waits for RetroArch. On Linux, its child also receives a parent-death signal if a frontend forcibly kills the adapter. An unconfigured adapter replaces itself with the original executable, retaining the frontend's normal process lifetime. These paths avoid leaving an emulator running behind a closed launcher.

A process-lifetime ownership lock at `/run/virtualglove/controller-router-owner.lock` prevents concurrent product startup from creating duplicate merged outputs or replacing the shared socket. The lock records the owning process ID for service discovery; the open file lock, not that recorded number alone, grants ownership.

A Router restart removes those persistent devices. The adapter reports that the game must be relaunched, and Router refuses to recreate outputs while RetroArch is playing. End the game, wait for Router to become ready, then relaunch. Recreating devices midway through a legacy session cannot safely recover its original slots.

Validation scope

Live evidence is recorded in `docs/ROUTING_VALIDATION.md`. Legacy validation targets Linux's udev joystick driver. Do not infer support for another driver or an untested platform version from successful identity resolution alone.

Per-system routing policy

The format-2 document accepts `physical_scope` values `nes`, `all`, and `systems`. Selected mode stores canonical console IDs in `physical_systems`; an empty list disables routing for every system. Existing documents without a scope retain their released all-system behavior. New configurations start with NES only. Assignment-only saves from older clients preserve the current policy.

The read API includes a `systems` catalogue with ID, display name, and enabled state. System selections use the existing revision-checked save and rollback operations. Discover newly installed systems without enabling them in selected mode.

RetroPie emulator registrations and Batocera configgen pass --system to the Router adapter. The adapter supplies CONTROLLER_ROUTER_SYSTEM to the RetroArch process; the input service reads that same identity from its process environment. Core names do not distinguish systems sharing an emulator. A compatibility fallback reads the RetroPie system configuration path, or recognizes known NES cores for older NES-only launches. Selected mode with no known system passes through without routing.

Disabled launches preserve the original frontend arguments and add no Router settings. The input service leaves physical sources ungrabbed and does not forward them for that session. Merged output devices remain alive. Global, system, and override RetroArch configurations remain untouched.

RetroArch configuration precedence and upgrades

Router appends its temporary settings after existing appended files. RetroArch can still load a core or game override afterward. A user override containing joystick indexes or reservations can therefore replace the session routing. Preserve unrelated game overrides; inspect controller-specific overrides when a game selects the wrong merged player despite correct launch diagnostics.

During RetroPie installation or upgrade, Router backs up the FCEUmm and Nestopia core overrides and removes only input_player1_joystick_index through input_player4_joystick_index inside one recognized old Router block. Button bindings, hotkeys, unmarked indexes, and other settings remain. This migration is installer-only. Router never changes these files at receiver startup or game launch, and RetroPie configuration and profile files remain owned by pi:pi.

Shared device pairing

Controller Router is the connection authority. The UNO Q host broker runs secure Setup on TCP **8444** and stores schema-1 connections under /home/arduino/.local/state/controller-router/connections.json. The persistent console TLS service listens on TCP **55359**. Router has a management credential; VirtualGlove and R.O.B. Vision have distinct, independently revocable credentials. Browser responses contain only public connection and readiness fields.

router_shared.pairing.Peer checks the console certificate before sending a code or credential. The CR1 code contains a 100-bit certificate fingerprint prefix and a 60-bit authorization value. Console windows last 300 seconds, accept one successful transaction, and lock after five incorrect codes. Physical Matrix confirmation lasts 120 seconds and allows five attempts. Requests are bounded; servers allow at most 16 concurrent workers and require TLS 1.2 or later. Secure browser writes require matching HTTPS Origin, a fixed action header, and JSON content.

Provisioning uses prepare, commit, and finalize. Private journals retain the previous Router registry and app configuration; interrupted or failed transactions restore those snapshots. Successful changes keep private before-connection backups. Legacy migration verifies an HMAC over a fresh nonce, canonical console ID, and observed TLS certificate; adoption signs the new connection transcript. Consolidating a console with multiple existing app pairings requires a separate valid proof for every paired app; one app's credential cannot authorize replacing another's connection. Hostnames alone never authorize consolidation. Conflicting records remain unchanged for an explicit re-pairing choice.

Products expose /api/router-pairing only to a capability-bearing local host request. Capability files are named data/router-pairing-adapter-token and must not be exposed to browsers. Adapters import app credentials into live caches without replacing ROM registries, calibration, or player settings. Router polls for newly installed console and UNO adapters and provisions them using its pinned management connection. Disabled app access stays disabled.

The console helper has /identity, /pair, /legacy-proof, /adopt, /manage, and /router interfaces. /manage uses Router's credential for inspection, provisioning, and removal. /router uses the same credential with RouterStore revision checks for assignments and system policy. It never writes saved RetroArch configurations. Buddy's first-pair adapter adds only its Player 2 source to Router configuration; emulator configuration migration remains installation-only.

Back up the UNO Q connection registry, its tls directory, and the private before-connection backups. On RetroPie, also back up /var/lib/controller-router/link/{console-id, adapters.json, connection.json, c

ertificate.pem,private-key.pem} and each product's credential files. Restore requires the separately installed shared link service. Keep backups private; never include credentials in diagnostics or support reports. Do not snapshot a provisioning transaction in progress.