



INSTALLATION INSTRUCTIONS

# VirtualGlove Installation Guide

Install, pair, and play with the VirtualGlove Controller and supported consoles.

2026 EDITION / IAIN BENNETT / MIT LICENSE

Install VirtualGlove with one script on the **VirtualGlove Controller (Arduino UNO Q)** and one on a supported RetroArch console. The scripts prepare the software and startup helpers; you finish by pairing the devices, positioning the camera, and testing a game.

Choose **Setup -> Matrix attract mode** to keep the idle animation On, Dim it, or turn it Off except for faint connection pixels. This does not change game displays, T, L, or gesture recognition. The setting saves without a tracker restart.

For an existing installation, this update changes controller transport on both computers. Stop controller output, update both to matching software, then start and test input. Mixed old/new versions do not deliver input with the default settings. See [signed controller transport and upgrades](#) for staged upgrades and rollback.

## Install stable release v0.4.2

Stable release **v0.4.2** retains Programs 1-14, the Ready-to-Play guide, and the live joystick dead-zone camera grid. It adds source-accurate rapid-fire defaults and live Dashboard overrides, removes retired protocol and pre-0.4.1 compatibility paths, avoids repeated configuration and camera scans during Dashboard polling, and reduces the installed documentation footprint. Close games and stop controller output, then run the matching command on each device.

On the VirtualGlove Controller:

```
SH
cd /home/arduino
curl -fLO \
  https://github.com/mathan416/VirtualGlove/releases/download/v0.4.2/install-uno-q.sh
bash install-uno-q.sh --version v0.4.2
```

On RetroPie:

```
SH
curl -fLO \
  https://github.com/mathan416/VirtualGlove/releases/download/v0.4.2/install-retropie.sh \
  && bash install-retropie.sh --version v0.4.2
```

Verify both report [v0.4.2](#), then follow the pairing/first-game checks below. Existing hand settings and pairing files are preserved. The Controller installer also updates the matrix firmware. Review [coordinated transport upgrades and rollback](#) before replacing an older installation.

## v0.5.0 console support under development

VirtualGlove 0.5.0 adds Recalbox 10.x, Batocera 38+, and LaunchBox on Windows x86-64 while retaining RetroPie. Each console has a separate release installer so the package can validate the intended operating system before changing it:

| Console       | Installer                           | Persistent VirtualGlove location                                      | Game detection                    |
|---------------|-------------------------------------|-----------------------------------------------------------------------|-----------------------------------|
| RetroPie      | <a href="#">install-retropie.sh</a> | <code>/opt/virtualglove-src</code> and <code>/etc/virtualglove</code> | RetroPie runcommand hooks         |
| Recalbox 10.x | <a href="#">install-recalbox.sh</a> | <code>/recalbox/share/system/virtualglove</code>                      | bounded RetroArch process monitor |

| Console      | Installer                                       | Persistent VirtualGlove location              | Game detection                                             |
|--------------|-------------------------------------------------|-----------------------------------------------|------------------------------------------------------------|
| Batocera 38+ | <a href="#">install-batocera.sh</a>             | <a href="#">/userdata/system/virtualglove</a> | supported <a href="#">gameStart/gameStop</a> script events |
| LaunchBox    | <a href="#">launchbox/install-launchbox.ps1</a> | <a href="#">%LOCALAPPDATA%\VirtualGlove</a>   | LaunchBox RetroArch wrapper                                |

Recalbox and Batocera publish a separate Linux gamepad named **VirtualGlove Merged Player 1**. It combines one explicitly selected physical controller with VirtualGlove, and NES RetroArch uses that one merged device. The original physical controller continues to operate EmulationStation without duplicate navigation. LaunchBox retains physical XInput Player 1 and adds a LAN-isolated loopback RetroPad; real keyboard mappings remain available as a manual backup. Player 2 and unrelated RetroArch settings are preserved on every target.

Generic RetroPie continues to publish a separate **VirtualGlove** gamepad. The cabinet's combined Player 1 merger is a specialized configuration and is not silently installed on other RetroPie systems.

In the Recalbox/Batocera merger, a physical direction or stick axis wins while it is active and ordinary buttons combine across both sources. The physical hotkey has its own merged-device button; VirtualGlove Select can never enable RetroArch hotkeys. Unplugging the pad releases only its held controls and leaves VirtualGlove active until the saved controller reconnects. The merged device is neutral outside RetroArch so EmulationStation sees no duplicate navigation.

Programs 1-14, A-I, Bad Street Brawler, and Super Glove Ball can use the standard FCEUmm joystick path. Recalbox, Batocera, and LaunchBox also support native Super Glove Ball through a separately named Nestopia (VirtualGlove) core. Each core must be built with its target system's own toolchain and load-checked on that target; neither replaces stock Nestopia. FCEUmm remains the reversible fallback. The ROM-free native calibration display remains RetroPie-only.

All three platforms use the same authenticated controller transport and game registry as RetroPie. Their receiver, registry, token, launcher settings, logs, and startup integration stay in persistent storage rather than the read-only system image. Updates preserve the token, launcher destination, game registry, ROMs, saves, and controller configuration.

After installing, the Setup page offers console-specific one-time-code commands. On Recalbox run:

```
SH
sh /recalbox/share/system/virtualglove/recalbox/virtualglove-service pair
```

On Batocera run:

```
SH
/userdata/system/services/VirtualGlove pair
```

On LaunchBox run the PowerShell command shown by Setup. It invokes [%LOCALAPPDATA%\VirtualGlove\launchbox\virtualglove-pair.ps1](#). LaunchBox uses one-time-code pairing only; the Controller never requests a Windows password.

SSH password pairing also recognizes the Linux console systems automatically; use their normal [root](#) SSH account. SSH pairing is not offered for LaunchBox. No console password is retained by the Controller. Physical validation on the target hardware remains required before v0.5.0 is published.

## Recalbox native Super Glove Ball

Recalbox 10.1 has seven build targets. Native cores are never shared across these targets merely because two machines use the same broad CPU family.

| Recalbox target           | Typical hardware                                  | Core ABI   | VirtualGlove package status                                             |
|---------------------------|---------------------------------------------------|------------|-------------------------------------------------------------------------|
| <a href="#">rpizero2</a>  | Raspberry Pi Zero 2 and compatible image variants | 32-bit ARM | Included and load-tested                                                |
| <a href="#">rpi3</a>      | Raspberry Pi 3 family                             | 32-bit ARM | Included; load-tested on Pi 3, exact <a href="#">rpi3</a> image pending |
| <a href="#">rpi4_64</a>   | Raspberry Pi 4/400 and CM4                        | ARM64      | Included and manifest-verified; hardware validation pending             |
| <a href="#">rpi5_64</a>   | Raspberry Pi 5                                    | ARM64      | Included and manifest-verified; hardware validation pending             |
| <a href="#">rg353x</a>    | Anbernic RG353 family                             | ARM64      | Included and manifest-verified; hardware validation pending             |
| <a href="#">odroidgo2</a> | ODROID Go Advance/Super                           | ARM64      | Included and manifest-verified; hardware validation pending             |
| <a href="#">x86_64</a>    | PCs and Steam Deck                                | x86-64     | Included and manifest-verified; hardware validation pending             |

The package manifest records the Recalbox target and build version together with the ELF class and machine identity. The installer requires the exact target and ELF identity. It prefers an exact Recalbox release build; when that is not packaged, it selects the newest build from the same major series and load-tests the core on the console before exposing it. It never crosses a Recalbox major release. This also permits a release to carry multiple builds for one hardware target safely.

The release package includes independently built Recalbox 10.1 cores and complete corresponding source archives for all seven targets. The [rpizero2](#) and [rpi3](#) ARM32 cores both load and report [Nestopia PowerGlove](#) on the available Raspberry Pi 3 running the [rpizero2](#) image; validation on an image that reports [rpi3](#) remains outstanding. The five additional cores have passed manifest, checksum, and ELF-identity validation but have not been claimed as hardware-tested. Normal Recalbox installation verifies size, SHA-256, target and same-major compatibility, ELF identity, libretro API, and core name before exposing a core through the reversible runtime overlay. Machines without a packaged core for their target and major release still install normally and use FCEUmm.

Maintainers can reproduce a target build with the matching official Recalbox source checkout on a Linux Docker host:

```
SH
scripts/build-recalbox-nestopia-powerglove.sh /path/to/recalbox rpizero2
```

Build all seven targets supplied by one exact Recalbox release tree with:

```
SH
scripts/build-recalbox-native-matrix.sh /path/to/recalbox
```

Public images may be on different releases. Build those targets separately from their exact tagged source tree and merge the resulting target/version entry only after target-side validation.

The builder emits [nestopia\\_powerglove\\_libretro.so](#) and a matching [manifest.json](#). To test a newly built core before promoting it into a future release, copy both to the appropriate architecture package directory. The manual target installer remains available for development validation:

```
SH
sh /recalbox/share/system/virtualglove/scripts/install-recalbox-nestopia-powerglove.sh \
/path/to/nestopia_powerglove_libretro.so \
"/recalbox/share/roms/nnes/Super Glove Ball (USA).7z"
```

The installer refuses to run while RetroArch is active, checks the release manifest, and loads the library on Recalbox before installation. A runtime overlay exposes the separate core in the read-only core directory and a temporary system list advertises it to EmulationStation. EmulationStation restarts only when that runtime view first appears or changes. The exact-ROM [.recalbox.conf](#) sidecar selects [nestopia\\_powerglove](#); unrelated ROMs and settings retain their current cores. On installation and startup, VirtualGlove finds exact Super Glove Ball ROM filenames from the installed registry and creates the per-ROM selection only when that ROM has no existing core choice. Upgrades never replace an existing selection. To return only that ROM to joystick mode:

```
SH
python3 /recalbox/share/system/virtualglove/scripts/configure-recalbox-super-glove-ball-core.py \
--rom "/recalbox/share/roms/nnes/Super Glove Ball (USA).7z" \
--mode fceumm --apply
```

## Batocera native Super Glove Ball

Batocera's operating-system core directories are read-only, and its cores are architecture-specific. Normal release packages include builds for all 15 supported Batocera 43.1 targets. The installer reads [batocera.arch](#), prefers an exact release build, verifies the binary and corresponding source archive, and load-tests the libretro API and [Nestopia PowerGlove](#) identity on the console. Only then does it expose the core through reversible overlays. If no packaged core loads, installation continues with FCEUmm.

Maintainers can reproduce the full matrix with:

```
SH
scripts/build-batocera-native-matrix.sh /path/to/batocera.linux
```

The supported target names are [bcm2835](#), [bcm2836](#), [bcm2837](#), [bcm2711](#), [bcm2712](#), [x86\\_64](#), [rk3326](#), [rk3399](#), [rk3568](#), [rk3588](#), [s905](#), [s905gen2](#), [s905gen3](#), [s922x](#), and [sm8250](#). The resumable matrix skips only artifacts that pass manifest verification. The single-target builder remains available for development. A manually supplied target build can still be installed as root with:

```
SH
/userdata/system/virtualglove/scripts/install-batocera-nestopia-powerglove.sh \
/path/to/nestopia_powerglove_libretro.so \
"/userdata/roms/nnes/Super Glove Ball (USA).nes"
```

The development installer first loads the core and checks its libretro ABI. It then places it atomically in persistent storage, exposes it under the separate [nestopia\\_powerglove](#) name through reversible overlay mounts, and changes only that exact ROM's Batocera core selection. Normal startup finds exact Super Glove Ball filenames in the installed registry and selects native mode only when no explicit per-ROM core already exists. Stock Nestopia and FCEUmm remain unchanged. To return the ROM to joystick mode:

```
SH
python3 /userdata/system/virtualglove/scripts/configure-batocera-super-glove-ball-core.py \
--rom "/userdata/roms/nnes/Super Glove Ball (USA).nes" --mode fceumm --apply
```

## LaunchBox on Windows x86-64

LaunchBox remains the frontend and 64-bit RetroArch remains the emulator. Install 64-bit Python 3 with its [py](#) launcher, place the matching FCEUmm core in RetroArch, and connect to the Internet for the one-time isolated Python dependency installation. Run PowerShell as Administrator, then use:

```
POWERSHELL
powershell -ExecutionPolicy Bypass -File .\launchbox\install-launchbox.ps1 `
-LaunchBoxRoot "C:\LaunchBox" -RetroArchRoot "C:\RetroArch"
```

The installer uses the current user's Local AppData folder and preserves an existing token, game registry, and Controller address. A fresh installation uses [virtualglove.local](#); pass [-ControllerHost](#) when the Controller has a different name or fixed address. The installer backs up LaunchBox's emulator definitions, creates **VirtualGlove RetroArch**, and makes it the default Nintendo Entertainment System emulator. It invokes the installed Python bridge directly rather than relying on Windows batch-file launching. Existing NES games assigned to standard RetroArch are migrated to the bridge; games assigned to a different emulator remain explicit overrides. The ROM path remains LaunchBox's only appended argument. Every bridge launch checks that the single managed receiver is running, which restores it after a reboot. During an upgrade, close LaunchBox, Big Box, and RetroArch; the installer then stops only older VirtualGlove background processes before replacing and restarting the managed runtime, preventing two receivers from competing for the input port. Installation verifies the DLL manifest and corresponding source, then actually loads the DLL and confirms its libretro API and [Nestopia VirtualGlove](#) identity.

The wrapper exact-matches the ROM registry. Ordinary games launch with FCEUmm; Super Glove Ball launches with the separately named Windows x86-64 [nestopia\\_powerglove\\_libretro.dll](#). It keeps an authenticated game lease alive only while that exact RetroArch process runs. Unregistered games still launch with FCEUmm but do not enable gestures. If the native DLL is later missing or does not match its recorded SHA-256, Super Glove Ball safely launches with FCEUmm joystick mode and reports a warning.

For standard FCEUmm games, VirtualGlove sends core-level Player 1 controls to RetroArch's built-in Network RetroPad over [127.0.0.1](#). RetroArch's normal XInput/autoconfiguration and real arrow, X, Z, Enter, and Right Shift mappings remain enabled, so the physical joypad and manual keyboard work at the same time. The installer selects a random dynamic UDP port, enables it only in the managed FCEUmm append configuration, verifies loopback delivery, and installs a program- and port-scoped firewall rule that blocks LocalSubnet access. A keyboard-command collision is reported as a degraded manual fallback; it does not disable VirtualGlove's independent RetroPad. Native Super Glove Ball instead selects the emulated Power Glove peripheral. Its confirmed Start and Select packet codes also accept the physical Player 1 joypad's Start and Select buttons, so either the hand gesture or joypad can advance menus without replacing native hand movement. Other native packet button meanings remain deliberately unmapped until they are confirmed. During this native session, recognized gestures go only through the guarded Power Glove state channel; VirtualGlove does not also send the ordinary RetroPad controls. This prevents duplicated input and RetroArch hotkey interactions. The receiver runs in the signed-in user's desktop session; it is not installed as a Windows service.

Maintainers build the Windows core through the manually dispatched [launchbox-native-core.yml](#) workflow or in a MinGW64 environment with:

```
SH
bash scripts/build-launchbox-nestopia-powerglove.sh
```

The build applies the common native-glove patch followed by a Windows-only memory-mapping and monotonic-clock portability patch. The verifier requires a PE32+ AMD64 DLL carrying the [Nestopia VirtualGlove](#) identity. Import the reviewed DLL and its generated complete corresponding source archive under [native/launchbox/x86\\_64/](#) before building release packages.

VirtualGlove 0.4.2 is the oldest supported in-place upgrade to 0.5.0. The installer preserves current [/etc/virtualglove](#) pairing, game-registry, and Controller settings, but does not import unsupported pre-v0.4.2 installation layouts. Unsupported older data is left untouched for manual recovery. A fresh installation creates only [virtualglove-\\*](#) runtime names. Install both devices from the same release; signed protocol version 2 does not fall back to the retired unsigned transport.

## 1. Prepare your devices

You need a provisioned VirtualGlove Controller, a supported RetroArch console, a UVC USB camera, a powered USB hub, and a physical controller for RetroArch setup. Put both devices on the same trusted local network with internet access. Supply your own games; no ROMs or BIOS files are included.

For a new Controller, use Arduino App Lab to complete board setup and networking. Record the console's hostname and the UNO Q's current App Lab address. The VirtualGlove installer will offer the Controller's permanent friendly name. Connect the camera through the powered hub. You do not need to import VirtualGlove through App Lab, install Arduino build tools, or build a ZIP. The release contains a verified precompiled Matrix image; the installer checks it and loads it using the UNO Q's factory flashing tools.

Open a terminal on each device, either locally or over SSH. For the Controller:

```
SH
ssh arduino@UNO-Q-NAME.local
```

For this initial connection, use the UNO Q name or IP address shown by App Lab. It may still have its factory name. Use your normal account; the scripts request your sudo password when administrator access is needed. They do not store it. Close games before installing. Leave the devices powered and connected while installation runs; first setup can take several minutes.

The commands below automatically select the latest published stable release from GitHub. You do not need to enter a release tag or set shell variables. Run both installers during the same setup session and compare the reported release names; if a new release appeared between runs, rerun the older installation. Development prereleases are available separately in the technical reference. The latest release must include the installer assets before these commands work.

## 2. Run the VirtualGlove Controller installer

Run this single line in the Controller terminal:

```
SH
cd /home/arduino
curl -fLO \
  https://github.com/mathan416/VirtualGlove/releases/latest/download/install-uno-q.sh
bash install-uno-q.sh
```

The Controller terminal may open in `/`, where a normal user cannot save files. The command first moves to the Arduino user's writable home directory so the installer can be downloaded safely.

The script verifies its download, installs VirtualGlove, and configures automatic startup. It also installs:

- the precompiled Matrix firmware and early-start hourglass;
- the Shutdown button's system helper;
- guarded camera recovery;
- `uhubctl` for hubs that advertise safe per-port power control.

On a fresh Controller, the installer shows the current board name and suggests **virtualglove**. Press Enter to use `virtualglove.local`, or enter a different short name such as `games-room`. Confirm the displayed `.local` address before installation continues. The installer checks for a visible name conflict on the current LAN and stops safely if another device is already using it.

This question appears only for a first installation. An update never changes an established hostname. A non-interactive installation also keeps the existing board name unless `--hostname NAME` is supplied explicitly.

The terminal connection used for installation can remain open after the rename. For future browser and SSH connections, use the chosen `.local` name or one of the IP addresses printed at the end of installation.

Camera recovery is standard and is not presented as an optional prompt. The camera may be connected after installation, and no separate helper command is needed. Updates preserve pairing, calibration, and personal tuning. They back up and replace the supplied `config/profiles.json` baseline so current shared recognition defaults take effect. The installer never copies a maintainer's neutral-hand coordinates because those measurements depend on the player's camera, distance, and position.

During an update, a pending Dashboard shutdown request stops setup before host helpers are installed. Complete or clear that shutdown request, bring the Controller back online, and rerun the same installer.

If the script reports a failure, stop and follow its message. If `curl` is missing, install it with `sudo apt-get install curl ca-certificates`, then retry. The installer checks compatibility before changing the application.

The ordinary installer also includes first-setup and maintenance support: camera recovery, pairing and health checks, the optional calibration dot and its read-only report, aggregate vision status, movement-reach tools, and emulator configuration. Research replays, protocol traces, soak tests, GPU experiments, and benchmark drivers remain in the source repository and separate Engineering Tools download. They are not needed to install, calibrate, play, back up a hand setup, or update the system.

**Checkpoint:** Open the Dashboard address printed by the installer, normally `http://virtualglove.local:8088/dashboard`, in your browser. Dashboard should load. With gestures off, a closed camera is normal. Open **Play** or **Glove Academy** to check that your camera view and whole hand appear, then return to Dashboard with controller transmission stopped.

For a first setup, keep the camera choices simple:

- Leave **Camera** on Automatic unless more than one camera is connected.
- Leave **Camera reader** on Recommended - OpenCV.
- Leave frame rate and exposure on Automatic.
- If movement is delayed or tracking drops, run **Find the best camera settings** in Setup. Pixel Pal compares only choices supported by that camera and does not save a recommendation until you accept it.

Direct V4L2, manual exposure, gain, and buffer comparisons are advanced tools, not required setup steps. The [Camera Guide](#) explains what they change in plain language and how to stop or recover a camera test safely.

## Camera

Camera

Camera frame rate

Camera buffers

Camera reader

Automatic — choose the connected

30 fps

1 buffer — lowest queue depth

Recommended — OpenCV

Exposure behavior

Hand or glove (diagnostic label)

Automatic — fixed frame rate

Bare hand

Camera is delivering 30 fps. Reader: ~; automatic fixed-rate exposure unavailable.

- Automatic and OpenCV are the recommended starting point and work when the camera is connected later.
- Direct V4L2 remains available for engineering comparisons and falls back safely when unsupported.
- Manual exposure is optional, camera-dependent, and restored to automatic when tracking closes.

[Open the Camera guide](#) for compatibility, exposure, lighting, and troubleshooting.

Save camera settings



### Find the best camera settings

Pixel Pal can compare safe settings for this camera. Keep one hand visible and follow the short movement cues. No video or images are saved.

Start camera test

**Camera test cancelled**

Your original camera settings are restored. You can start a new test.

Pixel Pal recommends OpenCV recommended. Your previous settings are still active until you choose Use recommended settings.

*Advanced camera settings with Automatic, a discovered camera, and optional manual exposure*

### 3. Install the console

Choose the one subsection for your console. Install the same published version on the Controller and console, and close RetroArch first. Repeating the same installer updates VirtualGlove while preserving pairing, the Controller destination, game registry, ROMs, saves, and unrelated controller settings.

#### RetroPie

Run in the RetroPie terminal as the normal RetroPie user:

```
SH
curl -fLO \
  https://github.com/mathan416/VirtualGlove/releases/latest/download/install-retropie.sh \
  && bash install-retropie.sh
```

**Older RetroPie images:** Raspberry Pi OS Buster's Raspbian packages moved to the legacy archive. The installer detects the obsolete repository and stops before changing VirtualGlove. Follow [Buster package source moved](#), run `sudo apt-get update`, then rerun the same installer. A current RetroPie image is preferable because Buster no longer receives normal security support.

For a new installation, the script asks for your Controller hostname or IP address. Enter the `.local` name printed by the Controller installer—normally `virtualglove.local`. There are no placeholders to replace in the command. An upgrade that finds `/etc/virtualglove/launcher.json` preserves that destination and does not ask for it again. Pre-0.4.1

`/etc/powerglove` settings are no longer imported automatically.

The script installs the receiver, controller mapping, game-launch integration, and automatic startup. Existing cabinet hooks and controller assignments remain. It offers missing emulator installation through RetroPie Setup and checks registered games, including Bad Street Brawler's Glove Zap configuration.

Follow any emulator or game ACTION messages. Missing games do not prevent the base installation. If asked to launch and exit FCEUmm once, do that and rerun the installer. If you use another emulator, the installer asks before selecting FCEUmm for Bad Street Brawler.

If a registered Super Glove Ball ROM is present, the installer also offers the optional `lr-nestopia-powerglove` core. Accepting installs Git and the standard build tools, downloads the pinned GPLv2 Nestopia source, applies the included patch, builds on that RetroPie, and registers a second emulator entry. It does not change the ROM's saved emulator: FCEUmm remains selected until you choose `lr-nestopia-powerglove` from RetroPie's per-ROM launch menu. Declining is safe and leaves the tested joystick fallback unchanged. The build needs internet access and may take several minutes; no ROM is read or copied by the build.

The installer separately offers **VirtualGlove Calibration Test**. Accept it to build the small project-owned `lr-powerglove-dot` core and add a ROM-free entry to RetroPie's **Ports** list. This choice is optional and can be accepted on a later installer run. It does not select an emulator for any NES game.

**Checkpoint:** The report confirms that receiver startup is configured. Pairing and live gameplay checks will still be listed as actions.

## Recalbox 10.x

Download `install-recalbox.sh` from the same v0.5.0 release used on the Controller. Connect to Recalbox as `root`, then run:

```
SH
bash install-recalbox.sh --version VERSION --peer virtualglove.local
```

Replace `VERSION` with the published tag and `virtualglove.local` if the Controller has a different saved name or address. Do not add `sudo`; Recalbox's SSH session already runs as root. The installer places all managed files in `/recalbox/share/system/virtualglove`, adds a bounded startup/process monitor to the persistent `custom.sh`, and asks which configured gamepad is physical Player

1. If exactly one configured gamepad is connected it is selected automatically. If several are present, list their stable IDs and repeat the install with one:

```
SH
bash install-recalbox.sh --version VERSION --list-player1-devices
bash install-recalbox.sh --version VERSION --peer virtualglove.local \
--player1-device DEVICE-ID
```

The saved identity and EmulationStation mapping do not depend on a changing `/dev/input/event*` number. At boot, **VirtualGlove Merged Player 1** is created before a game starts and only the NES Player 1 joypad index is managed. An upgrade removes only the former eight VirtualGlove keyboard values and backs up the displaced NES configuration. ROMs, saves, Player 2, and unrelated settings remain unchanged.

Run the same command without `--peer` for later updates. To check without changing anything:

```
SH
bash install-recalbox.sh --check
sh /recalbox/share/system/virtualglove/recalbox/virtualglove-service status
```

The available Raspberry Pi 3 running Recalbox 10.1's [rpizero2](#) image has passed FCEUmm play, native Super Glove Ball, simultaneous physical-joypad use, and reboot persistence. Other Recalbox targets require their own matching core and hardware validation.

## Batocera 38 and newer

Download [install-batocera.sh](#) from the same v0.5.0 release used on the Controller. Connect to Batocera as [root](#), then run:

```
SH
bash install-batocera.sh --version VERSION --peer virtualglove.local
```

The installer stores managed files in [/userdata/system/virtualglove](#), enables Batocera's persistent **VirtualGlove** user service, and installs supported [gameStart/gameStop](#) lifecycle hooks. Controller selection follows Recalbox: one configured gamepad is automatic; otherwise use [--list-player1-devices](#) and [--player1-device DEVICE-ID](#). Batocera creates **VirtualGlove Merged Player 1** before RetroArch and manages only its NES Player 1 assignment. The original physical controller remains the frontend controller.

Run the same command without [--peer](#) for later updates. To check without changing anything:

```
SH
bash install-batocera.sh --check
batocera-services is-enabled VirtualGlove
/userdata/system/services/VirtualGlove status
```

The installation check reports the resolved packaged target and mounted native core separately. Exact-ROM native selection is automatic only when the registry matches a ROM and no explicit Batocera core choice already exists. Batocera live hardware and gameplay acceptance remain v0.5.0 release gates.

## LaunchBox on Windows x86-64

Install 64-bit Python with its [py](#) launcher and 64-bit RetroArch with FCEUmm. Extract the matching VirtualGlove Windows package. In PowerShell, as the same Windows user who runs LaunchBox, open PowerShell as Administrator and run:

```
POWERSHELL
powershell -ExecutionPolicy Bypass -File .\launchbox\install-launchbox.ps1 `
  -LaunchBoxRoot "C:\LaunchBox" -RetroArchRoot "C:\RetroArch" `
  -ControllerHost "virtualglove.local"
```

Use the real folders and Controller name. The installer writes only to [%LOCALAPPDATA%\VirtualGlove](#), creates an isolated Python environment, and preserves its pairing key, registry, and Controller destination on updates. If Windows requests network permission for the authenticated receiver, allow Private networks only. The separate RetroArch input port is blocked from the LAN and used only through loopback. The installer verifies hashes, loads the Windows DLL, confirms its libretro identity, and retains the reviewed manifest and corresponding source archive beside the installed core. A missing or changed DLL falls back to FCEUmm for the affected launch.

The installer adds **VirtualGlove RetroArch**, points it directly at the isolated VirtualGlove Python runtime and LaunchBox hook, and makes it the default Nintendo Entertainment System emulator. Existing emulator and NES game definitions are backed up first. Existing NES games assigned to standard RetroArch are migrated; other emulator overrides and non-NES associations remain unchanged. The hook ensures the managed receiver on every game launch, including the first launch after a reboot. Updates require LaunchBox, Big Box, and RetroArch to be closed and remove duplicate older VirtualGlove

background processes before starting the managed runtime. FCEUmm keeps RetroArch's physical XInput Player 1 controller while VirtualGlove adds loopback RetroPad state to the same player. Real keyboard controls remain available. Installation and every wrapped launch audit the effective RetroArch command and Hotkey Enable bindings; any conflict is reported for the keyboard fallback without disabling VirtualGlove or XInput. The receiver runs only in the signed-in desktop session.

## Add NES ROMs after VirtualGlove is installed

Adding a ROM never requires reinstalling either VirtualGlove machine. The frontend must discover the game, and VirtualGlove must know the exact filename when a profile should start automatically:

1. Copy the `.nes`, `.zip`, or `.7z` file into the platform's NES library and refresh or restart its frontend so the game appears.
2. Open **Setup -> Games** on the Controller. If the complete filename is not already present, add it with its profile, then select **Validate** and **Save**. Matching is exact and case-insensitive; the extension is part of the filename, so archived and unarchived copies are separate entries.
3. Follow the platform-specific launch step below.

| Platform  | ROM library and post-add behavior                                                                                                                                                                                                                                                                                                                                                             |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RetroPie  | Copy into <code>~/RetroPie/roms/nnes</code> , then restart EmulationStation or refresh its game list. Ordinary registered games use the launch hook immediately. For native Super Glove Ball, select <code>lr-nestopia-powerglove</code> for that exact ROM in the runcommand launch menu; FCEUmm remains the safe fallback.                                                                  |
| Recalbox  | Copy into <code>/recalbox/share/roms/nnes</code> , then update the game list. Restart the VirtualGlove service or reboot after adding and registering Super Glove Ball. Startup creates its <code>.recalbox.conf</code> native-core choice only when that exact ROM has no existing core override.                                                                                            |
| Batocera  | Copy into <code>/userdata/roms/nnes</code> , then update the game list. Restart the VirtualGlove service or reboot after adding and registering Super Glove Ball. Startup adds the exact-ROM native choice to <code>batocera.conf</code> only when no explicit core choice already exists.                                                                                                    |
| LaunchBox | Import the ROM into <b>Nintendo Entertainment System</b> . New games inherit <b>VirtualGlove RetroArch</b> , and installation migrates existing NES games assigned to standard RetroArch. A genuinely different per-game emulator remains untouched. The bridge reads the registry and chooses FCEUmm or Nestopia (VirtualGlove) on every launch, so no sidecar or service restart is needed. |

Existing explicit per-ROM emulator/core choices are preserved on every platform. Registering a filename changes VirtualGlove's profile selection; it does not copy, rename, scan inside, or modify the ROM.

## 4. Pair the devices

The **Controller status** panel at the top of Setup shows the four Off-mode checks in pixel order: app, console service, authenticated response, and Networking. Green means confirmed, red means disconnected or not confirmed, and grey means unknown. Networking reflects a physical Wi-Fi or Ethernet link, including USB dock Ethernet; it is independent of the console checks. These checks do not prove that the game received input.

Both pairing methods below require the six-digit approval PIN shown on the Controller matrix and the certificate-ID comparison. The selected console's one-time code or SSH password is an additional credential. A first visit may show a privacy warning because this is a private local Controller, not a public website.

Pairing gives both devices the same private token. Use the recommended one-time-code method after both installers finish.

1. Open the secure Setup address printed by the Controller installer, normally <https://virtualglove.local:8443/setup>. Under **Connection and startup**, first choose RetroPie, Recalbox, Batocera, or LaunchBox, then enter that console's hostname or IP address and select **Save connection**. Pairing remains unavailable until both are saved; unsaved edits must be saved first.
2. Continue to **Pair this Controller** in the same card, choose **One-time code (recommended)**, and select **Continue**. Use **Change** beside the saved console to edit its address before starting.
3. In **Confirm your Controller**, compare the **ID** on the physical matrix with the beginning of the browser certificate's SHA-256 fingerprint. Expand **How to compare the certificate** for guidance. If they differ, stop pairing.
4. If they match, check the confirmation box, enter the six-digit **Controller approval PIN** shown after **PN** on the matrix, and select **Continue**.
5. On the saved console, run the single command shown by Setup and leave it running. Enter its 20-character code in **Console one-time code**, then select **Pair with console** within five minutes. Setup shows only the command for the chosen platform: `sudo /opt/virtualglove/bin/virtualglove-pair` on RetroPie, `sh /recalbox/share/system/virtualglove/recalbox/virtualglove-service pair` on Recalbox, `/userdata/system/services/VirtualGlove pair` on Batocera, or the installed `virtualglove-pair.ps1` command on LaunchBox. This single-use code is separate from the Controller approval PIN. Confirm that the terminal belongs to the console named in Setup.
6. Selecting **Pair with console** brings **Pairing in progress** into view while the request runs, followed by **Pairing complete** or an error with retry instructions. Before changing its token, the console verifies that its detected platform matches the saved selection. On success, the receiver was restarted and answered an authenticated controller handshake using the newly installed token; you can open Dashboard when ready. Pairing does not arm controller output or prove that a game received input.

## Optional: remove the browser privacy warning

After the Matrix ID matches the browser certificate, return to **Trust this Controller** and download the trust certificate. Install it as a trusted root on that phone or computer, then close and reopen the browser. This is required only once per browser device and survives ordinary VirtualGlove upgrades and website certificate renewals. Setup contains current instructions for Apple, Windows, and Android devices. Never install the certificate if the Matrix comparison does not match.

After pairing, always complete the game check below. **Pairing complete** proves that the receiver accepted the shared key; the game check proves that your own camera, Controller, network, receiver, emulator, and game work together.

### Pair with RetroPie

Pair this Controller with your saved RetroPie console. Both methods use a physical confirmation on the Controller matrix.

Saved console: `RETROPIE-NAME.local` [Change](#)

1. Choose a method

2. Confirm your Controller

3. Pair with RetroPie

#### 1. Choose a pairing method

How will you connect?

☒ One-time code (recommended)  
Run a command on RetroPie and enter the code it displays.

☐ SSH password  
Use your RetroPie username and password. SSH password login must be enabled.

Continue

Guided pairing starts with the saved console and a choice of one-time code or SSH password.

### Pair with RetroPie

Pair this Controller with your saved RetroPie console. Both methods use a physical confirmation on the Controller matrix.

Saved console: `RETROPIE-NAME.local`

1. Choose a method

2. Confirm your Controller

3. Pair with RetroPie

`RETROPIE-NAME.local` · One-time code

Confirmation window: 120 seconds remaining. Console and method are fixed until it ends.

2. Confirm your Controller

The Controller matrix shows ID 1234ABCD, then a six-digit approval PIN. Compare the browser certificate with the physical matrix before entering that PIN.

► How to compare the certificate

☒ I compared the browser certificate fingerprint with the matrix ID and they match  
Controller approval PIN

Six digits shown on the Controller matrix

Continue

Controller confirmation with certificate comparison, matrix approval PIN, and remaining time.

### Pair with RetroPie

Pair this Controller with your saved RetroPie console. Both methods use a physical confirmation on the Controller matrix.

Saved console: `RETROPIE-NAME.local`

1. Choose a method

2. Confirm your Controller

3. Pair with RetroPie

`RETROPIE-NAME.local` · One-time code · Controller confirmation entered

Pairing in progress

Sending the pairing request to RetroPie. Keep this page open while we wait for its response.

SSH pairing can take a few minutes. Pairing does not start controller output.

Pairing in progress. Waiting for RetroPie...

Pairing in progress while the request waits for the selected console.

### Pair with RetroPie

Pair this Controller with your saved RetroPie console. Both methods use a physical confirmation on the Controller matrix.

Saved console: RETROPIE-NAME.local [Change](#)

1. Choose a method

2. Confirm your Controller

3. Pair with RetroPie

RETROPIE-NAME.local · One-time code · Controller confirmation entered

#### Pairing complete

The RetroPie receiver was restarted. The matrix resumes its normal display; when idle, it follows your attract setting. Open Dashboard to start controller output when you are ready. Pairing does not verify that a game received input.



[Open Dashboard](#)

Pairing complete. The RetroPie receiver was restarted.

*Pairing complete, with the next step on Dashboard.*

The Controller confirmation window lasts two minutes. The console address and pairing method stay fixed during that window. If it expires, the PIN and password are cleared; select **Start a new confirmation**. You can change methods after the window ends. A submitted failure also requires fresh confirmation before retrying. Existing server PIN attempt limits still apply. If the window expires while you obtain a console code, repeat confirmation and obtain a new code if needed; neither credential has an unlimited lifetime.

## Alternative: pair with your console password

Use this route only if the console accepts SSH password login. RetroPie normally uses [pi](#) and requires that account to run [sudo](#); Recalbox and Batocera normally use [root](#). LaunchBox uses one-time-code pairing only and never asks for a Windows password.

1. Save both the platform and console address in **Connection and startup**.
2. In **Choose a pairing method**, select **SSH password**, then **Continue**.
3. Complete the same certificate comparison and Controller approval PIN step.
4. In **Pair with your console**, enter the console username and password, then select **Pair with console**.
5. **Pairing in progress** stays visible while the request runs; SSH pairing can take a few minutes. Wait for **Pairing complete**, which includes an authenticated receiver-token check, then check the receiver service or open Dashboard. Errors are brought into view with retry instructions.

The password field is unavailable until certificate confirmation is complete. The password is used for pairing and is not saved by the Controller. Returning to **Review Controller confirmation**, a failure, expiry, or leaving the page clears it. If neither route works, use the [token-management reference](#).

When a submitted pairing attempt finishes, the matrix releases the approval PIN and resumes its normal display. When idle, the glove animation follows your On, Dim, or Off attract setting; active game and status displays still take priority.

## Optional first-game check

Select **Get ready to play** on Setup or Dashboard. The guide helps you confirm the active player and console, practice safely, center the hand, and try the ten essential controls before launching a registered game. It saves progress per player without changing Glove Academy lessons. Each visit checks live readiness again. Finish practice explicitly before enabling game controls; **Ready to play** confirms the reported connection and game mode, not game-side input receipt. If you close the guide early, reopen it to resume or use **Leave guide - keep controls stopped** to exit the output pause explicitly.

## Connection settings and recovery

**Connection and startup** saves the console platform, address, and startup game profile, then continues directly into secure pairing. Existing upgraded systems with an address and token keep operating, but must select and save their platform before pairing again. Receiver port and camera engineering controls are under their respective advanced settings. **Check console address** only checks name resolution. If loading fails, use **Reload saved settings**; if a save fails, correct or retry it without losing fields. Controller Start/Stop and shutdown are on **Dashboard**; Setup keeps the read-only tracking and output status indicators.

Use your console's [.local](#) name when possible. If that name stops resolving-or if DHCP changes a saved numeric address-VirtualGlove can look for the already paired console on the same local network. Only the secure greeting is broadcast; hand movements and button states are not. The console must prove that it has the existing pairing key before delivery resumes. Networks that isolate devices, separate them into VLANs, or block local broadcasts still require a working name, a current address, or a router DHCP reservation.

Connection saves restart tracking. The separate **Save attract mode** action changes only the idle matrix display. Hand setup, players, and backups are in **Glove Academy**. Existing private settings and calibration remain preserved through the normal installation/upgrade process; the four-pixel display needs its matching matrix firmware. Extending the fourth pixel to Ethernet only needs the updated Controller app and host sampler. Normal installation and Wi-Fi deployment also install its unprivileged host status sampler. Receiver changes take effect only after updating both the console and Controller.

## 5. Calibrate and test a game

1. On Dashboard, select a profile, wait for the camera, and show your hand. On first use, the app collects a neutral reference automatically. Use **Center hand** if your resting position produces unwanted movement or your camera/playing position changed. Hold a relaxed, open hand still at the intended center and distance until the button reports completion.
2. Select **Start controller**. This arms authenticated output; delivery begins only for an active registered game or intentional manual profile.
3. Verify the console receiver using its platform check above. On RetroPie, `grep -A8 -B2 'VirtualGlove' /proc/bus/input/devices` should show the separate **VirtualGlove** device. On Recalbox or Batocera it should show **VirtualGlove Merged Player 1** and the installation check should confirm its current NES joypad index. LaunchBox reports `network-retropad`, its random loopback port, firewall isolation, and any conflict affecting only the manual keyboard fallback.

For a visual calibration check, open **Ports -> VirtualGlove Calibration Test**. The utility selects native coordinate delivery only while it is open. The yellow dot should follow the hand; the green marker means the receiver has a fresh calibrated sample. A red X means tracking, calibration, pairing, or the sample's freshness is not ready. Adjust center or **Movement reach** on the Controller, then reopen or return to the test. Exit normally to release the test profile.

1. Use the physical controller to open RetroArch. On generic RetroPie, confirm the separate **VirtualGlove** mapping. On Recalbox and Batocera, confirm NES Player 1 is **VirtualGlove Merged Player 1** while EmulationStation still responds only to the original pad. On LaunchBox, confirm physical XInput, the loopback RetroPad, and real-keyboard fallback can all control Player 1.
2. Test D-pad, A, B, Start, and Select in a registered game, then confirm the physical joypad still works. Do not replace the entire RetroArch configuration to repair one binding.

For the first test, confirm the selected Program's control style rather than assuming every numeric profile uses ordinary hand-position movement:

| Programs     | What to expect                                                                               |
|--------------|----------------------------------------------------------------------------------------------|
| 1, 2, 11, 12 | Position-based D-pad with additional finger combinations; Program 2 also reports centering.  |
| 3, 5, 6, 8   | Side movement plus push/pull depth controls.                                                 |
| 4, 10        | Finger and wrist poses replace ordinary positional steering.                                 |
| 7            | Open-hand dodging/ducking plus positioned fist punches.                                      |
| 9            | Make a fist once to arm Rad Racer controls; this Program has no rapid fire.                  |
| 13           | VirtualGlove supplies A/B while the merged physical Player 1 controller supplies movement.   |
| 14           | Camera and VirtualGlove output intentionally stay off; use the physical Player 1 controller. |

Rapid A/B defaults on only for explicitly documented pulsed buttons: Program 7 A, Program B A, Program H A/B, and Bad Street Brawler B. Every other profile defaults off. The registry retains Mattel's explicit off entries for Blaster Master, Double Dribble, Racket Attack, Ice Hockey, and Alpha Mission. Use the [complete Programs 1-14 gesture cards and official game index](#) when confirming a compound action.

An update preserves any Rapid A/B choices already saved for a registered game. Those choices continue to override its profile defaults. To adopt the corrected defaults for that game, launch it and choose **Use profile defaults** on Dashboard. Rapid A/B controls button repetition only; profile-owned fast turns, pulsed movement, turbo movement, and compound

actions do not change.

**Checkpoint:** A gesture changes the intended control in the running game. Seeing the device name or a running service alone is not an end-to-end test. Bad Street Brawler's Glove Zap uses simultaneous Left + Right through the standard gamepad path. The RetroPie installer checks the game-specific FCEUmm option. Follow any remaining ACTION message and rerun the installer after resolving it. See [Glove Zap setup](#). No extra-trigger assignment or receiver change is required.

A calibration uses 24 geometrically valid hand observations. The Controller installer includes the validated MediaPipe Hands 0.10.35 ARM64 runtime and headless OpenCV 4.11; it does not download an older fallback or unused JAX components. MediaPipe's displayed score describes handedness certainty rather than position confidence, so it is not used as a false quality gate. Repeating calibration from the same position should give closely comparable center, scale, wrist, and jitter values, but natural landmark variation prevents an exact numeric match. Calibration is shared by every profile. Closing Dashboard after this check stops its 5 fps diagnostic preview work without stopping hand tracking or controller delivery.

For Super Glove Ball testing on RetroPie, enter the launch menu while starting the ROM and choose either [lr-fceumm](#) or [lr-nestopia-powerglove](#). Recalbox and Batocera use an exact-ROM selection for FCEUmm or their target-built Nestopia (VirtualGlove) core. The LaunchBox wrapper makes the same exact registry choice automatically. FCEUmm uses the ordinary D-pad and buttons for the whole session. The native core uses absolute X/Y/Z plus open-hand, fist, and index-point packets. Native movement uses **Latest coordinate** with MediaPipe Hands and the same saved center and reach. It validates the palm geometry and clamps it to that reach before mapping, so movement beyond an edge stays at the edge and a recovered hand normally starts from its first fresh coordinate. Latest holds only a contradictory or unusually distant non-forward reacquisition for one additional fresh result. Adjust native travel separately under **Glove Academy -> Tune gestures -> Movement reach**. Full-game cabinet play has confirmed grab/throw, index fire, and fist-plus-forward Power Punch. Continuous movement is playable, with further latency refinement still planned. Wrist rotation and remaining unused native packet fields stay neutral. Shared recognition remains available to every FCEUmm profile. A per-ROM selection is remembered, so choose FCEUmm again whenever you want the complete fallback.

Setup -> **Camera** offers Automatic, 30 fps, and 60 fps. Automatic is the 0.4.0 default: it tries the tested 30-fps path and then accepts the camera driver's usable rate if necessary. The active rate is shown while tracking runs. Other UVC cameras do not need to support both explicit rates. See the [Camera guide](#) before changing the reader, exposure, or gain. Dashboard's optional **Show statistics** switch is off by default; leave it off for the lightest gameplay page and enable it only when reading diagnostics. Controller transmission remains ahead of Dashboard housekeeping either way; opening the preview does not select a different MediaPipe preparation path.

## 6. Confirm startup and finish

- Launch a registered game and check the expected profile on Dashboard and the matrix.
- Exit the game and confirm that gestures turn off.
- Reboot both devices normally. Confirm that Dashboard returns and the matrix progresses through startup to the selected mode. The early-start helper is enabled automatically for this boot.
- Check that your saved tuning and calibration remain available.
- Select **Start controller** when ready and verify movement and buttons in the game.

The installers never reboot or request a shutdown automatically. They check that the Controller shutdown helper is ready. The tested Arduino UNO Q hardware restarts after a halt; a disconnected website or blank matrix is not proof that power can be removed.

## Updates and checks

Updates keep an inventory of installed application files. After the first inventory is created, unchanged obsolete files are backed up and removed; your own changes are kept and reported. If an update is interrupted, follow its recovery instructions before trying again.

To update, repeat the same single-line commands on both machines. Each selects the latest published stable release. Changed managed files are backed up, and the installer prints their location. It asks before interrupting an active Controller session. Close RetroArch before updating the console. [config/profiles.json](#) is intentionally replaced; saved personal tuning remains in [data/gesture-tuning.json](#).

### Upgrade from v0.4.2 to v0.5.0

Version 0.5.0 changes the internal Python package name. This is a managed upgrade from the released v0.4.2 installation, not a fresh-install requirement. Stop the Controller, close any running game, and update the Controller and RetroPie from the same v0.5.0 release.

The installers use the v0.4.2 installation manifest to verify and back up the retired application files before removing them. They also clear only generated Python bytecode from the retired package directory, then install the current [virtualglove](#) package. The upgrade preserves Controller player records, calibration, tuning, dead-zone settings, camera/device configuration, pairing credentials, console game registry, ROMs, saves, controller assignments, and the installed native core.

If an old application file was edited locally or the retired package is not covered by a valid installation manifest, the installer stops before writing anything. Back up the reported file and restore its released v0.4.2 copy before retrying, or reconcile the customization manually. Do not delete the manifest to bypass this protection.

After updating both machines, run the checks below. They now report a failure if the retired Python package remains. Confirm that both installations report the same v0.5.0 build, then verify pairing, neutral release, a standard FCEUmm game, and Super Glove Ball before returning the cabinet to service.

For checks only, use the script you already downloaded:

```
SH
# On the VirtualGlove Controller:
bash install-uno-q.sh --check
# On RetroPie:
bash install-retropie.sh --check
# On Recalbox (as root):
bash install-recalbox.sh --check
# On Batocera (as root):
bash install-batocera.sh --check
```

Checks do not download, install, restart, or change anything. They may request administrator access to inspect protected settings. LaunchBox does not have a separate system check mode: rerun its per-user installer after closing RetroArch, then complete the pairing and registered-game checks.

| Report | Meaning                                                                       |
|--------|-------------------------------------------------------------------------------|
| PASS   | The named check succeeded.                                                    |
| FAIL   | Resolve the problem before proceeding, then rerun the installer or checks.    |
| ACTION | Complete the named step, such as pairing, adding games, or checking gameplay. |

A successful technical installation can still report ACTION for the physical checks. Those checks need you and your cabinet.

If movement feels delayed after installation, use the [read-only latency baseline](#) before changing sensitivity or video settings. It separates Controller timing from the receiver, emulator, and display checks and does not enable controls.





For a specific version or a development prerelease, use the [technical installation reference](#). It also explains compatibility, package building, backups, and recovery.

## If something does not work

- **Download fails:** confirm that the latest stable release includes installer assets, check internet access, and retry. A failed verification installs nothing.
- **Unsupported board software:** complete App Lab provisioning or use a compatible project release. Do not bypass the installer's compatibility check.
- **Website does not open:** try the Controller's current IP address instead of its hostname. Use HTTP on port 8088 and HTTPS on port 8443.
- **Camera missing:** open Glove Academy and wait for the camera view. The Controller host helper automatically enrolls the single UVC camera and its parent hub on first successful use, even if no camera was connected during installation. After enrollment it makes one guarded recovery attempt during a sustained outage. Supported hubs power-cycle only the camera port; non-networking hubs may use the identity-checked whole-hub fallback. Success requires a real camera frame, not merely a device returning to USB. If it remains missing, reconnect or power-cycle the camera and check the powered hub and cable. A network-bearing hub is never reset as a unit.
- **No controller in RetroArch:** finish pairing, select Start controller, and select VirtualGlove for Port 1 using your physical controller.
- **Partial installation:** correct the reported problem and rerun the same release. Keep the printed backup location for recovery.

For diagnostic commands or manual repair, use the [configuration reference](#).

## Read the matrix and open the web pages

| Display                      | See it                                                                              | Meaning                                                                                                        |
|------------------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| Arduino boot logo            |    | System startup, before the app display.                                                                        |
| System heart                 |    | System startup is progressing.                                                                                 |
| Pulsing hourglass            |    | VirtualGlove is starting.                                                                                      |
| Lightning and animated glove |    | Gestures are off. The revised animation requires updated matrix firmware.                                      |
| Scanning <b>L</b>            |    | Play or Glove Academy practice is active; controller output is paused.                                         |
| Scanning <b>T</b>            |    | Tune gestures is active; controller output is paused.                                                          |
| <b>1-14</b>                  | Numeric program code                                                                | The corresponding original Programs 1-14 profile is selected. Older firmware safely leaves this display blank. |
| <b>A-I</b>                   |  | The corresponding profile is selected; Program A is shown.                                                     |
| <b>BS</b>                    |  | Bad Street Brawler is selected.                                                                                |
| <b>GB</b>                    |  | Super Glove Ball is selected.                                                                                  |
| Blank matrix                 |  | No LEDs are illuminated. Check board power and Dashboard; blank does not confirm shutdown.                     |
| Pulsing profile code         |  | A calibrated hand is being tracked. Confirm controller output separately.                                      |
| Blinking X                   |  | The app has requested an error display. Check Dashboard for the cause.                                         |

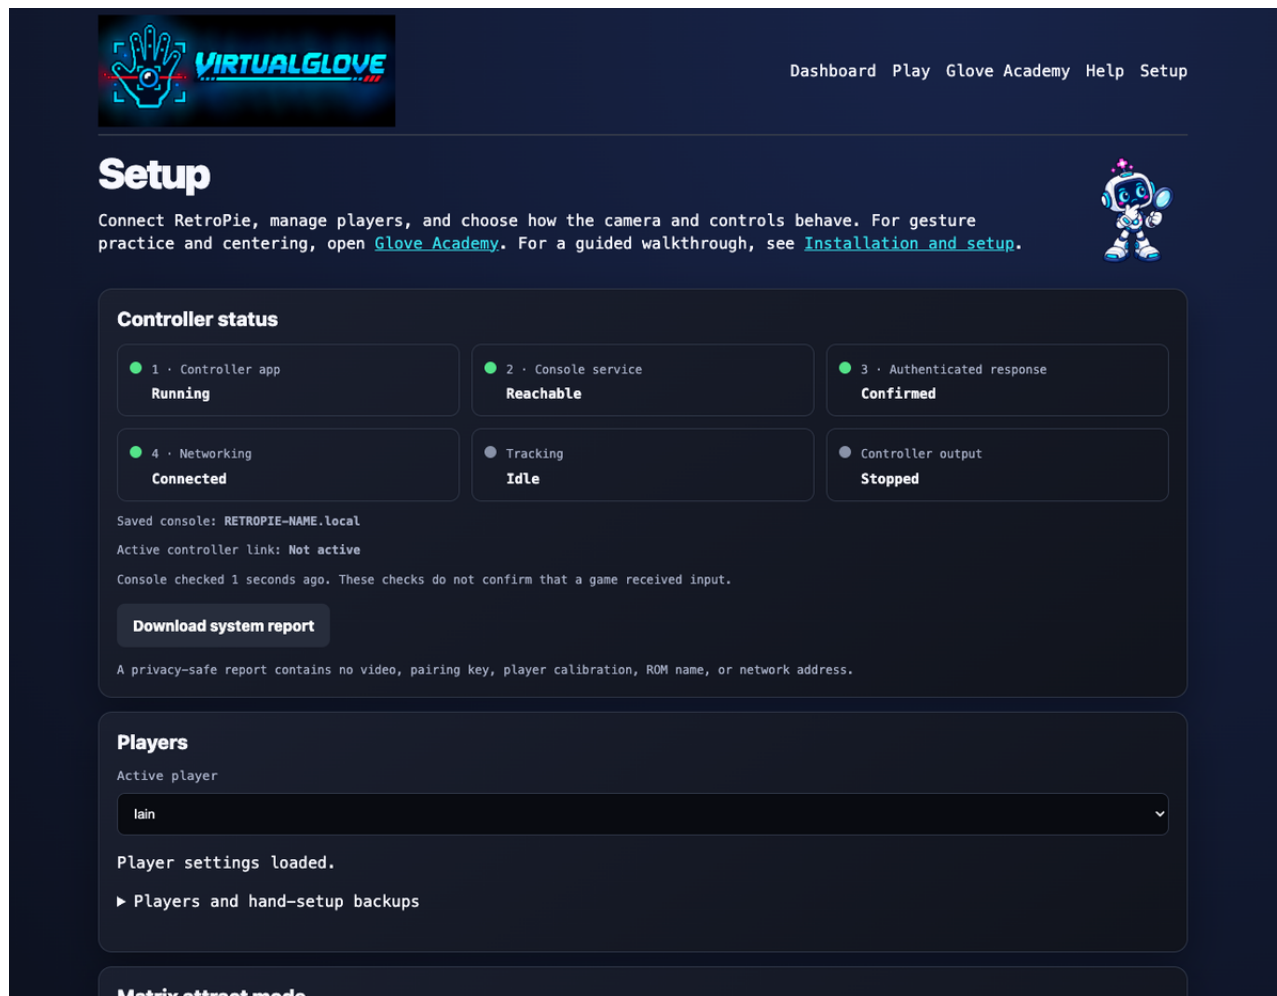
See the [Matrix display guide](#) for the complete animations and startup sequence. An animation does not prove that shutdown has finished.

| Page                        | Address                                                                                                         |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------|
| Dashboard                   | <a href="http://UNO-Q-NAME.local:8088/dashboard">http://UNO-Q-NAME.local:8088/dashboard</a>                     |
| Play                        | <a href="http://UNO-Q-NAME.local:8088/play">http://UNO-Q-NAME.local:8088/play</a>                               |
| Glove Academy               | <a href="http://UNO-Q-NAME.local:8088/learn">http://UNO-Q-NAME.local:8088/learn</a>                             |
| Games (lower Setup section) | <a href="http://UNO-Q-NAME.local:8088/setup#games-section">http://UNO-Q-NAME.local:8088/setup#games-section</a> |
| Help and printable manuals  | <a href="http://UNO-Q-NAME.local:8088/help">http://UNO-Q-NAME.local:8088/help</a>                               |
| Connection settings         | <a href="http://UNO-Q-NAME.local:8088/setup">http://UNO-Q-NAME.local:8088/setup</a>                             |
| Secure pairing              | <a href="https://UNO-Q-NAME.local:8443/setup">https://UNO-Q-NAME.local:8443/setup</a>                           |

Add and manage players in **Setup -> Players**. Choose the active player on Dashboard or in Glove Academy before practicing or playing. Progress and hand sensitivity persist across restarts and normal upgrades. Selecting a player immediately loads their sensitivity, progress, and saved center. Use **Center hand** for a new player or after moving the camera or changing playing position. Restoring a hand-setup backup requires centering unless you explicitly reuse its calibration with the same camera and playing positions. Backups include name, center-box size, personal and effective gesture sensitivity, source software identity, and calibration. VirtualGlove backup version 4 is the only supported portable format; older formats are rejected without changing the active player. The web footer reports exact software and running firmware identities; older firmware may report unavailable.

Choose each player in turn and select **Back up hand setup** to download a separate file named for that player, such as [alex-virtualglove-hand-setup.json](#). Your browser saves it on the computer, phone, or tablet you are using, usually in **Downloads** or the folder you choose. To restore, select the player you want to update, choose **Restore hand setup**, and pick that player's saved file from your device. Review it before confirming; restore updates the selected player, rather than adding a new one.

Completing all sixteen lessons replaces the lesson panel with the **Glove Master** award. **Start again** restores the lessons.



*Setup connection settings and pairing; use HTTPS to enable pairing*

Help serves the public manuals, illustrations, and PDFs locally. **This console** shows addresses derived from your current browser connection and public device settings. It never displays the token. The standalone Quick Reference is excluded from the public package; the live cabinet page supplies local details.

## Play Checklist

1. Power the selected console and VirtualGlove Controller; leave the camera connected to the powered hub.
2. Open <http://UNO-Q-NAME.local:8088/dashboard>.
3. Select the active profile on the Dashboard, then confirm the expected profile and a detected hand. The saved startup profile remains on Setup.
4. On first use, or after changing your camera or playing position, select **Center hand** while holding a comfortable neutral pose. Otherwise reuse the saved calibration.
5. Select **Start controller** when you are ready to arm gesture control.
6. Launch a registered game and confirm its profile code on the matrix. Delivery begins only after RetroArch is running and its short initialization guard ends.
7. Select **Stop controller** before adjusting the camera or leaving the cabinet.
8. Read the shutdown limitation before disconnecting power. **Shutdown** requests a graceful halt, but the tested board restarts; an offline website is not proof that it is safe to unplug.

VirtualGlove remembers the player's explicit **Start controller** or **Stop controller** choice across Controller application and system restarts. A remembered Start means **armed**, not unconditional output: controls are sent only during a live registered RetroArch session or after an intentional manual Dashboard profile selection. A registered game renews its session while RetroArch is running, so an Controller application restart can reconnect automatically. Game exit, an unknown game, or an expired session releases all controls and stops delivery without changing the armed preference. **Stop controller** remains sticky until explicitly started again. Install the same release on both devices because this behavior uses a matching Controller worker and the selected console's game-session integration.

Vision and the dashboard keep running while output is unarmed or waiting for a game, so setup never generates surprise game inputs. **Shutdown** is different: it halts Linux on the Controller. The tested board automatically restarts; remaining halted is not guaranteed.

## Fresh hardware acceptance test

Use this checklist for a new Controller and newly prepared supported console. It deliberately starts without relying on settings from the development machines.

1. Install the same release on both devices. The Controller camera may be absent during installation; connect it afterward if needed.
2. Run each available installer's final checks. Confirm the Controller website opens and the console receiver and game-session integration start normally.
3. Pair once from Setup. Confirm **Saved console**, **Console service**, and **Authenticated response**, then download the privacy-safe system report.
4. Create or rename Player 1, center the hand, set movement reach if desired, and complete a few Academy lessons. Restart the Controller and confirm those choices remain while controller output stays safely gated.
5. Launch one registered FCEUmm game and Super Glove Ball with the native core. Confirm Setup shows an active authenticated link; game play remains the final proof.
6. Restart the console receiver while the devices remain paired. Confirm the input link repairs without pairing again and stale input releases during the gap.

7. Change one device's DHCP address, or temporarily make its saved name unavailable, while both remain on the same ordinary LAN. Confirm signed discovery restores both controller delivery and the registered-game profile without changing the saved name.
8. Disconnect and reconnect the camera. Confirm the helper declares recovery only after the worker receives a frame; USB enumeration alone is insufficient.
9. Upgrade both devices with the same release again. Confirm the player, center, reach, personalization, camera choices, Academy progress, pairing, and game registry remain. Keep the printed installation backup until the next play session succeeds.

Setup's **Download system report** contains versions, camera/runtime choices, controller/profile state, and connection-check results. It contains no video, pairing key, player calibration, ROM name, or network address, so it is the preferred starting attachment when asking for help.

## Optional latency diagnostics

Normal installation leaves timing traces off and does not install or select the separate diagnostic core. The [native test procedure](#) explains temporary process environments, same-architecture diagnostic builds, private local evidence, and restoration of the normal launch configuration. Video analysis dependencies belong in a temporary Mac environment. Capture the physical hand and cabinet screen together; deployment alone is not a latency test.

For a guided symptom check, see [Troubleshooting by symptom](#).