
zx128 keyboard

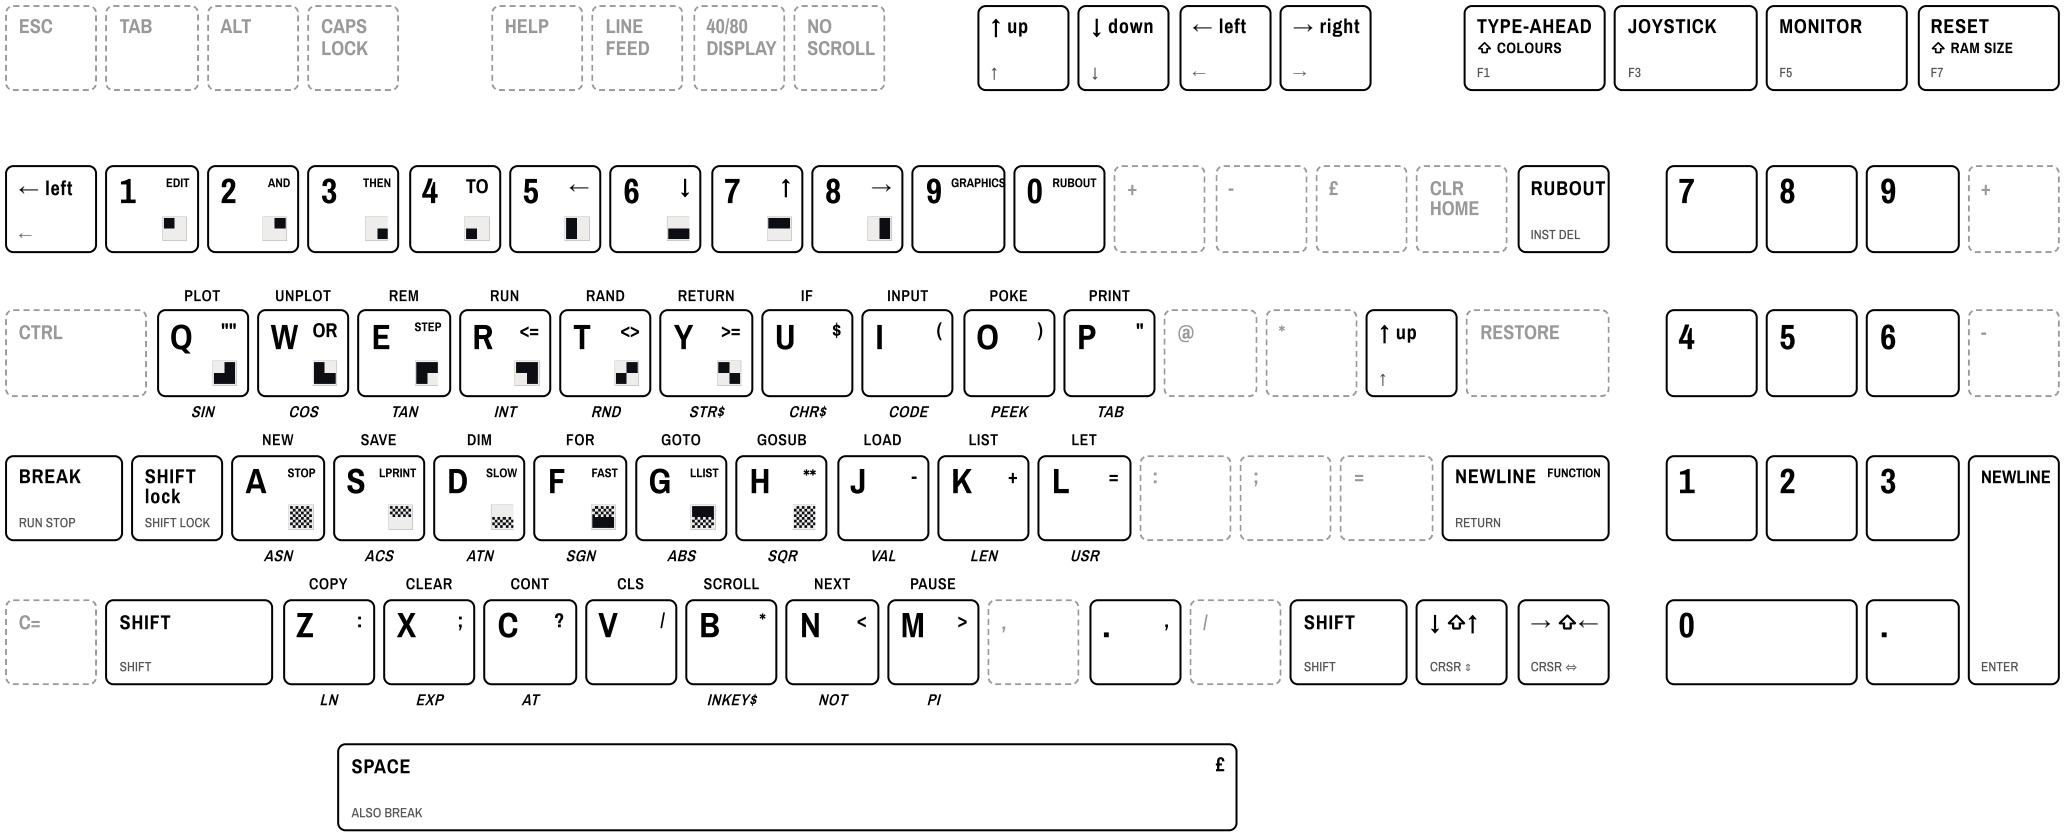

above the key: keyword, at the **K** cursor top right: with SHIFT below the key: function, after SHIFT RETURN bottom right: block graphic, SHIFT in graphics mode dashed: not used

K Keyword

Start of a line, or after THEN. A letter gives the keyword above it: P is PRINT, K is LIST. Digits give a line number.

L Letters

Everywhere else. Keys give their letter; SHIFT gives the red legend: SHIFT P is ", SHIFT L is =.

F Function

SHIFT RETURN, then one key: the function below it. B is INKEY$, T is RND, M is PI.

G Graphics

SHIFT 9 in, SHIFT 9 out. Plain keys give inverse characters; SHIFT gives the block graphic in the key's corner.

C128 KEY	ZX81
RETURN	NEWLINE. SHIFT RETURN is FUNCTION
INST/DEL	RUBOUT (the ZX81's SHIFT 0)
CRSR ⇕ CRSR ⇔	Down and right; with SHIFT, up and left (the ZX81's SHIFT 6, 8, 7, 5)
← ↑	Cursor left and up
SPACE RUN/STOP	BREAK while a program runs
SHIFT LOCK	Holds the left SHIFT down, as on the C64
SHIFT 1	EDIT: brings the current line down to be changed
F1	Type-ahead on or off
F2	The next colour scheme
F3	Joystick keys: 5678+0 or your own; hold it to teach your own
F5	The monitor; F5 or X goes back
F7	Reset
F8	Memory: 16K, 32K, 1K (resets)
↑ ↓ ← →	The four cursor keys in the top row: the ZX81's cursor keys
The keypad	Its digits and . as the main keys; ENTER as RETURN

INDEX

With SHIFT

-	J
,	.
;	X
:	Z
?	C
"	P
""	Q
(	I
)	O
*	B
**	H
/	V
←	5
→	8
↑	7
↓	6
+	K
<	N
≤	R
<>	T
=	L
>	M
≥	Y
$	U
£	SPACE
AND	2
EDIT	1
FAST	F
FUNCTION	RETURN
GRAPHICS	9
LLIST	G
LPRINT	S
OR	W
RUBOUT	0
SLOW	D
STEP	E
STOP	A
THEN	3
TO	4

At the K cursor

CLEAR	X	NEW	A
CLS	V	NEXT	N
CONT	C	PAUSE	M
COPY	Z	PLOT	Q
DIM	D	POKE	O
FOR	F	PRINT	P
GOSUB	H	RAND	T
GOTO	G	REM	E
IF	U	RETURN	Y
INPUT	I	RUN	R
LET	L	SAVE	S
LIST	K	SCROLL	B
LOAD	J	UNPLOT	W

After SHIFT RETURN

ABS	G	NOT	N
ACS	S	PEEK	O
ASN	A	PI	M
AT	C	RND	T
ATN	D	SGN	F
CHR$	U	SIN	Q
CODE	I	SQR	H
COS	W	STR$	Y
EXP	X	TAB	P
INKEY$	B	TAN	E
INT	R	USR	L
LEN	K	VAL	J
LN	Z		