

Installation Manual:

xM-3 QUATTRO-260S

(STD 60, BIO 120, BIO 300)



TABLE OF CONTENTS

1	General information	2
	Warnings	2
	Product identification	3
2	Storage, lifting & unpacking	6
	Precautions	8
3	Mounting instructions	8
	Safety precautions.....	8
	3.1.1 General.....	8
	3.1.2 Fire rating requirements.....	9
	3.1.3 Environmental conditions	9
	3.1.4 Installation requirements.....	9
3.2	Installation conditions	9
3.3	Mechanical installation.....	9
	3.3.1 Identification of VPV Unit Components	10
	3.3.2 Beginning of the Installation	10
	3.3.3 Assembly of the Start Beam with feet	10
	3.3.4 Assembly of the First VPV Unit with Start Beam-feet	11
	3.3.5 Move the Full Assembly into Position.....	15
	3.3.6 Connecting VPV Units	15
	3.3.7 Complete the First Row	16
	3.3.8 Continue with the Remaining Rows	17
	Wiring and connections	18
	Grounding and lightning protection	21
4	Maintenance and care.....	21
	Visual inspection	21
	Inspection of connectors and cables.....	22
	Cleaning	22
5	Disclaimer of liability	22
	Appendix.....	i
	Electrical data (Preliminary).....	iii
	Mechanical data	iii
	Working conditions	iv

1 GENERAL INFORMATION

Thanks for choosing *Over Easy Solar* AS vertical photovoltaic units, hereinafter referred to as *Over Easy* VPV units. The VPV Unit is designed for flat roofs with a maximum slope of up to 7-10°, depending on roof properties and valid wind load standards. This general manual provides important safety information relating to the installation, maintenance and handling of VPV units. To ensure the VPV units are installed correctly, please read the following instructions carefully before the units are installed and connected. The installation and handling of VPV units require professional skills and should only be performed by qualified professionals. Please remember that these products generate electricity and certain safety measures need to be taken to avoid danger. Failure to follow these instructions may result in death, injury or property damage.

This manual is valid for: **xM-3 QUATTRO-260S**.

Warnings

The instructions related to safety and use indicated in this installation manual are intended for the prevention of unexpected danger, damage or failure and should therefore be read and understood. Non-compliance with the instructions may cause product damage, product failure and/or serious bodily injury or death.

All VPV units must be installed by licensed electricians in accordance with the local applicable electrical codes.



VPV units generate DC current when exposed to sunlight or other light sources. Do not contact electrically active parts of the unit, such as terminals, without appropriate safety gear. Contact may result in lethal spark or electrical shock.



Use proper equipment, connectors and wires for the installation of the VPV units. Failure to comply may result in product damage, product failure or bodily injury.



Do not exceed maximum system voltage of any component. Do not disconnect any of the units when under load.



Do not reconnect or repair junction box cables. Do not bend junction box's cables while under stress. It may cause sparks, electrical shocks or panel damage.



Do not apply a shock to the junction box or pull the cables. Do not remove the labels attached to the panels. Failure to comply may result in damage to the product.



Do not remove any part installed by *Over Easy* or disassemble the unit without having the required certifications and training.



The VPV unit does not contain any serviceable parts. Do not attempt to repair any part of the unit. Do not disassemble a unit or remove any part of the unit without having the required certifications and training.



Do not artificially concentrate sunlight on the solar panel surface. Failure to comply may result in product damage or failure.



Do not use or install if the unit is broken or torn. Damaged panels must be treated with safety protection equipment.

-  Do not approach the damaged or broken panel unless you are an authorized or qualified expert. Failure to comply may result in electric shock, serious bodily injury or death.
-  Holes in the structural frame, brackets or glass of the panel may decrease the strength of the structural frame or break the glass.
-  Do not stand on or step on the panels or the metallic beams. Do not drop the unit. Do not lift the unit by the cables or the junction box. Failure to comply may result in product damage, malfunction or bodily injury.
-  Perform all work in dry conditions and use only dry tools. Do not handle wet units without appropriate protection equipment. Failure to comply may result in accident or death.
-  When installing units in rainy conditions or during morning dew, take appropriate measures to prevent water ingress into the connector.
-  Do not use units to replace parts of the roof/wall.
-  Do not install units during strong wind.
-  Do not install units where flammable gas may be present.
-  Do not connect units that have different electrical properties or physical configurations in the same system. Do not connect it with other PV systems.

Product identification

To ensure simple handling and installation of the units, the following naming is introduced (see Figure).

A preassembled *Over Easy* VPV unit is composed of four bifacial PV panels mounted vertically, it includes cables, junction boxes, brackets and the structural frame. Each VPV panel is attached to the beams with a bracket on each side, forming the structural frame. Each panel has a label, which specifies the model type, serial number and the main electrical and safety characteristics of the panel. The four panels are internally connected and secured within the beam. The product sheet details the properties of the complete VPV Unit, including the four panels and the structural frame. There is only one positive and one negative DC connector per unit, which means the four panels are electrically integrated and function as a single panel.

Since the panels are bifacial, both sides generate electrical energy when illuminated. With a bifaciality of approximately 96%, the panels are classified into a main (marked on the beam with an arrow) and a back side. The product label marks the main (front) side of the panel. Furthermore, the main side can easily be located by the male DC connector or the junction box on the right-hand side of the panel. The feet that secure the necessary ground clearance are mounted on the VPV Unit before placement on the roof. Different types of feet are offered, which vary in terms of their ground clearance and intended use:

- STD Foot 60 with friction pads and a ground clearance of 4.0 cm for flat roofs.
- BIO Foot 120 with anchoring hooks and a ground clearance of 12.0 cm for extensive green roofs (see



Figure).

- BIO Foot 300 with anchoring hooks and a ground clearance of 30.0 cm for suitable intensive green roofs.



Figure 1: Fully Assembled VPV Unit

Please consult for special cases where BIO options for flat roofs might be required, such as in areas with heavy snow or on flat roofs covered with gravel.

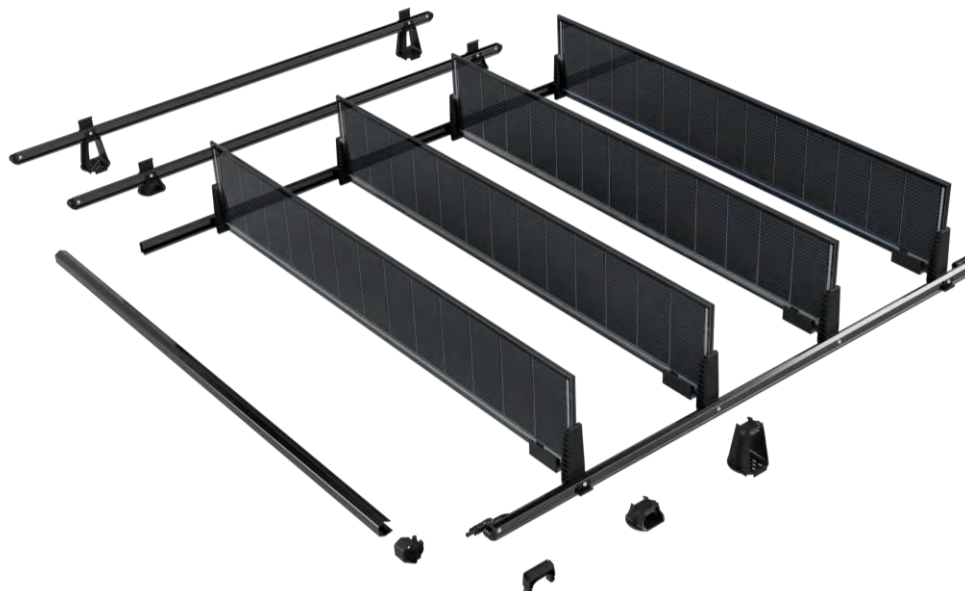


Figure 2: VPV Unit Components

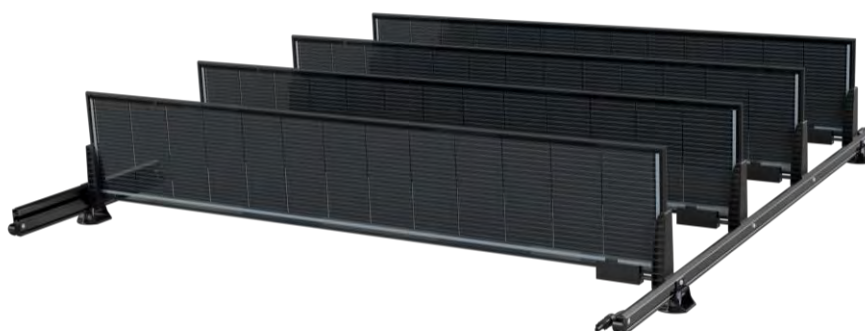


Figure 3: VPV unit with STD 60 foot for flat roof tops



Figure 4: VPV unit with BIO120 foot for green roof tops

2 STORAGE, LIFTING & UNPACKING

Over Easy units are delivered preassembled on a pallet, with 27 units per pallet (see figure 5).

Before unpacking, check for damage caused during transportation. Verify the completeness of the delivery and compare it with the delivery note. If the units are not going to be mounted in the foreseeable future, store the pallet in a dry, well-ventilated area. If the units are stored in an uncontrolled environment, the storage time should not exceed 3 months, and extra precautions should be taken to prevent the DC connectors from being exposed to moisture or sunlight, such as using connector endcaps.



Do not stack more than two pallets. The maximum height allowed is two pallets. Excessive stacking can cause stress to the wooden collars and may cause product damage.

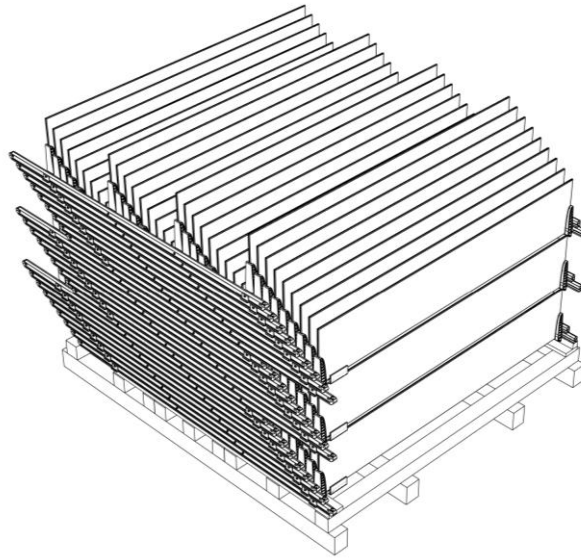


Figure 5: 27 preassembled VPV units on a pallet

Use appropriate lifting equipment (e.g., crane forks, slings, etc.) with the appropriate load capacity (min. 1 ton) and lift it onto the roof. Respect the load-bearing capacity of the roof. When lifting with slings, make sure to use long enough slings that do not squeeze or twist the units and that no point pressure is exerted on the units (see Figure 6).

On the roof, detach the lifting equipment and remove it. Use a suitable tool (e.g., screwdriver or cordless screwdriver) to loosen and remove the collar screws (if present). Store the collars safely. The unit cables are secured with cable ties — remove them using a suitable tool (e.g., side cutter).



Do not tilt the pallet.



Handle with care. The pallet includes fragile products made of glass.



Do not use a crowbar or other sharp objects to remove the collars, as they may damage the units.



Do not cut or damage the cables. This may result in product damage, malfunction or bodily injury.



Do not place or stack the units on the ground without a pallet or on the appropriate feet. This could damage the junction box.

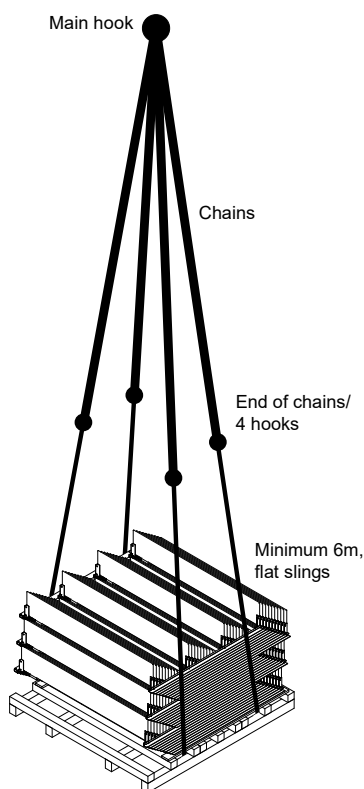


Figure 6: Appropriate lifting of pallet using slings

Precautions

- Always use both hands when handling the units.
- Do not stand, step/walk or jump on the units or any part of the units including the structural frame. This may lead to structural deformation.
- Do not lift the units by their wires or junction box, lift them by the beams or panels.
- Do not leave units unsupported or unsecured.
- Keep all connectors clean and dry at all times.
- Do not expose the units and their connectors to any unauthorized chemical substances.

3 MOUNTING INSTRUCTIONS

Prior to installing the units, please obtain information about any requirements and necessary approvals for the site, installation and inspection from the relevant authorities. Please carefully read this manual before installation.

Safety precautions

3.1.1 General

- VPV unit installation and maintenance must be performed by qualified and authorized installers.
- Read and fully understand all installation instructions before starting the installation. Secure all necessary permits and licenses to install the VPV units.

- Check applicable building codes to ensure that the construction and roof can bear the VPV system load. Protect the roof's integrity.
- Always wear protective head gear, safety shoes and insulating gloves according to the local regulations when installing VPV systems.

3.1.2 Fire rating requirements

- Consult your local authority for guidelines and requirements for building or structural fire safety.
- The units are to be mounted over a fire-resistant roof covering rated for the application.

3.1.3 Environmental conditions

- Keep the units packed on the pallet until the time of installation.
- Keep flammable gases away from the installation site.
- Do not immerse units in water or constantly expose units to water (e.g., fountains, sea spray, ...).
- Exposing units to salt in marine environments or sulfur incurs the risk of corrosion.
- Do not expose the system to any unauthorized chemical substances.
- VPV units are not intended for use indoors or on moving vehicles of any kind.
- Always keep the VPV units and system away from children.

3.1.4 Installation requirements

- Ensure that the units meet the general technical system requirements.
- Before installing the units, measure their voltage to ensure a proper electrical connection between the panels.
- Ensure that other system components do not damage the units mechanically or electrically.
- Small drainage holes on the underside of the structural frame must not be blocked.
- The units are designed for a max. roof pitch < 7-10°, depending on roof properties and valid wind load standards.

3.2 Installation conditions

Before mounting the units on the roof, make sure that the roof is free of snow, dirt, oil, water, or any other debris that could interfere with the installation and functionality of the units. Use appropriate tools such as a broom, shovel, or similar to do this. Make sure that the roof drain is not blocked by leaves, etc. and is working properly. A blocked drain can cause water/snow/ice accumulation that can reduce the functionality and life of the units. Consider the weather forecast. Do not work in rain, snow or windy conditions. While working on the roof, keep a safety distance to the edge of at least 2 m. If the provided layout plan requires the installation to be closer to the edge, the use of an appropriate safety harness according to local regulation is necessary. The applicable regulations pertaining to work safety, accident prevention and securing the construction site must be observed. Any third party needs to be protected against injuries and damage.

3.3 Mechanical installation

Before installing the units, please ensure that all previous instructions and safety requirements have been carefully reviewed and followed.

3.3.1 Identification of VPV Unit Components

Before starting the installation, it is essential to correctly identify the two distinct beams that make up the structural frame of the VPV unit: the Main Beam and the Support Beam. The main Beam is slightly lower than the other one and can be identified by the presence of the electrical cable and mounting hooks. This is the side where the feet will later be attached, as detailed in upcoming steps. The Support Beam, which is slightly higher and lacks both cable and hooks, is designed to interface with the adjacent unit during installation, ensuring proper alignment and structural continuity.

You will find the direction of the main side marked on the beam with an arrow. Additionally, the panel label and serial number are located on the main side of the panel.

In Figure 7, you can find all elements clearly marked:

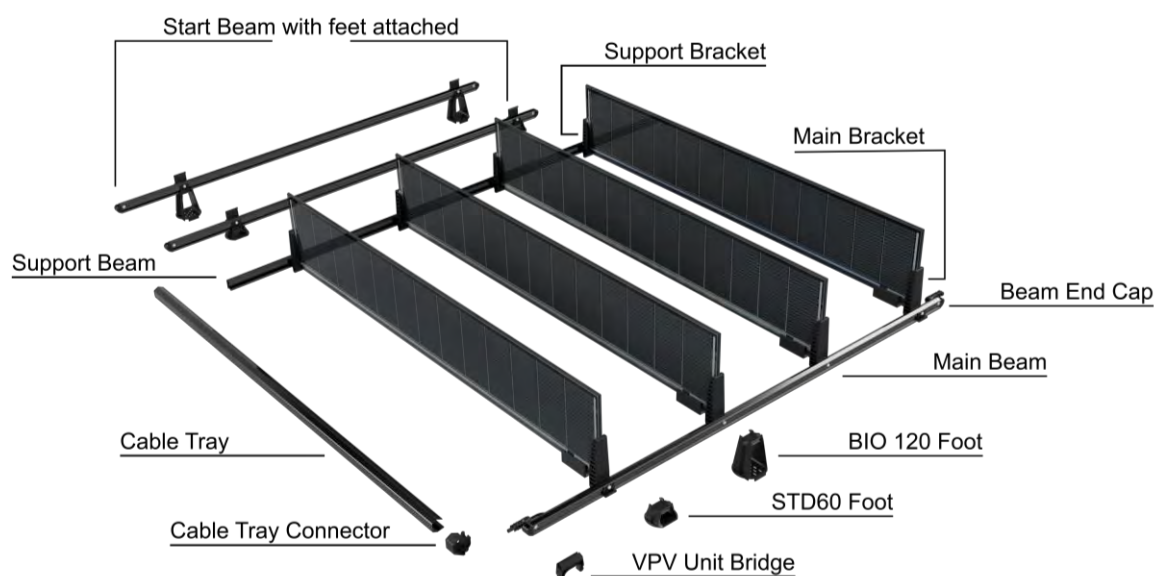


Figure 7: VPV unit with identifiable elements

3.3.2 Beginning of the Installation

Once all components have been identified, proceed to the first installation step.

Start by measuring the distances from the array to the edges of the roof, following the dimensions indicated in the layout plan. Use appropriate tools such as a folding ruler, measuring tape, laser distance meter, or chalk line. Mark the outer boundaries clearly and ensure all lines are straight and form 90° angles where needed.

1. Choose a starting point for the installation, typically a corner of the array closest to the reference edges.
2. Mark the exact distances from the roof edges using your measurement tools.
3. Stretch a string, chalk line, or laser along both axes of the array to maintain alignment throughout the installation.

3.3.3 Assembly of the Start Beam with feet

Before placing the first VPV unit, the Start Beam must be prepared and assembled.

Begin by securely attaching two feet to the hooks of the Start Beam, as shown in Figure 8. Rotate the feet until they snap securely into place. A clicking sound will confirm that they are correctly positioned. Ensure that the feet are flush and parallel to the roof surface. These feet will serve as the mounting base and will guarantee the correct installation height.

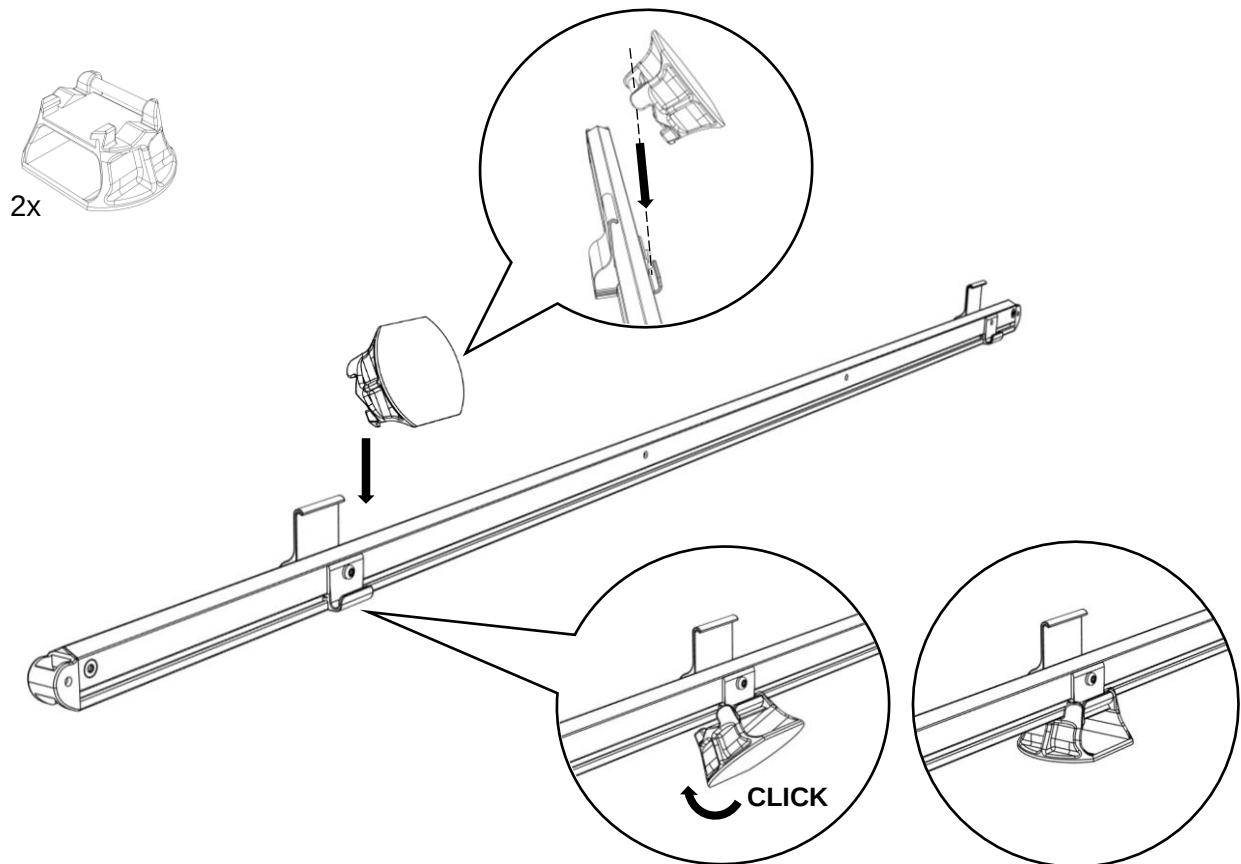


Figure 8: Assembly of the Start Beam with STD Feet 60

3.3.4 Assembly of the First VPV Unit with Start Beam-feet

Once Start Beam-feet assembly is ready, proceed with the preparation and placement of the first VPV unit on top of the Start Beam-feet assembly.

1. While the unit is still on the pallet, locate the main beam that has the hooks and pre-installed cable.
2. Attach the feet to the hooks of this main beam as shown in Figure 9.

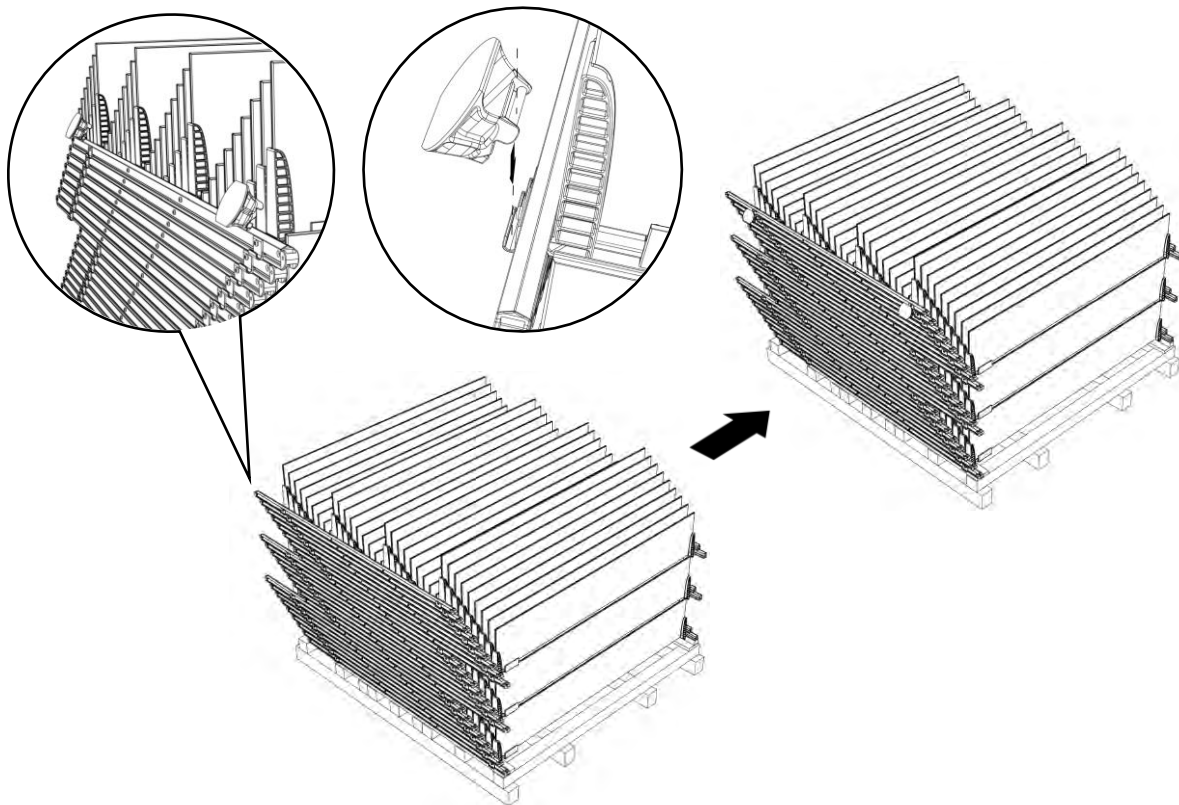


Figure 9: Attaching the feet to the VPV unit's main beam while still on the pallet.

3. With the feet securely attached, two installers should lift the unit from the pallet and carry it towards the Start Beam. For better handling and to avoid damage, carry the unit parallel to the ground, as shown below.

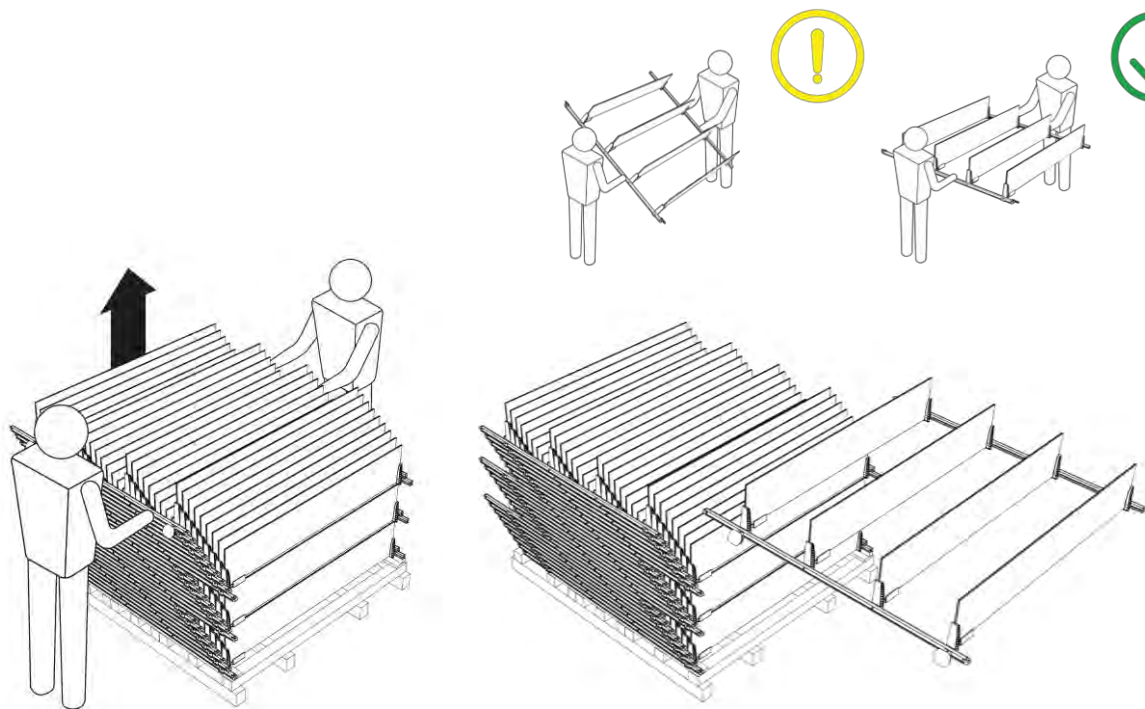


Figure 10: Proper Handling of the VPV Unit

4. Before placing the unit on the roof surface, rotate each foot until it snaps into place. A clicking sound will confirm that they are correctly positioned, ensuring it is flush and parallel to the roof surface.

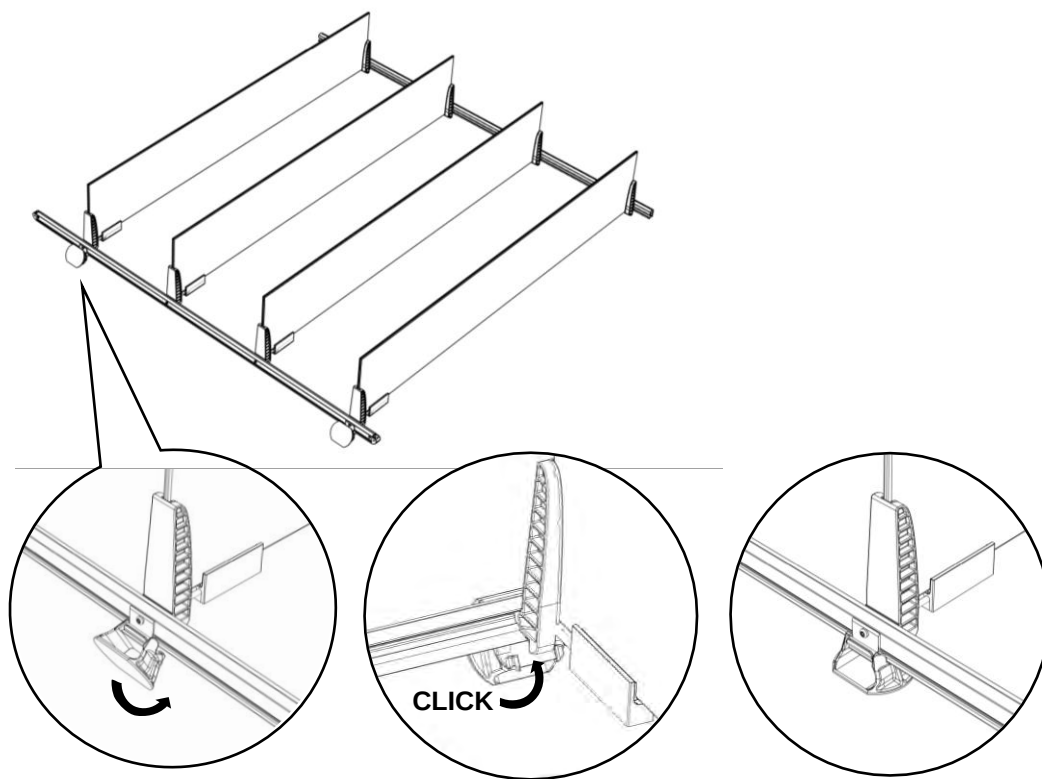


Figure 11: Foot Rotation and Snap-In Position

5. Carefully lower the unit, making sure that the Support beam (the one without feet and without cables) is properly aligned with the Start Beam. Then, slide the Start Beam into position until it securely snaps into place. A clicking sound will confirm that it is correctly positioned, as illustrated in Figure 12.

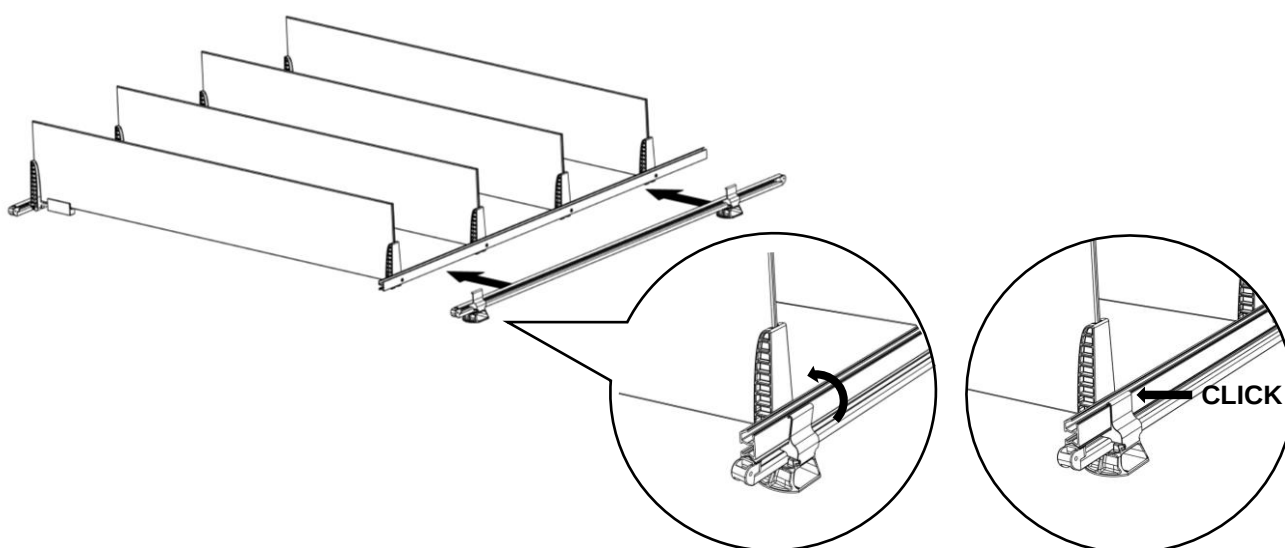


Figure 12: Alignment and Connection of the Support Beam with the Start Beam

3.3.5 Move the Full Assembly into Position

After attaching the Start Beam to the VPV unit, carefully carry the assembly to the designated starting point on the roof. This first unit will serve as the reference for positioning the entire row, so ensure it is aligned with the layout plan and the previously marked guidelines.

The placement of the first VPV unit will determine the final location of the array, making accurate positioning essential. An installation order suggestion is provided in the appendix for ideal conditions; however, the installer must adjust as needed to ensure the most efficient setup.

3.3.6 Connecting VPV Units

After placing the first unit in its designated position, repeat all previous steps for unit number two, starting from the assembly of the Start Beam with the feet to the assembly of the VPV unit with the Start Beam and feet. Then, move the fully assembled second unit into position, placing it directly behind the first VPV unit assembly.

At this point, you will need two VPV Unit Bridge, as they will connect the two units and determine the correct spacing between them. Snap the bridges into place between the two VPV unit assemblies, as shown below.

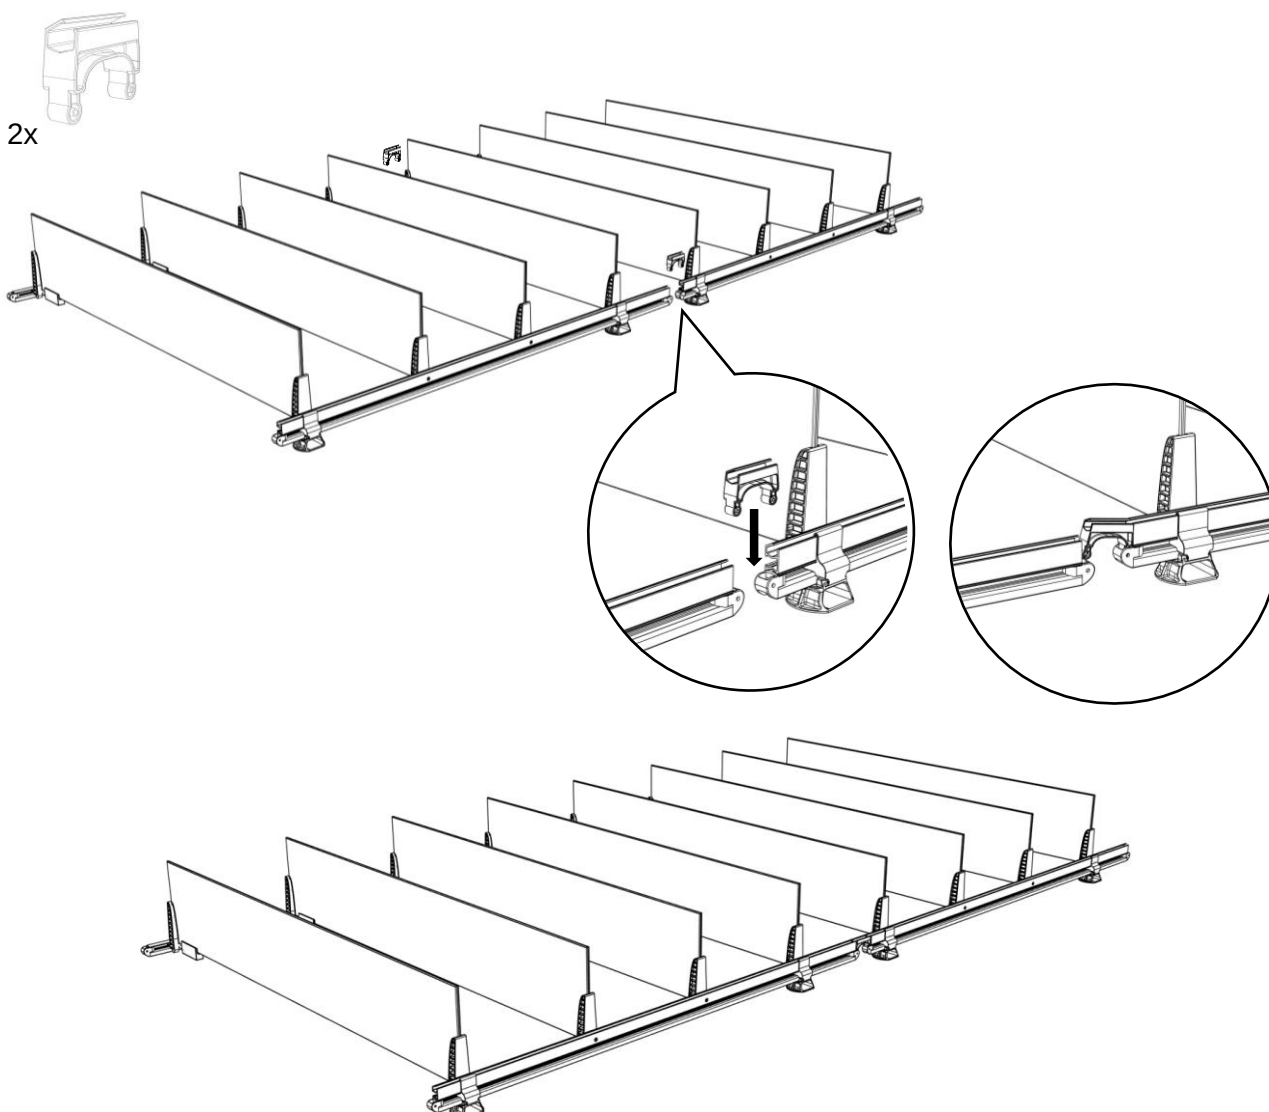


Figure 13: VPV Unit Bridge Placement

3.3.7 Complete the First Row

Once the first two VPV units have been correctly connected using VPV Unit Bridges, continue by completing the entire first row. For each additional unit in this row, repeat the same steps: assemble the VPV unit with the Start Beam and feet, move the full assembly into position behind the previous unit, and connect it using VPV Unit Bridges. This process must be followed for every unit in the first row, which is the only row where each VPV unit is assembled with a Start Beam and feet before connection.

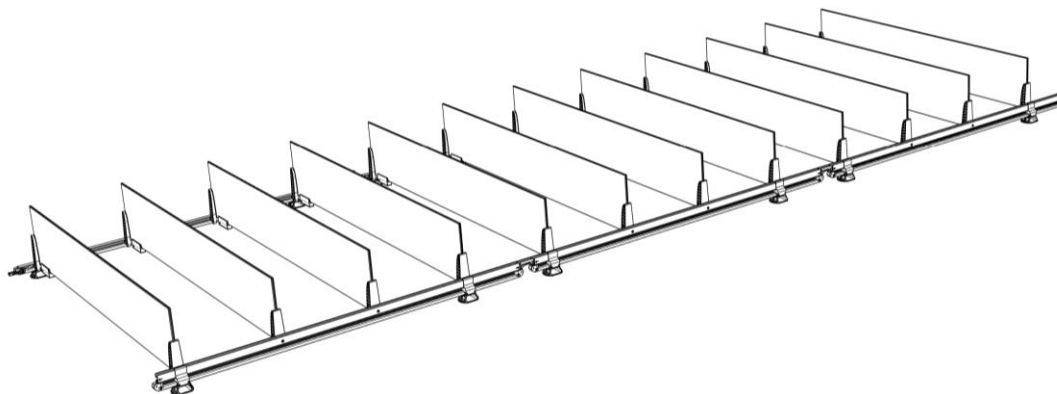


Figure 14: VPV Unit Bridge Placement

3.3.8 Continue with the Remaining Rows

After all the units of the first row are in place and connected using the VPV Unit bridges, proceed to complete the rest of the array by installing the units in the following row.

Start by attaching the feet to the hooks of the main beam on the new VPV unit, following the same procedure used earlier. Before placing the unit next to the first row, rotate each foot until it snaps into place.

Then, position the Support Beam of the new unit on top of the Main Beam of the previously installed unit on the ground. Once aligned, place the new VPV unit in place, as shown below.

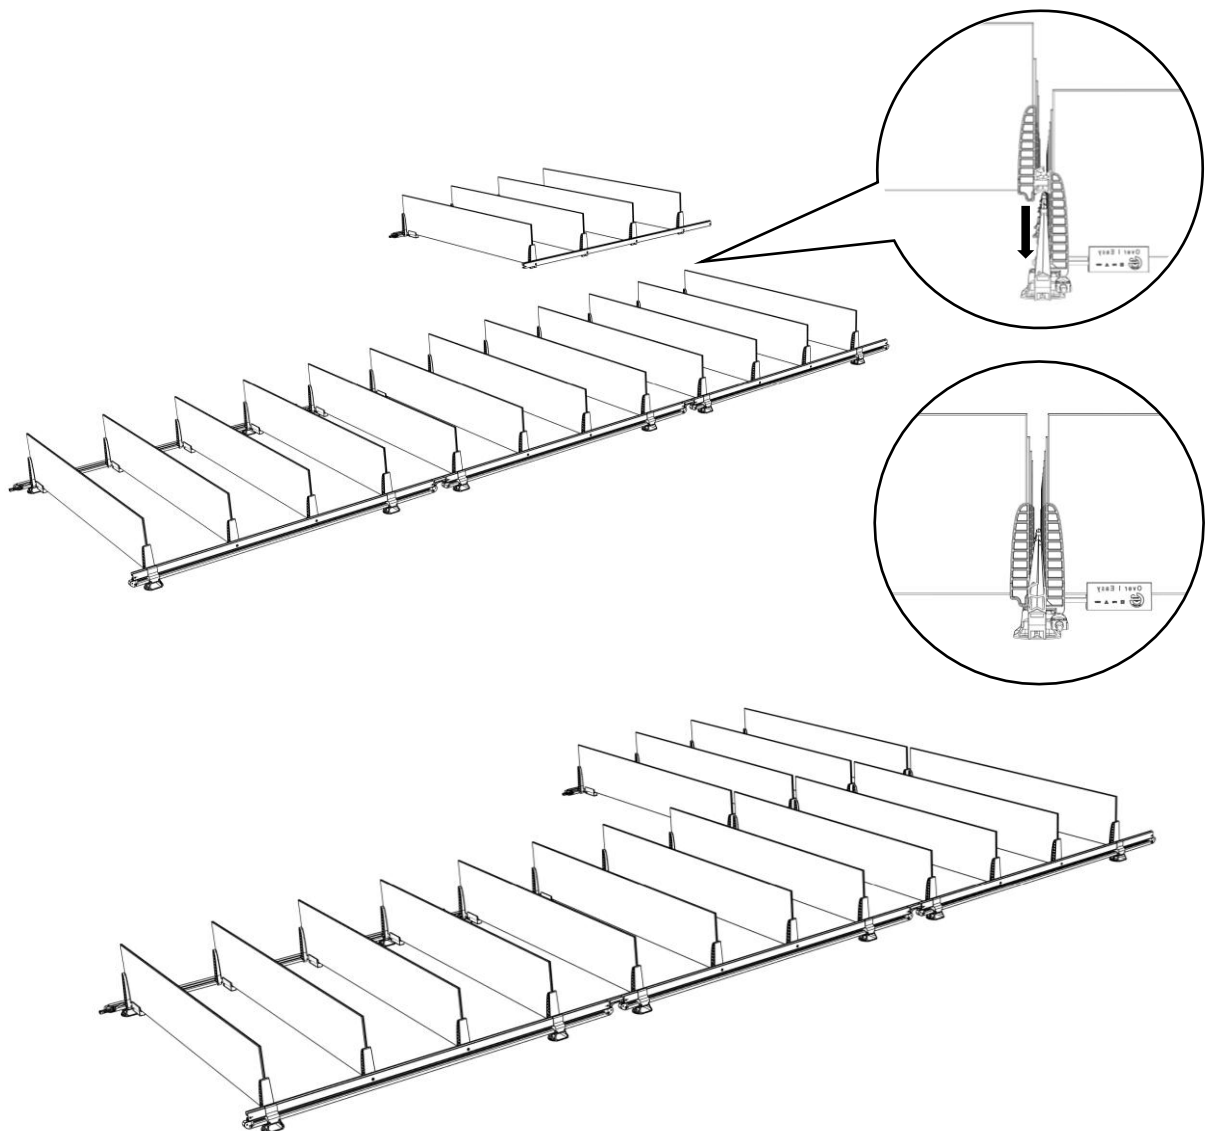


Figure 15: Aligning a New VPV Unit with the Previously Installed One

Once the units are correctly placed, use VPV Unit Bridge to connect them securely.

Repeat this process until all VPV units are installed.

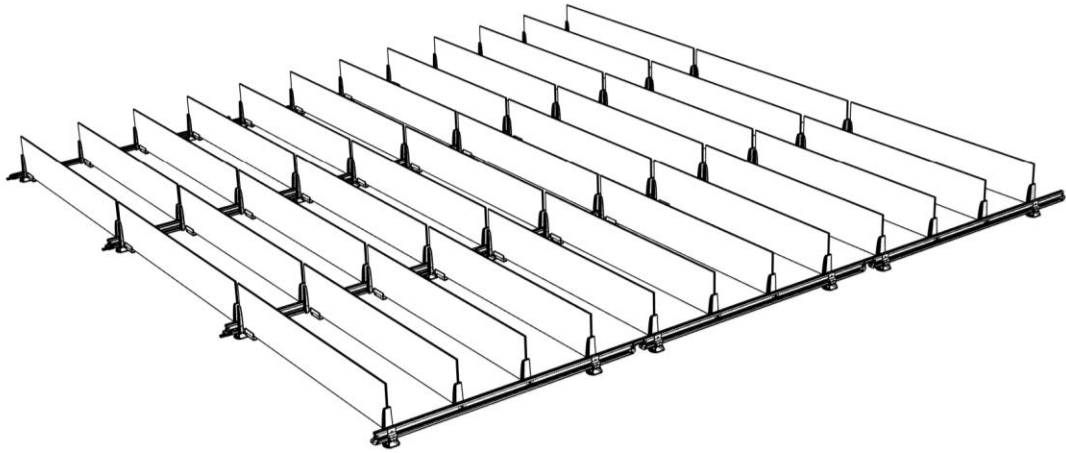


Figure 16: Finished installation

Ballasting

Ballasting is not required for most systems using the VPV Unit, as the vertically mounted panels of *Over Easy* do not create any vertical uplift force. In addition, the load sharing capability of the interconnected substructure allows high wind loads to be redistributed across the statically connected rows and columns, further reducing the need for additional ballast. For more detailed information, please refer to the provided wind load report and, if applicable, the ballast plan.

Wiring and connections

Once the units have been correctly installed and are in the correct location, a certified and authorized electrician may start the electrical installation. Therefore, the provided string plan for the correct wiring of the units needs to be considered. To electrically connect two units, connect the terminal of the first unit of a row to the opposing terminal of the next unit (see Figure 7).

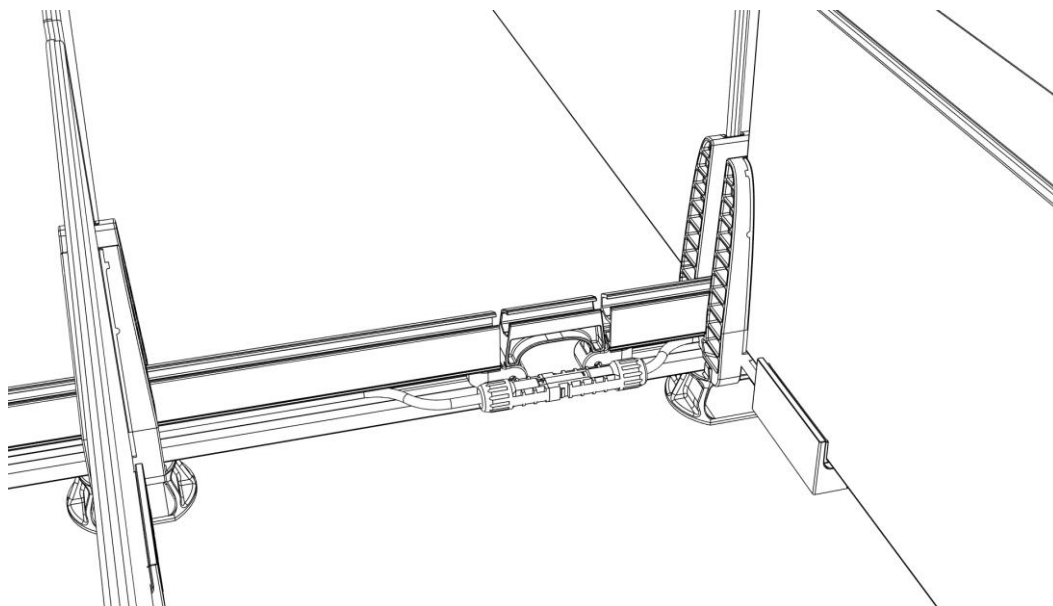


Figure 17: Electrical connection between two units

String cables can be safely stowed in the top tray of the aluminum profile.

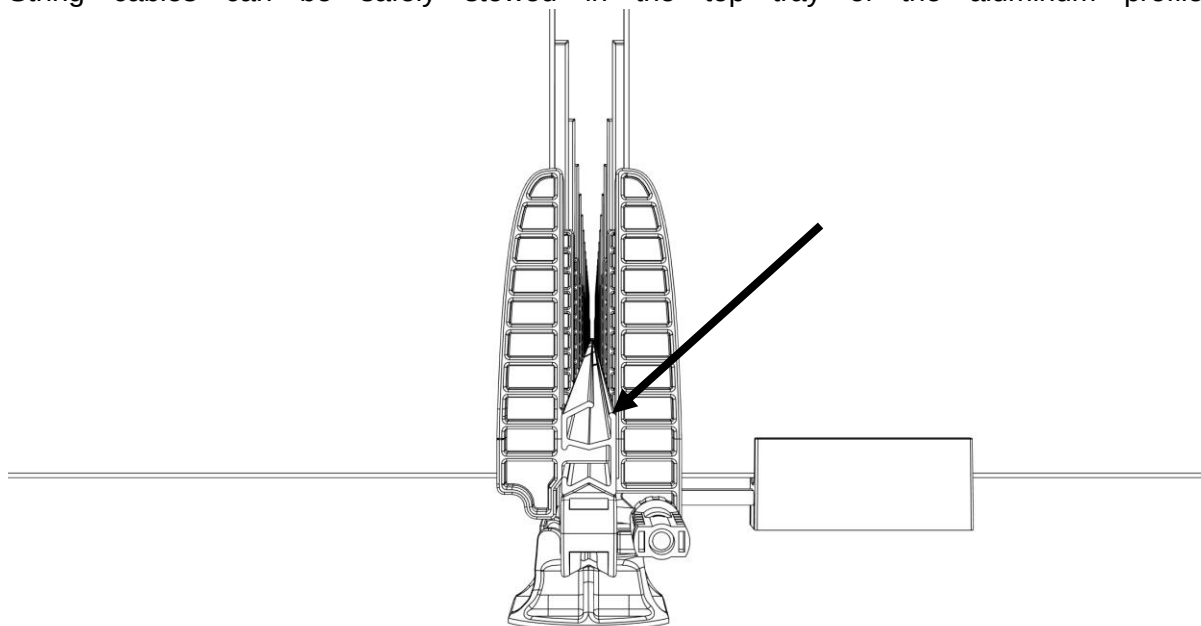


Figure 18: Integrated cable tray on top of aluminum profile

Only connect the number of units in a string that corresponds to the voltage specifications of the inverters used in the system. In addition, units must not be connected to create a voltage higher than the maximum permitted system voltage stated on the panel's datasheet. A maximum of two strings can be connected in parallel without the need to incorporate an over-current protection device (fuses, etc.) in series within each string. Three or more strings can be connected in parallel if an appropriate, certified over-current protection device is installed in series within each string. To minimize risk in the event of an indirect lightning strike, avoid

forming loops with the wiring when designing the system. Ensure that the wiring is correct before starting up the system. If the measured open-circuit voltage V_{oc} and short-circuit current I_{sc} differ substantially from the specifications, this indicates a wiring fault.



Under normal conditions, a photovoltaic panel is likely to experience conditions that produce higher current and/or voltage than reported at standard test conditions. Accordingly, the values of I_{sc} and V_{oc} , marked on this PV panel should be multiplied by a factor of 1.25 when determining component voltage ratings, conductor current ratings, and size of controls (e.g. inverter) connected to the PV output.



The safety factor of 1.25 for the minimum voltage rating of the components can be modified during the design of a system according to the minimum temperature of the location of the installation and the temperature coefficient for V_{oc} . I_{sc} can be adjusted based on maximal temperature, irradiance and orientation of the panel. To this end a full simulation for the specific location is required using long-term weather data.



The cables and connectors should not be subject to stress from the exterior. Connectors should only be used to connect the circuit, never to turn it on and off.



Connectors are not waterproof when unmated. When installing panels, connectors should be connected to each other as soon as possible or appropriate measures should be taken to avoid moisture and dust penetrating into the connector.



Only use dedicated solar cable and suitable connectors (wiring should be sheathed in a sunlight-resistant conduit or, if exposed, should be sunlight-resistant itself) that meet local fire, building and electrical regulations. Please ensure that all wiring is in perfect electrical and mechanical condition.



Installers may only use single-conductor cable with proper insulation which is able to withstand the maximum possible system open-circuit voltage.



Only copper conductor material should be used. Select a suitable conductor gauge to minimize voltage drop and ensure that the conductor's ampacity complies with local regulations.



Only units oriented in the same direction should be wired in the same string.

Grounding and lightning protection

VPV installations should comply with all applicable local electrical codes and regulations including potential equalization, functional grounding, protective grounding and lightning protection. If regulations or an assessment of special local conditions require equipotential bonding or grounding, *Over Easy* recommends connecting the rows with a suitable electrical conductor (wire with terminals, steel band etc.) using the grounding holes marked on the end of each beam (see Figure). Therefore, use flat head, thread rolling/cutting (not self-drilling) screws with the correct diameter (grounding hole: Ø5mm, 1.2mm steel sheet) and a max. length of 15 mm. The tip of the screw should not be sharp to avoid cutting of the internal cables. Other grounding equipment like grounding clips etc. may also be used. Within the rows, the beams and feet have the necessary electrical continuity. All electrical connections must be installed by qualified electricians. The grounding method must not result in the direct contact of dissimilar metals to the structural frame, which could result in galvanic corrosion. Use adequate grounding cables to connect the structural frame of the units together. The grounding hardware must not damage critical parts of the VPV unit such as brackets, cables and solar panels.

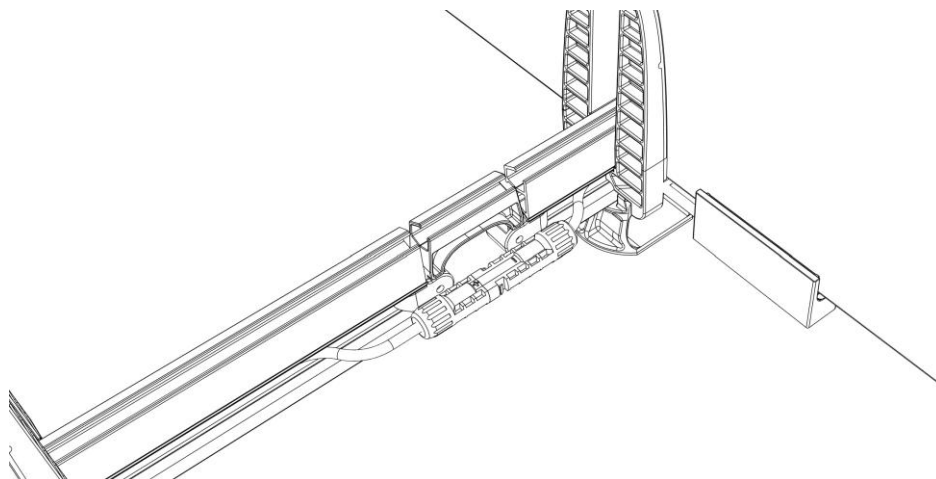


Figure 19: Marked grounding hole on one side of the beam

4 MAINTENANCE AND CARE

It is required to perform regular inspections and maintenance of the units, especially during the warranty period. To ensure optimum performance, *Over Easy* recommends the following measures.

Visual inspection

Conduct periodic inspections of the units for damage to cells, glass, structural frame, junction box, and external electrical connections.

Damage that can negatively affect the performance of the panels can be:

- Broken glass,
- Corrosion of the connections of the individual cells,
- Moisture in between the glasses,
- Formation of bubbles between the glasses,
- Burn marks in the connections.

A slight cell color difference is a normal phenomenon and does not affect the overall performance of the panel. Furthermore, check the mechanical stability of the units by visually inspecting the correct position of the beams inside the feet, the friction pads underneath the feet and the tilt angle of each individual panel.

If damage to the units has occurred, please contact your installer, they will evaluate and verify with Over Easy Solar AS on how to proceed.

Inspection of connectors and cables

To ensure the proper functionality of the VPV system and not to pose a security risk to any third parties, the following inspections and measures of the electrical connections must be taken:

- Check electrical connections for loose connections and corrosion,
- Cables and plugs must not touch the roof.

Cleaning

The cleaning of the unit once a year is recommended to ensure maximum performance of the VPV system. Please consider the following aspects:



- To avoid electrical and thermal shock, cleaning is recommended early in the morning or late afternoon or on a cloudy day when solar radiation is low.
- Water (with low mineral content recommended), ethanol or a conventional glass cleanser with a micro-fiber cloth can be used for regular washing or rinsing of the glass to remove dust, dirt or other deposits.
- Aggressive and abrasive cleansers or chemicals such as alkali chemicals including ammonia-based solution should not be used on cleaning the panel.
- Deposits of foreign material on the surface can be cleaned by using a wet sponge or cloth and dried in air or by using a clean chamois.
- Do not use abrasive material under any circumstances.
- Do not use high pressure water to remove dust, dirt or other deposits.

5 DISCLAIMER OF LIABILITY


Over Easy shall not held responsible for damages of any kind, including – without limitation – bodily harm, injury or damage to property, in connection with handling VPV units, system installation, or compliance or non-compliance with the instructions set forth in this manual.

Specifications included in this manual are subject to change by Over Easy without prior notice. Over Easy gives no warranty of any kind whatsoever, either explicitly or implicitly, with respect to the information contained herein.


APPENDIX

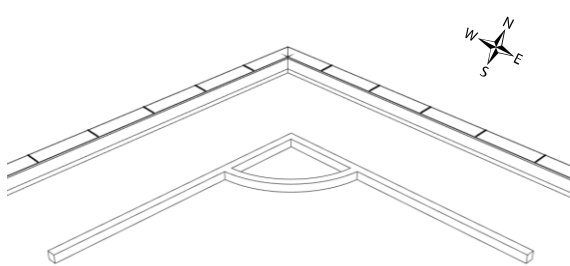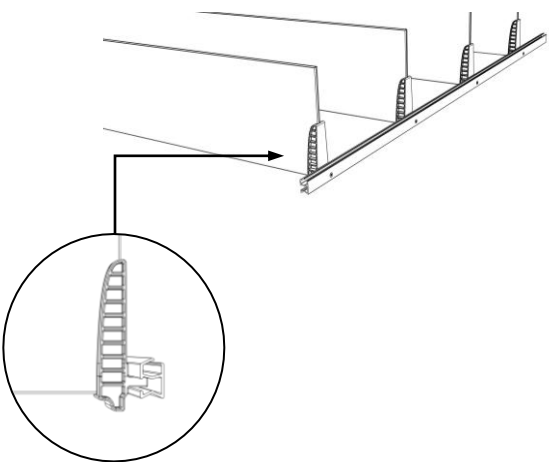1 	Start by measuring the distances from the array to the edges of the roof, according to the layout plan. Mark the boundaries using tools such as a laser or chalk lines. Make sure that all lines are properly aligned and form right angles Consult the layout plan for the correct orientation of the units, and begin by placing the first VPV unit on the roof surface.
	To prepare the first unit for placement on the roof and removal from the pallet, begin by attaching the feet to the beam of the first VPV unit. This process will be explained in more detail in points 2.1 and 2.2
2.1 	For better visualization, the following representation shows how to attach the feet using a single isolated unit. However, in practice, this process should be carried out while the unit is still stacked on the pallet.

1

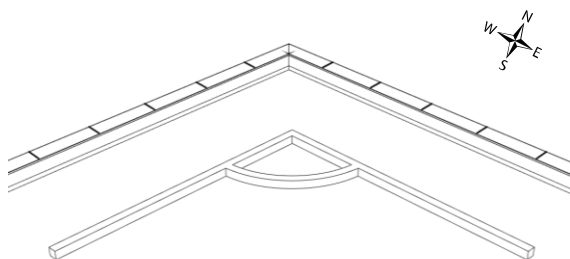


Start by measuring the distances of the array to the edge of the roof, according to the layout plan. Mark the boundaries using a laser, chalk lines, etc. Make sure that all lines are properly aligned and form right angles

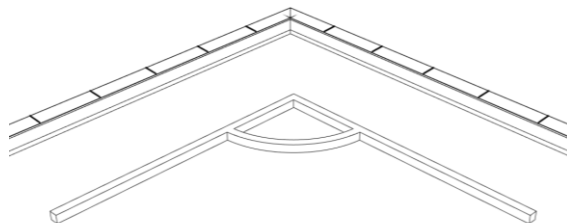


Consult the layout plan for the correct orientation of the units and start by placing the first VPV Unit on the roof surface.

3

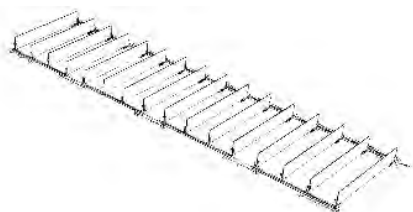


Attache the feet and lift the next unit from the pallet. Place it, and continue until the first row is finished.

4

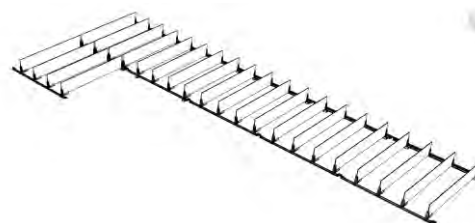


Place the first VPV Unit of each to form an inverted 'L'.

5

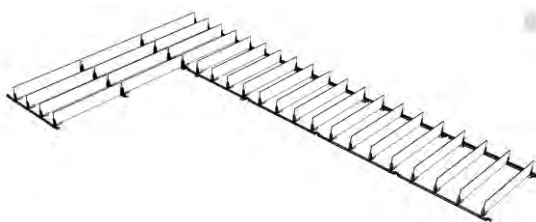

Finalize the inverted "L".

6

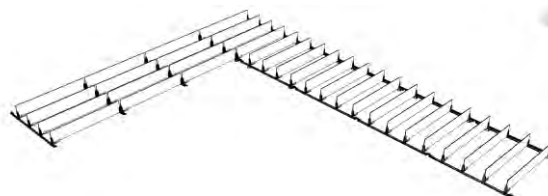


To make sure that the array is correctly aligned. Check the alignment of the inverted "L" and adjust if necessary.

7



Start filling the rows by placing the units and connecting them.

8

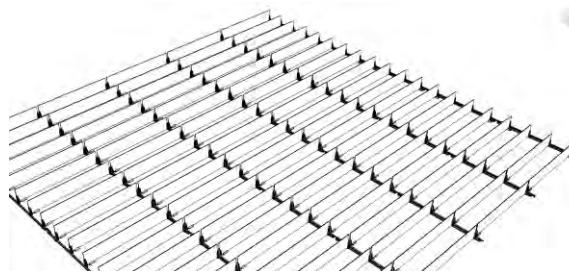

Congratulations, now you can start the electrical work.

Electrical data

Registered trade name	Over Easy Solar AS
Model	xM-3 QUATTRO-260S
Max. Power at STC (P_{max})	256 Wp
Power Tolerance	$\pm 3 \%$
Max. Power Voltage (V_{mpp})	33.04 V (Preliminary results)
Max. Power Current (I_{mpp})	8.85 A (Preliminary results)
Open-circuit Voltage (V_{oc})	39.04 V $\pm 3 \%$ (Preliminary results)
Short circuit Current (I_{sc})	8.13 A $\pm 3 \%$ (Preliminary results)
Cell Efficiency	$\geq 25.4 \%$
Temperature Coefficient of P_{mpp} ($\alpha_{P_{mpp}}$)	-0.24 %/°C
Temperature Coefficient of V_{oc} ($\alpha_{V_{oc}}$)	-0.22 %/°C
Temperature Coefficient of I_{sc} ($\alpha_{I_{sc}}$)	0.04 %/°C
Reverse current rating	20 A
Max. Overcurrent Protection Rating	20 A

* All electrical data shall be shown as relative to standard test conditions (1 000 W/m², (25 $\pm$ 2) °C, AM 1.5 according to IEC 60904-3). BNPI: Efront=1000W/m², Erear=135W/m²

Mechanical data

Cell technology	Silicon heterojunction solar cells (HJT cells)
Cell arrangement	52 (13x4)
Dimensions xM-3 QUATTRO-260S STD60 foot	5 ft 2.2 in $\times$ 4 ft 10.9 in $\times$ 11.0 in (1580 mm $\times$ 1496 mm $\times$ 280 mm)
Dimensions xM-3 QUATTRO-260S BIO120 foot	5 ft 2.2 in $\times$ 4 ft 10.9 in $\times$ 1 ft 1.4 in (1580 mm $\times$ 1496 mm $\times$ 340 mm)
Ground clearance with BIO 120 Foot	4.7" (120 mm)
Ground clearance with STD 60 Foot	2.4" (60 mm)
Weight xM-3 QUATTRO-260S	approx. 55.1 lbs. (25 kg)
Roof area covered	25.8 ft ² /unit (2.4 m ² /unit)
Area load	2.2 lbs/ft ² (10.2 to 10.8 kg/m ²)
Glass technology	2x3.2 mm tempered solar glass
Structural frame	Aluminum 6061-T6 anodized and PA66
Design load	1600Pa with Safety factors 1.5! (2400Pa positive / negative)
Junction Box	IP-68, 4x1 bypass diode
Cables	0.16" (4 mm ²) solar cable, 9.8" (25 cm) long

DC connectors	IP-68
Packaging Configuration	27 units per pallet

Working conditions

Max. System Voltage (V_{sys})	1000 V DC
Operating Temperature	-40°C to +85°C
Electrical protection class	Class II
Fire Safety Class	Class B



**Over Easy
Solar**

