

PanelStock

Standard Operating Procedures

Receiving · Dispatching · Damage · Stocktaking · Settings · CNC

Lennox Facades

For warehouse staff using PanelStock - desktop edition.

Updated 31 August 2026 | Original SOP layout restored

Contents



1. Getting Started
2. Logging In & Registering
3. Viewing Stock & Exporting Reports
4. Receiving Stock
5. Dispatching to a Job
6. Writing Off Damaged Stock
7. Job History
8. Stocktaking Procedure (Admin-initiated)
9. Voiding a Mistaken Entry (Admin)
10. Settings: Materials Catalog
11. Settings: Damage Reason Codes
12. Settings: Users
13. Settings: Email Reports
14. Settings: Backup, Reset & Recovery
15. CNC Tracker
16. Shared CNC Tracker & Excel

1. Getting Started

How to access PanelStock for the first time on your desktop.




Open the app in your browser

Open your browser and go to:

web.panelstockhq.com

Or scan this code to open the link directly.

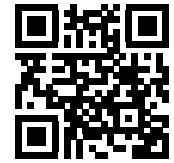

Using PanelStock

Use the left sidebar to open Stock, Receive, Dispatch, Damage, CNC, Jobs and Settings.

Your account and permissions

Use your own account. Users and admins can receive stock, add a missing material with a receipt, dispatch, record damage, add offcuts and complete CNC work. Admins manage catalog settings, scheduling, user access and resets.

Before you leave the device

Check the sync indicator after recording work. Saved on this device does not mean other devices have received the update. Keep pending changes available for review.

Screenshots in this guide

The original numbered-step and screenshot layout is retained. Current screenshots use isolated example data; relevant original examples are preserved. Do not copy example quantities or job details into live work.

2. Logging In & Registering



First time using PanelStock on this device

A screenshot of a mobile app's registration screen. At the top, there are two buttons: "Log in" (light blue) and "Register" (white with a black border). Below these is the heading "Register a new user" in bold. A sub-heading reads "Ask whoever manages this app for the 6-digit registration code, then choose your own username." There are two input fields: the first is labeled "Choose a username" and contains the text "admin"; the second is labeled "Registration code" and contains the placeholder text "6-digit code". At the bottom is a large teal button labeled "Continue".

Log in Register

Register a new user

Ask whoever manages this app for the 6-digit registration code, then choose your own username.

Choose a username

admin

Registration code

6-digit code

Continue

- 1 Open the app, then select **Register**.
- 2 Enter your own **username**. Use a separate account for each staff member.
- 3 Enter the current **six-digit registration code** supplied by an admin.
- 4 Select **Continue**, then choose and confirm a unique **6-12 digit personal PIN**.

Keep your personal PIN private. Never put it in job notes or share an admin login.

Returning after the app has logged you out



Use your own account so stock changes and CNC completions are attributed to you.

A screenshot of the PanelStock mobile app login screen. At the top, there are two tabs: "Log in" (highlighted) and "Register". Below the tabs, the text "Log in to PanelStock" is displayed. There are two input fields: "Username" with the text "admin" and "PIN" with the placeholder text "Your PIN". Below the PIN field is a checkbox labeled "Remember my username on this device" which is checked. At the bottom is a large blue button labeled "Log in".

Log in Register

Log in to PanelStock

Username

admin

PIN

Your PIN

☒ Remember my username on this device

Log in

- 1 Select the **Log in** tab.
- 2 Check the **username**. If changes are waiting to sync, sign in as the account that created them.
- 3 Enter your personal **PIN** and select **Log in**. Ask an admin for a PIN reset if you have forgotten it.
- 4 On a shared device, turn off **Remember my username** if appropriate and log out when finished.

A saved username is not a shared account. Check the sync status before leaving the device.

3. Viewing Stock & Exporting Reports



Check stock on hand before taking or receiving material.

Stock on Hand

Every full panel and off-cut currently in the warehouse, grouped by material and colour.

TOTAL PANELS ON HAND
21

DISTINCT MATERIALS
5

AT OR BELOW REORDER POINT
0

Full panels (5)Off-cuts (0)

ExcelPDF

COLOUR	THICKNESS	SIZE (MM)	SKU	SOH
ALUMINIUM				
White	3mm	1200 x 2400	TEST-WHITE	12
POPUP RECEIPT TEST				
Blue	3mm	1000 x 2000	AL-PRDJH0	4
PREVIEW ALLOY				
Silver	4mm	1500 x 3000	AL-FWGM3S	0
Silver	3mm	1200 x 2400	AL-KLWEQ6	0
RECEIVE TEST ALLOY				
Bronze	4mm	1000 x 2000	AL-XG1M6Y	5

- 1 Open **Stock**. Choose **Full panels** or **Off-cuts**.
- 2 Search by colour, material, thickness, size or SKU. Check the exact item before using it.
- 3 Read the displayed **SOH** and compare it with the physical stock. Report discrepancies for review.
- 4 Use **Excel** or **PDF** to export a report. Ordinary stock exports are snapshots, not live workbooks.

The shared CNC Excel workbook is different: it refreshes while open. See Section 16.

Adding an off-cut

Use this when a job leaves a usable leftover piece worth keeping in stock.

Add off-cut to SOH

Cut from which material? (optional — picking one fills in the fields below)

Search colour, material, size, SKU...

White · Aluminium

3mm · 1200 × 2400 · TEST-WHITE

12 SOH

Silver · Preview Alloy

3mm · 1200 × 2400 · AL-KLWEQ6

0 SOH

Silver · Preview Alloy

4mm · 1500 × 3000 · AL-FWGM35

0 SOH

Colour / material — not listed above? Type it in directly

Colour / finish

Material

Thickness (mm)

e.g. Bronze Anodised

e.g. ACP, Solid Aluminium

Off-cut size

Width (mm)

Height (mm)

Quantity

Note (optional)

1

e.g. leftover from WO-1042

- 1 Open **Stock**, choose **Off-cuts**, then select **Add off-cut**.
- 2 Optionally select the original material to fill its details, or enter colour, material and thickness manually.
- 3 Enter the offcut's own **Width** and **Height** - usually smaller than the original sheet.
- 4 Enter the **Quantity** and an optional **Note**.
- 5 Select **Add off-cut**. Scroll within the form if the button is below the visible area.

Adding an offcut does not dispatch its parent sheet. Record that full-sheet movement separately.

4. Receiving Stock

Use this whenever new panels physically arrive at the warehouse.

+ Add missing material

 **Receive stock**

Add incoming panels against an approved material.

	White · Aluminium 3mm · 1200 × 2400 · TEST-WHITE	12 SOH
	Silver · Preview Alloy 3mm · 1200 × 2400 · AL-KLWEQ6	0 SOH
	Silver · Preview Alloy 4mm · 1500 × 3000 · AL-FWGM3S	0 SOH
	Bronze · Receive Test Alloy 4mm · 1000 × 2000 · AL-XG1M6Y	5 SOH
	Blue · Popup Receipt Test 3mm · 1000 × 2000 · AL-PRDJH0	4 SOH

Select a material from the list

Supplier / PO reference (optional)

Quantity received

Add to SOH

- 1 Open **Receive** in the app navigation.
- 2 Search for the material, colour, thickness or SKU, then select the exact item you're receiving.
- 3 Optionally enter a **Supplier / PO reference**.
- 4 Enter the **Quantity received** as a positive whole number.
- 5 Select **Add to SOH**. Check the new total and the sync indicator.

If the material is not in the catalog, use Add missing material. Both users and admins can do this.

Adding missing material while receiving



Create the missing material and receive its stock in the same popup.

Add missing material

Colour / finish *

Material *

Thickness (mm) *

e.g. Bronze Anodised

e.g. ACP, Solid Aluminium

Width (mm) *

Height (mm) *

Reorder point (optional)

Enter the new material details and quantity to add it to the catalog and receive its stock.

Quantity received *

Supplier / PO reference (optional)

Receive stock

- 1 In **Receive**, select **Add missing material**. It is available to users and admins, even with an empty catalog.
- 2 Enter **Colour / finish**, **Material**, **Thickness**, **Width** and **Height**. Use positive dimensions in millimetres.
- 3 Optionally enter a whole-number **Reorder point**. Blank uses zero for new materials.
- 4 Enter the **Quantity received** and optional **Supplier / PO reference** in this popup.
- 5 Select **Receive stock**. The catalog item, stock and receipt record are saved together.

If a matching material already exists, its stock is increased without creating a duplicate. Existing reorder points are preserved.

5. Dispatching to a Job

Use this whenever material is pulled from stock and sent out to a job.

**Dispatch to a job**
Pull material from stock and send it out to a job.

	White · Aluminium 3mm · 1200 × 2400 · TEST-WHITE	12 SOH
	Bronze · Receive Test Alloy 4mm · 1000 × 2000 · AL-XG1M6Y	5 SOH
	Blue · Popup Receipt Test 3mm · 1000 × 2000 · AL-PRDJH0	4 SOH

Select a material from the list

Order number

Job reference (optional)

Quantity to dispatch

Confirm dispatch

Leaving a usable off-cut behind? Dispatch the full sheet here, then log the remainder from Stock → Off-cuts → Add.

- 1 Open **Dispatch**. Search and select the correct full panel or offcut.
- 2 Enter the **Order number** and optional **Job reference**.
- 3 Enter the **Quantity to dispatch**. Check available SOH and the physical item.
- 4 Select **Confirm dispatch**, then verify the reduced SOH and sync status.

If a usable piece remains, add it through the offcut form. Do not count the same material twice.

6. Writing Off Damaged Stock

Use this when damaged material must be removed from stock on hand.

**Write off damaged stock**
Remove damaged material from stock on hand.

[View damage log](#)

	White · Aluminium 3mm · 1200 × 2400 · TEST-WHITE	12 SOH
	Bronze · Receive Test Alloy 4mm · 1000 × 2000 · AL-XG1M6Y	5 SOH
	Blue · Popup Receipt Test 3mm · 1000 × 2000 · AL-PRD3H0	4 SOH

Select a material from the list

Reason
001 — Handling damage ▼

Quantity damaged

Photo of damage (required)

 Add photo

At least one photo is required before this can be submitted.

Write off stock

- 1 Open **Damage** and select the affected stock item.
- 2 Choose the **Reason** and enter the **Quantity damaged**.
- 3 Use **Add photo** to attach at least one clear photo of the damage. Evidence is required.
- 4 Select **Write off stock**. Confirm the deduction from the correct item.

Do not dispatch and write off the same quantity twice. Ask an admin to review incorrect movements.

7. Job History



Use this to review past dispatches, grouped by job.

 **Job history**
Dispatches grouped by job reference and order number.

No dispatches yet. Job history will build up as you dispatch stock.


- 1 Open **Jobs** to find dispatch history by job reference or order number.
- 2 Review the relevant job and its material movements. Check quantities and timestamps.
- 3 For receipts, damage and other actions, open **Settings > Activity Log**. The recorded user helps identify who made the entry.

Job history and activity are records of previous actions. Use current SOH to check what is available now.

8. Stocktaking Procedure

ADMIN ONLY

Plan the physical count before resetting quantities.

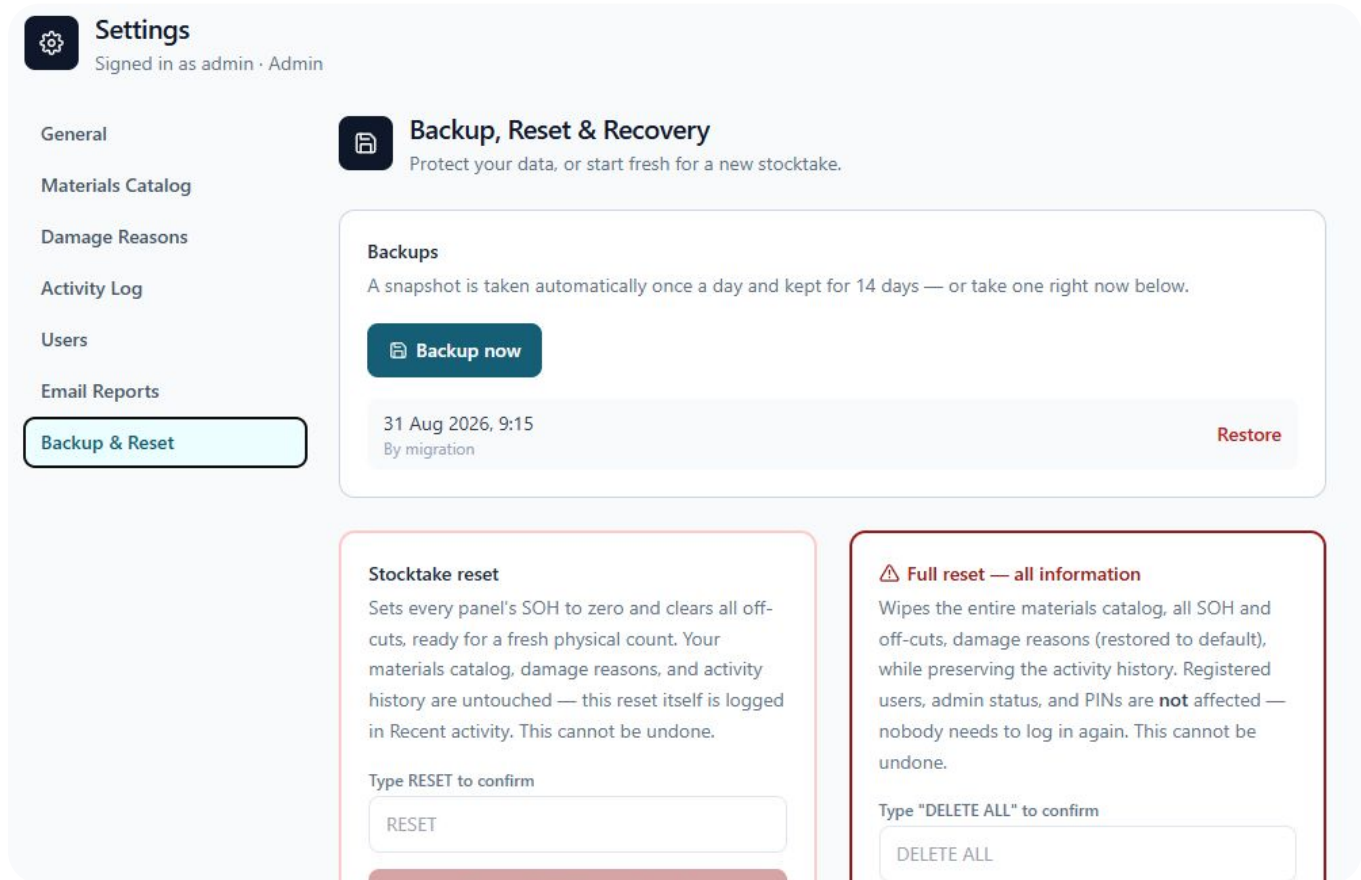

Settings
Signed in as admin · Admin

- General
- Materials Catalog
- Damage Reasons
- Activity Log
- Users
- Email Reports
- Backup & Reset**

Backup, Reset & Recovery

Protect your data, or start fresh for a new stocktake.

Backups

A snapshot is taken automatically once a day and kept for 14 days — or take one right now below.

Backup now

31 Aug 2026, 9:15
By migration Restore

Stocktake reset

Sets every panel's SOH to zero and clears all off-cuts, ready for a fresh physical count. Your materials catalog, damage reasons, and activity history are untouched — this reset itself is logged in Recent activity. This cannot be undone.

Type RESET to confirm

RESET

Full reset — all information

Wipes the entire materials catalog, all SOH and off-cuts, damage reasons (restored to default), while preserving the activity history. Registered users, admin status, and PINs are **not** affected — nobody needs to log in again. This cannot be undone.

Type "DELETE ALL" to confirm

DELETE ALL

- 1 Pause normal stock movements. An **admin** takes a backup before starting the count.
- 2 Use **Stocktake reset** in Settings and follow its confirmation. Full-panel quantities become zero and offcuts are cleared.
- 3 Count the warehouse by material, colour, thickness and dimensions. Users and admins enter counted panels through **Receive**.
- 4 Enter usable offcuts through the offcut form. Reconcile discrepancies and confirm all devices have synced before resuming work.

Stocktake reset preserves the catalog, damage reasons and prior activity. The reset itself is logged.

9. Voiding a Mistaken Entry

ADMIN ONLY

Reverse an eligible stock movement without removing the audit history.

**Settings**
Signed in as admin · Admin

General

Materials Catalog

Damage Reasons

Activity Log

Users

Email Reports

Backup & Reset

**Recent Activity**
Every receipt, dispatch, damage write-off, and admin action, newest first.

Excel

PDF

DATE	TYPE	DESCRIPTION	SKU	QTY	USER	
31/08/26	RECEIPT	Blue Popup Receipt Test 3mm 1000 × 2000 (new catalog material)	AL-PRDJH0	4	admin	Void
31/08/26	RECEIPT	White Aluminium 3mm 1200 × 2400 - POPUP-TEST-1	TEST-WHITE	2	admin	Void
31/08/26	RECEIPT	Bronze Receive Test Alloy 4mm 1000 × 2000	AL-XG1M6Y	5	admin	Void
31/08/26	CATALOG	Added Bronze Receive Test Alloy 4mm 1000 × 2000 to the catalog (SKU AL-XG1M6Y)			admin	
31/08/26	CNC	Bulk scheduled 1 panel for CNC			admin	
31/08/26	CATALOG	Bulk added 2 materials to the catalog			admin	
31/08/26	CNC	Bulk scheduled 2 panels for CNC			admin	
31/08/26	CNC	Completed CNC cut: Order 0007 - Sheet 1 - Panel 1			admin	

- 1 Open **Settings > Activity Log**. Find the exact receipt, dispatch or damage entry.
- 2 Check the item, quantity, date and recorded user before using **Void**.
- 3 Review and confirm the reversal. Check the resulting SOH.
- 4 If blocked by stock or a conflict, investigate first. Do not force a duplicate correction.

Voiding preserves the original entry and records its reversal. It does not silently delete history.

10. Settings: Materials Catalog

ADMIN ONLY

Manage the approved material, colour and size combinations.

**Settings**
Signed in as admin · Admin

General

Materials Catalog

Damage Reasons

Activity Log

Users

Email Reports

Backup & Reset

**Materials Catalog**
Every colour, material, thickness and size combination your team stocks — Receive can only pull from this list.

Excel

PDF

Bulk entry

Add material

COLOUR	MATERIAL	THICKNESS	SIZE (MM)	SKU	REORDER AT	
ALUMINIUM						
 White	Aluminium	3mm	1200 x 2400	TEST-WHITE	5	 
POPUUP RECEIPT TEST						
 Blue	Popup Receipt Test	3mm	1000 x 2000	AL-PRDJH0	—	 
PREVIEW ALLOY						
 Silver	Preview Alloy	4mm	1500 x 3000	AL-FWGM35	—	 
 Silver	Preview Alloy	3mm	1200 x 2400	AL-KLWEQ6	—	 
RECEIVE TEST ALLOY						

1 Open **Settings** and **Materials Catalog**.

2 Use **Add material** for one new entry, or the edit control to correct an existing entry.

3 Enter colour, material, thickness, width, height and optional reorder point. Check all dimensions in millimetres.

4 Save the item. New catalog entries made here start with **zero stock**. Receive physical deliveries separately.

Regular users can add missing material only with a matching receipt in Receive. Catalog editing and deletion remain admin-only.

Adding catalog materials in bulk

ADMIN ONLY

Enter multiple sizes in the app; no spreadsheet import is needed.

Add catalog materials

Enter the material and colour once, then add each size.

Material *

Colour *

Thickness mm *	Width mm *	Height mm *	Reorder point	
mm	mm	mm	0	

* Required. Leave reorder point blank to use 0.

- 1 In the catalog, select **Bulk entry**. Enter the required **Material** and **Colour** once.
- 2 Add rows for **Thickness**, **Width**, **Height** and optional **Reorder point**.
- 3 Use **+ Add line** for another size and the **red trash icon** to remove a row. Blank reorder points use zero.
- 4 Select **Add N catalog items**. Correct incomplete values and duplicates before saving the whole batch.

Dimensions must be positive. Duplicate material/colour/size combinations are rejected. New items start with zero stock.

11. Settings: Damage Reason Codes

ADMIN ONLY

Maintain the reasons used when recording damaged stock.



Damage Reason Codes

Every reason has a 3-digit code, assigned automatically and never reused.

 [View damage log](#)

001 Handling damage



- 1 Open **Settings** and the damage-reasons controls.
- 2 To add a reason, enter its description and use the add control.
- 3 To remove a reason, use its trash icon. Review the choice before confirming.


Existing damage records retain the reason recorded at the time. Use the damage log to review past write-offs.

12. Settings: Users



ADMIN ONLY

Give every staff member their own account.

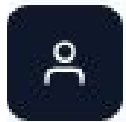

Manage Users

Grant or remove admin access, reset a forgotten PIN, or remove a user

USER	ADMIN	
admin (you)	☒	Reset PIN
staff	☐	Reset PIN

- 1 Open **Settings > Users**. Give new staff the current registration code so they can register their own account.
- 2 Use the admin control to grant or revoke admin access only where required.
- 3 Use **Reset PIN** for a forgotten PIN. It resets that user to the current registration code and revokes existing sessions.
- 4 Have the user choose a new personal PIN. Use the remove-user control only when their access should end.

Keep registration codes and PINs out of screenshots, job notes and shared messages. Never share an admin login.

13. Settings: Email Reports

ADMIN ONLY

Set the report recipients and delivery schedule.

Email reports

Stock data syncs across every device automatically. Email reports: Paused — Daily at 07:00, to 0 recipients.

Recipients

+

No recipients yet.

Send on these days

Sun Mon Tue Wed Thu Fri Sat

All · Weekdays · None

Time

🕒

Times use your device's current timezone: Australia/Brisbane.

☐ Enabled

Save settings Send test now


- 1 Open the **email-report settings** in Settings.
- 2 Review recipient email addresses and choose the days reports should be sent.
- 3 Set the time and check the displayed **timezone**.
- 4 Enable the schedule and **save settings**.
- 5 Use the **test-send** control to verify delivery to the intended recipients.

Scheduled reports run on the server. Nobody needs to leave an app open for delivery.

14. Settings: Backup & Recovery

ADMIN ONLY

Back up before stocktakes, restores or major catalog changes.

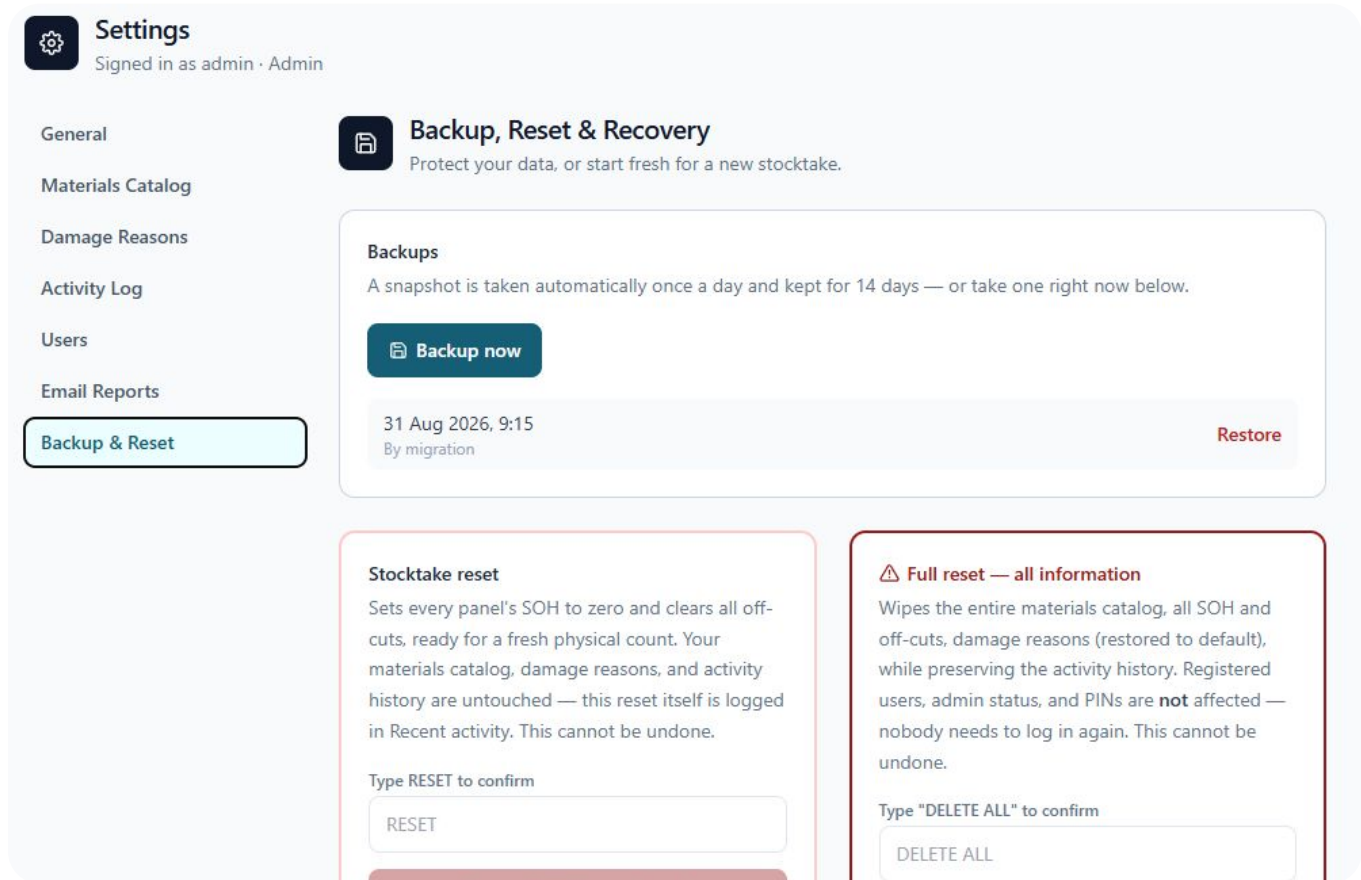

Settings
Signed in as admin · Admin

Backup, Reset & Recovery
Protect your data, or start fresh for a new stocktake.

Backups
A snapshot is taken automatically once a day and kept for 14 days — or take one right now below.

Backup now

31 Aug 2026, 9:15
By migration **Restore**

Stocktake reset
Sets every panel's SOH to zero and clears all off-cuts, ready for a fresh physical count. Your materials catalog, damage reasons, and activity history are untouched — this reset itself is logged in Recent activity. This cannot be undone.

Type RESET to confirm

RESET

Full reset — all information
Wipes the entire materials catalog, all SOH and off-cuts, damage reasons (restored to default), while preserving the activity history. Registered users, admin status, and PINs are **not** affected — nobody needs to log in again. This cannot be undone.

Type "DELETE ALL" to confirm

DELETE ALL

- 1 Open the **backup controls** in Settings. Take a current backup before any high-impact action.
- 2 Review the backup date before choosing **Restore**. Pause stock changes across devices.
- 3 Follow the restore confirmation. If stock changes after your review, refresh and review again.
- 4 Refresh other devices after the restore and reconcile any pending changes created against the old state.

Daily snapshots are normally retained for 14 days. Server restores preserve current activity history and do not roll back user credentials.

Stocktake reset & Full reset



ADMIN ONLY

These controls have different effects. Read the warning before proceeding.

Settings

Signed in as admin · Admin

General

Materials Catalog

Damage Reasons

Activity Log

Users

Email Reports

Backup & Reset

Backup, Reset & Recovery

Protect your data, or start fresh for a new stocktake.

Backups

A snapshot is taken automatically once a day and kept for 14 days — or take one right now below.

Backup now

31 Aug 2026, 9:15
By migration

Restore

Stocktake reset

Sets every panel's SOH to zero and clears all off-cuts, ready for a fresh physical count. Your materials catalog, damage reasons, and activity history are untouched — this reset itself is logged in Recent activity. This cannot be undone.

Type RESET to confirm

RESET

Full reset — all information

Wipes the entire materials catalog, all SOH and off-cuts, damage reasons (restored to default), while preserving the activity history. Registered users, admin status, and PINs are **not** affected — nobody needs to log in again. This cannot be undone.

Type "DELETE ALL" to confirm

DELETE ALL

- 1 **Stocktake reset** sets full-panel SOH to zero and clears offcuts. Catalog entries, reasons and history remain.
- 2 **Full reset** clears catalog and stock and restores default damage reasons. Prior activity is retained with a reset record.
- 3 User accounts and PINs are not removed by these stock resets.
- 4 Make a backup first and follow the displayed confirmation phrase. Do not use reset controls as routine housekeeping.

A reset is not a way to erase audit history. Only admins should perform it after a deliberate review.

Pending changes & sync recovery



A local save is not confirmation that other devices have received the change.

Stock on Hand

Every full panel and off-cut currently in the warehouse, grouped by material and colour.

TOTAL PANELS ON HAND

21

DISTINCT MATERIALS

5

AT OR BELOW REORDER POINT

0

Q Search colour, material, size, SKU...

Full panels (5)

Off-cuts (0)

Excel

PDF

COLOUR	THICKNESS	SIZE (MM)	SKU	SOH
ALUMINIUM				
White	3mm	1200 x 2400	TEST-WHITE	12
POPUP RECEIPT TEST				
Blue	3mm	1000 x 2000	AL-PRDJH0	4
PREVIEW ALLOY				
Silver	4mm	1500 x 3000	AL-FWGM3S	0
Silver	3mm	1200 x 2400	AL-KLWEQ6	0
RECEIVE TEST ALLOY				
Bronze	4mm	1000 x 2000	AL-XG1M6Y	5

1 Check the connection and sync indicator. Keep the device and the account that created pending changes available.

2 If offered, use **Export pending changes** and save the export for reconciliation.

3 Do not clear browser storage, reinstall or discard pending work before it has been reviewed.

4 Only one tab may edit on a device at a time. Close another editing tab if instructed; sign back in as the owner of queued changes.

Discarding pending changes does not apply them to shared stock. Contact an admin if the correct state is uncertain.

15. CNC Tracker

Find scheduled work by job reference, order, sheet or panel.

**CNC Tracker**

Panels scheduled to be cut, and their completion status. The shareable link always reflects the latest data — no need to re-send it.

[Copy shareable link](#)[+ Bulk entry](#)[+ Schedule panel](#)

Pending (3)**Completed (2)**

Release Test

1 pending · 0/1 complete ▾

Bulk Test

2 pending · 0/2 complete ▾

Order 0099

2 pending · 0/2 complete ▾

ORDER NUMBER	SHEET	PANEL	
0099	01	A001	Complete sheet Complete panel
0099	02	B002	Complete sheet Complete panel

1 Open **CNC**. Expand the **job reference**, then its **order**. Orders appear highest number first within each job.

2 Use search and the **Pending / Completed** filters to find the required work.

3 Use **Complete panel** for one panel, or **Complete sheet** above it for the whole order/sheet.

4 Check the completion confirmation before saving. Only mark work completed after it has actually been cut.

Users and admins can complete CNC work. Completion records progress only; it does not deduct warehouse stock.

Scheduling CNC panels

ADMIN ONLY

Admins can schedule one panel or enter many panels together.

Schedule multiple panels

Enter the order and job once, then add your panels.

Order number *

Job reference *

Sheet number	Panel ID	
1	A73-219	
e.g. 1	A73-219	

[+ Add line](#)

[Schedule 1 panel](#) [Cancel](#)

- 1 Use **Schedule panel** for a single panel, or **Bulk entry** for several.
- 2 For bulk entry, enter the required **Order number** and **Job reference** once.
- 3 Enter **Sheet number** and **Panel ID** on each row. Add lines as needed; use the red trash icon to remove a row.
- 4 Select **Schedule N panels**. Blank rows are ignored; incomplete or repeated sheet/panel pairs must be corrected.

Job references use title case. An order label such as Order #001234 becomes 001234. A leading panel-ID letter is capitalized.

Confirming a panel or sheet

The confirmation lists the panel IDs affected by your action.

Complete CNC sheet?

Order 0099
Sheet 01

This will mark all 1 pending panel on this order and sheet as completed, including panels hidden by your search.

Panel IDs to complete (1)

A001

Previously completed panels and other sheets will stay unchanged.

CancelComplete sheet


- 1 Complete panel** asks you to confirm the individual panel ID.
- 2 Complete sheet** lists every pending panel for that order and sheet. Scroll through the whole list if necessary.
- 3** The sheet action also includes matching panels hidden by your search. Already completed panels and other sheets stay unchanged.
- 4** Confirm only when all listed work is complete, or choose **Cancel** to leave it unchanged.

The pictured example contains one pending panel. A sheet with several pending panels lists all of their IDs.

16. Shared CNC Tracker & Excel



Share a read-only view that stays up to date.

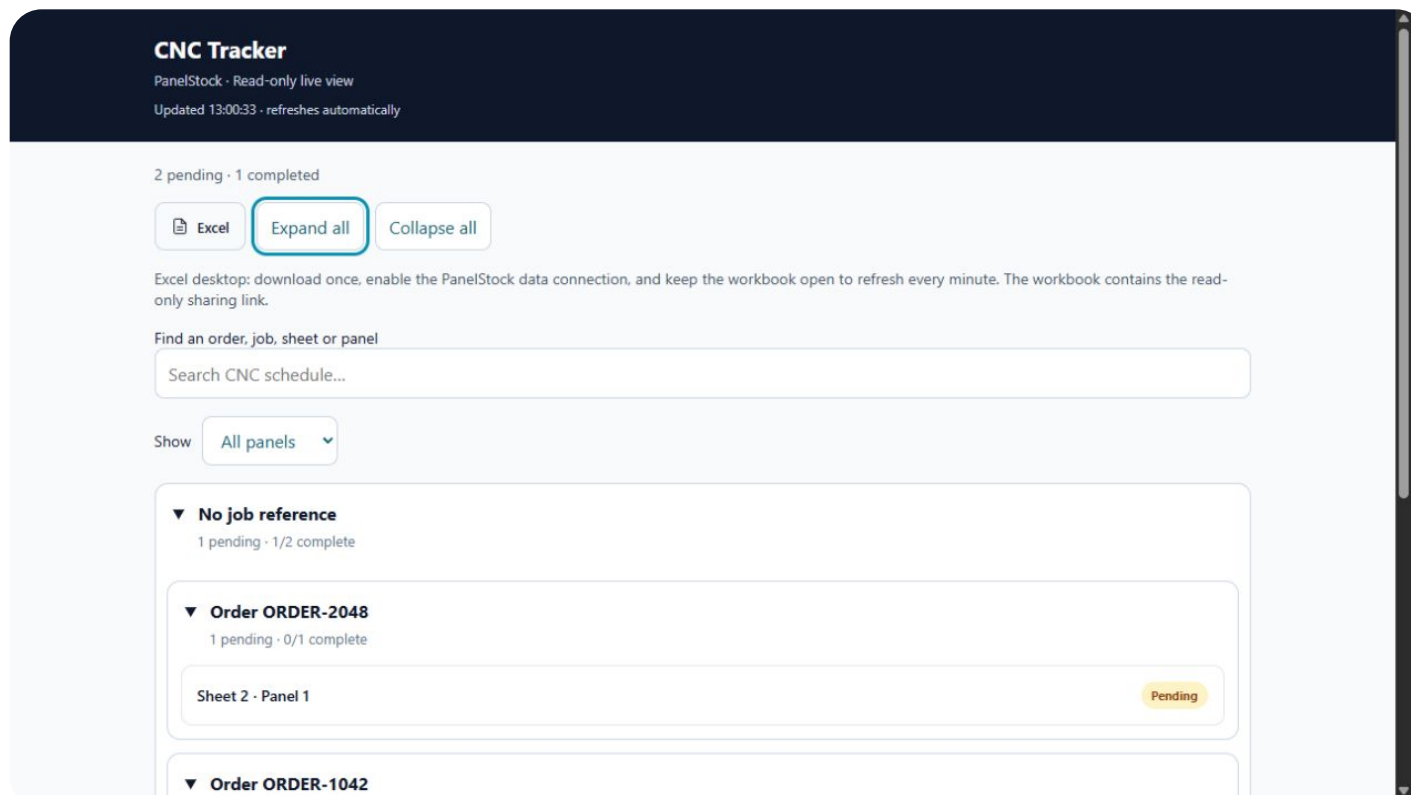


- 1 In CNC, select **Copy shareable link**. Send it only to intended viewers.
- 2 Open the link on a phone or desktop. Expand job/order groups and use search or status filters.
- 3 Select **Excel** to download the connected workbook. Open it in desktop Microsoft Excel.
- 4 If you trust the source, allow editing and its data connection when prompted. Keep Excel open for the one-minute refresh.

The shared page and workbook are read-only. Edits in Excel do not change PanelStock. Treat the link and workbook as access to CNC information.

Excel refresh & status colours

One connected workbook can refresh without repeated downloads.

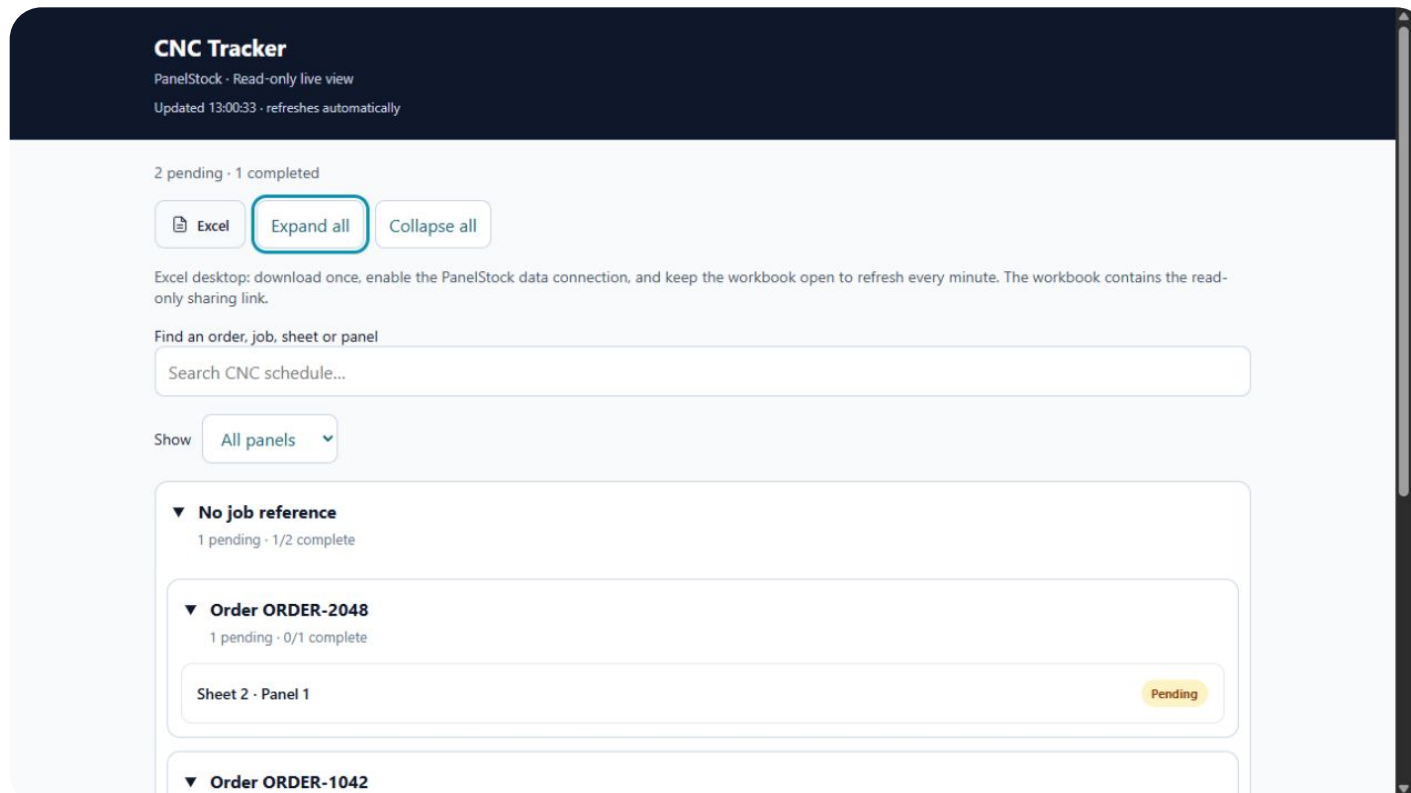

- 1 **Completed** rows are green and **Pending** rows are yellow across all eleven exported columns.
- 2 Colours update with refreshed statuses, including newly added rows. Headers and blank rows are not coloured.
- 3 Download an older workbook once again to receive the new colour rules. Routine changes then refresh without another download.
- 4 If refresh stops, check Excel connection messages. Do not lower global Trust Center security settings. The workbook contains no macros.

Refresh runs on opening and every minute while desktop Excel is open. On mobile, use the shared browser tracker.