

PanelStock

Standard Operating Procedures

Receiving · Dispatching · Damage · Stocktaking · Settings · CNC

Lennox Facades

For warehouse staff using PanelStock - mobile / tablet edition.

Updated 31 August 2026 | Original SOP layout restored

Contents



1. Getting Started
2. Logging In & Registering
3. Viewing Stock & Exporting Reports
4. Receiving Stock
5. Dispatching to a Job
6. Writing Off Damaged Stock
7. Job History
8. Stocktaking Procedure (Admin-initiated)
9. Voiding a Mistaken Entry (Admin)
10. Settings: Materials Catalog
11. Settings: Damage Reason Codes
12. Settings: Users
13. Settings: Email Reports
14. Settings: Backup, Reset & Recovery
15. CNC Tracker
16. Shared CNC Tracker & Excel

1. Getting Started

How to access PanelStock for the first time on your phone or tablet.




Open the app in your browser

Open your browser and go to:

app.panelstockhq.com

Or scan this code to open the link directly.

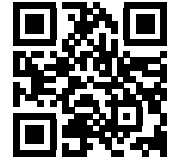

Using PanelStock

Use the bottom navigation to open SOH, Receive, Dispatch, Damage, CNC, Jobs and Settings.

Your account and permissions

Use your own account. Users and admins can receive stock, add a missing material with a receipt, dispatch, record damage, add offcuts and complete CNC work. Admins manage catalog settings, scheduling, user access and resets.

Before you leave the device

Check the sync indicator after recording work. Saved on this device does not mean other devices have received the update. Keep pending changes available for review.

Screenshots in this guide

The original numbered-step and screenshot layout is retained. Current screenshots use isolated example data; relevant original examples are preserved. Do not copy example quantities or job details into live work.

2. Logging In & Registering

First time using PanelStock on this device



- 1 Open the app, then select **Register**.
- 2 Enter your own **username**. Use a separate account for each staff member.
- 3 Enter the current **six-digit registration code** supplied by an admin.
- 4 Select **Continue**, then choose and confirm a unique **6-12 digit personal PIN**.

A smartphone screen displaying the Lennox Facades app's registration interface. The status bar at the top shows the time 7:39, signal strength, Wi-Fi, and 66% battery. The app's logo is centered on a grey background. Below the logo are two buttons: "Log in" and "Register". The "Register" button is selected. Below the buttons is a section titled "Register a new user" with a user icon. It includes instructions: "Ask whoever manages this app for the 6-digit registration code, then choose your own username." There are two input fields: "Choose a username" with the text "test" and "Registration code" with the text "6-digit code". A "Continue" button is at the bottom of the form.

Keep your personal PIN private. Never put it in job notes or share an admin login.

Returning after the app has logged you out



Use your own account so stock changes and CNC completions are attributed to you.

- 1 Select the **Log in** tab.
- 2 Check the **username**. If changes are waiting to sync, sign in as the account that created them.
- 3 Enter your personal **PIN** and select **Log in**. Ask an admin for a PIN reset if you have forgotten it.
- 4 On a shared device, turn off **Remember my username** if appropriate and log out when finished.

A screenshot of the Lennox Facades app login screen. The background is a light gray with the company logo in the center. At the bottom, there are two tabs: "Log in" (active) and "Register". Below the tabs, there is a section titled "Log in to PanelStock" with a user icon. It contains two input fields: "Username" with the text "admin" and "PIN" with the placeholder "Your PIN". Below these fields is a checkbox labeled "Remember my username on this device" which is checked. At the very bottom is a large blue button labeled "Log in".

Log in Register

Log in to PanelStock

Username

admin

PIN

Your PIN

☒ Remember my username on this device

Log in

A saved username is not a shared account. Check the sync status before leaving the device.

3. Viewing Stock & Exporting Reports




Check stock on hand before taking or receiving material.

1 Open **SOH**. Choose **Full panels** or **Off-cuts**.

2 Search by colour, material, thickness, size or SKU. Check the exact item before using it.

3 Read the displayed **SOH** and compare it with the physical stock. Report discrepancies for review.

4 Use **Excel** or **PDF** to export a report. Ordinary stock exports are snapshots, not live workbooks.

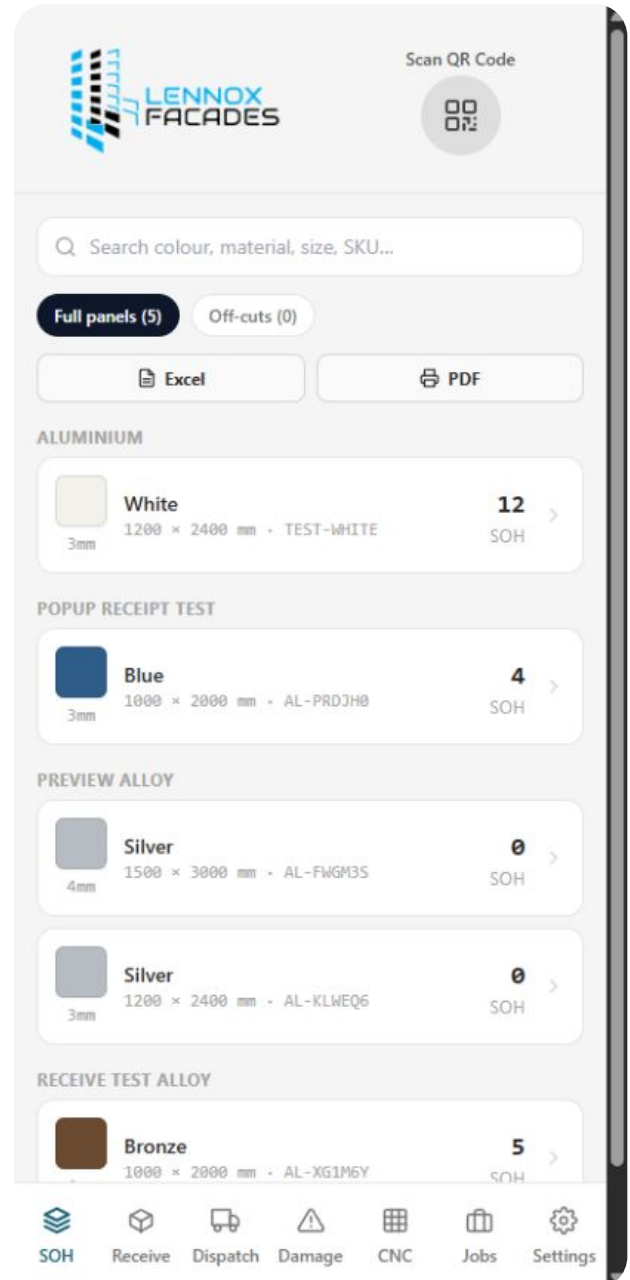

The shared CNC Excel workbook is different: it refreshes while open. See Section 16.

Adding an off-cut



Use this when a job leaves a usable leftover piece worth keeping in stock.

1 Open **SOH**, choose **Off-cuts**, then select **Add off-cut**.

2 Optionally select the original material to fill its details, or enter colour, material and thickness manually.

3 Enter the offcut's own **Width** and **Height** - usually smaller than the original sheet.

4 Enter the **Quantity** and an optional **Note**.

5 Select **Add off-cut**. Scroll within the form if the button is below the visible area.

4:13

LENNOX FACADES

Scan QR Code

✂ Add off-cut to SOH

Cut from which material?

Search colour, material, size, SKU...

Charcoal · Solid Aluminium	25 SOH
3mm · 4200 × 1575 · AL-AX0BZR	
Charcoal · Alpolic	25 SOH
4mm · 4000 × 1270 · AL-KVL2V3	
Champagne · Solid Aluminium	20 SOH
3mm · 4000 × 1575 · AL-T9TK41	
Champagne · Solid Aluminium	25 SOH
3mm · 3200 × 1250 · AL-IFL8XC	
Mill · Solid Aluminium	25 SOH
3mm · 2400 × 1200 · AL-Q5TA0F	
Charcoal · Alpolic	25 SOH ✓
4mm · 3200 × 1270 · AL-UN3D22	

Off-cut size

Width (mm) 2480

Height (mm) 1270

Quantity 1

Note (optional)

Leftover from order 103

Add off-cut

Adding an offcut does not dispatch its parent sheet. Record that full-sheet movement separately.

4. Receiving Stock



Use this whenever new panels physically arrive at the warehouse.

- 1 Open **Receive** in the app navigation.
- 2 Search for the material, colour, thickness or SKU, then select the exact item you're receiving.
- 3 Optionally enter a **Supplier / PO reference**.
- 4 Enter the **Quantity received** as a positive whole number.
- 5 Select **Add to SOH**. Check the new total and the sync indicator.

The screenshot shows the 'Receive stock' screen in the Lennox Facades app. At the top, there's a header with the company logo and a 'Scan QR Code' button. Below the header, there's a '+ Add missing material' button. The main section is titled 'Receive stock' with a subtitle 'Add incoming panels against an approved material'. Underneath, there's a 'Select material' section with a search bar 'Search colour, material, size, SKU...'. A list of materials is displayed, each with a color swatch, name, specifications, and SOH value:

Material	Specifications	SOH
White · Aluminium	3mm · 1200 × 2400 · TEST-WHITE	12
Silver · Preview Alloy	3mm · 1200 × 2400 · AL-KLWEQ6	0
Silver · Preview Alloy	4mm · 1500 × 3000 · AL-FWGM35	0
Bronze · Receive Test Alloy	4mm · 1000 × 2000 · AL-XG1M6Y	5
Blue · Popup Receipt Test	3mm · 1000 × 2000 · AL-PRDJH0	4

Below the list, there are input fields for 'Supplier / PO reference (optional)' and 'Quantity received'. At the bottom, there's a large blue button labeled 'Add to SOH'. The bottom navigation bar shows icons for SOH, Receive (highlighted), Dispatch, Damage, CNC, Jobs, and Settings.

If the material is not in the catalog, use Add missing material. Both users and admins can do this.

Adding missing material while receiving



Create the missing material and receive its stock in the same popup.

- 1 In **Receive**, select **Add missing material**. It is available to users and admins, even with an empty catalog.
- 2 Enter **Colour / finish**, **Material**, **Thickness**, **Width** and **Height**. Use positive dimensions in millimetres.
- 3 Optionally enter a whole-number **Reorder point**. Blank uses zero for new materials.
- 4 Enter the **Quantity received** and optional **Supplier / PO reference** in this popup.
- 5 Select **Receive stock**. The catalog item, stock and receipt record are saved together.

If a matching material already exists, its stock is increased without creating a duplicate. Existing reorder points are preserved.

5. Dispatching to a Job



Use this whenever material is pulled from stock and sent out to a job.

- 1 Open **Dispatch**. Search and select the correct full panel or offcut.
- 2 Enter the **Order number** and optional **Job reference**.
- 3 Enter the **Quantity to dispatch**. Check available SOH and the physical item.
- 4 Select **Confirm dispatch**, then verify the reduced SOH and sync status.

7:41

 Scan QR Code 



Charcoal · Solid Aluminium
3mm · 4200 × 1575 · AL-AX0BZR

25 SOH



Charcoal · Alpolic
4mm · 4000 × 1270 · AL-KVL2V3

25 SOH ✓



Champagne · Solid Aluminium
3mm · 4000 × 1575 · AL-T9TK41

20 SOH



Champagne · Solid Aluminium
3mm · 3200 × 1250 · AL-IFL8XC

25 SOH



Mill · Solid Aluminium
3mm · 2400 × 1200 · AL-Q5TA0F

25 SOH



Charcoal · Alpolic
4mm · 3200 × 1270 · AL-UN3D22

25 SOH

Order number

Job reference (optional)

Quantity to dispatch

Confirm dispatch

 SOH

 Receive

 **Dispatch**

 Damage

 Jobs

 Settings

If a usable piece remains, add it through the offcut form. Do not count the same material twice.

6. Writing Off Damaged Stock



Use this when damaged material must be removed from stock on hand.

- 1 Open **Damage** and select the affected stock item.
- 2 Choose the **Reason** and enter the **Quantity damaged**.
- 3 Use **Add photo** to attach at least one clear photo of the damage. Evidence is required.
- 4 Select **Write off stock**. Confirm the deduction from the correct item.

The screenshot shows a mobile app interface for 'LENNOX FACADES'. At the top, there's a status bar with the time 7:45 and battery level 64%. Below the app logo, there's a 'Scan QR Code' button. The main section is titled 'Write off damaged stock' with a subtitle 'Remove damaged material from SOH' and a 'View log' link. Under 'Select material', there's a search bar and a list of materials. The first material, 'Charcoal · Solid Aluminium', is selected. Below this, there's a 'Reason' dropdown menu set to '001 — Scratched'. The 'Quantity damaged' field contains the number '2'. A red warning message says '*** PHOTO OF DAMAGE ***' with an 'Add photo' button. Below this, a note states 'At least one photo is required before this can be submitted.' A large red button labeled 'Write off stock' is at the bottom. The bottom navigation bar includes icons for SOH, Receive, Dispatch, Damage (which is highlighted), Jobs, and Settings.

7:45 64%

LENNOX FACADES Scan QR Code

Write off damaged stock
Remove damaged material from SOH [View log](#)

Select material

Search colour, material, size, SKU...

	Charcoal · Solid Aluminium 3mm · 4200 × 1575 · AL-AX0BZR 25 SOH ✓
	Charcoal · Alpolic 4mm · 4000 × 1270 · AL-KVL2V3 25 SOH
	Champagne · Solid Aluminium 3mm · 4000 × 1575 · AL-T9TK41 20 SOH
	Champagne · Solid Aluminium 3mm · 3200 × 1250 · AL-IFL8XC 25 SOH
	Mill · Solid Aluminium 3mm · 4000 × 1270 · AL-KVL2V3 25 SOH

Reason

001 — Scratched

Quantity damaged

2

*** PHOTO OF DAMAGE ***

Add photo

At least one photo is required before this can be submitted.

Write off stock

SOH Receive Dispatch **Damage** Jobs Settings

Do not dispatch and write off the same quantity twice. Ask an admin to review incorrect movements.

7. Job History




Use this to review past dispatches, grouped by job.

- 1 Open **Jobs** to find dispatch history by job reference or order number.

- 2 Review the relevant job and its material movements. Check quantities and timestamps.

- 3 For receipts, damage and other actions, open **Settings > Recent activity**. The recorded user helps identify who made the entry.

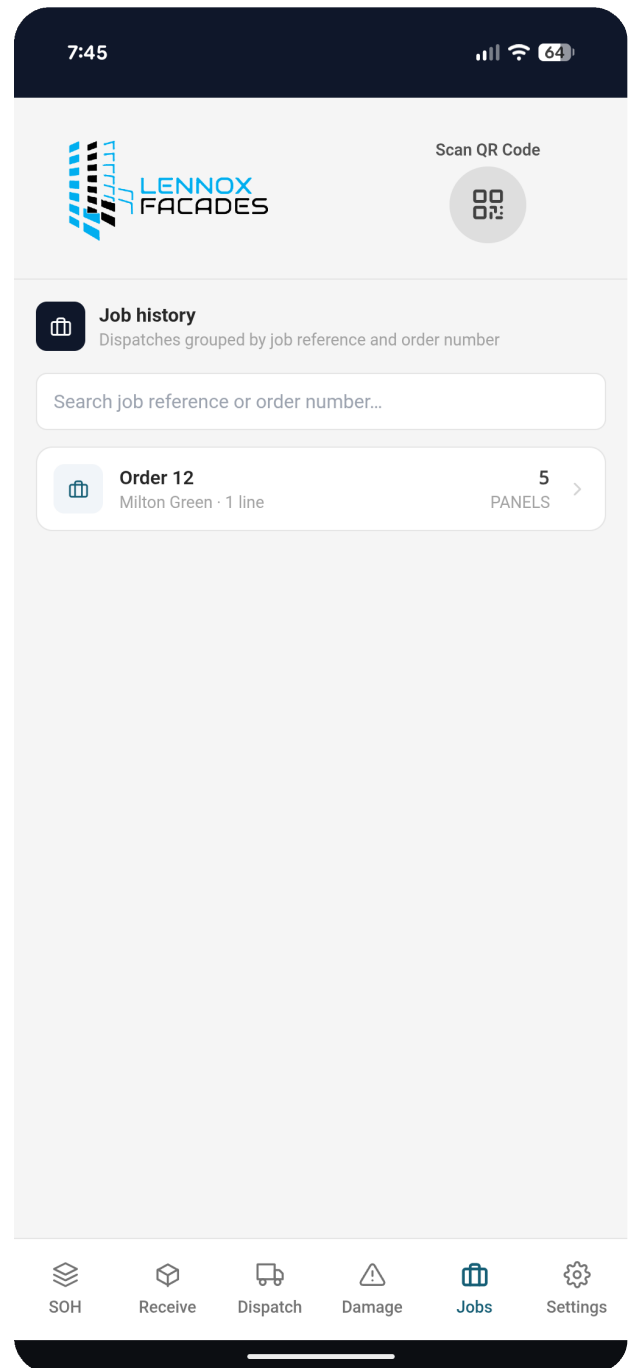

Job history and activity are records of previous actions. Use current SOH to check what is available now.

8. Stocktaking Procedure



ADMIN ONLY

Plan the physical count before resetting quantities.

- 1 Pause normal stock movements. An **admin** takes a backup before starting the count.
- 2 Use **Stocktake reset** in Settings and follow its confirmation. Full-panel quantities become zero and offcuts are cleared.
- 3 Count the warehouse by material, colour, thickness and dimensions. Users and admins enter counted panels through **Receive**.
- 4 Enter usable offcuts through the offcut form. Reconcile discrepancies and confirm all devices have synced before resuming work.

The screenshot shows the Lennox Facades mobile app interface. At the top, there's a header with the company logo and a 'Scan QR Code' button. Below the header, there's a section for backup and restore. It says '— or take one right now below.' and has a 'Backup now' button. Below that, it shows the date and time '31 Aug 2026, 9:15' and the method 'By migration', with a 'Restore' button. The main section is titled 'Stocktake reset' and describes the process: 'Sets every panel's SOH to zero and clears all off-cuts, ready for a fresh physical count. Your materials catalog, damage reasons, and activity history are untouched — this reset itself is logged in Recent activity. This cannot be undone.' It asks the user to 'Type RESET to confirm' and has a text input field with 'RESET' entered. Below the input field is a 'Reset all SOH for stocktake' button. The bottom section is titled 'Full reset — all information' and describes a more comprehensive reset: 'Wipes the entire materials catalog, all SOH and off-cuts, damage reasons (restored to default), while preserving the activity history. Registered users, admin status, and PINs are **not** affected — nobody needs to log in again. This cannot be undone.' It asks the user to 'Type "DELETE ALL" to confirm' and has a text input field with 'DELETE ALL' entered. Below the input field is a 'Reset all information' button. At the bottom of the screen is a navigation bar with icons for SOH, Receive, Dispatch, Damage, CNC, Jobs, and Settings.

Stocktake reset preserves the catalog, damage reasons and prior activity. The reset itself is logged.

9. Voiding a Mistaken Entry



ADMIN ONLY

Reverse an eligible stock movement without removing the audit history.

- 1 Open **Settings > Recent activity**. Find the exact receipt, dispatch or damage entry.
- 2 Check the item, quantity, date and recorded user before using **Void**.
- 3 Review and confirm the reversal. Check the resulting SOH.
- 4 If blocked by stock or a conflict, investigate first. Do not force a duplicate correction.

Recent activity		
Excel		PDF
RECEIPT	Charcoal Alpolic 4mm 3200 x 1270 - qty 250 - matt	
VOIDED by matt · 23/08/2026, 23:00:26		
DISPATCH	Champagne Solid Aluminium 3mm 4000 x 1575 · qty 5 · Order 12 · Milton Green · Matt	VOID
RECEIPT	Mill Solid Aluminium 3mm 2400 x 1200 · qty 3 · Matt	VOID
RECEIPT	Charcoal Alpolic 4mm 3200 x 1270 · qty 3 · Matt	VOID
RECEIPT	Charcoal Alpolic 4mm 3200 x 1270 · qty 22 · Matt	VOID
RECEIPT	Mill Solid Aluminium 3mm 2400 x 1200 · qty 22 · Matt	VOID
RECEIPT	Champagne Solid Aluminium 3mm 3200 x 1250 ·	

Voiding preserves the original entry and records its reversal. It does not silently delete history.


10. Settings: Materials Catalog



ADMIN ONLY

Manage the approved material, colour and size combinations.

- 1 Open **Settings** and **Materials catalog**.
- 2 Use **Add material** for one new entry, or the edit control to correct an existing entry.
- 3 Enter colour, material, thickness, width, height and optional reorder point. Check all dimensions in millimetres.
- 4 Save the item. New catalog entries made here start with **zero stock**. Receive physical deliveries separately.

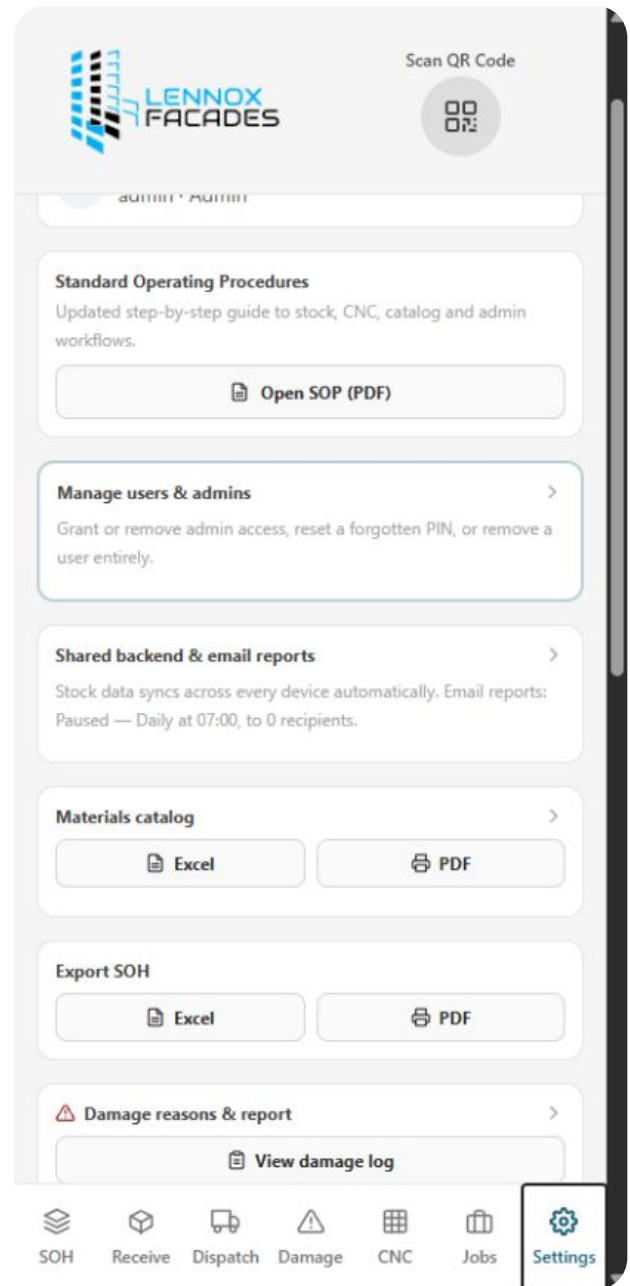

Regular users can add missing material only with a matching receipt in Receive. Catalog editing and deletion remain admin-only.

Adding catalog materials in bulk



ADMIN ONLY

Enter multiple sizes in the app; no spreadsheet import is needed.

- 1 In the catalog, select **Bulk entry**. Enter the required **Material** and **Colour** once.

- 2 Add rows for **Thickness**, **Width**, **Height** and optional **Reorder point**.

- 3 Use **+ Add line** for another size and the **red trash icon** to remove a row. Blank reorder points use zero.

- 4 Select **Add N catalog items**. Correct incomplete values and duplicates before saving the whole batch.

The screenshot shows the 'LENNOX FACADES' app interface. At the top, there's a 'Scan QR Code' button. Below it, a form titled 'Enter the material and colour once, then add each size.' contains fields for 'Material *' (Solid Aluminium) and 'Colour *' (White). Below these are four input fields: 'Thickness mm *' (3), 'Width mm *' (1200), 'Height mm *' (2400), and 'Reorder point' (0). Each of these fields has a unit selector (mm) and a red trash icon. A '+ Add line' button is below the inputs. A note states: '* Required. Leave reorder point blank to use 0.' At the bottom of the form are 'Add 1 catalog item' and 'Cancel' buttons. Below the form, there's a list of existing items under the heading 'ALUMINIUM'. The first item is 'White · Aluminium' with dimensions '3mm · 1200 × 2400 · TEST-WHITE'. Below this is a 'POPUP RECEIPT TEST' section with a 'Blue · Popup Receipt Test' item, dimensions '3mm · 1000 × 2000 · AL-PRDJH0'. At the very bottom is a navigation bar with icons for SOH, Receive, Dispatch, Damage, CNC, Jobs, and Settings.

Dimensions must be positive. Duplicate material/colour/size combinations are rejected. New items start with zero stock.

11. Settings: Damage Reason Codes



ADMIN ONLY

Maintain the reasons used when recording damaged stock.

1 Open **Settings** and the damage-reasons controls.

2 To add a reason, enter its description and use the add control.

3 To remove a reason, use its trash icon. Review the choice before confirming.

Damage reason codes

001	Scratched	
002	Bent / Warped	
003	Wrong Cut Size	
004	Delamination	
005	Missing Route Line	
006	Moved on CNC	
New reason...		

Damage report
Browse damaged stock by date range, view photos, and export a linked PDF for supplier claims and record-keeping.

View damage log

Existing damage records retain the reason recorded at the time. Use the damage log to review past write-offs.


12. Settings: Users



ADMIN ONLY

Give every staff member their own account.

- 1 Open **Settings > Manage users & admins**. Give new staff the current registration code so they can register their own account.
- 2 Use the admin control to grant or revoke admin access only where required.
- 3 Use **Reset PIN** for a forgotten PIN. It resets that user to the current registration code and revokes existing sessions.
- 4 Have the user choose a new personal PIN. Use the remove-user control only when their access should end.

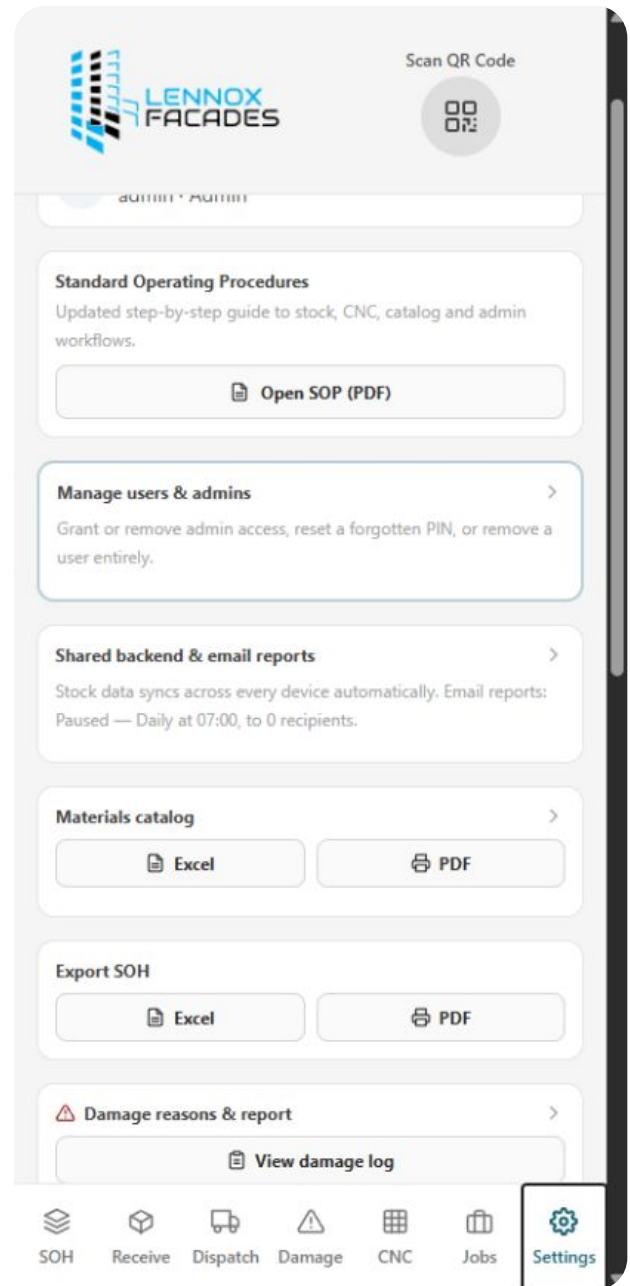

Keep registration codes and PINs out of screenshots, job notes and shared messages. Never share an admin login.


13. Settings: Email Reports



ADMIN ONLY

Set the report recipients and delivery schedule.

- 1 Open the **email-report settings** in Settings.
- 2 Review recipient email addresses and choose the days reports should be sent.
- 3 Set the time and check the displayed **timezone**.
- 4 Enable the schedule and **save settings**.
- 5 Use the **test-send** control to verify delivery to the intended recipients.

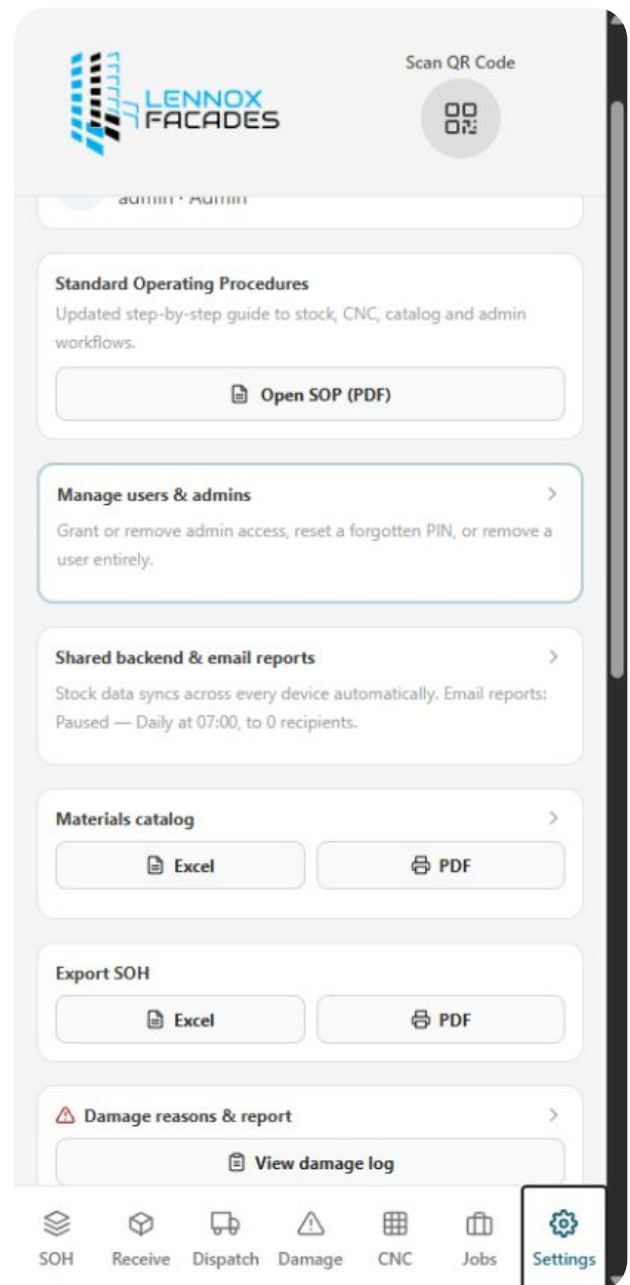

Scheduled reports run on the server. Nobody needs to leave an app open for delivery.


14. Settings: Backup & Recovery



ADMIN ONLY

Back up before stocktakes, restores or major catalog changes.

- 1 Open the **backup controls** in Settings. Take a current backup before any high-impact action.
- 2 Review the backup date before choosing **Restore**. Pause stock changes across devices.
- 3 Follow the restore confirmation. If stock changes after your review, refresh and review again.
- 4 Refresh other devices after the restore and reconcile any pending changes created against the old state.

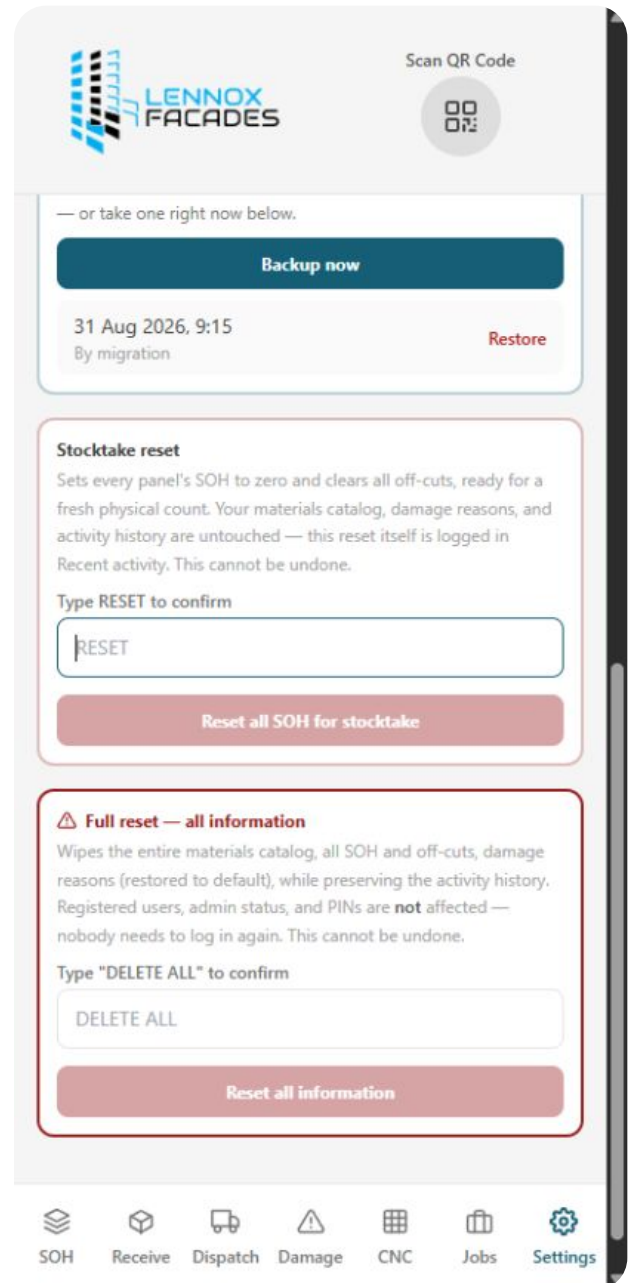

Daily snapshots are normally retained for 14 days. Server restores preserve current activity history and do not roll back user credentials.

Stocktake reset & Full reset



ADMIN ONLY

These controls have different effects. Read the warning before proceeding.

- 1 **Stocktake reset** sets full-panel SOH to zero and clears offcuts. Catalog entries, reasons and history remain.
- 2 **Full reset** clears catalog and stock and restores default damage reasons. Prior activity is retained with a reset record.
- 3 User accounts and PINs are not removed by these stock resets.
- 4 Make a backup first and follow the displayed confirmation phrase. Do not use reset controls as routine housekeeping.

The screenshot shows the Lennox Facades mobile app interface. At the top, there's a header with the company logo and a 'Scan QR Code' button. Below the header, there's a section for backup and restore, with a 'Backup now' button and a 'Restore' button. The main content area is divided into two sections: 'Stocktake reset' and 'Full reset — all information'. The 'Stocktake reset' section includes a description of the action, a confirmation prompt 'Type RESET to confirm', a text input field containing 'RESET', and a 'Reset all SOH for stocktake' button. The 'Full reset — all information' section includes a description of the action, a confirmation prompt 'Type "DELETE ALL" to confirm', a text input field containing 'DELETE ALL', and a 'Reset all information' button. At the bottom, there's a navigation bar with icons for SOH, Receive, Dispatch, Damage, CNC, Jobs, and Settings.


A reset is not a way to erase audit history. Only admins should perform it after a deliberate review.

Pending changes & sync recovery



A local save is not confirmation that other devices have received the change.

- 1 Check the connection and sync indicator. Keep the device and the account that created pending changes available.
- 2 If offered, use **Export pending changes** and save the export for reconciliation.
- 3 Do not clear browser storage, reinstall or discard pending work before it has been reviewed.
- 4 Only one tab may edit on a device at a time. Close another editing tab if instructed; sign back in as the owner of queued changes.

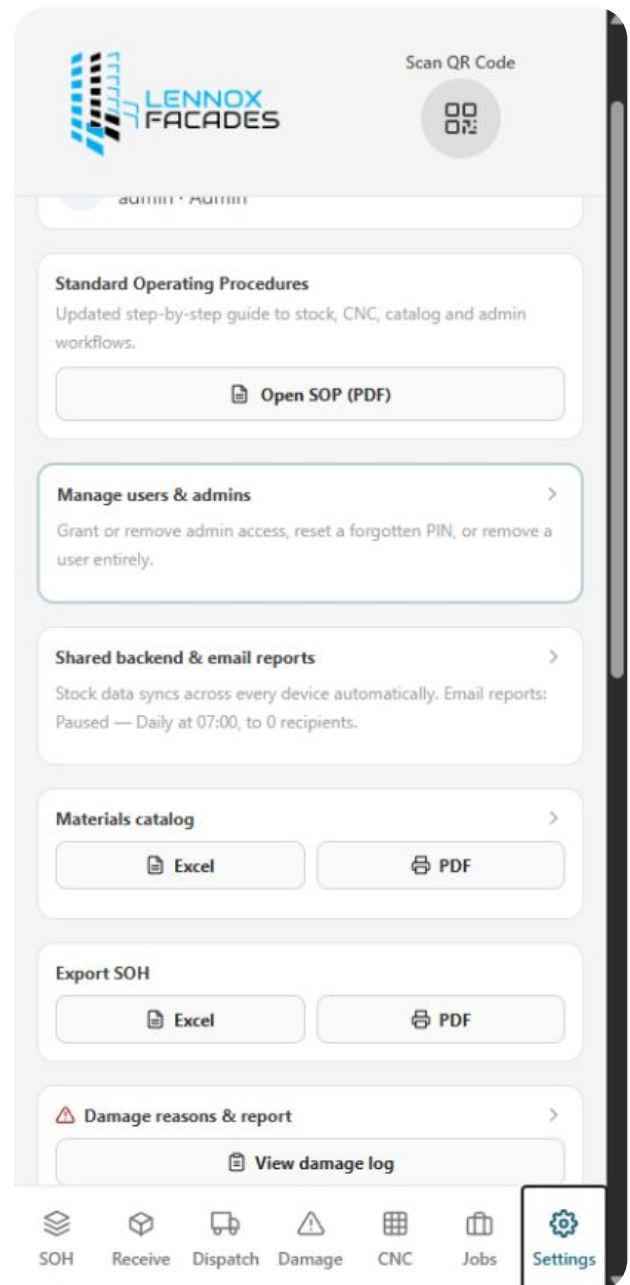


Discarding pending changes does not apply them to shared stock. Contact an admin if the correct state is uncertain.

15. CNC Tracker



Find scheduled work by job reference, order, sheet or panel.

- 1 Open **CNC**. Expand the **job reference**, then its **order**. Orders appear highest number first within each job.
- 2 Use search and the **Pending / Completed** filters to find the required work.
- 3 Use **Complete panel** for one panel, or **Complete sheet** above it for the whole order/sheet.
- 4 Check the completion confirmation before saving. Only mark work completed after it has actually been cut.

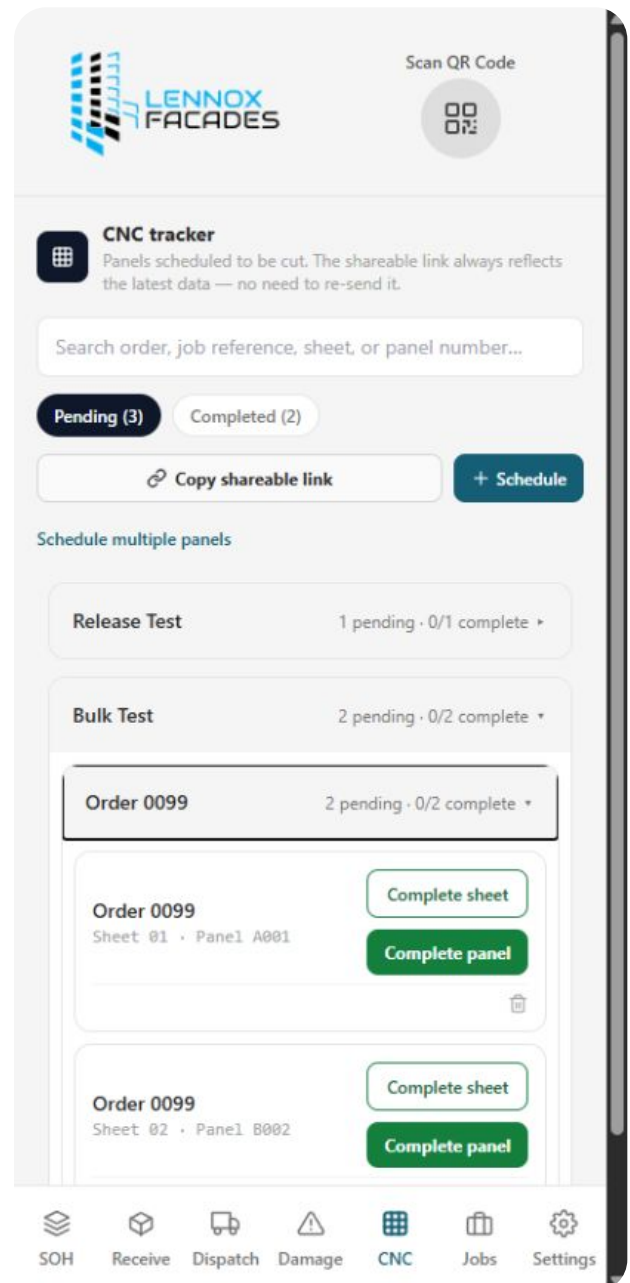

Users and admins can complete CNC work. Completion records progress only; it does not deduct warehouse stock.

Scheduling CNC panels



ADMIN ONLY

Admins can schedule one panel or enter many panels together.

- 1 Use **Schedule** for a single panel, or **Schedule multiple panels** for several.
- 2 For bulk entry, enter the required **Order number** and **Job reference** once.
- 3 Enter **Sheet number** and **Panel ID** on each row. Add lines as needed; use the red trash icon to remove a row.
- 4 Select **Schedule N panels**. Blank rows are ignored; incomplete or repeated sheet/panel pairs must be corrected.

The screenshot shows the Lennox Facades mobile app interface. At the top, there's a header with the company logo and a 'Scan QR Code' button. Below this is a 'CNC tracker' section with a search bar and filters for 'Pending (3)' and 'Completed (2)'. There are buttons for 'Copy shareable link' and '+ Schedule'. A 'Close bulk entry' button is also visible. The main section is titled 'Schedule multiple panels' and contains instructions: 'Enter the order and job once, then add your panels.' It has input fields for 'Order number *' (with example 'e.g. 001234') and 'Job reference *' (with example 'e.g. Meridian Constructions'). Below these is a table with two columns: 'Sheet number' and 'Panel ID'. The first row contains 'e.g. 1' and 'A73-219' respectively, with a red trash icon to the right. There is a '+ Add line' button below the table. At the bottom of the form are 'Add to schedule' and 'Cancel' buttons. The app's bottom navigation bar includes icons for SOH, Receive, Dispatch, Damage, CNC (highlighted), Jobs, and Settings.

Job references use title case. An order label such as Order #001234 becomes 001234. A leading panel-ID letter is capitalized.

Confirming a panel or sheet




The confirmation lists the panel IDs affected by your action.

1 **Complete panel** asks you to confirm the individual panel ID.

2 **Complete sheet** lists every pending panel for that order and sheet. Scroll through the whole list if necessary.

3 The sheet action also includes matching panels hidden by your search. Already completed panels and other sheets stay unchanged.

4 Confirm only when all listed work is complete, or choose **Cancel** to leave it unchanged.

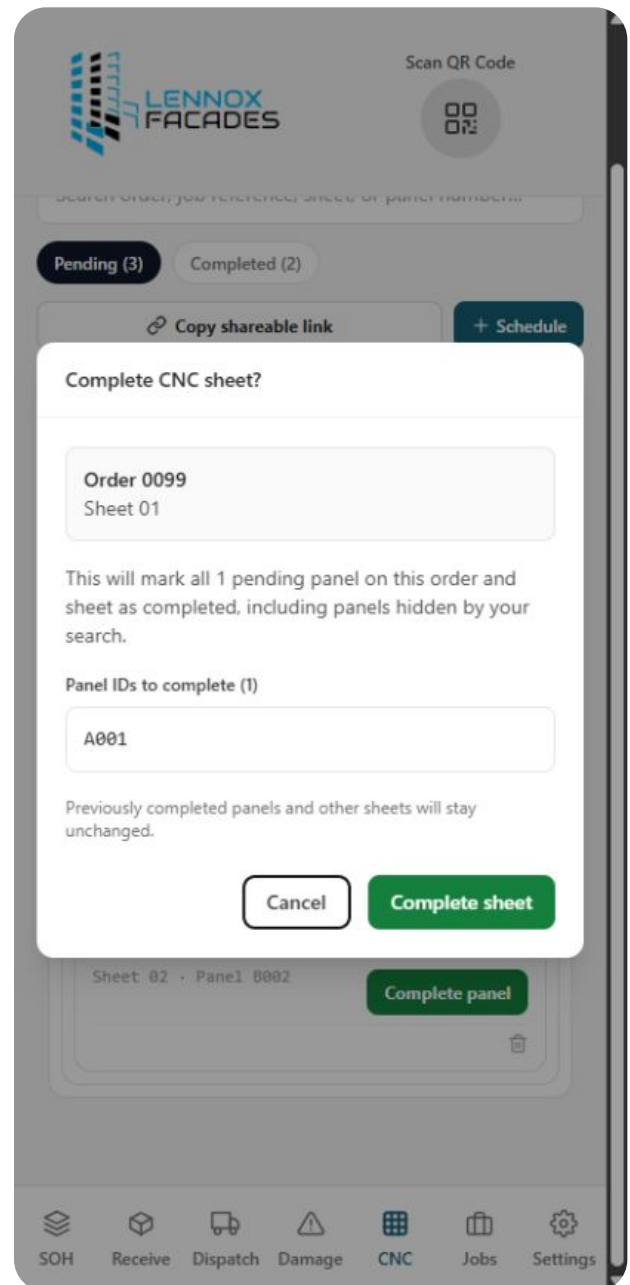


The pictured example contains one pending panel. A sheet with several pending panels lists all of their IDs.

16. Shared CNC Tracker & Excel



Share a read-only view that stays up to date.

- 1 In CNC, select **Copy shareable link**. Send it only to intended viewers.
- 2 Open the link on a phone or desktop. Expand job/order groups and use search or status filters.
- 3 Select **Excel** to download the connected workbook. Open it in desktop Microsoft Excel.
- 4 If you trust the source, allow editing and its data connection when prompted. Keep Excel open for the one-minute refresh.

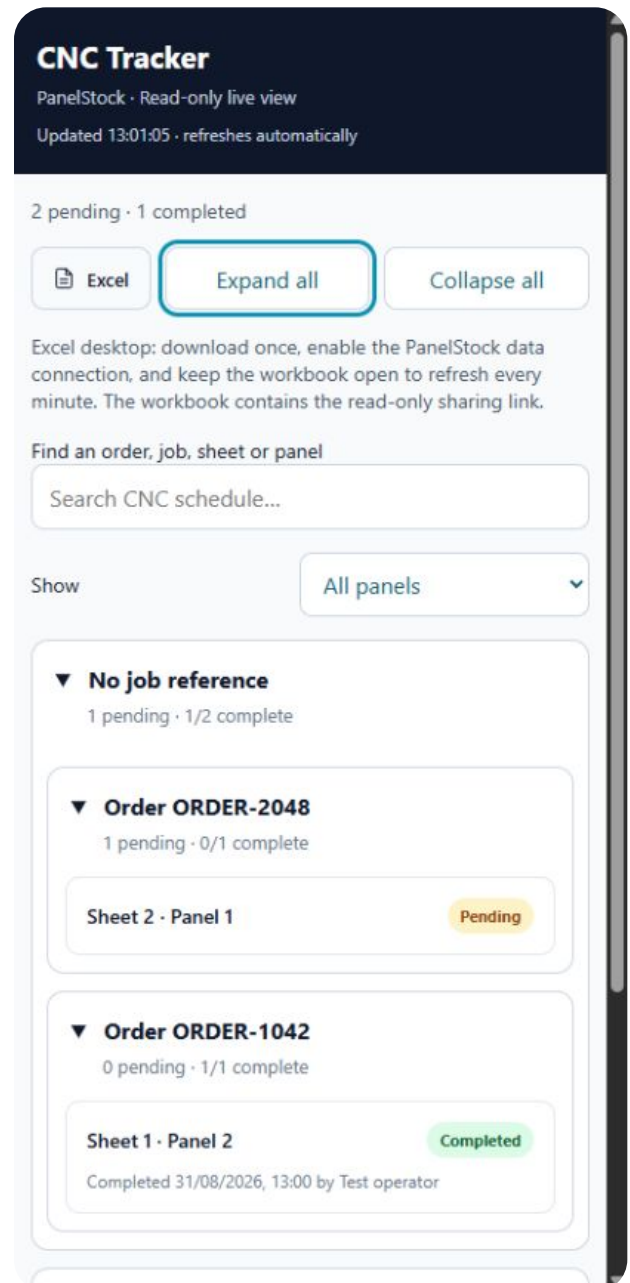


The shared page and workbook are read-only. Edits in Excel do not change PanelStock. Treat the link and workbook as access to CNC information.

Excel refresh & status colours

One connected workbook can refresh without repeated downloads.

- 1 **Completed** rows are green and **Pending** rows are yellow across all eleven exported columns.
- 2 Colours update with refreshed statuses, including newly added rows. Headers and blank rows are not coloured.
- 3 Download an older workbook once again to receive the new colour rules. Routine changes then refresh without another download.
- 4 If refresh stops, check Excel connection messages. Do not lower global Trust Center security settings. The workbook contains no macros.

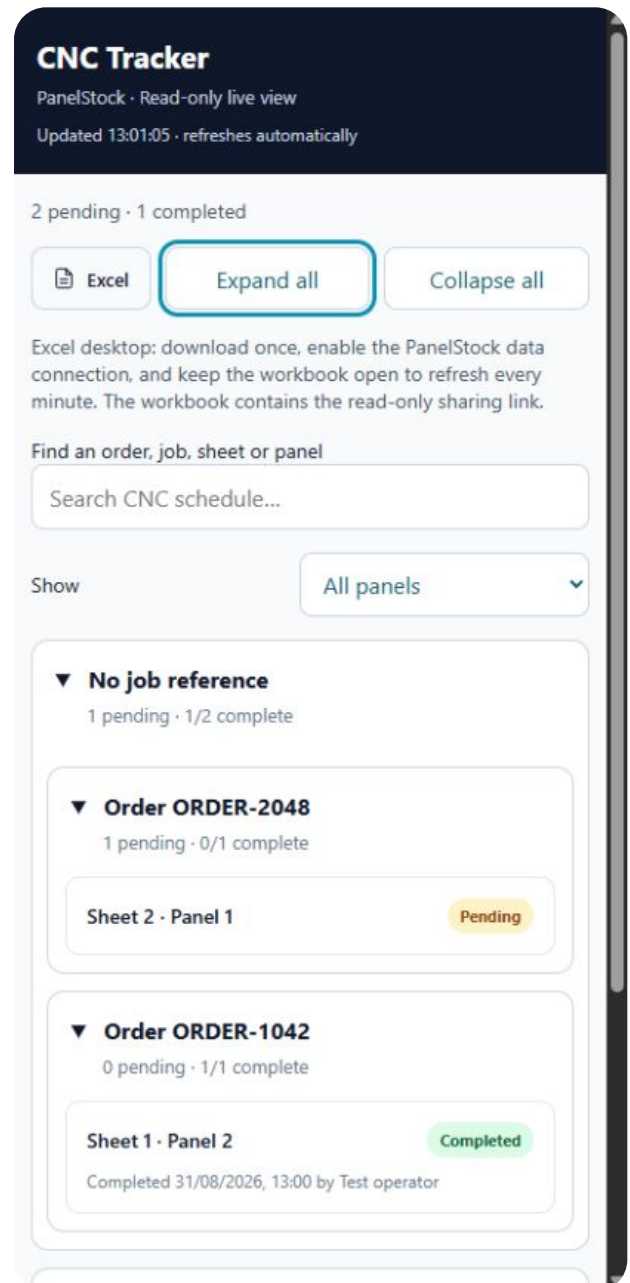

Refresh runs on opening and every minute while desktop Excel is open. On mobile, use the shared browser tracker.