


## Internally Patching on the M7CL Guide

Help! I've been scheduled to work Doxology (or another difficult worship set) and my inputs are scattered all over the board. How can I put every input in a place that is easy to access?


With these quick tips you can master internally patching on the Yamaha M7CL.



First, you need to select the channel (fader) that you want to change the input on. In this case, we want to change channel 1 (fader 1) to receive a different input. To do this, touch the icon labeled "CH 1" indicated by the red arrow.

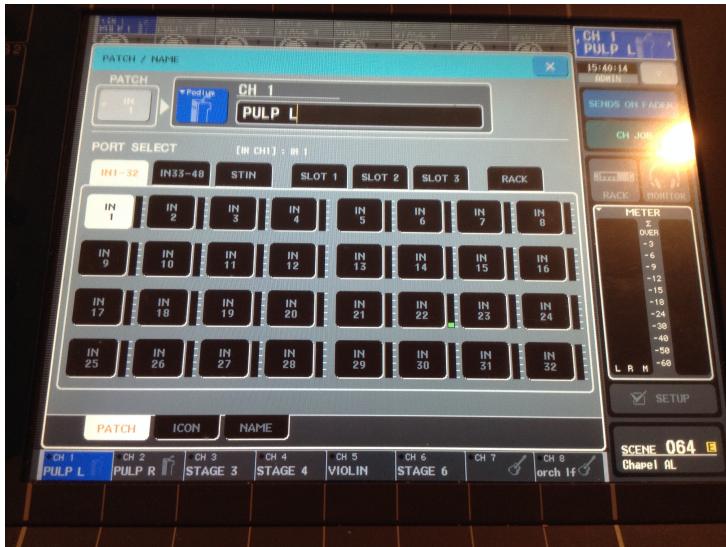

Once you do so, you will be led to this window. Then, secondly, you must select which input you would like to go to this channel (fader). To do so, simply touch the input you would like to use. In this case, we want to select input 2.

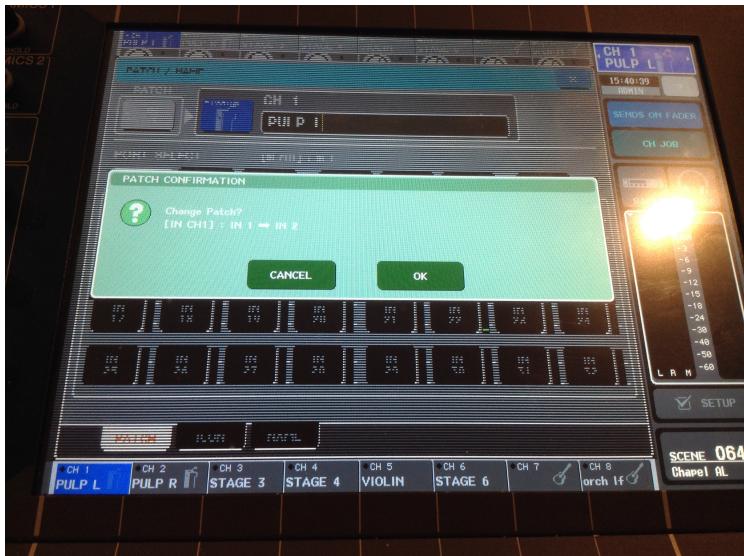

Next, you will see a confirmation screen that asks if you want to use input 2 instead of input 1 for this particular channel. Select "OK".



Once you press "OK" the board will switch the inputs. In this case, input 2 will now be going to channel 1 (as noted in the picture).

To exit this screen, push the "X" at the top right of the window.

Congratulations! With these few quick steps you can now successfully internally patch on the Yamaha M7CL.