
PUTTING THE GAME AWAY

- repeatedly until water stops spraying out. This may take many flushes. 1. When you are done playing, pour out all water from the bowl. Then, to ensure that no water remains inside the toilet, flush the handle
- 2. Leave the toilet upside down to dry thoroughly. When toilet is dry, store in an upright position.

TO REPLACE BATTERIES

alkaline batteries. Use a Phillips/cross head screwdriver (not included).



IMPORTANT: BATTERY INFORMATION

- . TO AVOID BATTERY LEAKAGE
- a, Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
 - c. Remove exhausted or dead batteries from the product
- d. Remove batteries if product is not to be played with for a long time.
- e. Do not short-circuit the supply terminals
- remove from the product before recharging. Recharge batteries under adult supervision. DO f. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always NOT RECHARGE OTHER TYPES OF BATTERIES.
- other electrical equipment. Reset (switching off and back on again or removing and re-inserting 2. Should this product cause, or be affected by, local electrical interference, move it away from

his device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and (2) this device must accept any interference

received, including interference that may cause undesired operation.

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the oursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against a particular installation, if this equipment does cause harmful interference to radio or television reception, requency energy, and, if not installed and used in accordance with the instructions, may cause harmful nterference to radio communications. However, there is no guarantee that interference will not occur in NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device. narmful interference in a residential installation. This equipment generates, uses and can radiate radio interference by one or more of the following measures:

- Reprient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

CAN ICES-3 (B) / NMB-3 (B)

© 2015 Hasbro, Pawtucket, RI 02861-1059 USA. All Rights Reserved. TM & @ denote U.S. Trademarks. Consumer contact. USA and Canada: Hasbro Games, Consumer Affairs Dept., P.O. Box 200, Pawtucket, RI 02861-1059 USA. TEL. 800-255-5516. Hasbro Australia Ltd., Level 4, 67-71 Epping Rd, Macquarie Park, NSW 2113, Australia. TEL. 1300 138 697. Hasbro NZ (a branch of Hasbro Australia. Ltd.), 221 Albany Highway, Auckland, New Zealand.

HASBROGAMINGCOM



Game Base • Toilet Base •

Foilet Tank with Toilet Paper Roll Spinner •

foilet Bowl with Lid




after use. Read instructions thoroughly for use and care instructions. TO AVOID INJURY: Use only clean tap water. Dry thoroughly

OBJECT

Flush without getting the gush! The last player left who doesn't get sprayed wins!

ONE-TIME ASSEMBLY

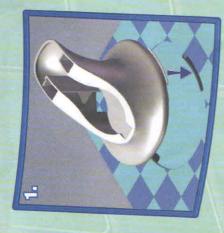

Carefully slide the notches of the toilet base through the holes in the game base.



Attach the toilet bowl to the toilet base as shown. Gently push down until the parts click together.



Attach the toilet tank to the toilet bowl as shown. Gently push down until the parts click together,



The first time you play, replace the batteries (see battery information on back page).

GET READY!

NOTE: Prior to playing the game, thoroughly clean all surfaces using only tap water.

- 1. Make sure the toilet lid is flipped to the upward position.
- 2. Fill toilet bowl to the fill line with clean tap water.
- Prepare the toilet for gameplay by flushing the handle until water begins to spray.

NOTE: Game works best when placed on a flat surface.




LET'S PLAY!

The last person to have used the toilet goes first! Play continues to the left.

ON YOUR TURN:

- 1. Place the toilet in front of you with the toilet bowl facing you.
- 2. Spin the toilet paper roll spinner.
- 3. Press down on the handle to flush the toilet the number of times shown on the spinner.



MIN

Continue to take turns spinning the toilet paper roll and flushing until only one player is left. The only player not to get sprayed by the toilet wins!