
INSTALLATION Page 1 of 2

## **INSTALLATION**

Install the oil filter screen [1] into the oil pan in the direction as shown.

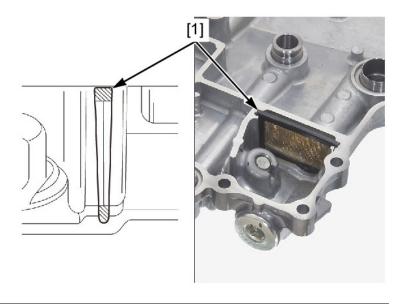


Apply engine oil to a new O-rings.
Install the new gasket [1] and O-rings [2] to the oil pan.
Apply engine oil to a new O-rings.
Install the new back up rings [3] and O-rings [4] to the oil joints [5].
Install the oil joints to the oil pan.

! DCT model:

## NOTE:

• Install the back up rings and O-rings to the oil joints as shown.

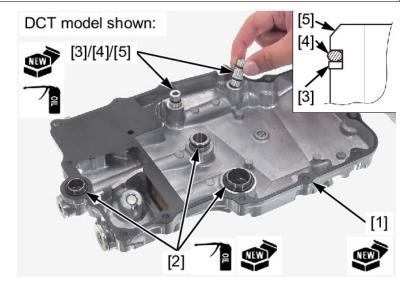

**INSTALLATION** Page 2 of 2

Apply engine oil to a new seal ring. Install the seal ring [1] to the oil pump. Install the oil strainer [2]. NOTE:

• Align the oil strainer boss with the oil pump groove.



Install the oil pan [1].
Install and tighten the bolts [2] in a crisscross pattern in 2 or 3 steps.
Fill the engine with the recommended engine oil and check that there are no oil leaks.

