REMOVAL/INSTALLATION Page 1 of 2

REMOVAL/INSTALLATION

SEAT CATCH HOOK

Remove the pillion seat.


Remove the bolt [1].

Disconnect the seat lock cable [2] from the seat catch hook [3] and seat lock cable B stay [4].

Remove the seat catch hook. Installation is in the reverse order of removal.

NOTE:

- Apply grease to the seat catch hook sliding area.
- Align the seat catch hook boss
 [5] with the seat rail hole [6].

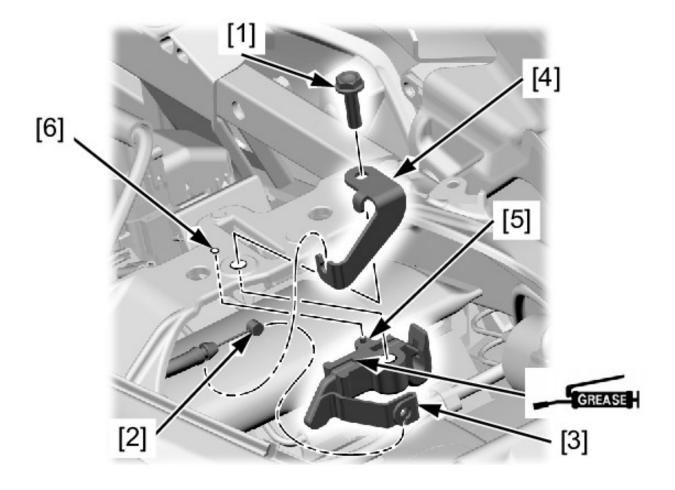

REMOVAL/INSTALLATION Page 2 of 2

SEAT LOCK CYLINDER

Remove the left fender B cover.

Disconnect the seat lock cable [1] from the seat lock cylinder [2]. Remove the lock spring [3], seat lock cylinder, and stay [4]. Installation is in the reverse order of removal.

NOTE:

 Align the seat lock cylinder lug [5] with the left fender B cover groove [6] and stay groove [7].

