

Crossbar socket and bias configuration

MIRA Control Rev.A | 3300 | Named nets connect functional blocks


J8001 / Contacts 1–32

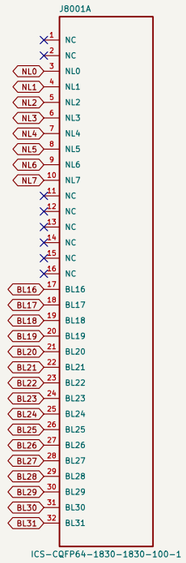


J8001 / Contacts 33–64

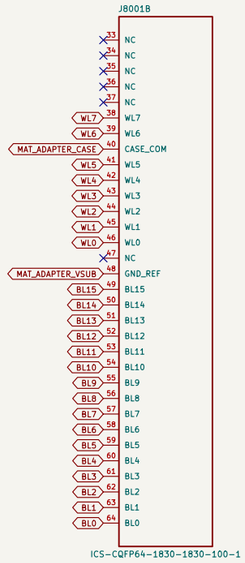

Pin 48 / Reference GND or bias

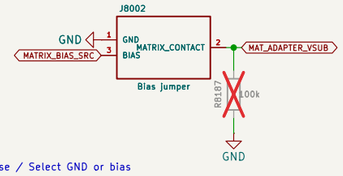

Case / Select GND or bias

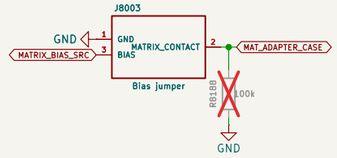

BL routing: 2200–2500
WL drivers: 2700 | NL selection / clamps: 2800
MATRIX_BIAS_SRC: 1800

J8001A and J8001B are one 64-contact socket.
BL0–BL15 use contacts 64–49 in reverse order.
Pin 40: CASE_COM. Pin 48: GND in the user reference;
its existing configurable net is MAT_ADAPTER_VSUB.
Default both bias selectors to GND.
Unused NC contacts are not permanent GND.

Sheet: /		
File: 3300 – Matrix adapter and bias configuration.kicad_sch		
Title:		
Size: A3	Date:	**Rev:**
KiCad E.D.A. 10.0.5		Id: 1/1