
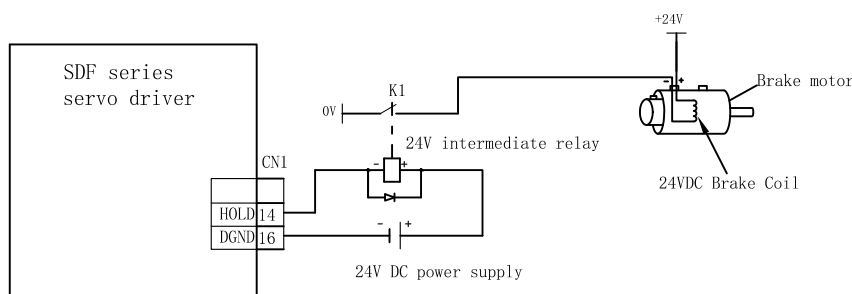


SDF04NK7X/SDF08NK8X/SDF04NKW/SDF08NKW Driver

Position control mode wiring diagram (24V single-ended input signal)

Notice:

1. When using the built-in braking resistor, the P and D terminals need to be short-circuited;
2. When using an external braking resistor, the connecting wires of the P and D terminals must be disconnected, and the resistor must be connected between the P and C terminals;
3. The built-in and external braking resistors cannot be used at the same time.

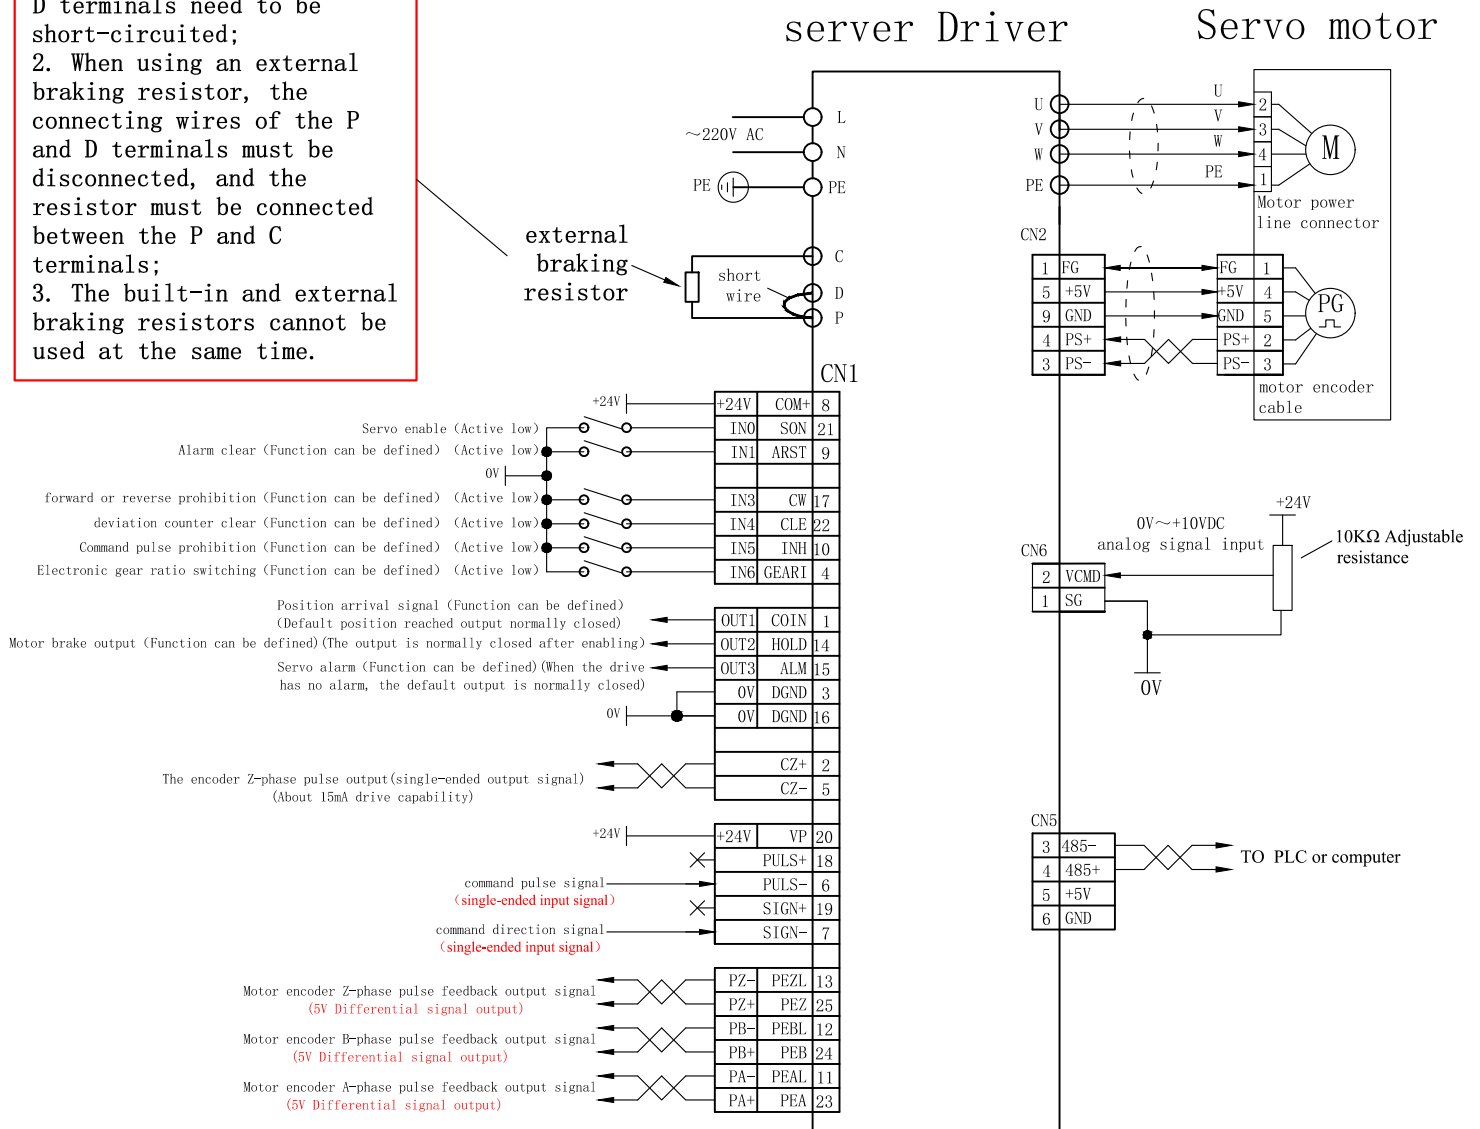

Connection diagram of brake motor and servo driver