


SDF series drive internal speed control wiring diagram

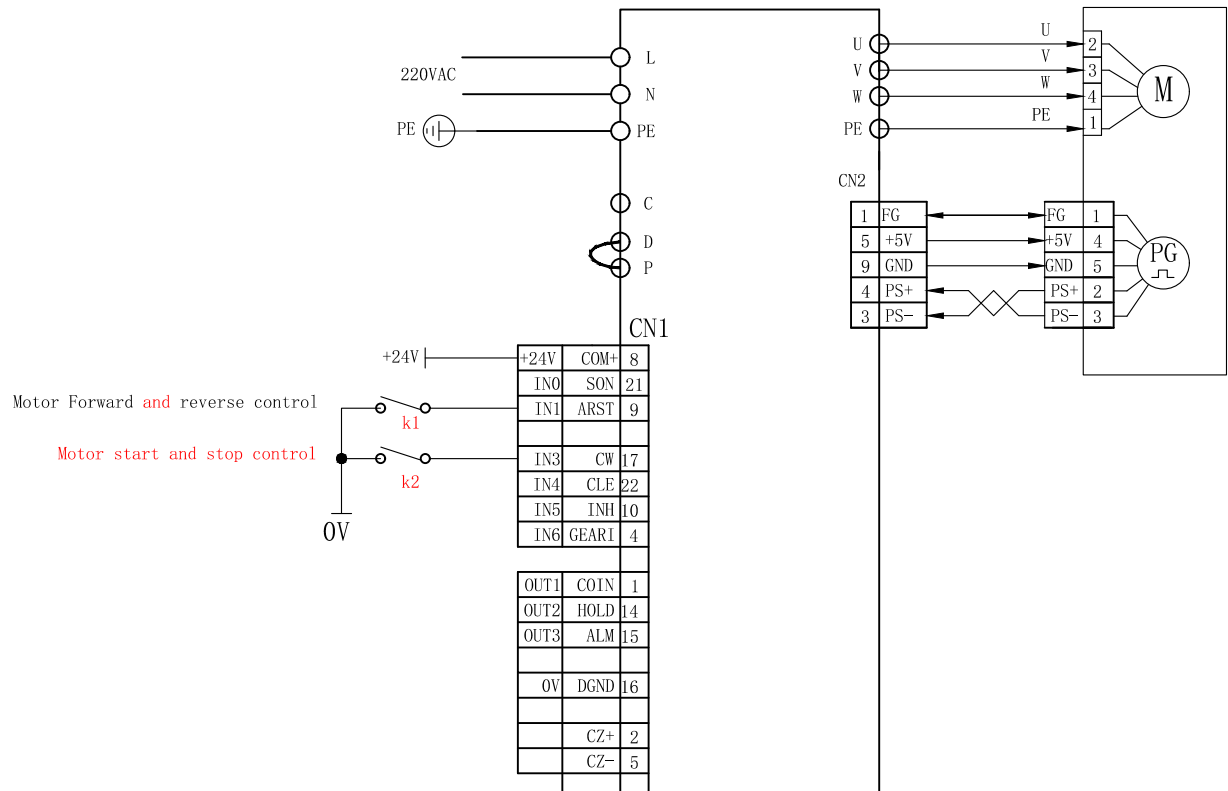

parameter settings		
parameter number	parameter value	explanation
PN1	Motor ID	In order to achieve the best control effect, the drive and motor must be matched to use (Pn1 motor ID matched with corresponding model number). Otherwise, it may vibrate, scream, position error etc. matching method: 1) change Pn0 to 0. 2) Set Pn1 to the needed motor ID value. 3) enter SN-DEF menu, press “Enter” key for 2 seconds till display “DONE”. 4) power off, power on again can work normally.
PN4	1	Internal speed control mode
PN32	0	single internal control
PN95	1	The driver uses an internal enable control
PN111	5	Define IN1 input port as internal speed command 0
PN113	6	Define IN3 input port as internal speed command 1
PN114	19	Define the IN4 input port as the internal control mode switch selection 0
PN52	1	The IN4 input port is forced to ON(Equivalent to setting to internal speed mode)
PN33	0	
PN34	0	
PN35	100	forward speed (The speed value is defined by the customer)
PN36	-100	Reverse speed (The speed value is defined by the customer)
PN37	0	
PN38	0	
PN39	0	
PN40	0	