


# NUC64DEBUG

## Overview

|            |                                                                                                                                |
|------------|--------------------------------------------------------------------------------------------------------------------------------|
| Name       | NUC64DEBUG                                                                                                                     |
| URL        | <a href="http://campo.seesslen.net/nuc64debug">Link (http://campo.seesslen.net/nuc64debug)</a>                                 |
| SW-Project | <a href="http://hase.seesslen.net/redmine/projects/nuc64debug">Link (http://hase.seesslen.net/redmine/projects/nuc64debug)</a> |
| HW-Rev     | v0.2.x                                                                                                                         |
| SN:        |                                                                                                                                |
| Dimensions | 17.15mm x 22.86mm                                                                                                              |

Small adapter PCB to connect a STM32 based PCB via 10P-FPC with the STLink-part of an Nucleo64-Board.

## PCB

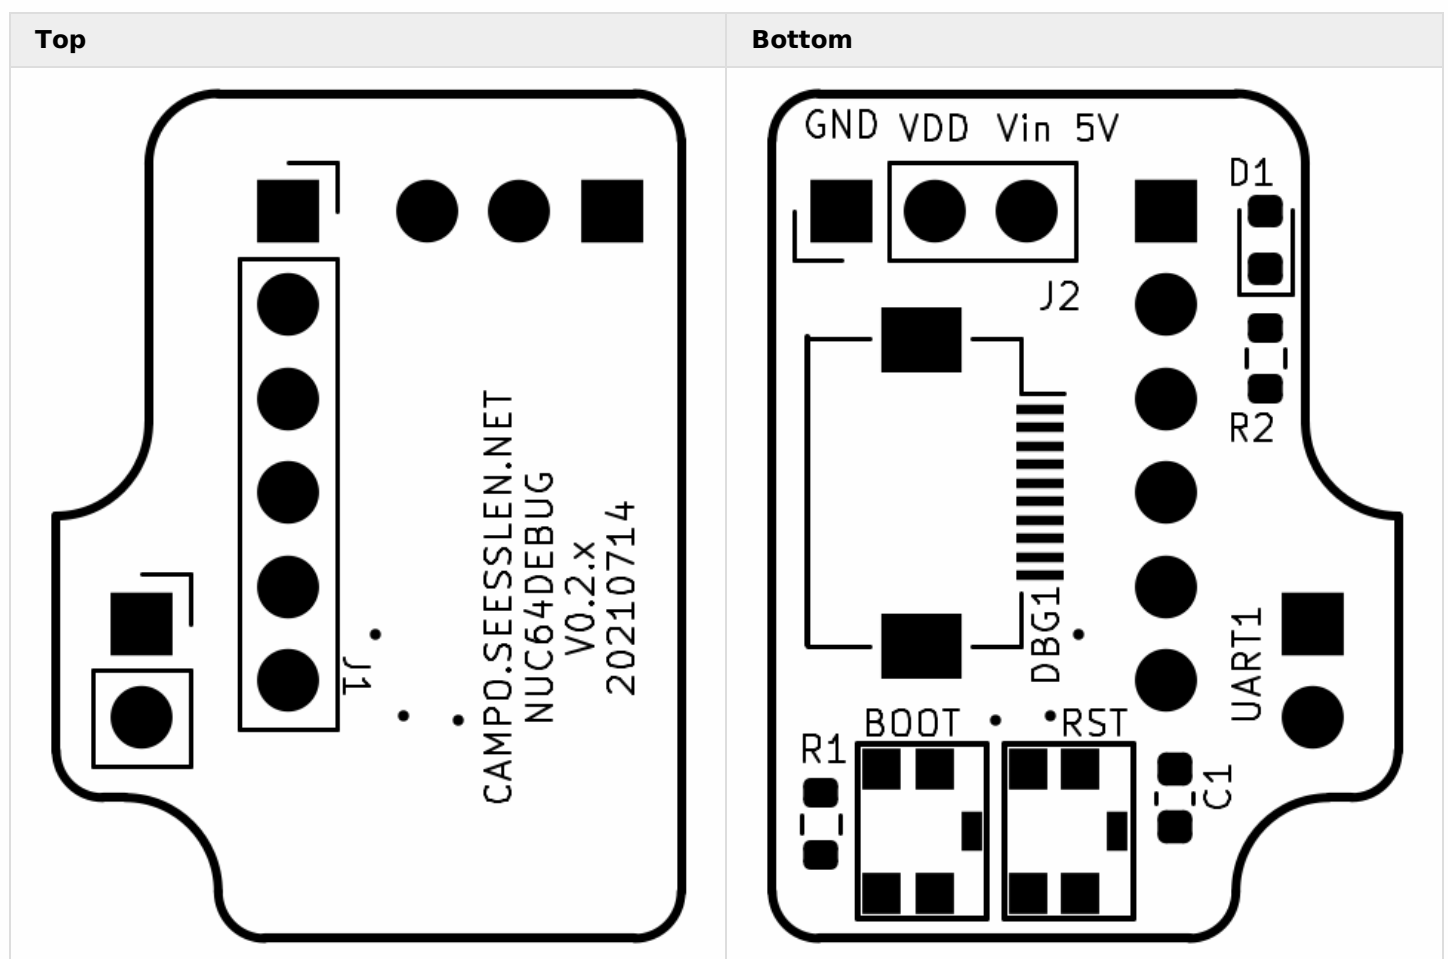

# Connectors

## Debug

| Connector-pin | Function                |
|---------------|-------------------------|
| 1             | VDD Target              |
| 2             | SWCLK                   |
| 3             | GND                     |
| 4             | SWDIO                   |
| 5             | NRST                    |
| 6             | NC (Reserved for SWO)   |
| 7             | UART TX                 |
| 8             | UART RX                 |
| 9             | VIN 5V                  |
| 10            | NC (Reserved for BOOT0) |

## J1

| Connector-pin | Function |
|---------------|----------|
| 1             | VDD      |
| 2             | SWCLK    |
| 3             | GND      |
| 4             | SWDIO    |
| 5             | NRST     |
| 6             | SWO      |

## UART1

| Connector-pin | Function     |
|---------------|--------------|
| 1             | TX (ST-Link) |
| 2             | RX (ST-Link) |

## Errata

- UART only works with low data rate (not necessarily low baud rate). Reason may be located in (some) Nucleos STLink implementation.
- Boot-Button not functional