Manual Details	B-64485EN_01(Maint 32iB), B-64605EN_01 (Maint 0iF)
System type	FANUC Series 30i/31i/32i - Model -B & FANUC Series 0i F

"WN69 I/0 Link i DO ALARM (CHn Gxx Syy zz : PMCm Ybbb= **H)"

This message indicates that the DO alarm occurs at "zz" byte of slot "yy" of group "xx" in channel "n", Y "bbbb" address of P MC path "m". The "**H" shows some bits at which the alarm occurs by hexadecimal. See the descriptions of each unit in this section for the correspondence between "zz"byte of slot "yy" in that message and where alarm occurs in each unit.

In addition, information of status alarm including DO alarms is also output to the system relay area. For details of the system relay area, refer to the FANUC Series 0i-MODEL F CONNECTION MANUAL (HARDWARE) (B-64603EN).

NOTE: Status alarm cannot be cleared without power off. After turning the power off, please correct the cause of alarm and turn the power on again.

1. I/0 Module for Connector Panel [Supporting I/0 Link i]

Name	Ordering specifications	Specification
1/0 module for connector panel (basic module)	A03B-0824-C001	DI/DO : 24/16
1/0 module for connector panel (extension module A)	A03B-0824-C002	DI/DO : 24/16 With MPG interface
1/0 module for connector panel (extension module B)	A03B-0824-C003	DI/DO : 24/16 Without MPG interface
1/0 module for connector panel (extension module C)	A03B-0824-C004	DO: 16 2A output module
1/0 module for connector panel (extension module D)	A03B-0824-C005	Analog input module

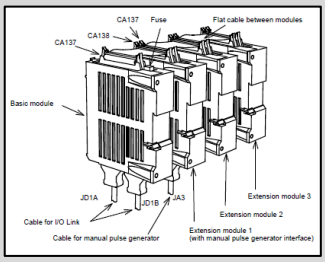

PMC alarm message		Faulty location
Slot number Syy	Intra-slot byte address zz	
1	0	DO alarm occurs at 0th byte of Basic module
	1	DO alarm occurs at 1st byte of Basic module
2	0	DO alarm occurs at 0th byte of Extension module1
	1	DO alarm occurs at 1st byte of Extension module1
3	0	DO alarm occurs at 0th byte of Extension module2
	1	DO alarm occurs at 1st byte of Extension module2
4	0	DO alarm occurs at 0th byte of Extension module3
	1	DO alarm occurs at 1st byte of Extension module3

NOTE: DO alarm is detected not for each bit but for each byte in this module. It cannot be detected in which bit a DO alarm occurs. "01H" is displayed in the alarm message whichever bit a DO alarm occurs.

2. I/0 Module for Operator's Panel (Support Matrix input) [Supporting I/0 Link i]

Name	Specification	Remark
1/0 module for operator's panel	A03B-0824-K200 (A20B-2102-0170)	

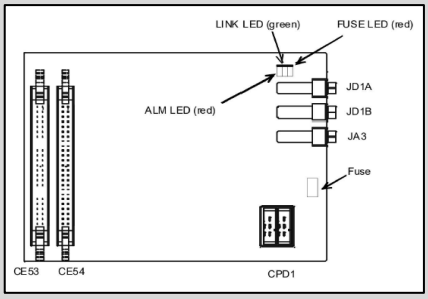

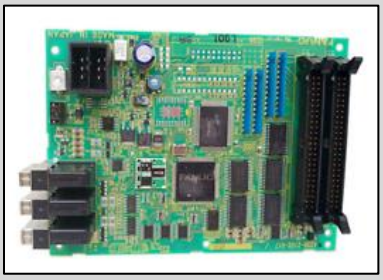

PMC alarm message		Faulty location
Slot number Syy	Intra-slot byte address zz	
1	0	DO alarm occurs at 0th byte
	1	DO alarm occurs at 1st byte
	2	DO alarm occurs at 2nd byte
	3	DO alarm occurs at 3rd byte
	4	DO alarm occurs at 4th byte
	5	DO alarm occurs at 5th byte
	6	DO alarm occurs at 6th byte

3. Connection of I/0 Module for Operator's Panel and I/0 Module for Power Magnetics Cabinet [Supporting I/0 Link i]

Item	Ordering specifications	Remarks
1/0 module for operator's panel (with MPG interface)	A03B-0824-K202 (A20B-2004-0690)	DI : 48 points DO : 32 points With MPG interface
1/0 module for power magnetics cabinet (without MPG interface)	A03B-0824-K203 (A20B-2004-0691)	DI : 48 points DO : 32 points Without MPG interface

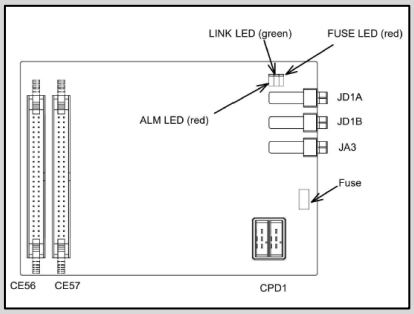

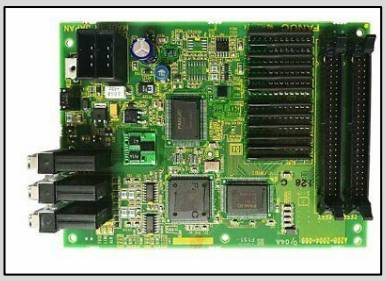

PMC alarm message		Faulty location
Slot number Syy	Intra-slot byte address zz	
1	0	DO alarm occurs at 0th byte
	1	DO alarm occurs at 1st byte
	2	DO alarm occurs at 2nd byte
	3	DO alarm occurs at 3rd byte

4. I/0 Module Type-2 for Connector Panel [Supporting I/0 Link i]

Item	Ordering specifications	Specification
1/0 module type-2 for connector panel (basic module B1)	A03B-0824-C040	DI/DO=48/32 With MPG interface
1/0 module type-2 for connector panel (basic module B2)	A03B-0824-C041	DI/DO=48/32 Without MPG interface
1/0 module type-2 for connector panel (extension module E1)	A03B-0824-C042	DI/DO=48/32

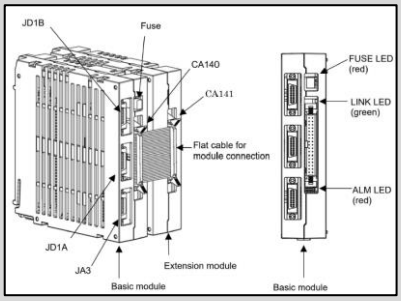

PMC alarm message		Faulty location
Slot number Syy	Intra-slot byte address zz	
1	0	DO alarm occurs at 0th byte of Basic module
	1	DO alarm occurs at 1st byte of Basic module
	2	DO alarm occurs at 2nd byte of Basic module
	3	DO alarm occurs at 3rd byte of Basic module
2	0	DO alarm occurs at 0th byte of Extension module
	1	DO alarm occurs at 1st byte of Extension module
	2	DO alarm occurs at 2nd byte of Extension module
	3	DO alarm occurs at 3rd byte of Extension module

5. Terminal Type I/0 Module [Supporting I/0 Link i]

Item	Ordering specifications	Specification
Basic module	A03B-0823-C011	DI/DO: 24/16
Extension module A	A03B-0823-C0 12	DI/DO : 24/16 With MPG interface
Extension module B	A03B-0823-C0 13	DI/DO : 24/16 Without MPG interface
Extension module C	A03B-0823-C0 14	DO : 16 2-A output module
Extension module D	A03B-0823-C015	Analog input module
Extension module E	A03B-0823-C0 16	Analog output module
Fuse (spare parts)	A03B-0823-K001	2A (for basic module)
Spare terminal block set (for basic module and extension module A/B)	A03B-0823-K020	Cable-side terminal block set (including each ofT1 through T4)
Spare terminal block set (for	A03B-0823 -K011	Cable-side terminal block

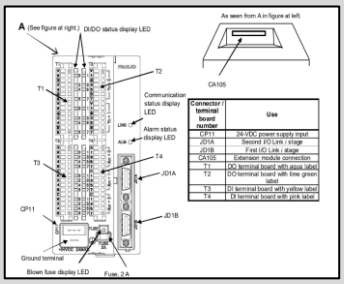

extension module C)		set (including each of T1 and T2)
Spare terminal block set (for extension module D)	A03B-0823-K0 12	Cable-side terminal block set (including each of T1 and T2)
Spare terminal block set *(for* extension module E)	A03B-0823-K0 13	Cable-side terminal block set (including each of T1 and T2)
Inter-module cable A	A03B-0823-K 100	Cable length: 100 mm, 52 pins Used for extension module connection

PMC alarm message		**Faulty location**
Slot number Syy	**Intra-slot byte address zz**	
1	0	DO alarm occurs at 0th byte of Basic module
	1	DO alarm occurs at 1st byte of Basic module
2	0	DO alarm occurs at 0th byte of Extension module1
	1	DO alarm occurs at 1st byte of Extension module1
3	0	DO alarm occurs at 0th byte of Extension module2
	1	DO alarm occurs at 1st byte of Extension module2
4	0	DO alarm occurs at 0th byte of Extension module3
	1	DO alarm occurs at 1st byte of Extension module3

6. Machine Operator's Panel [Supporting I/0 Link i]

Name	Specification	Remarks
Standard machine operators panel Main panel	A02B-0323-C231	
Safety machine operators panel	A02B-0323-C234	
Safety machine operators panel type B	A02B-0323-C235	
Standard machine operators panel Sub panel AA	A02B-0236-C237	
Standard machine operators panel Sub panel D	A02B-0236-C244	

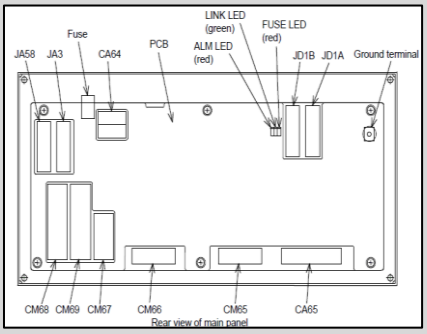

PMC alarm message		**Faulty location**
Slot number Syy	**Intra-slot byte address zz**	
1	5	DO alarm occurs at 5th byte
	6	DO alarm occurs at 6th byte

NOTE : DO alarm does not occur at 0th to 4th byte.

7. Operator's Panel Connection Unit [Supporting I/0 Link i]

Item	Ordering specifications	Specification
Operator's panel connection unit (source DO)	A16B-2204-0260	DI : 96 points DO : 64 points
Operator's panel connection unit (source DO)	A16B-2204-0261	DI : 64 points DO : 32 points

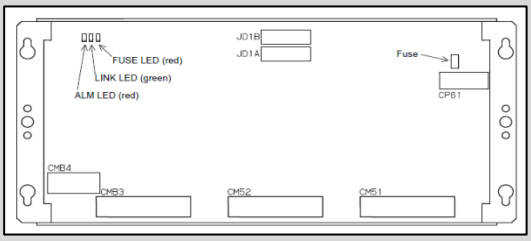

PMC alarm message		Faulty location For A16B-2204-0260
Slot number Syy	Intra-slot byte address zz	
1	0	DO alarm occurs at 0th byte
	1	DO alarm occurs at 1st byte
	2	DO alarm occurs at 2nd byte
	3	DO alarm occurs at 3rd byte
	4	DO alarm occurs at 4th byte
	5	DO alarm occurs at 5th byte
	6	DO alarm occurs at 6th byte
	7	DO alarm occurs at 7th byte

PMC alarm message		Faulty location For Al6B-2204-0261
Slot number Syy	Intra-slot byte address zz	
1	0	DO alarm occurs at 0th byte
	1	DO alarm occurs at 1st byte
	2	DO alarm occurs at 2nd byte
	3	DO alarm occurs at 3rd byte

8. Safety I/0 unit [for I/0 Link *i* only]

Name	Order specification
Safety 10 Unit	A03B-0821-C002

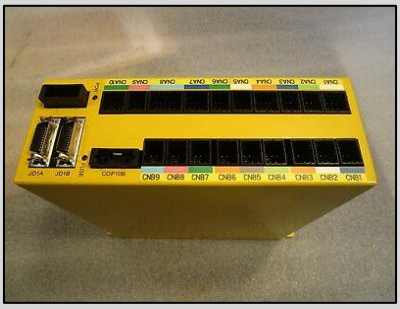

PMC alarm message			Faulty location
Group number Gyy	Slot number Syy	Intra-slot byte address zz.	
0 to 23 (1st group in PMC)	1	0	DO alarm occurs at 0th byte in PMC
		1	DO alarm occurs at 1st byte in PMC
0 to 23 (2nd group in DCSPMC)	1	0	DO alarm occurs at 0th byte in DCSPMC
		1	DO alarm occurs at 1st byte in DCSPMC

9. I/O module for operator's panel supporting safety function [for I/O Link *i* only]

Name	Order specification
1/0 module for operator's panel supporting safety function (type A)	A20B-2200-0471
1/0 module for operator's panel supporting safety function (type B)	A20B-2200-0470

PMC alarm message			Faulty location
Group number Gyy	Slot number Syy	Intra-slot byte address zz	
0 to 23 (1st group in PMC)	1	0	DO alarm occurs at 0th byte in PMC
		1	DO alarm occurs at 1st byte in PMC

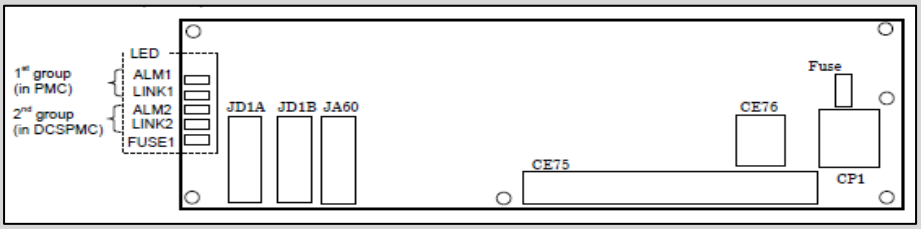

10. I/O Unit for Power Magnetics Cabinet [Supporting I/O Link i]

Item	Ordering specifications	Specification
1/0 unit for power magnetics cabinet	A02B-0319-C001	DI/DO=96/64, With MPG interface

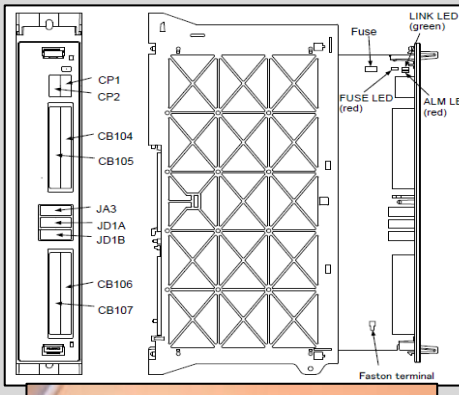

PMC alarm message		Faulty location
Slot number Syy	Intra-slot byte address zz	
1	0	DO alarm occurs at 0th byte
	1	DO alarm occurs at 1st byte
	2	DO alarm occurs at 2nd byte
	3	DO alarm occurs at 3rd byte
	4	DO alarm occurs at 4th byte
	5	DO alarm occurs at 5th byte
	6	DO alarm occurs at 6th byte
	7	DO alarm occurs at 7th byte