How to clean Spindle Motor Cooling fan motor

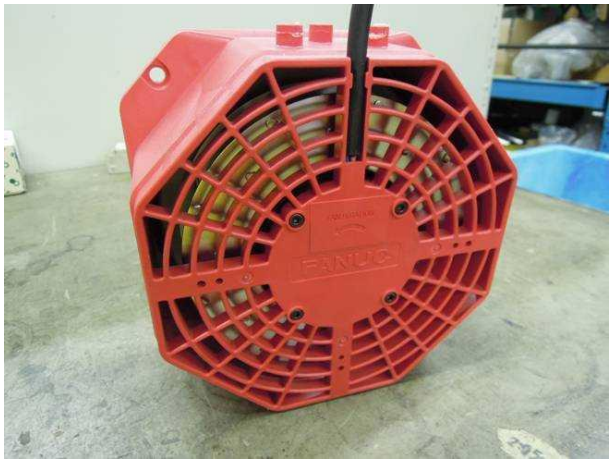

1.Take off fan motor from spindle motor

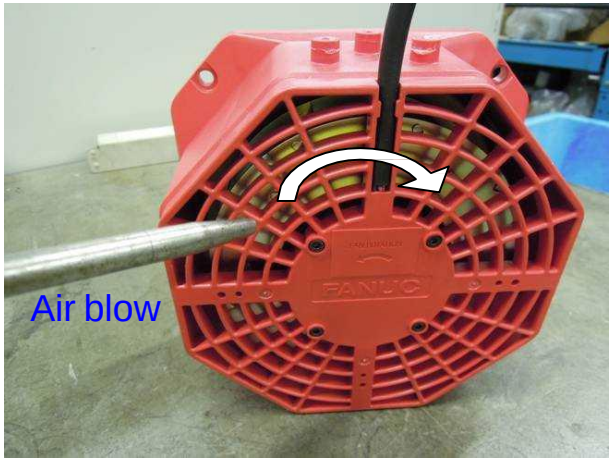

2. Air blow

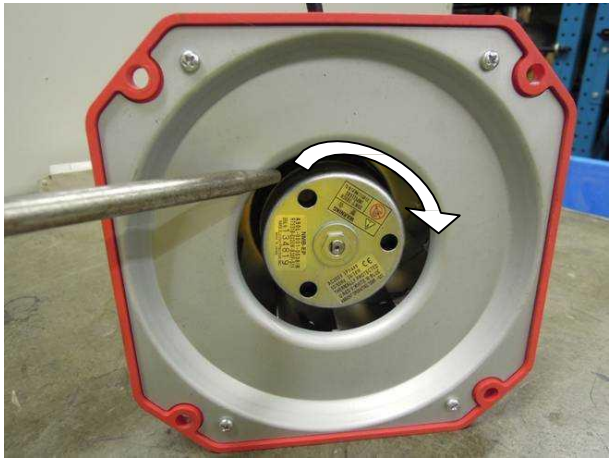

3. Air blow on opposite side

4. Air blow in drain hall

How to apply lubricant to Cooling fan motor

Please apply lubricant by using squirt can or skewer.

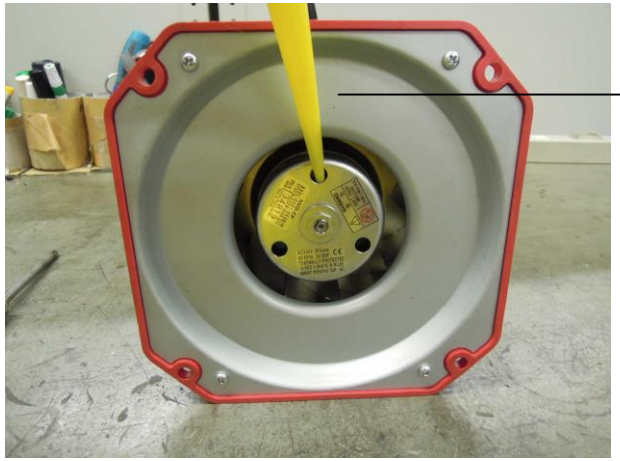

Squirt can

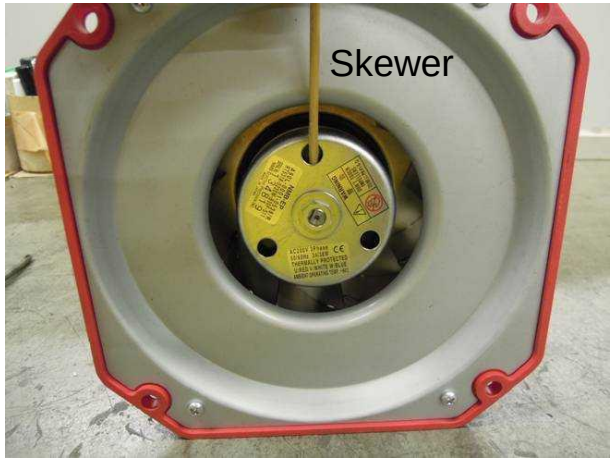

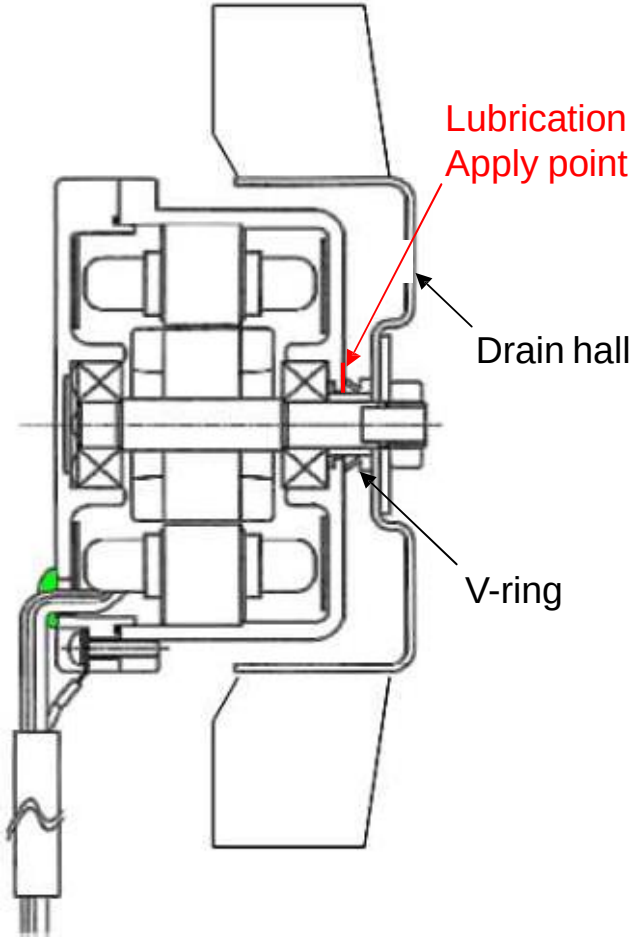

Cross-section of fan motor