


Fan control for the Victron Buck-Boost — switched by the converter output through a DC-SSR

The converter runs 12 V or 24 V on either side. Take the fan supply from the side whose voltage matches the fan.

Installation — all power terminals sit on one end of the case, seen here from that end

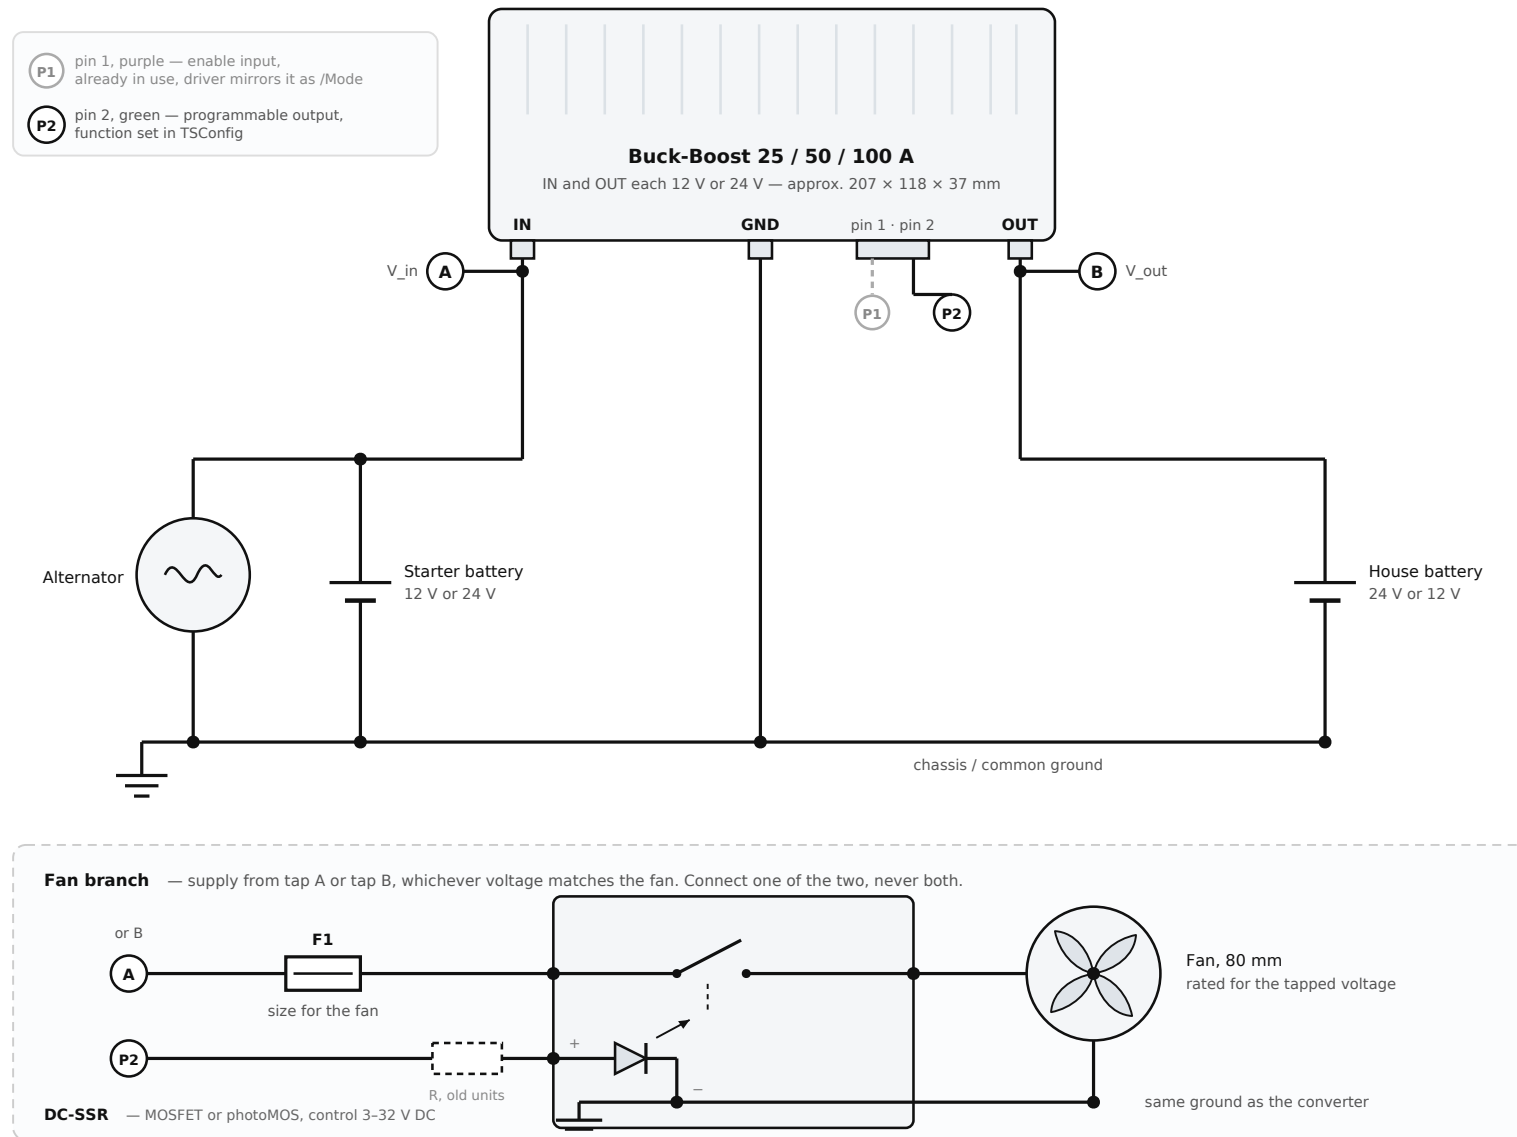

- 1 The fan must match the voltage of the tap it hangs on — check which side of your installation is 12 V and which is 24 V before wiring.
- 2 If the fan does not suit the input side, take the supply from the converter output instead (tap B). Same circuit, other tap.
- 3 The SSR must be DC rated (MOSFET or photoMOS). An AC triac type conducts until the current crosses zero and never switches DC off again.
- 4 Pin 2 carries V_{in} when active and is rated 1.5 A. Old TS units (smooth case) need the series resistor supplied with the converter.