



Service Bulletin

Customer Service Department

TELEPHONE: 419-661-9000 FAX: 419-661-9639

INTERNET: <http://www.glasstech.com>

Kromschroder Gas Regulators Obsolete

Reference #041

The Kromschroder GI--- series gas regulators used on some Glasstech burner systems are no longer available from the vendor. We are providing an equivalent gas regulator from Karl Dungs.

The Glasstech part number for the old style regulator is P-REG8G5A60G001 or P-REG8G5A60G002

The Glasstech part number for the replacement regulator is P-REGAG50BE0001

The Dungs regulators are functionally equivalent but require different set up adjustment than the Kromschroder regulators.

The proportional regulator is installed between the burner and the blocking valve. It is labeled "Gas Regulator" in Figure 1 below, and shown by itself in Figure 2.

SET THE BYPASS FOR LIGHT OFF GAS

The proportional regulator has an adjustable bypass installed to set the low gas flow necessary to keep the burners on once they are started. The adjustment screw for this bypass is located on the side of the proportional regulator under the black plastic cap. See Figure 2. The adjustment of this bypass is accomplished by **turning the screw clockwise** (as if tightening it) **until it stops. DO NOT FORCE**. Next, **turn the adjustment screw back 5 full turns counter-clockwise**.

SET THE REGULATOR ADJUSTMENT SCREW

Adjust the setting of the regulator by using the adjustment screw in the top of the regulator. This adjustment screw is under the black plastic cap visible at the top of the regulator in Figure 2. **DO NOT LOOSEN THE FACETED COVER UNDER THE BLACK PLASTIC CAP.** This retains the regulator springs.

Step 1 - First turn the adjustment screw counter-clockwise until it stops. **DO NOT FORCE.**

Step 2 – Light the burners and adjust temperature set point to 0 degC.

Step 3 - Next, turn the adjustment screw 1 full turn clockwise and observe the burner to see if the flame increases.

Step 4 - Continue to turn the adjustment screw clockwise in 1 turn steps until the flame does increase. At this point the main diaphragm is starting to open.

Step 5 - Then turn the adjustment screw counter-clockwise 1 turn and the flame should decrease. This is the correct point where the main gas diaphragm is not yet open but is set to open as soon as the demand for heat increases.

The number of turns required to reach this threshold point will vary depending on the mechanical configuration of the burner in your system.

NOTE: The counterclockwise and clockwise turns in this section are referenced by looking down on the top of the regulator.

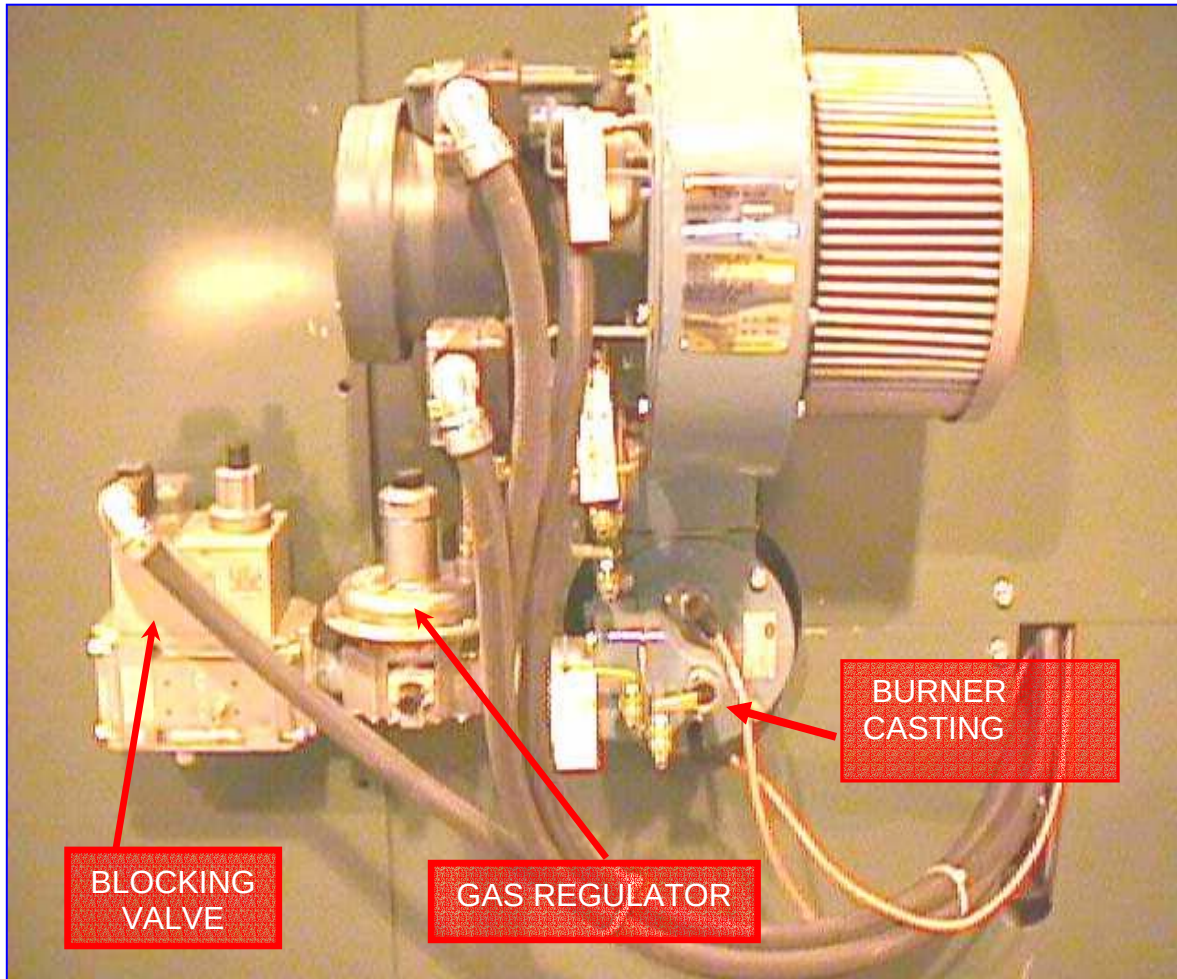


FIGURE 1

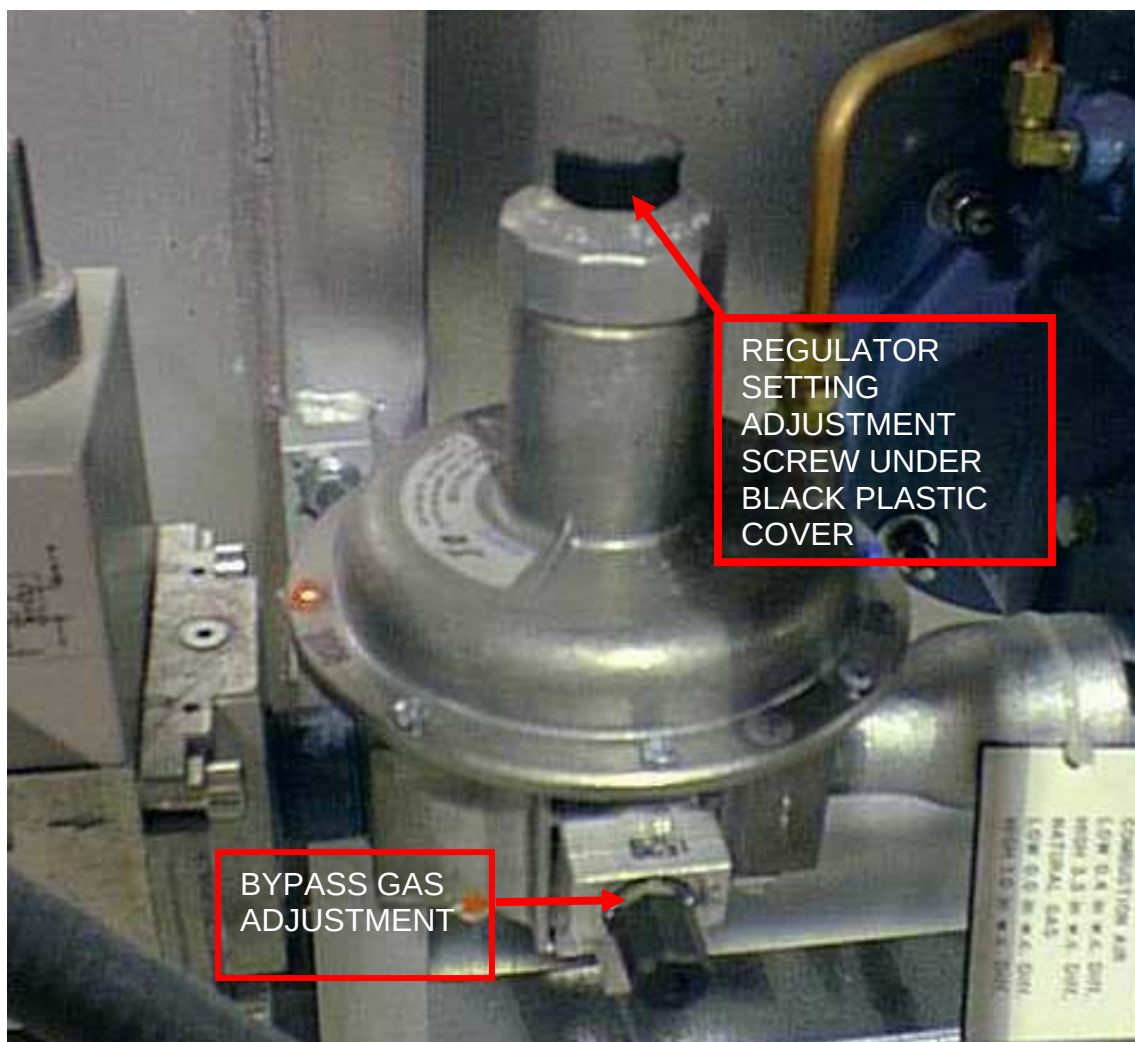


FIGURE 2