


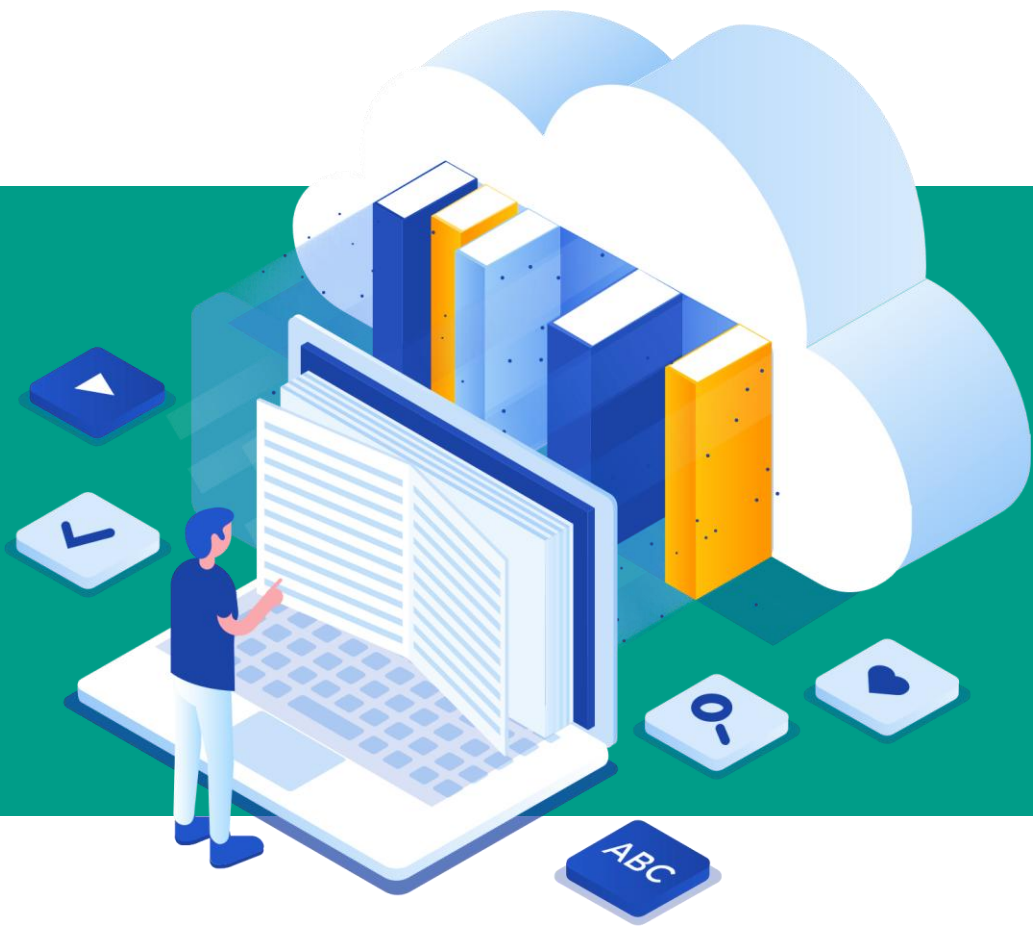

Switch Basic Config

Step 1. Enter Privileged EXEC mode and Set a Hostname the Switch

- 장비 이름 변경

```
Switch>enable  
Switch#
```

```
Switch#configure terminal  
Enter configuration commands, one per line. End with CNTL/Z.  
Switch(config)#hostname SW1  
SW1(config)#
```

Step 2. Assign a Password to the Switch

- EXEC 모드에 대한 접근 제어를 위해 패스워드 필요

```
SW1(config)#enable secret cisco
```

```
SW1#show run | sec enable  
enable secret 5 $1$mERr$hx5rVt7rPNoS4wqbXKX7m0
```

```
SW1>enable  
Password:
```

Step 3. Configure Telnet and Console Access Passwords

- 원격 접근에 대한 패스워드 설정

```
SW1(config)#line vty 0 15
SW1(config-line)#password cisco
SW1(config-line)#login
SW1(config-line)#logging synchronous
SW1(config-line)#exec-timeout 1 0
SW1(config-line)#exit
```

```
C:\>telnet 1.1.1.1
Trying 1.1.1.1 ...Open
User Access Verification
Password:
```

Step 3. Configure Telnet and Console Access Passwords

- 원격 접근에 대한 패스워드 설정

```
SW1(config)#line con 0
SW1(config-line)#password cisco
SW1(config-line)#login
SW1(config-line)#logging synchronous
SW1(config-line)#exec-timeout 1 0
SW1(config-line)#exit
```

User Access Verification

Password:

Step 4. Encrypt Passwords

- 접근 패스워드 암호화

```
SW1#configure terminal
SW1(config)# service password-encryption
```

```
SW1#sh run | sec line con
line con 0
password 7 0822455D0A16
login
exec-timeout 1 0
```

Step 5. Banner Messages

- 접근 패스워드 암호화

```
SW1#configure terminal
SW1(config)# banner motd #Authorized Access Only#
```

```
authorized Access Only
```

```
User Access Verification
```

```
Password:
```

Step 6. Management IP 설정

```
SW#show ip interface brief
```

Interface	IP-Address	OK?	Method	Status	Protocol
(...)					
Vlan1	unassigned	YES	manual	administratively down	down

```
SW#configure terminal
```

```
SW(config)#interface vlan1
```

```
SW(config-if)#ip address 192.168.1.1 255.255.255.0
```

```
SW(config-if)#no shutdown
```

```
%LINK-5-CHANGED: Interface Vlan1, changed state to up
```

```
SW(config-if)#exit
```

```
SW(config)#ip default-gateway 192.168.1.254
```


Step 6. Management IP 설정

```
SW#show ip interface brief
```

Interface	IP-Address	OK?	Method	Status	Protocol
(...)					
Vlan1	192.168.1.1	YES	manual	up	up

```
SW#ping 192.168.1.2
```

```
Type escape sequence to abort.
```

```
Sending 5, 100-byte ICMP Echos to 192.168.1.2, timeout is 2 seconds:
```

```
!!!!!!
```

Option. 명령어 DNS확인 중지

```
SW1# configure terminal
SW1(config)#no ip domain-lookup
```

```
SW1(config)#1
               ^
% Invalid input detected at '^' marker.
```

Option. Logging 시간 표시

```
SW1# configure terminal  
SW1(config)#service timestamps log datetime msec
```

```
*Mar 01, 00:11:01.1111: SYS-5-CONFIG_I: Configured from console by console
```

Option. 장비 정보 확인

```
Switch#show version
```

```
Cisco IOS Software, C2960 Software (C2960-LANBASEK9-M), Version 15.0(2)SE4, RELEASE SOFTWARE (fc1)  
Technical Support: http://www.cisco.com/techsupport  
Copyright (c) 1986-2013 by Cisco Systems, Inc.  
Compiled Wed 26-Jun-13 02:49 by mnguyen
```

```
ROM: Bootstrap program is C2960 boot loader
```

```
BOOTLDR: C2960 Boot Loader (C2960-HB00T-M) Version 12.2(25r)FX, RELEASE SOFTWARE (fc4)
```

```
Switch uptime is 39 minutes
```

```
System returned to ROM by power-on
```

```
System image file is "flash:c2960-lanbasek9-mz.150-2.SE4.bin"
```

```
cisco WS-C2960-24TT-L (PowerPC405) processor (revision B0) with 65536K bytes of memory.
```

```
Processor board ID FOC1010X104
```

```
Last reset from power-on
```

```
1 Virtual Ethernet interface
```

```
24 FastEthernet interfaces
```

```
2 Gigabit Ethernet interfaces
```

```
The password-recovery mechanism is enabled.
```

Option. 장비 정보 확인

```
64K bytes of flash-simulated non-volatile configuration memory.
Base ethernet MAC Address      : 00:D0:BA:4D:9B:B4
Motherboard assembly number    : 73-10390-03
Power supply part number       : 341-0097-02
Motherboard serial number      : FOC10093R12
Power supply serial number     : AZS1007032H
Model revision number          : B0
Motherboard revision number    : B0
Model number                   : WS-C2960-24TT-L
System serial number           : FOC1010X104
Top Assembly Part Number       : 800-27221-02
Top Assembly Revision Number   : A0
Version ID                     : V02
CLEI Code Number               : COM3L00BRA
Hardware Board Revision Number : 0x01

Switch Ports Model          SW Version  SW Image
-----
*    1 26    WS-C2960-24TT-L  15.0(2)SE4  C2960-LANBASEK9-M

Configuration register is 0xF
```

Option. 부팅 이미지 변경 (upgrade/downgrade)

```
Switch#dir
Directory of flash:

 2  -rw-      4670455      <no date>  c2960-lanbasek9-mz.150-2.SE4.bin
```

```
Switch#copy tftp: flash:
Address or name of remote host []? 192.168.0.100
Source filename []? c2960-lanbase-mz.122-25.SEE1.bin
Destination filename [c2960-lanbase-mz.122-25.SEE1.bin]?

Accessing tftp://192.168.0.100/c2960-lanbase-mz.122-25.SEE1.bin...
Loading c2960-lanbase-mz.122-25.SEE1.bin from
192.168.0.100: !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
[OK - 4670455 bytes]
```

Option. 부팅 이미지 변경 (upgrade/downgrade)

```
Switch#dir
Directory of flash:/
3 -rw- 4670455 <no date> c2960-lanbase-mz.122-25.SEE1.bin
2 -rw- 4670455 <no date> c2960-lanbasek9-mz.150-2.SE4.bin
```

```
Switch#conf t
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)#boot system flash:/c2960-lanbase-mz.122-25.SEE1.bin
Switch(config)# exit
Switch# wr
Building configuration...
[OK]
Switch# reload
```

Loading "flash:/c2960-lanbase-mz.122-25.SEE1.bin"...

[OK]