

# **Technical Note**

TN# MCSTN294 Category: Software

Rev# 1.0 Support Model: ATC3XXX serial

Release Date: 2023 / 9 / 14

# Subject

How to install Team viewer in ATC3XXX serial


# Introduction

The installation step of Team viewer under Jetson Nano

# **Trouble Shooting Step-by-Step**

Team viewer install package download path: https://www.teamviewer.com/en/download/raspberry-pi/

1. Download Raspberry-Pi→arm64-64bit

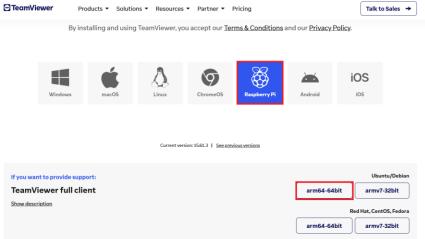


2. Use command : sudo dpkg -i <package name> to install Teamviewer. #sudo dpkg -i teamviewer 15.45.3 arm64.deb



#### 3. Launch Teamviewer.

### #teamviewer

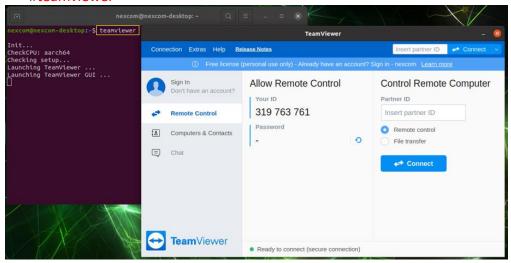

4. Setting personal password

Extras → Options → Advanced → Setting Personal Password and Confirm → OK

