


## **Self-study programme M001**



## Design and function

# Boat engines from Volkswagen Marine

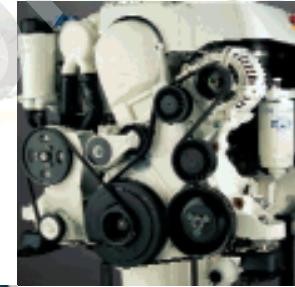

**TDI 100-5**  
**TDI 120-5**  
**TDI 150-5**      **SDI 55-5**  
**TDI 150-5D**    **SDI 75-5**

# Foreword

---

Volkswagen diesel engines have been providing dependable service in passenger vehicles and transporters since 1976.

The development of TDI engines is a significant step in the direction of high technology.

With their sophisticated mechanical and electronic systems, low fuel consumption values and outstanding power ratings, these diesel engines represent peak performance in diesel technology.



MSSP\_001\_002


Boat engines from Volkswagen are developed by skippers for skippers.

The easy-to-service components as well as a worldwide parts organisation ensure reliable and efficient operation over many years.

NEW



Attention Note



# Table of Contents



## Fundamentals . . . . . 6

Features . . . . .	6
The SDI engine . . . . .	8
The TDI engine . . . . .	10

## Engine mechanical systems . . . . . 12

Engine oil circuit . . . . .	12
Cup-type oil filter . . . . .	12
Electric oil extractor pump for oil change . . . . .	13
Marine oil pan . . . . .	13
Crankcase ventilation with oil separator . . . . .	13
Toothed belt drive for the camshaft . . . . .	14
Toothed belt drive for the distributor injection pump . . . . .	14
Ribbed V-belt drives for ancillary components . . . . .	15
Dual-mass flywheel . . . . .	16
Hydraulic bucket tappet . . . . .	18

## Combustion system . . . . . 20

Two-spring nozzle holder . . . . .	21
------------------------------------	----

## Engine electronic systems . . . . . 22

Overview of installation locations . . . . .	22
System overview . . . . .	24
Glow plug system . . . . .	26
Intake manifold pressure and intake air temperature sender . . . . .	27
Needle lift sender . . . . .	28
Modulating piston movement sender . . . . .	29
Engine speed sender . . . . .	30
Coolant temperature sender . . . . .	31
Fuel temperature sender . . . . .	32
Throttle lever position sender . . . . .	33
Metering adjuster . . . . .	34
Start of injection valve . . . . .	35
Fuel shut-off valve . . . . .	36
Indicator lamp for glow plug system monitoring and engine electronics . . . . .	37
Fuel volume control . . . . .	38
Start of injection control . . . . .	39
Internal functions in the engine control unit . . . . .	42
Function diagram . . . . .	44

# Table of Contents

---



## Fuel system ..... 46

Fuel supply .....	46
Diesel fuel microfilter with water warning facility .....	48
Circulation preliminary filter with water separator (optional) ..	50

## Emission characteristics ..... 52

Pollutants in exhaust gas.....	52
Reducing pollutants.....	53

## Exhaust turbocharging ..... 54

Fundamental principle of exhaust turbocharging .....	54
Turbocharger with variable turbine geometry .....	56
Control of variable guide vanes .....	58
Guide vane adjustment.....	59

## Cooling system ..... 60

Introduction to cooling system .....	60
Overview of cooling circuit for SDI engines .....	60
Overview of cooling circuit for TDI engines .....	62
Design of cooler assembly .....	64
Intercooler.....	64
Main heat exchanger .....	65
Exhaust header .....	65
Exhaust manifold.....	66
Combined cooler.....	66
Seawater pump .....	67
Sacrificial anode .....	68

## Electrical system ..... 69

Central electrics unit .....	69
Earth cutout relay .....	69
Multifunction display.....	70
Displays/indicators – rev counter, voltmeter and oil pressure gauge.....	72

# Table of Contents

<b>Self-diagnosis . . . . .</b>	<b>73</b>
Diagnosis . . . . .	73
Function 01 to 08 . . . . .	74
Examples of fault code memory entries . . . . .	76
Monitored sensor e.g. coolant temperature sender . . . . .	78
<b>Adaptation kits . . . . .</b>	<b>80</b>
Gearbox bell housing for Volvo SP-E/DP-E . . . . .	80
Gearbox bell housing for reversing gearbox (SAE-7) . . . . .	80
Gearbox bell housing for Mercruiser . . . . .	81
Gearbox bell housing for Volvo SX/DP-S. . . . .	81
<b>Abbreviations . . . . .</b>	<b>82</b>
List of abbreviations used . . . . .	82



# Fundamentals



## Features

- Quiet-running 5-cylinder engines
- Low weight and compact dimensions
- 2-pole electrical system:  
To avoid galvanic corrosion, the engine is not connected to ground
- Electric oil intake pump and upright cup-type oil filter for clean and efficient oil change at the push of a button
- Oil pan with support feet and baffle plates for increased protection when listing and in rough seas
- Low-maintenance belt drives with automatic tensioning elements to ensure long service life of belts and components
- Ultramodern electronics for monitoring engine functions
- Warnings with visual and acoustic alarm
- Water-cooled turbocharger with Variable Turbine Geometry (VTG) for high propelling power in a wide speed range
- Powerful three-phase alternators for reliable power supply and fast battery charging
- All engines comply with the currently valid and most stringent pollution standard, the Bodensee Schifffahrtsverordnung (Lake Constance Shipping Ordinance) BSO II also with twin motorisation
- Complete instrumentation with economy control
- Suitable for PME/RME fuel



Particular care must be taken to ensure that the fuel tank and the fuel hoses leading to the engine are also suitable for PME/RME fuel.

# Fundamentals

The Volkswagen Marine boat engines feature

- a special **Marine Diesel Control (MDC)** system specifically adapted to boat operation and which is characterized by maximum reliability. An emergency running program with a regeneration function ensures reliable engine operation should, contrary to expectations, a malfunction occur.
- a wide effective engine speed range with high propelling power.
- extensive corrosion protection for the engine housing and all add-on components.
- a dual-mass flywheel to absorb drive and transmission vibrations.



MSSP\_001\_003

# Fundamentals




## The SDI engine

The Volkswagen Marine boat engines are designed as naturally aspirated diesel engines with direct injection for use in displacement boats.

The engines, well-proven a million times over, offer:


- Quiet operation despite high pressure direct injection
- Low engine speed level and low-vibration operation
- High torque and low fuel consumption
- Low pollutant emission
- Compact installation dimensions
- Ease of maintenance and
- Ultramodern technology

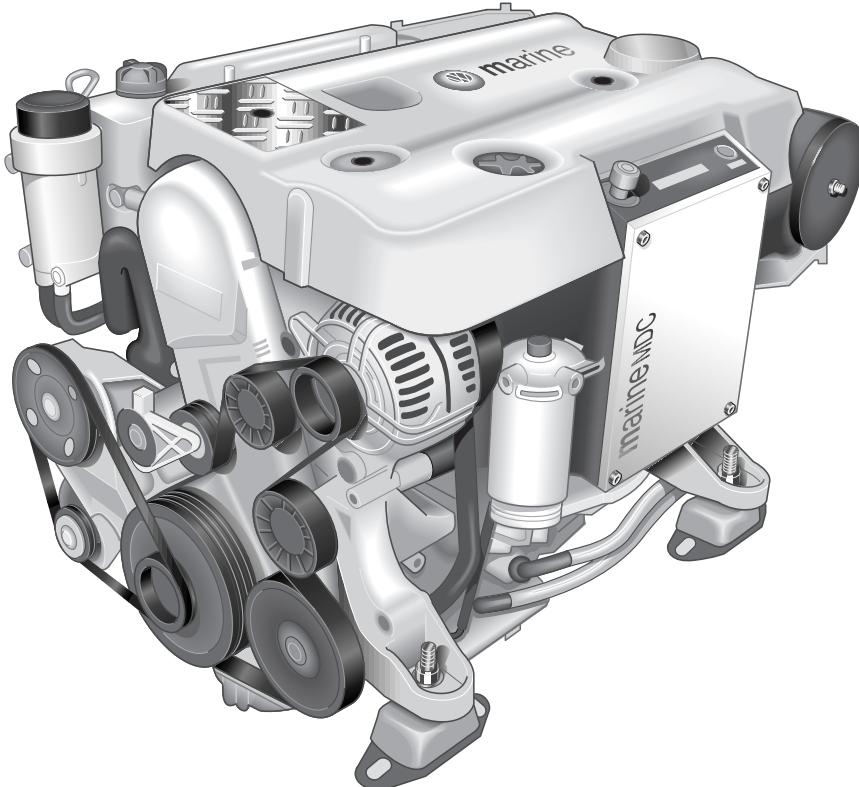


MSSP\_001\_004

**Engine data**

<b>Marine Type</b>	SDI 55-5	SDI 75-5
<b>Engine code letter</b>	BCT	ANF
<b>Engine design</b>	5-cylinder in-line naturally aspirated diesel engine	
<b>Fuel injection system</b>	Diesel direct injection with electronically controlled distributor-type injection pump	
<b>Displacement</b>	2461 cm <sup>3</sup>	
<b>Compression ratio</b>	19.0 : 1	
<b>Power rating at engine speed</b>	40 kW (55 bhp) 2500 rpm	55 kW (75 bhp) 3600 rpm
<b>Max. torque at engine speed</b>	155 Nm 2250 rpm	155 Nm 2250 rpm
<b>Specific power output</b>	16.3 kW/l	22.3 kW/l
<b>Min. specific fuel consumption</b>	233 g/kWh	233 g/kWh
<b>Weight (dry, with ancillary components, cooling system and clutch flange) not including gearbox</b>	260 kg	260 kg
<b>Alternator</b>	120 A	
<b>Electrical system</b>	12 V not earthed	
<b>Exhaust emission legislation, certified in accordance with</b>	Bodensee Schifffahrtsverordnung Stufe 2 (Lake Constance Shipping Ordinance, Stage 2)	

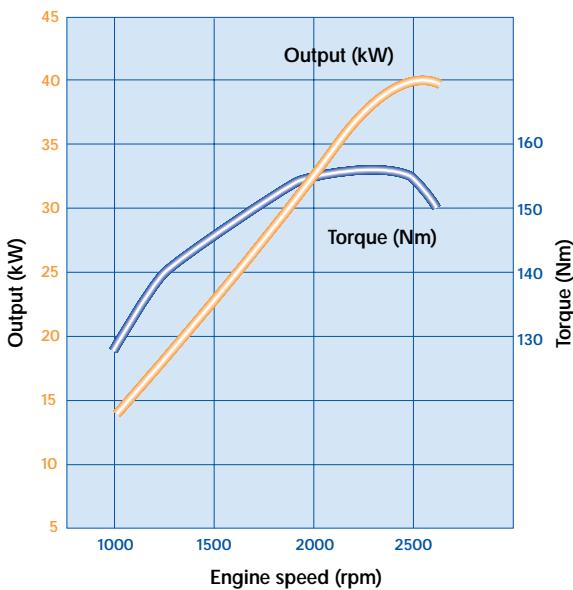**SDI 55-5**

MSSP\_001\_109

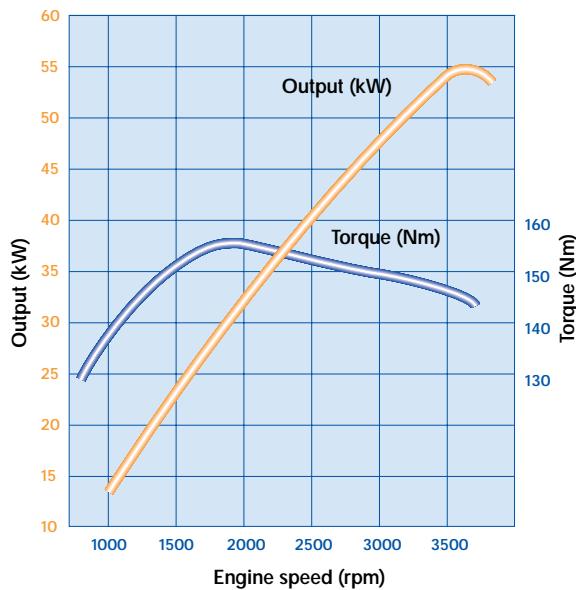**SDI 75-5**

MSSP\_001\_110

# Fundamentals



## The TDI engine


Volkswagen Marine boat engines are designed as direct injection engines with turbocharging for use in displacement and hydroglider boats.

The TDI 150-5 is particularly suitable for use in fast hydroplanes. The TDI 150-5D variant is certified for use as twin motorisation in compliance with BSO II.

The TDI 100-5 and 120-5 engines are perfectly adapted to use in touring and sailing boats. They are both also certified for use as twin motorisation in compliance with BSO II.


The TDI engines feature a turbocharger with a water-cooled VTG turbocharger (Variable Turbine Geometry).

The engines develop a wide effective speed range offering high propelling power without the characteristic propulsion weakness of turbocharged engines in the lower engine speed range.

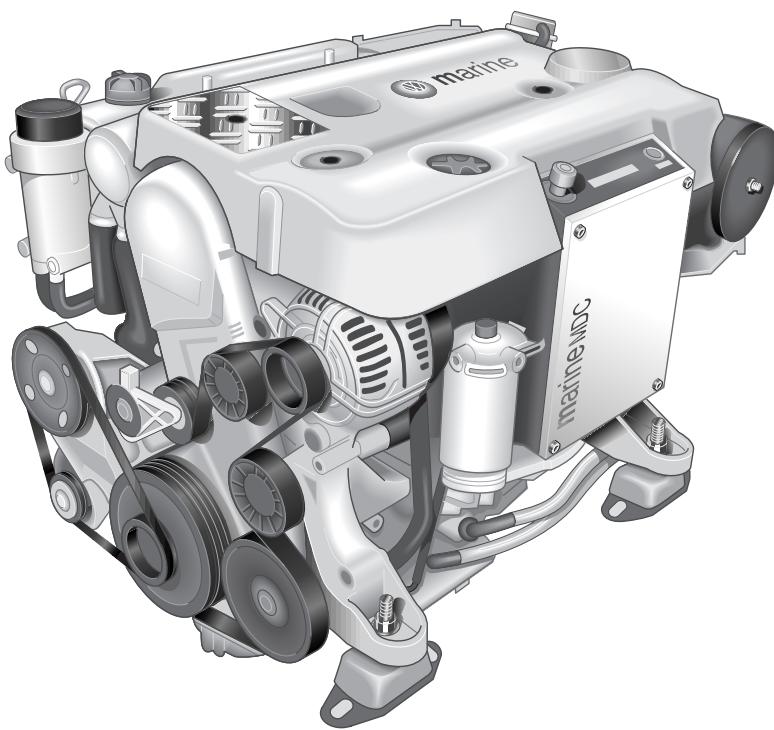

MSSP\_001\_005


## TDI 100-5

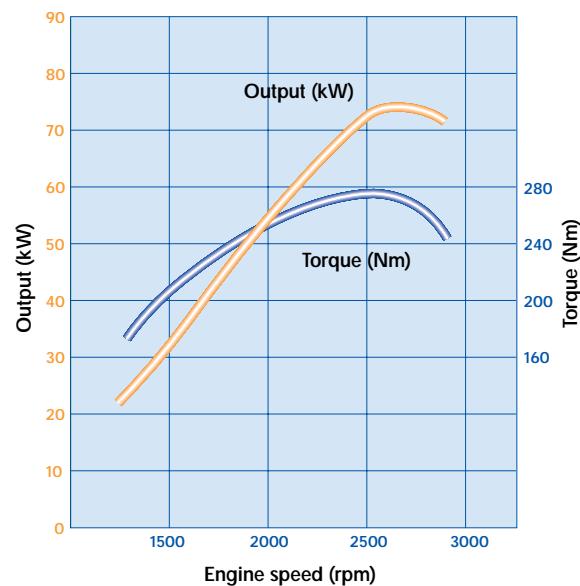


MSSP\_001\_111

**Engine data**

Marine Type	TDI 100-5	TDI 120-5	TDI 150-5	TDI 150-5D
Engine code letter	BCU	ANG	ANH	BCV
Engine design	5-cylinder in-line turbocharged diesel engine			
Fuel injection system	Diesel direct injection with electronically controlled distributor-type injection pump			
Supercharging	Variable turbocharger (VTG)			
Displacement	2461 cm <sup>3</sup>			
Compression ratio	19.0 : 1			
Power rating at engine speed	74 kW (100 bhp) 2600 rpm	88 kW (120 bhp) 3250 rpm	111 kW (150 bhp) 4000 rpm	108 kW (147 bhp) 4000 rpm
Max. torque at engine speed	270 Nm 2500 rpm	275 Nm 2500 rpm	310 Nm 1900 rpm	310 Nm 1900 rpm
Specific power output	30.1 kW/l	35.8 kW/l	45.1 kW/l	43.9 kW/l
Min. specific fuel consumption	217 g/kWh	217 g/kWh	203 g/kWh	203 g/kWh
Weight (dry, with ancillary components, cooling system and clutch flange) not including gearbox	275 kg	275 kg	280 kg	280 kg
Alternator	120 A			
Electrical system	12 V not earthed			
Exhaust emission legislation, certified in compliance with	Bodensee Schifffahrtsverordnung Stufe 2 (Lake Constance Shipping Ordinance, Stage 2)			

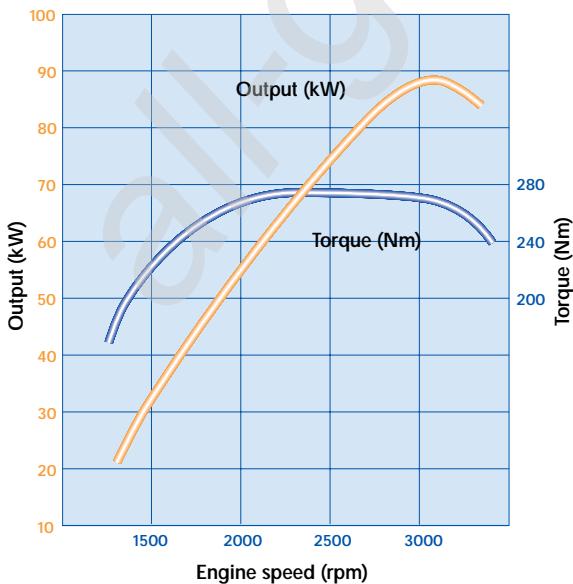**TDI 120-5**


MSSP\_001\_112

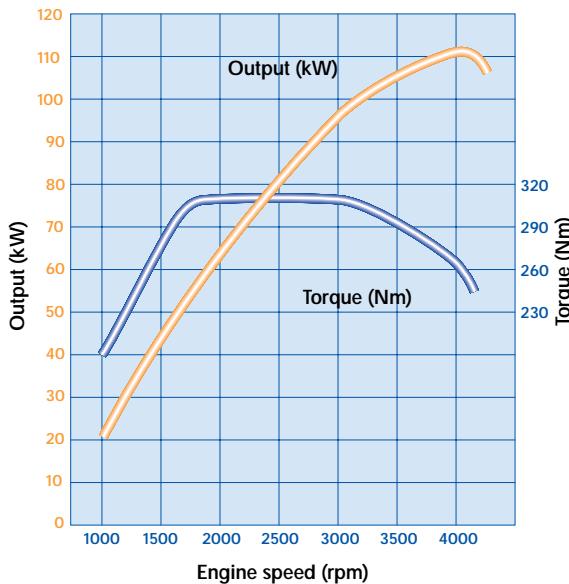**TDI 150-5**

MSSP\_001\_113

# Engine mechanical systems

## Engine oil circuit

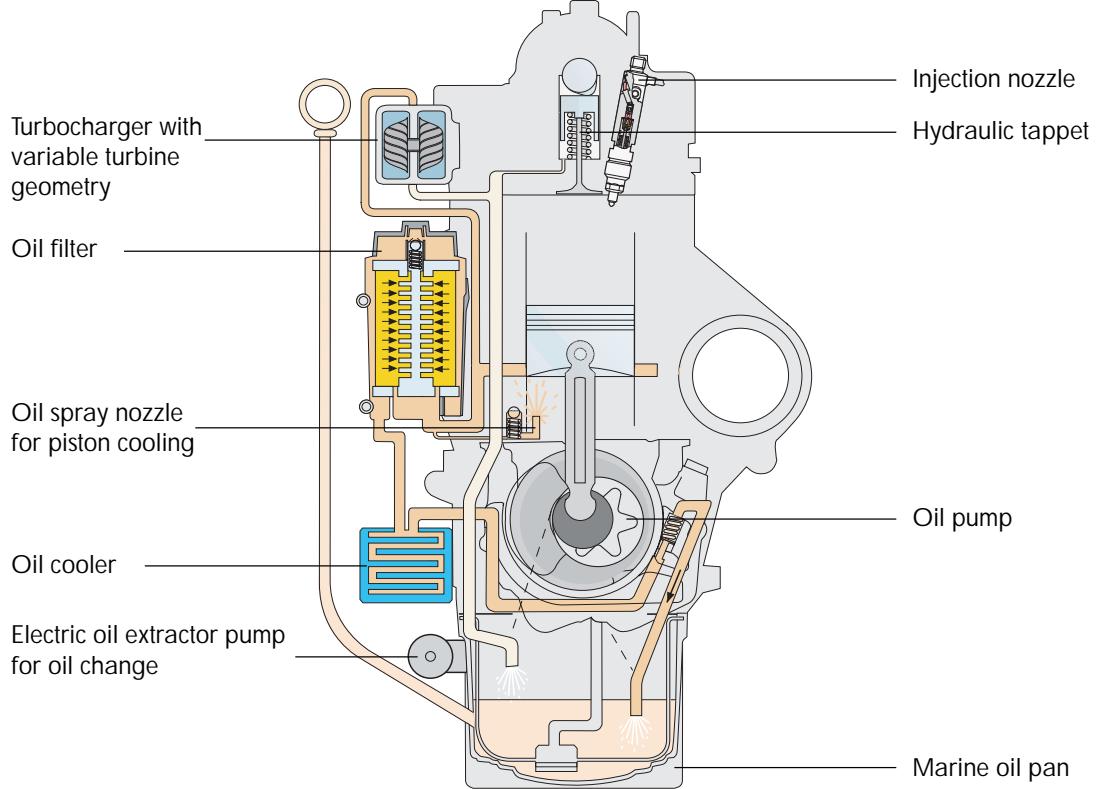


MSSP\_001\_011

## Cup-type oil filter

The cup oil filter is arranged upright. The paper filter that can be replaced from the top ensures the filter is easy to service and environmentally compatible.

When the oil filter cover is opened, a valve also opens so that the oil can flow out of the filter housing through a separate line back into the oil pan.

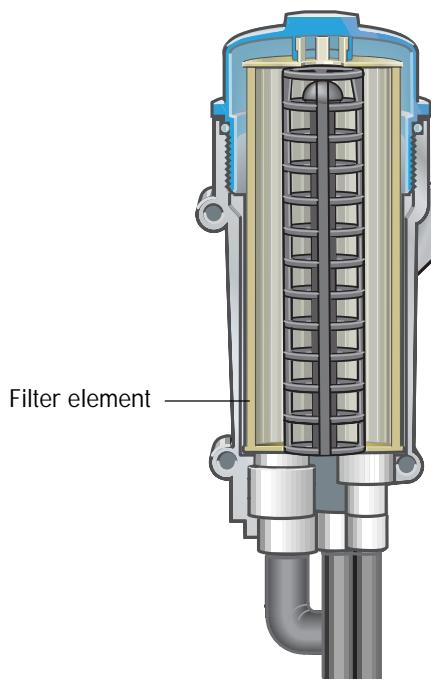


MSSP\_001\_073

# Engine mechanical systems

## Electric oil extractor pump

The electric oil extractor pump can be used to extract the engine oil in an environmentally friendly manner and free of drips.


The pump is switched on by the switch on the central electrics unit.

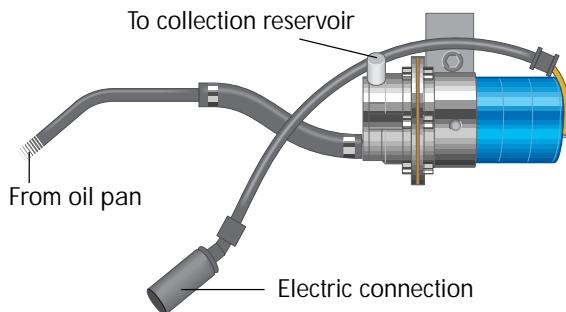

MSSP\_001\_107

## Oil pan

The oil pan is designed specially for use in Volkswagen Marine boat engines. Baffle plates ensure reliable oil supply to the engine also when listing heavily and in rough seas.

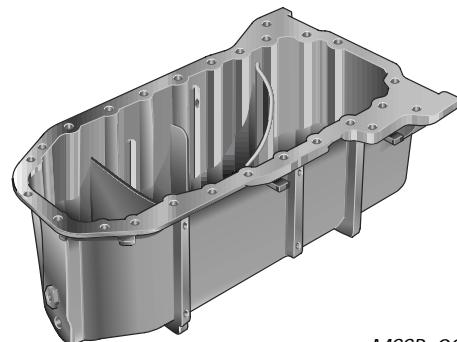


MSSP\_001\_104

## Crankcase ventilation with oil separator

The crankcase ventilation system with oil separator serves the purpose of keeping the air clean (to minimize oil burning) and prevents oil deposits forming on the intercooler.

The oil vapours pass through the crankcase ventilation system into the oil separator. The fabric element contained in the oil separator separates oil droplets and blow-by gas. The oil droplets are collected on the base and returned to the oil pan. The blow-by gas is routed back into the intake manifold of the engine.

The fabric element need not be replaced.

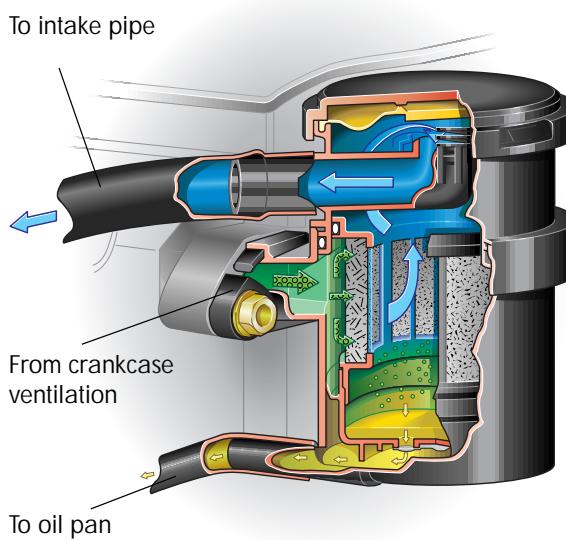

MSSP\_001\_103

# Engine mechanical systems

## Belt drives




### Toothed belt drive for the camshaft

The toothed belt drives

- the camshaft and
- the coolant pump.


The mechanical tension of the toothed belt is controlled by a tension pulley.

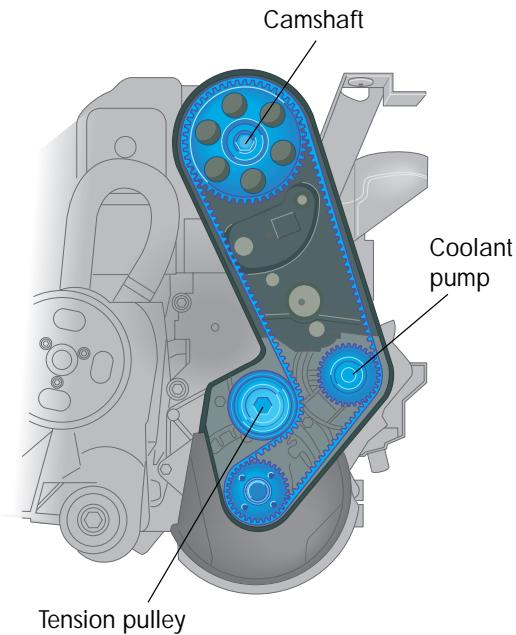

MSSP\_001\_006

### Toothed belt drive for the distributor injection pump

The toothed belt drive for the distributor-type injection pump consists of the tension pulley, deflection pulley, drive gearwheel that is driven by the camshaft, injection pump gearwheel as well as the toothed drive belt.

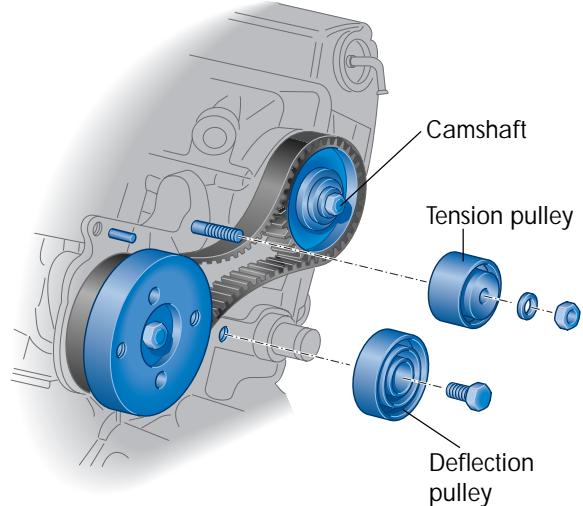

MSSP\_001\_007

# Engine mechanical systems

## Ribbed V-belt drives for ancillary components

The ancillary components are driven by ribbed V-belts.

The following components are driven:

- The alternator (12 V) for engine operation and battery charging
- *Optional*  
The power steering pump for boats with Z-drive
- *and optional*  
An additional 12 V, 24 V or 230 V alternator
- The seawater pump via a separate ribbed V-belt drive




To avoid damage to the vibration damper and the engine, the engine must not be run without the alternator belt drive.

Please refer to the current Workshop Manual for instructions on all adjustment and repair work.



The belt drives are equipped with automatic belt tensioners and therefore require little maintenance.

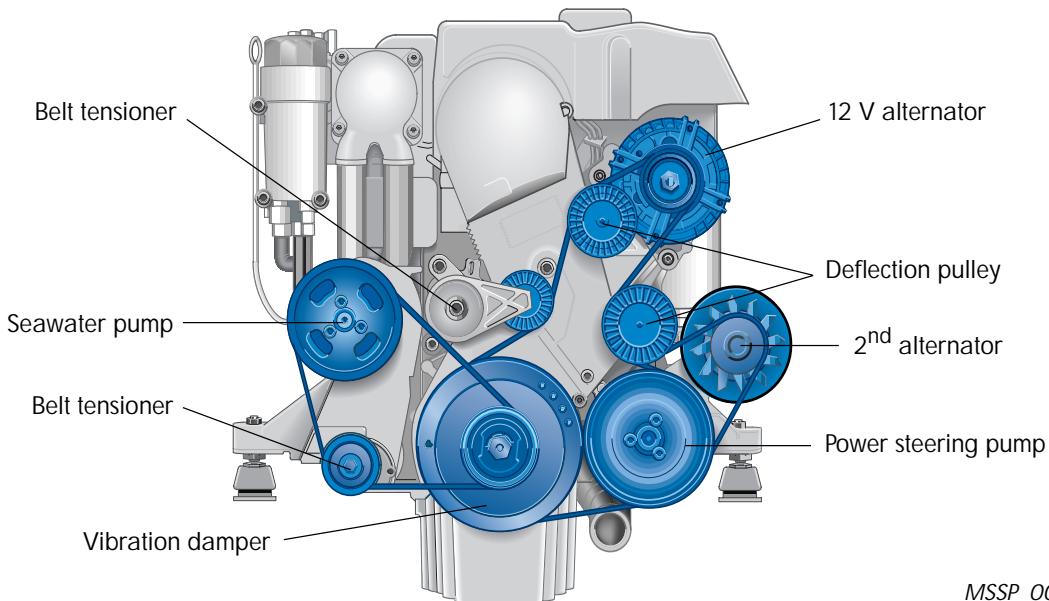

MSSP\_001\_008

# Engine mechanical systems

## Dual-mass flywheel

Due to irregularities in combustion, displacement engines produce torsional vibrations at the crankshaft and the flywheel.



The use of a dual-mass flywheel prevents these torsional vibrations being transmitted into the drive train where they would produce resonance, resulting in disturbing noise in the boat. The dual-mass flywheel therefore also avoids excessive stress in the subsequently connected gearbox.


The dual-mass flywheel divides the flywheel mass into two parts.

One part is the primary flywheel or centrifugal mass; it belongs to the mass moment of inertia of the engine.


The other part, the secondary mass, increases the mass moment of inertia of the drive.

Connected by means of a spring damping system, both decoupled masses isolate the vibrations.

They absorb the vibrations at low engine speeds thus ensuring "drive rattle" no longer occurs.

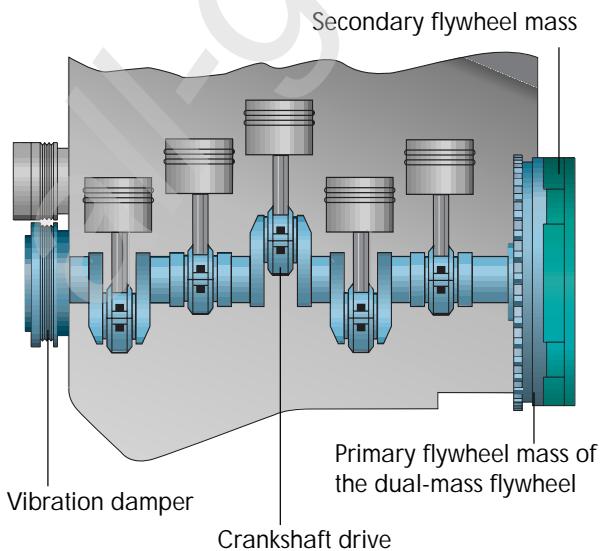

Vibration insulation

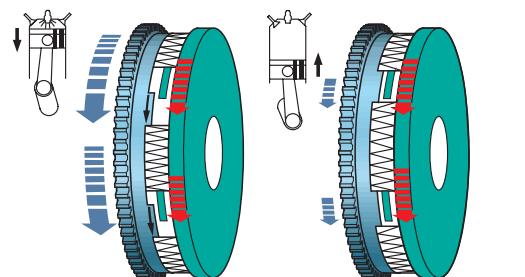


MSSP\_001\_063

MSSP\_001\_010


# Engine mechanical systems

**Conventional power transmission structure without dual-mass flywheel**

Engine and drive train vibrations at low engine speed

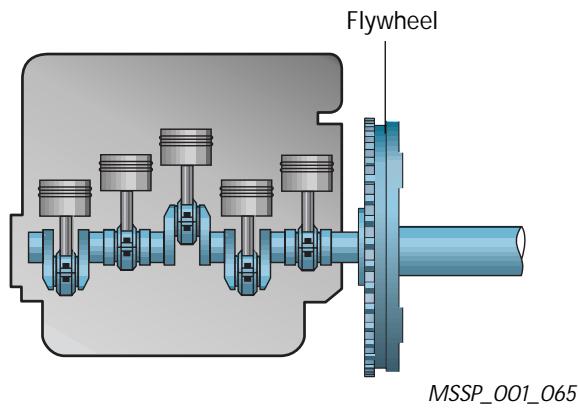


**Engine and drive train vibration in idle speed range**

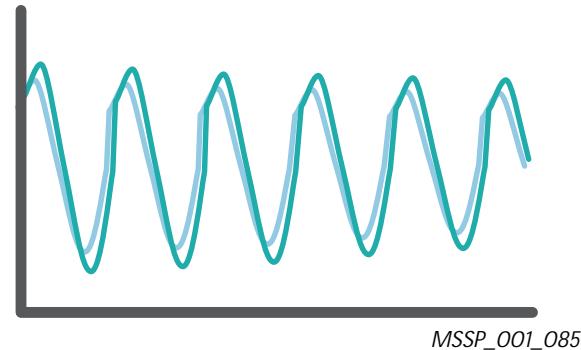


**Power transmission with dual-mass flywheel**

Engine and drive train vibrations at low engine speed

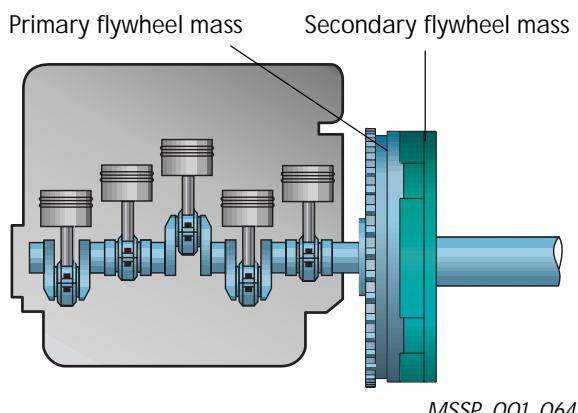

**Engine and drive train vibration in idle speed range**

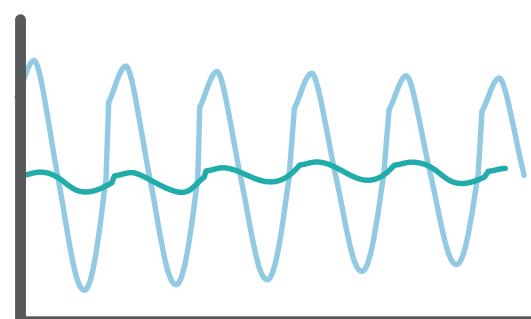

- Vibrations generated by the engine
- Vibrations absorbed by the drive train

MSSP\_001\_084

# Engine mechanical systems


## Hydraulic bucket tappet

All Volkswagen Marine boat engines are equipped with hydraulic bucket tappets.



In addition to reducing noise, they also simplify servicing:

- No need to check and adjust valve clearance
- Precision valve timing

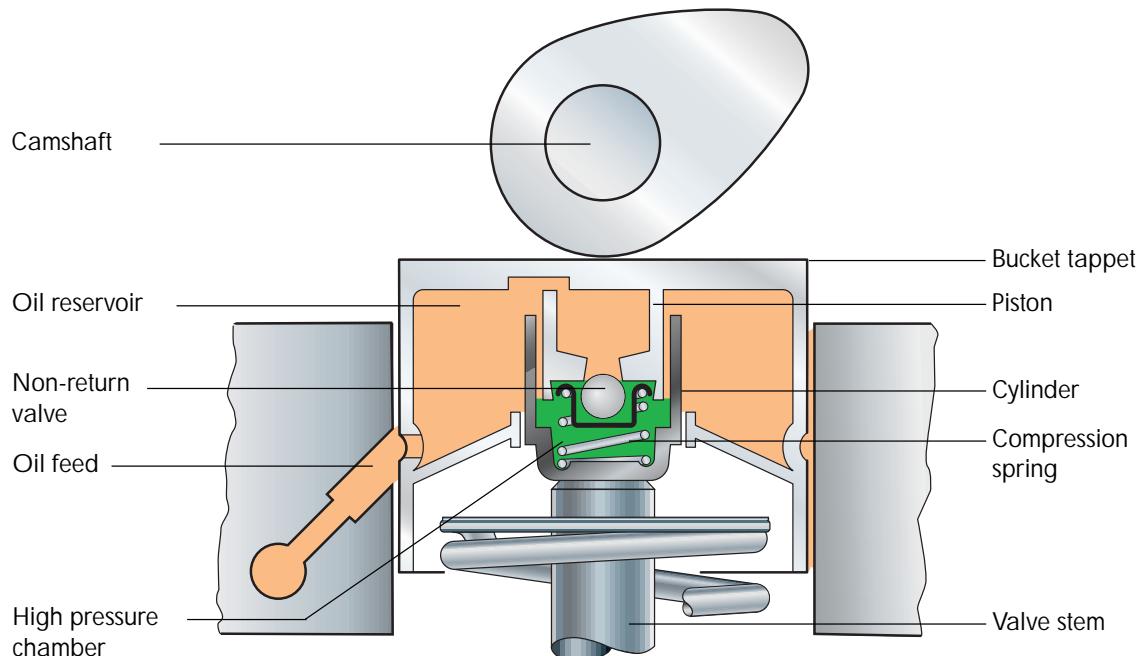

MSSP\_001\_012

The hydraulic bucket tappets essentially comprise:

- Bucket tappet with piston
- Cylinder
- Non-return valve




Valve noise after starting the engine is a normal occurrence. Oil is forced out of the bucket tappet while the engine is inoperative. As soon as the engine is running, the high pressure chamber is filled with oil again and the valve noise disappears.

# Engine mechanical systems

## Functional description

### Beginning of valve stroke


The cam turns on the bucket tappet, the non-return valve closes and pressure builds up in the high pressure chamber. The oil trapped in the high pressure chamber cannot be compressed. The bucket tappet acts as a rigid element.

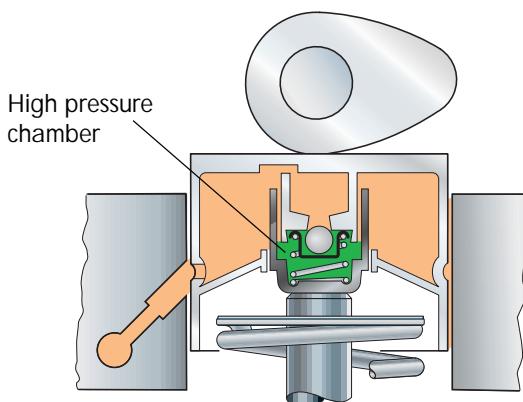

MSSP\_001\_013

### Valve stroke


The pressure in the high pressure chamber increases due to the force the cam exerts on the tappet. A little oil escapes via the leakage gap so that the tappet compresses by max. 0.1 mm.

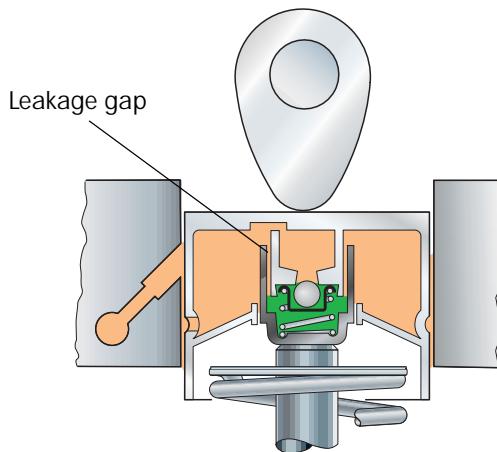

MSSP\_001\_014

### Valve clearance compensation

Compensation of the valve clearance (lash) begins after the valve has closed. The pressure in the high pressure chamber drops as the cam no longer presses against the tappet. The spring forces the cylinder and bucket apart to such an extent that there is no clearance between the bucket tappet and cam. Oil flows out of the supply reservoir through the now opening non-return valve into the high pressure chamber.

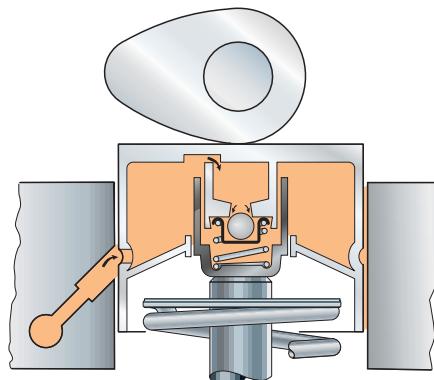

MSSP\_001\_015

# Combustion system

## The combustion system

In Volkswagen Marine boat engines, the fuel is injected directly into the main combustion chamber.

The advantages include:


- More efficient combustion
- Improved fuel utilization
- Lower fuel consumption and
- Low pollutant emission



The special design of the pistons, injection nozzles and of the intake port optimises the combustion process with regard to noise development, smooth operation and pollutant emissions.

### Intake swirl port

The special design of the intake port induces a swirling motion in the drawn-in air.

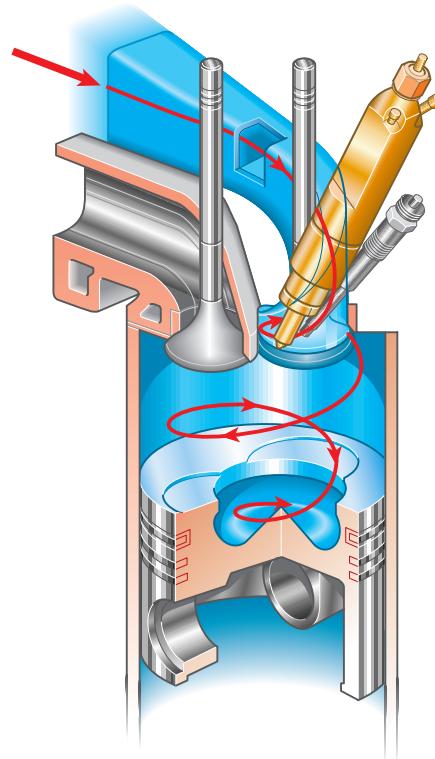


### Piston recess

The swirling motion of the intake air is continued in the piston recess that is optimally adapted to this engine.

### Injection nozzle

The five-hole injection nozzle (fuel injector) injects the fuel in two stages into the piston recess where it ignites on the hot air.

The two-stage injection prevents a "harsh" increase in pressure thus avoiding the characteristic diesel "knock".

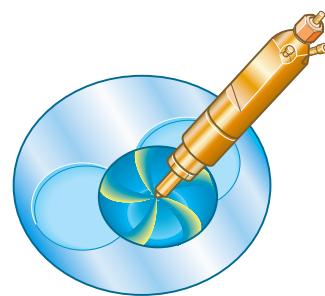

MSSP\_001\_016

# Combustion system


## Two-spring nozzle holder

Smooth increase in pressure in the combustion chamber reduces combustion noise and mechanical stress.

The two-spring nozzle holder developed for the Volkswagen direct injection diesel engines enables fuel injection in two stages. As a result, it plays an important part in ensuring "smooth" combustion.

## Functional description

There are two springs of different thickness fitted in the nozzle holder. Due to the geometry of the springs, the nozzle needle is raised only against the force of the first spring at the start of injection. A small gap is produced, allowing a small quantity of fuel to be pre-injected at low pressure. This pre-injection ensures a smooth increase in the combustion pressure and creates the ignition conditions for the main volume of fuel. The pressure in the injection nozzle increases due to the fact that the injection pump delivers more fuel than escapes through the small gap. The nozzle needle is further raised against the force of the second spring. The main injection now takes place at high pressure.

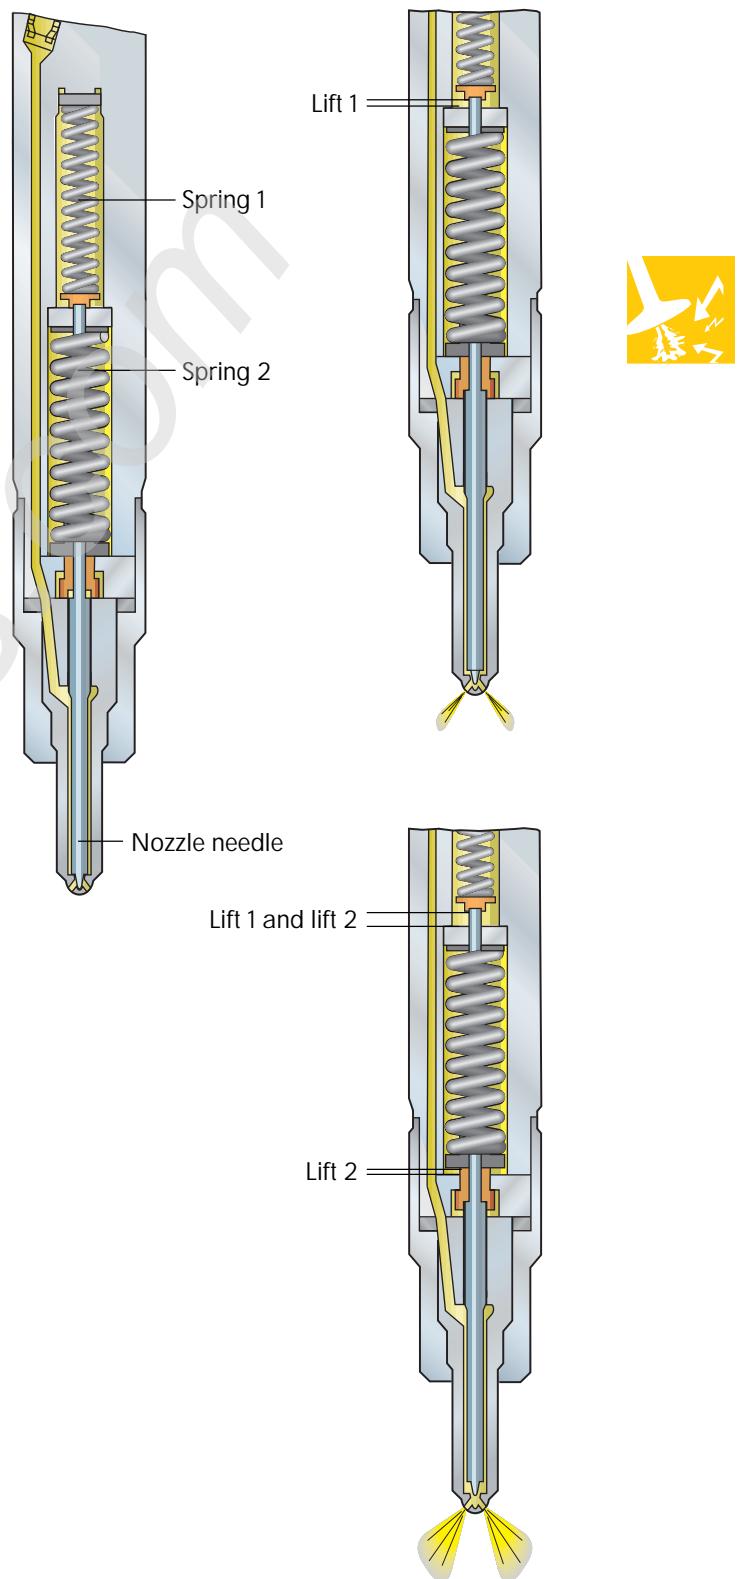


MSSP\_001\_017

# Engine electronic systems


## Overview of installation locations

This general layout provides an overview of the components of the MDC. The components are described in detail in the following chapters.


Throttle lever position sender

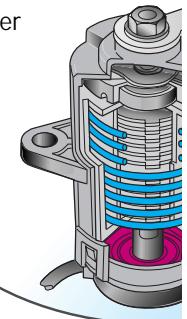


Needle lift sender at injection nozzle of 5th cylinder

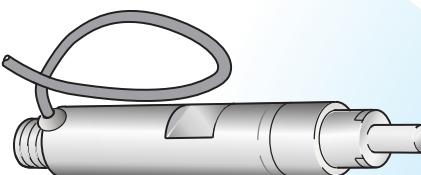

Intake manifold pressure and intake air temperature sender

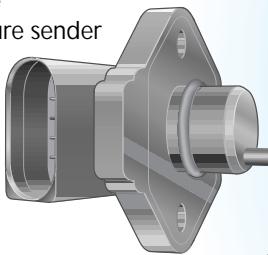

Indicator lamp for glow plug system monitoring and engine electronics

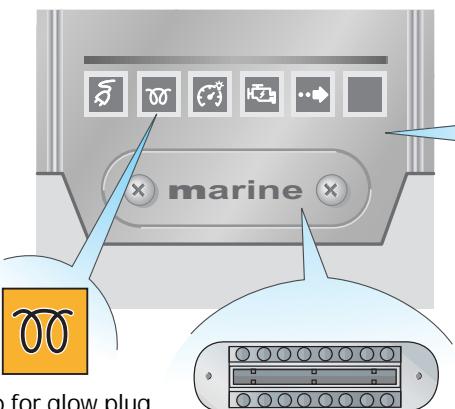

Acoustic warner




Diagnosis interface



Coolant temperature sender

# Engine electronic systems

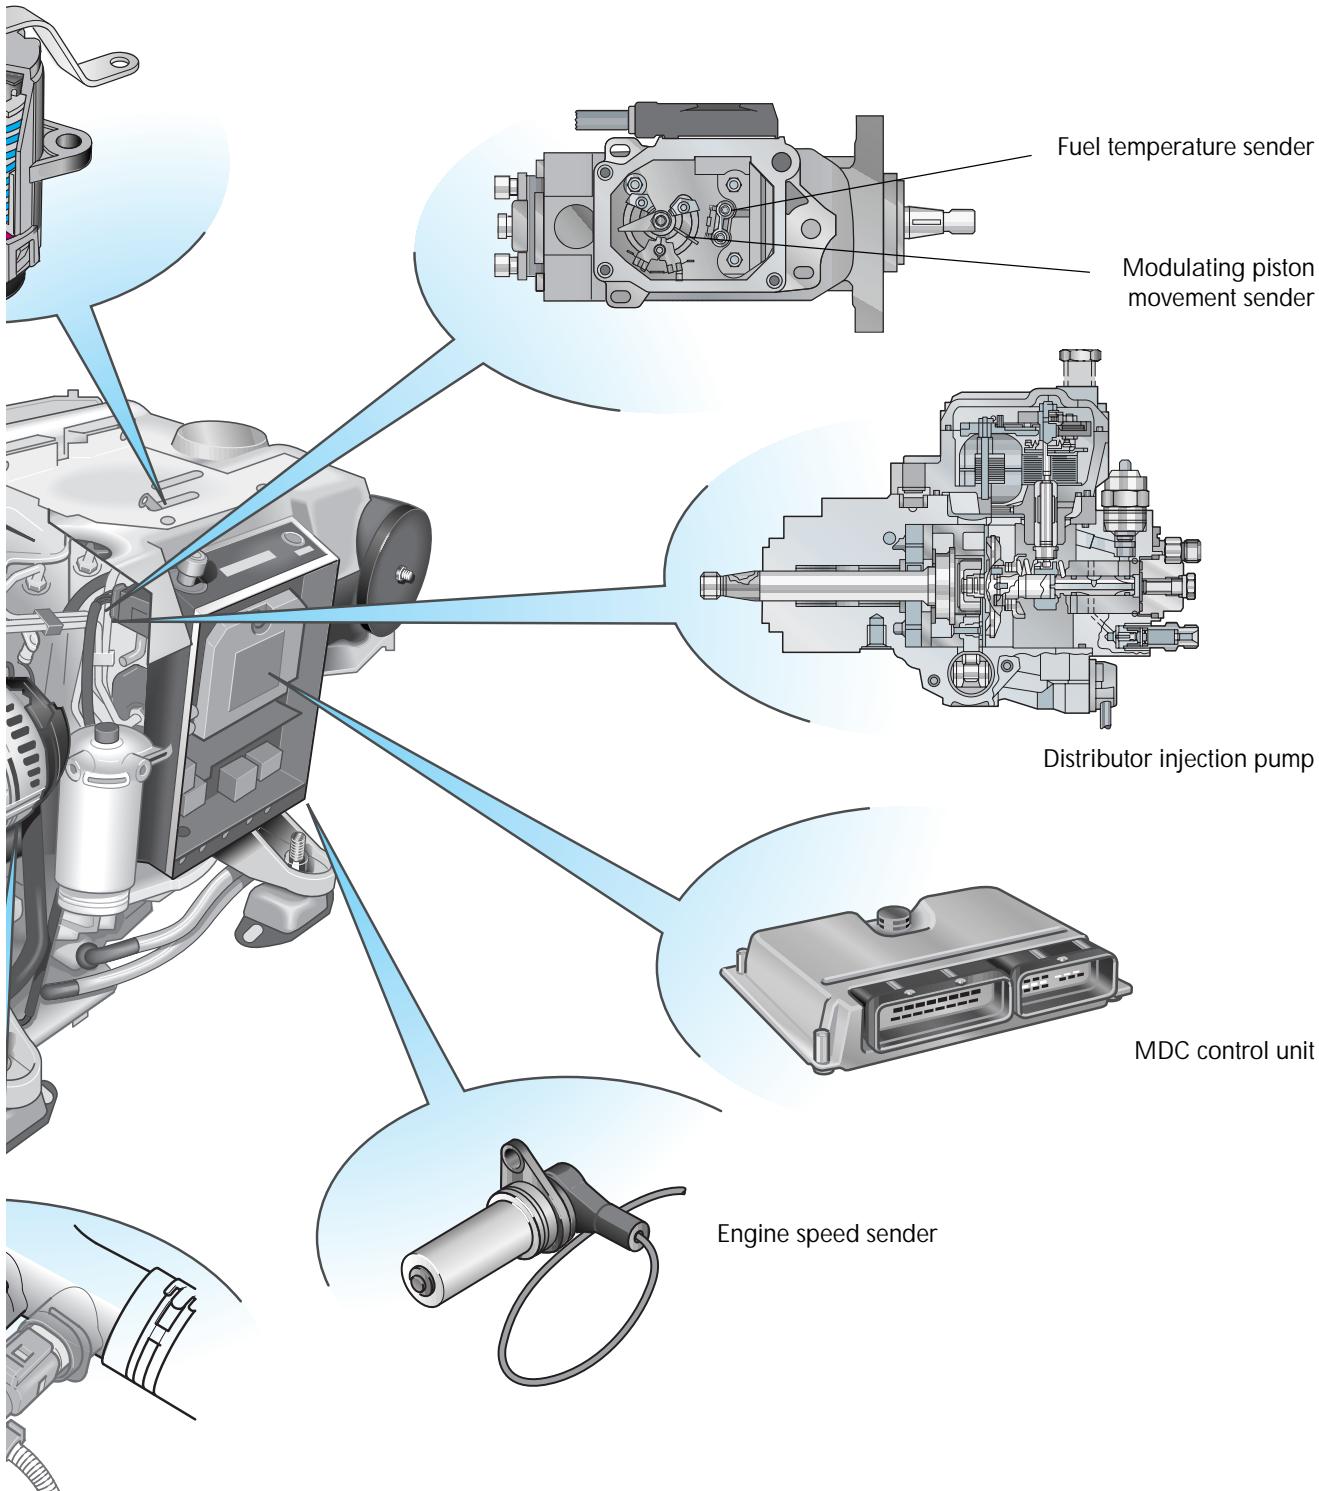

MSSP\_001\_019


# Engine electronic systems

## System overview

Sensors supply the engine control unit with information on the current operating status of the engine.



Needle lift sender

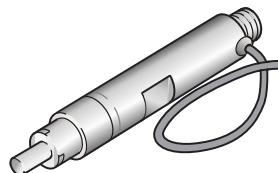


Engine speed sender



Coolant temperature sender




Intake manifold and intake air temperature sender

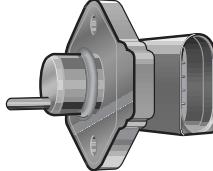

Throttle lever position sender



Modulating piston movement sender

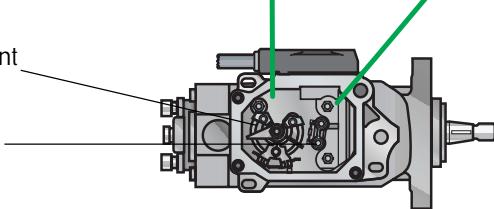

Fuel temperature sender




# Engine electronic systems

The corresponding actuators are activated following evaluation of the sensor information in the engine control unit.

The injection volume and start of injection as well as the preheater system are controlled and monitored in this way.

For monitoring purposes, the engine control unit makes use of several characteristic maps and characteristic curves while ensuring the best torque output, the most favourable fuel consumption and the best exhaust emission characteristics for every operating situation.

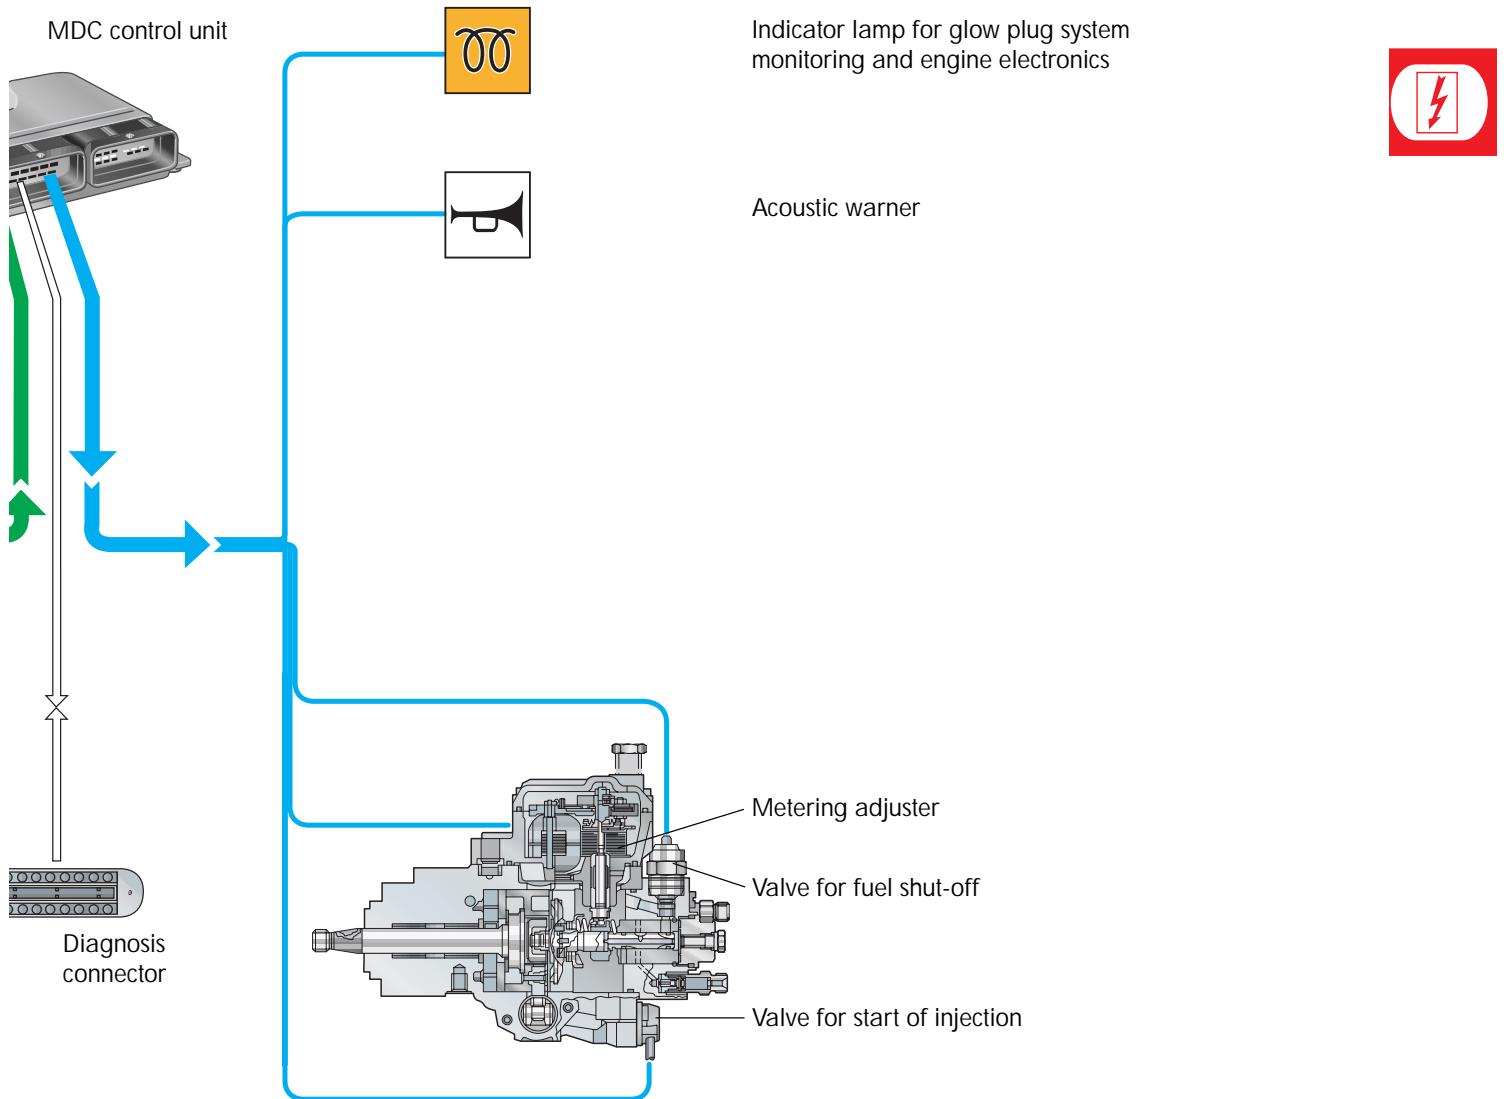

# Engine electronic systems

## Glow plug system

A glow plug system control is integrated in the Volkswagen Marine engine control unit.

The glow plug control contains the following functions:

- Preheating
- Post-heating
- Standby heating




### Functional description

#### Preheating

In view of the outstanding starting characteristics of the Volkswagen Marine direct injection boat engines, preheating (glow plug) is only activated at temperatures below +9 °C. The engine control unit receives the signal for the engine temperature from the coolant temperature sender.

The preheating procedure is started automatically. The preheating time depends on the current engine temperature.

An indicator lamp in the panel informs the skipper that preheating is active.

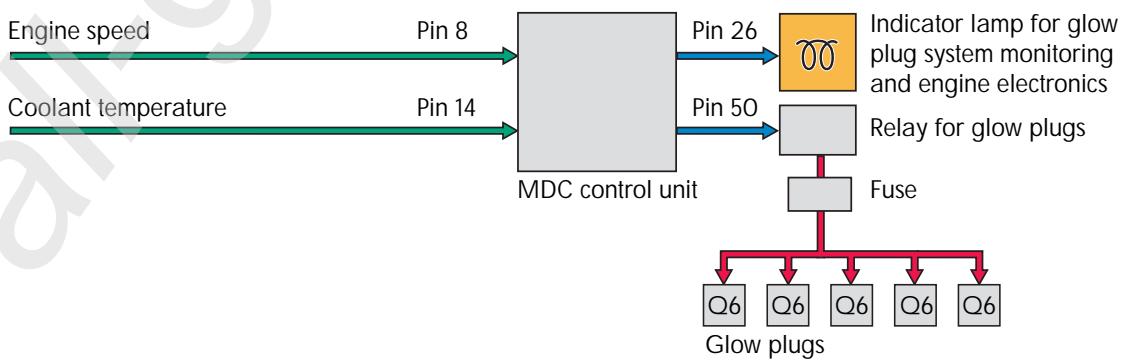


MSSP\_001\_045

# Engine electronic systems

## Intake manifold pressure and intake air temperature sender

The intake manifold pressure and intake air temperature sender is located in the intake manifold. From the signal, the engine control unit recognizes the pressure and temperature of the intake air. The signal is required for limiting smoke in the dynamic range and to monitor the function of the turbocharger (TDI only).

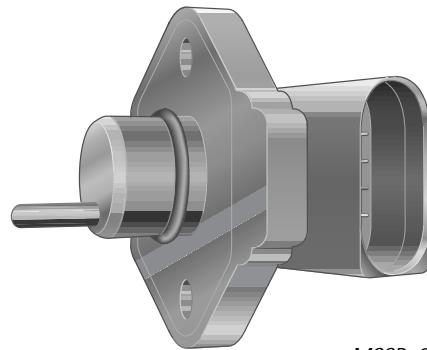

MSSP\_001\_098



### Functional description

The piezoelectric crystals in the intake manifold pressure sender are changed by the pressure of the air drawn in and thus send a voltage signal to the engine control unit.

### Substitute function

None

### Effect

In the event of failure, there are no malfunctions in engine operation

# Engine electronic systems

## Needle lift sender


The needle lift sender is located on the injection nozzle of the 5<sup>th</sup> cylinder.

It signals the actual start of injection to the engine control unit. The signal is used to ensure the characteristic map for start of injection is adhered to.

## Functional description



The voltage applied at the magnet coil of the needle lift sender is controlled by the engine control unit such that a constant current always flows. In this way, a magnetic field is generated in the magnet coil (solenoid). The magnetic field changes with the movement of the nozzle needle that is connected to the thrust pin. The change distorts the applied voltage; a pulse peak is created. The engine control unit calculates the actual start of injection from the time difference between the pulse peak and the TDC signal from the engine speed sender. The actual start of injection is compared with the set start of injection specified in the characteristic map of the engine control unit and is corrected by the control unit in the event of deviations.

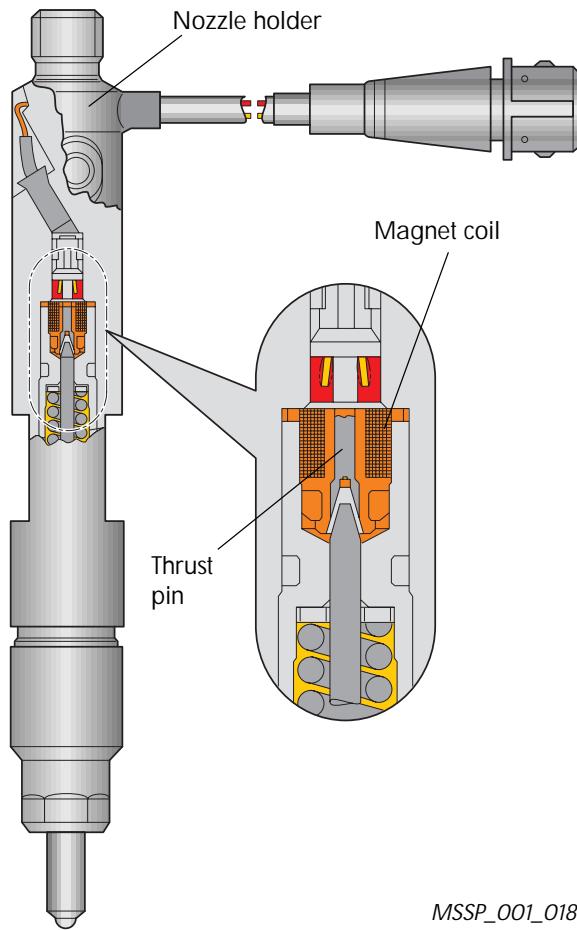

MSSP\_001\_018

## Substitute function

An emergency operation program is started in the event of the needle lift sender failing.

The start of injection is controlled according to fixed setpoints from the characteristic map. In addition, the injection volume is reduced.

## Effect

The power output of the engine is reduced.

# Engine electronic systems

## Modulating piston movement sender


The modulating piston movement sender signals to the engine control unit the current position of the metering adjuster in the injection pump.

### Functional description

An alternating voltage generates an alternating magnetic field in a special iron core. A metal ring that is secured to the eccentric shaft moves along the iron core.

This movement influences the magnetic field.

The engine control unit evaluates this change and thus obtains the current position of the metering adjuster.

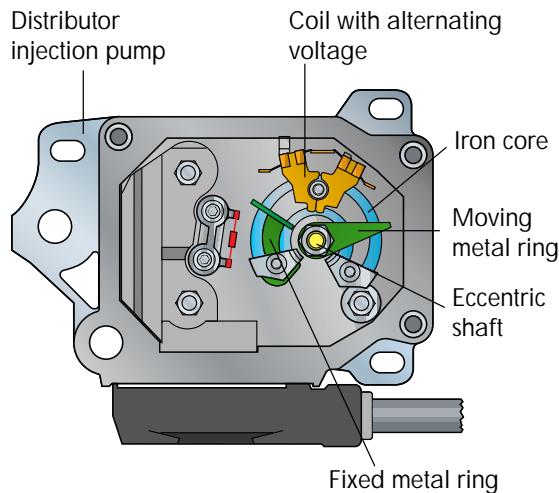

MSSP\_001\_021

### Substitute function

If the engine control unit receives no signal from the modulating piston movement sender, the engine will be shut down for safety reasons.

### Effect

Engine operation is not possible.

# Engine electronic systems

## Engine speed sender

The engine speed sender is located in the vicinity of the starter crown gear. It scans five marks on the sender wheel for engine speed.


The engine control unit uses the signal to detect the engine speed.

## Functional description

The sender operates in accordance with the induction principle.



The marks on the sender wheel generate an alternating voltage in the sender coil. From this signal, the engine control unit can accurately calculate the angular position and the current engine speed.

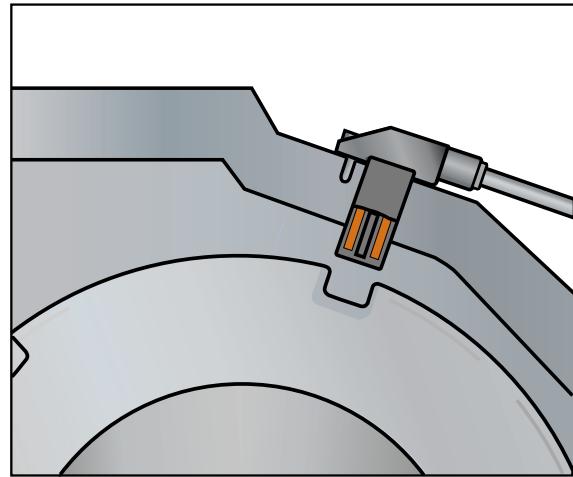

## Substitute function

If the engine control unit receives no signal from the engine speed sender, an activated emergency operation program uses the signal from the needle lift sender as a substitute signal.

## Effect

The injection volume is reduced thus also reducing the engine power output. The engine is shut down if the signal from the needle lift sender also fails.


# Engine electronic systems

## Coolant temperature sender

The coolant temperature sender is located on the connection coupling for the coolant above the coolant pump.

Its signal serves as a variable for determining the engine temperature and for detecting whether preheating, post-heating, standby heating or increased idle speed is required when the engine is cold (90 sec).

The signal is additionally used in the event of engine overheating to reduce the power output.

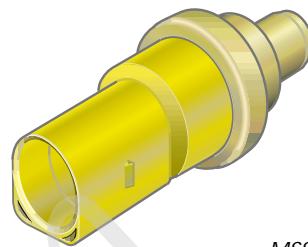

MSSP\_001\_023



## Functional description

The coolant temperature sender features an NTC bead. An NTC (Negative Temperature Coefficient) changes its resistance corresponding to temperature. When the temperature increases the resistance value drops. When the temperature drops the resistance values increases.

The engine control unit can detect the current engine temperature from this resistance value.

## Substitute function

If the engine control unit receives no signal from the coolant temperature sender, a fixed value stored in the engine control unit is used as the substitute signal.

## Effect

The MDC control unit receives no engine temperature value from the coolant temperature sender.

# Engine electronic systems

## Fuel temperature sender


The fuel temperature sender is located in the upper housing of the distributor-type injection pump.

Its signal informs the engine control unit of the coolant temperature and the control unit adapts the fuel volume accordingly.

## Functional description



The fuel density changes with the change in the fuel temperature. The injection volume must be correspondingly adapted to ensure an optimum combustion process.

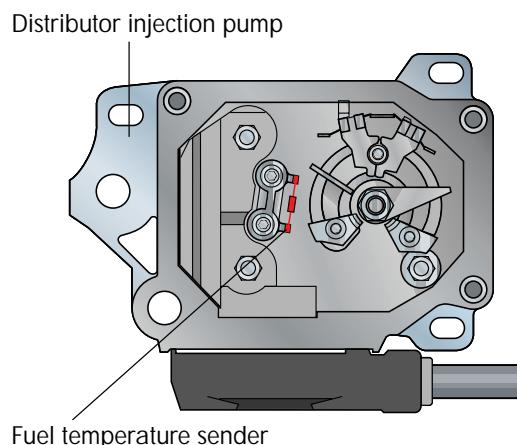

MSSP\_001\_O24

## Substitute function

In the event of the fuel temperature sender failing, the last temperature value is stored in the MDC control unit.

## Effect

The injection volume can no longer be determined correctly. The MDC now determines the injection volume according to the value last stored.

# Engine electronic systems


## Throttle lever position sender

The throttle lever position sender is located in the vicinity of the central electronics unit.

Its signal informs the engine control unit of the throttle lever position. This signal is also used to determine the injection volume.

## Functional description

The shaft in the sender is turned when accelerating. The potentiometer mounted on the end of the shaft sends to the engine control unit a voltage value corresponding to the throttle position. From this value, the engine control unit recognizes the throttle lever position and the skipper's choice. In connection with the fuel volume control of the distributor injection pump, the control unit regulates the fuel volume to be injected.

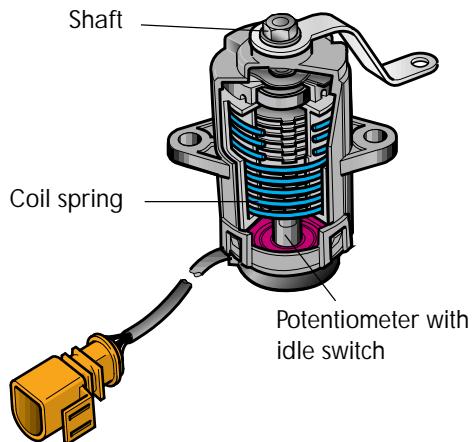

MSSP\_001\_025



## Substitute function

If the engine control unit receives no signal, a fixed stored value is used as the substitute signal.

## Effect

The engine runs at increased idle speed (1400 rpm) so that the skipper can reach the next mooring. Acceleration is no longer possible.


# Engine electronic systems

## Metering adjuster

The metering adjuster with an electromagnetic actuator for controlling the injection volume is located in the distributor-type injection pump.

## Functional description

With the aid of a control shaft, the electromagnetic actuator changes the position of the control slide valve. When activated by the engine control unit, the position of the control slide valve is changed axially thus constantly varying the injection volume between "minimum" (idle speed) and "maximum" (full throttle).

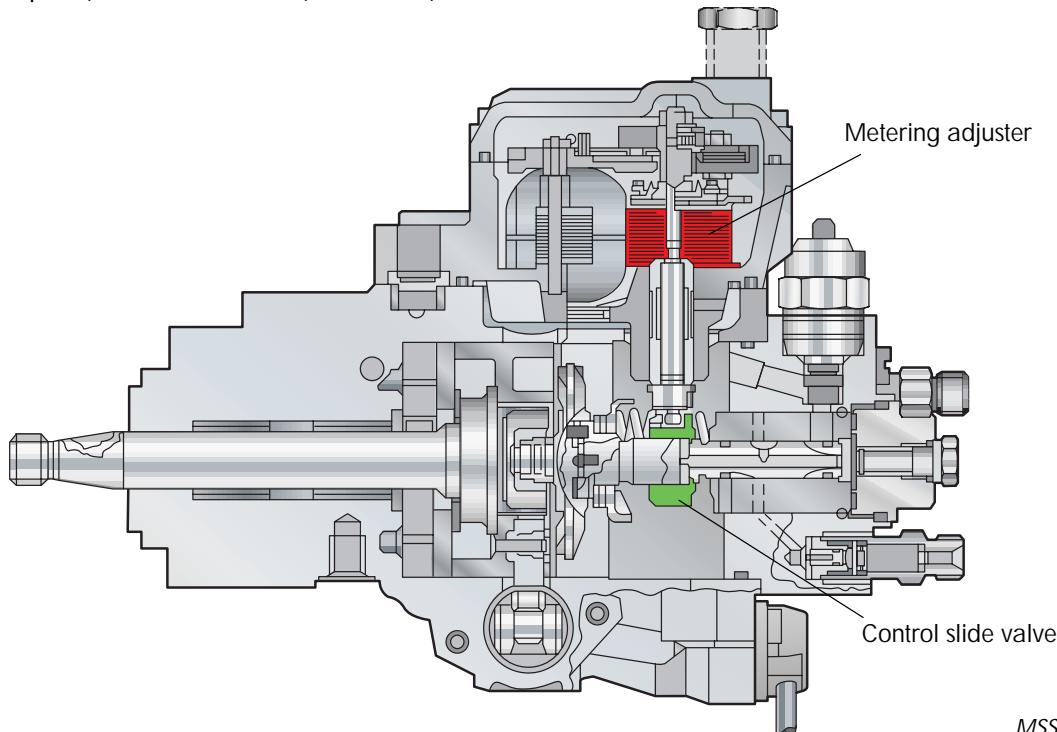

MSSP\_001\_026

## Substitute function

None

## Effect

If the metering adjuster fails due to a defect, the engine is shut down by means of the fuel shut-off valve.

# Engine electronic systems


## Start of injection valve

The start of injection valve is positioned on the underside in the housing of the distributor-type injection pump. The inner chamber pressure of the pump acts on the injection control piston via this cyclically clocked solenoid valve.

## Functional description

The start of injection is controlled depending on the clock pulse (pulse duty factor) of the start of injection valve. The engine control unit can adjust infinitely variable between retarded start of injection (fully open) and advanced start of injection (fully closed).

Activation takes place by means of a ground pulse from the engine control unit.

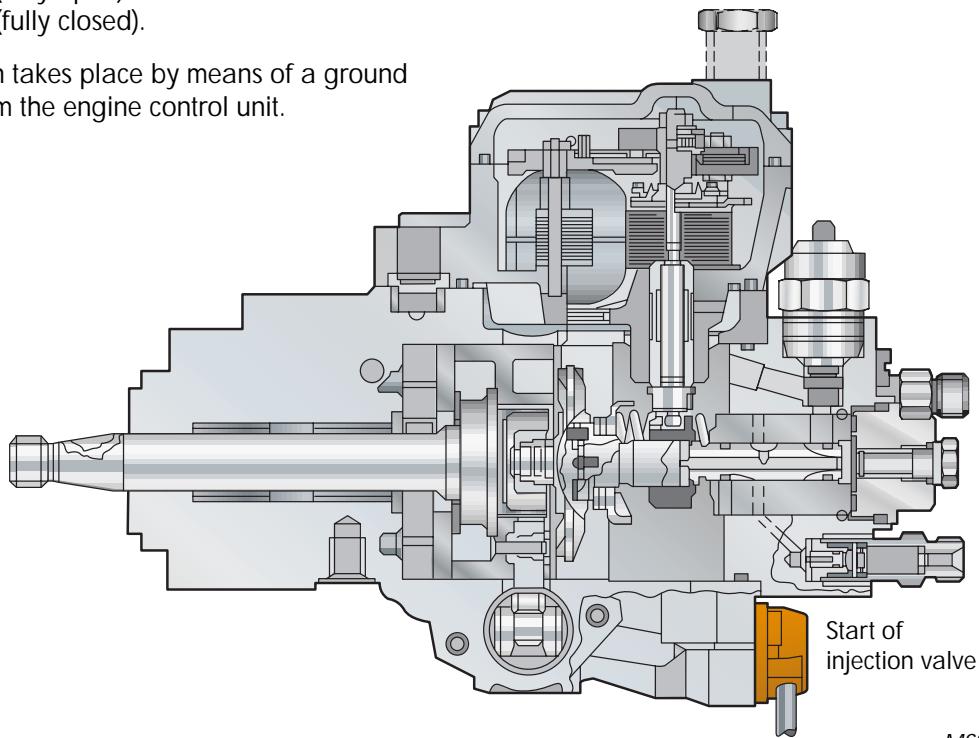

MSSP\_001\_030

## Substitute function

Control is no longer possible in the event of the start of injection valve failing.

A fixed value is used.

## Effect

The engine runs with reduced power output due to the now limited volume of fuel.


# Engine electronic systems

## Fuel shut-off valve

The fuel shut-off valve is installed on the upper side of the distributor-type injection pump in the vicinity of the fuel injection lines. This solenoid valve interrupts the fuel supply when the engine is shut down.

## Functional description

The valve is open when no power is applied. In this way, it keeps the inlet hole to the high pressure chamber open. When power is applied to the solenoid, the valve closes the inlet hole. The fuel supply is shut off so that the high pressure piston can no longer deliver fuel.

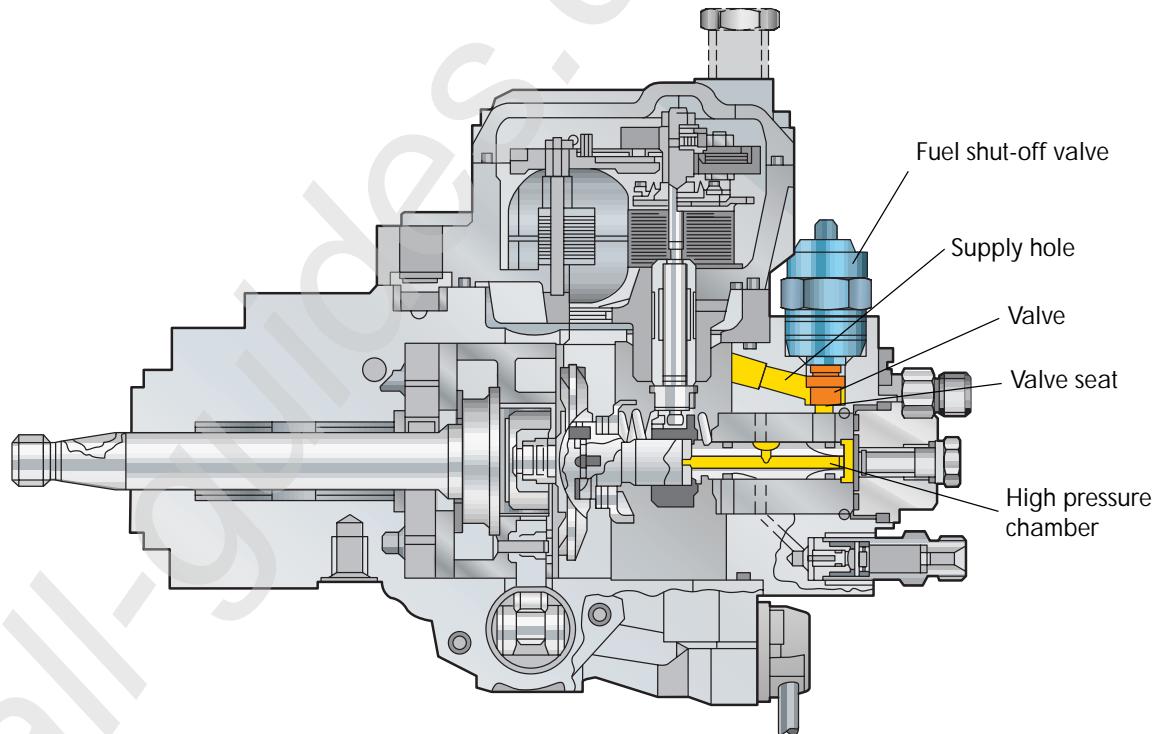

MSSP\_001\_031

## Substitute function

None

## Effect

The engine is shut down by the metering adjuster.

# Engine electronic systems

## Indicator lamp for glow plug system monitoring and engine electronics

The self-diagnosis concept of Volkswagen Marine boat engines comprises a self-monitoring function for sensors, actuators and microprocessors by the engine control unit.

### Functional description

The self-diagnosis system uses an indicator lamp to inform the skipper of any malfunctions. In this way he is requested to call at the nearest service centre.

A warning is given in the event of a malfunction in the following components:

- Needle lift sender
- Engine speed sender
- Modulating piston movement sender
- Metering adjuster
- Start of injection valve
- Turbocharger: Boost pressure outside set range (TDI only)

### Substitute function

None

### Effect

The effect depends on the type of component that has failed.

### Activation


The engine control indicator lamp is activated by the engine control unit.



When the indicator lamp is activated by the engine control unit, an acoustic warning signal additionally sounds. This signal can be turned off after pressing the acknowledging button.



MSSP\_001\_032

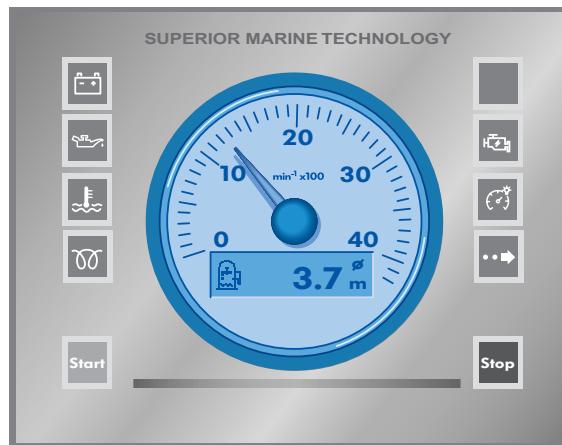

MSSP\_001\_067



# Engine electronic systems


## Fuel volume control

Following evaluation of the received sensor signals, the correct injection volume is determined in the engine control unit and an electrical signal is sent to the metering adjuster in the injection pump. The metering adjuster varies the position of the control slide valve corresponding to the electrical signal.

The engine control unit monitors the change in the valve position with the aid of the modulating piston movement sender.

If there is insufficient air in the system, the injection volume is limited by the smoke characteristic map.

## Overview of sensors and actuators

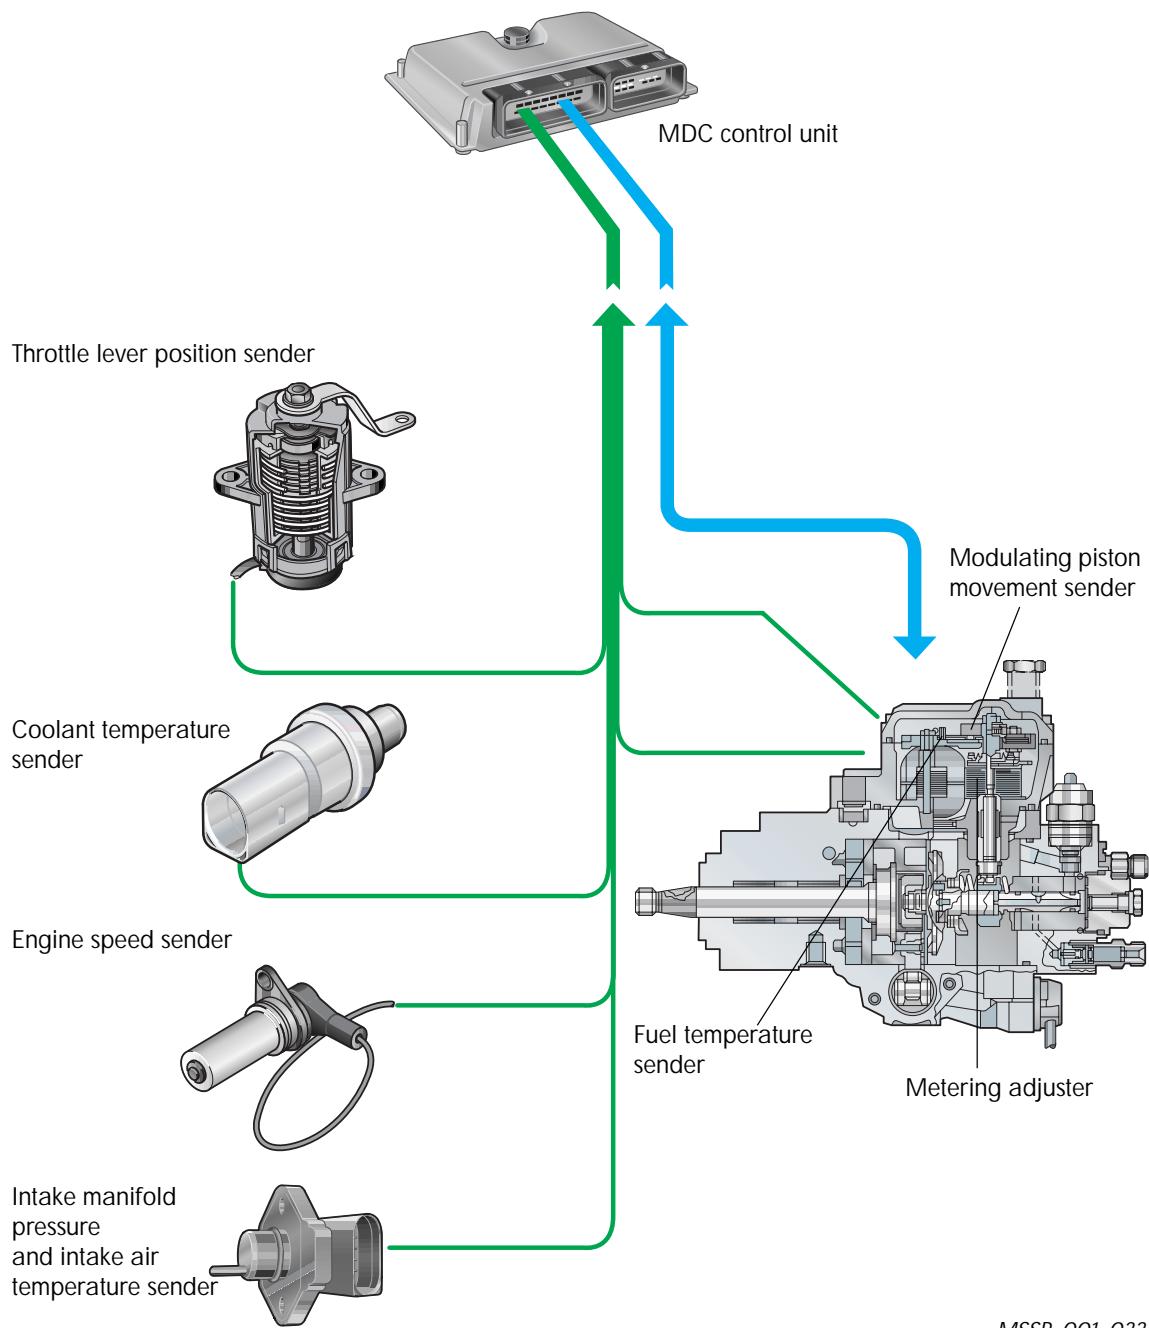

MSSP\_001\_033


# Engine electronic systems

## Start of injection control

A large number of engine properties such as the starting characteristic, fuel consumption, engine output, smooth engine operation as well as exhaust emission are influenced by the start of injection.


The task of the start of injection control is to determine the correct timing for fuel delivery.

Based on the influencing variables illustrated in the following, the engine control unit calculates the start of injection and sends a corresponding electrical signal to the start of injection valve in the distributor-type injection pump.

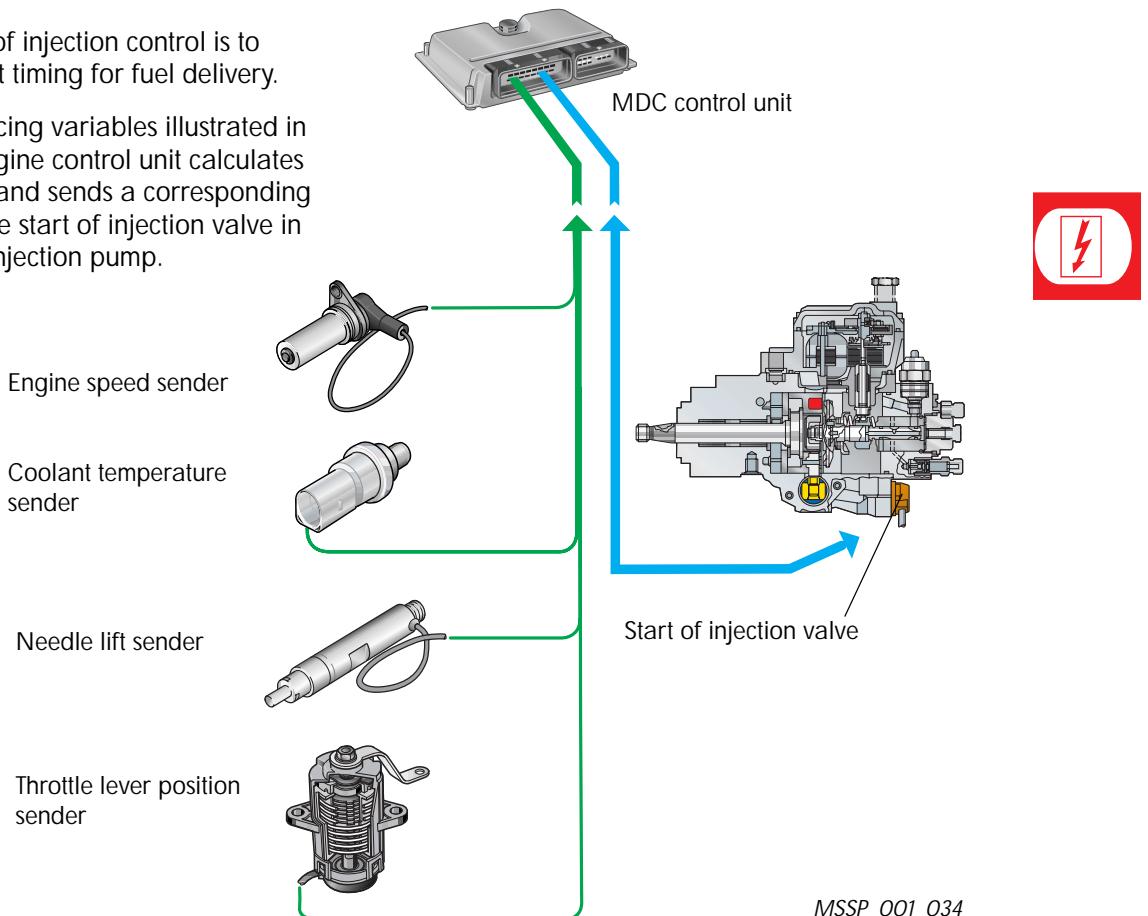

## Start of injection characteristic map

The engine control unit calculates the optimum start of injection from the stored start of injection characteristic map and the input variables.

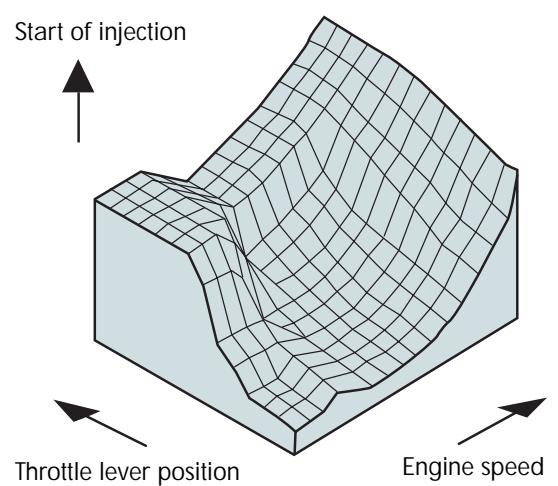

MSSP\_001\_046

# Engine electronic systems

## Functional description

### Injection timing device

The mechanical injection timing device in the distributor-type injection pump operates with the aid of the speed-dependent fuel pressure in the pump interior.

 It is necessary to inject fuel earlier as the engine speed increases. The start of injection is varied by the turning movement of the rolling ring. This is controlled by the change in the fuel pressure in the pump interior. The fuel pressure increases as the engine speed increases. The control unit controls the start of injection valve by means of a clock pulse (pulse duty factor). The pressure in the pump interior changes corresponding to the pulse duty factor. One start of injection operation is assigned to each clock pulse. This facilitates infinitely variable control of the start of injection from maximum advance to retard setting.

### Engine control unit


From the incoming sensor signals, the engine control unit calculates the set start of injection and sends the signals for the necessary pulse duty factor to the start of injection valve.

### Start of injection valve


The valve converts the pulse duty factor into a change in the pump interior pressure (control pressure).

### Note

To provide a clear illustration, the objects in the enlargements have been turned through 90°!

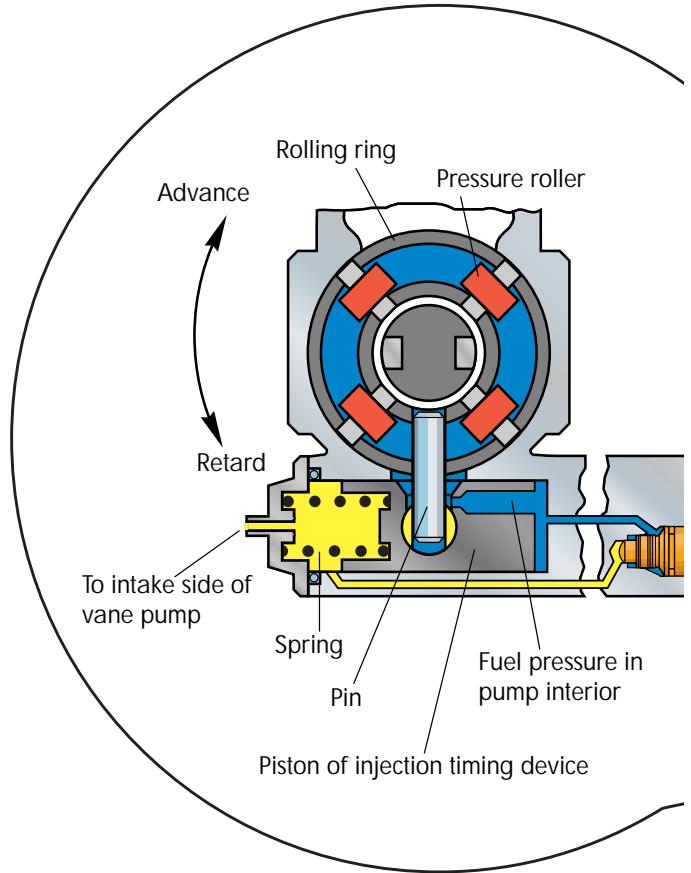

# Engine electronic systems

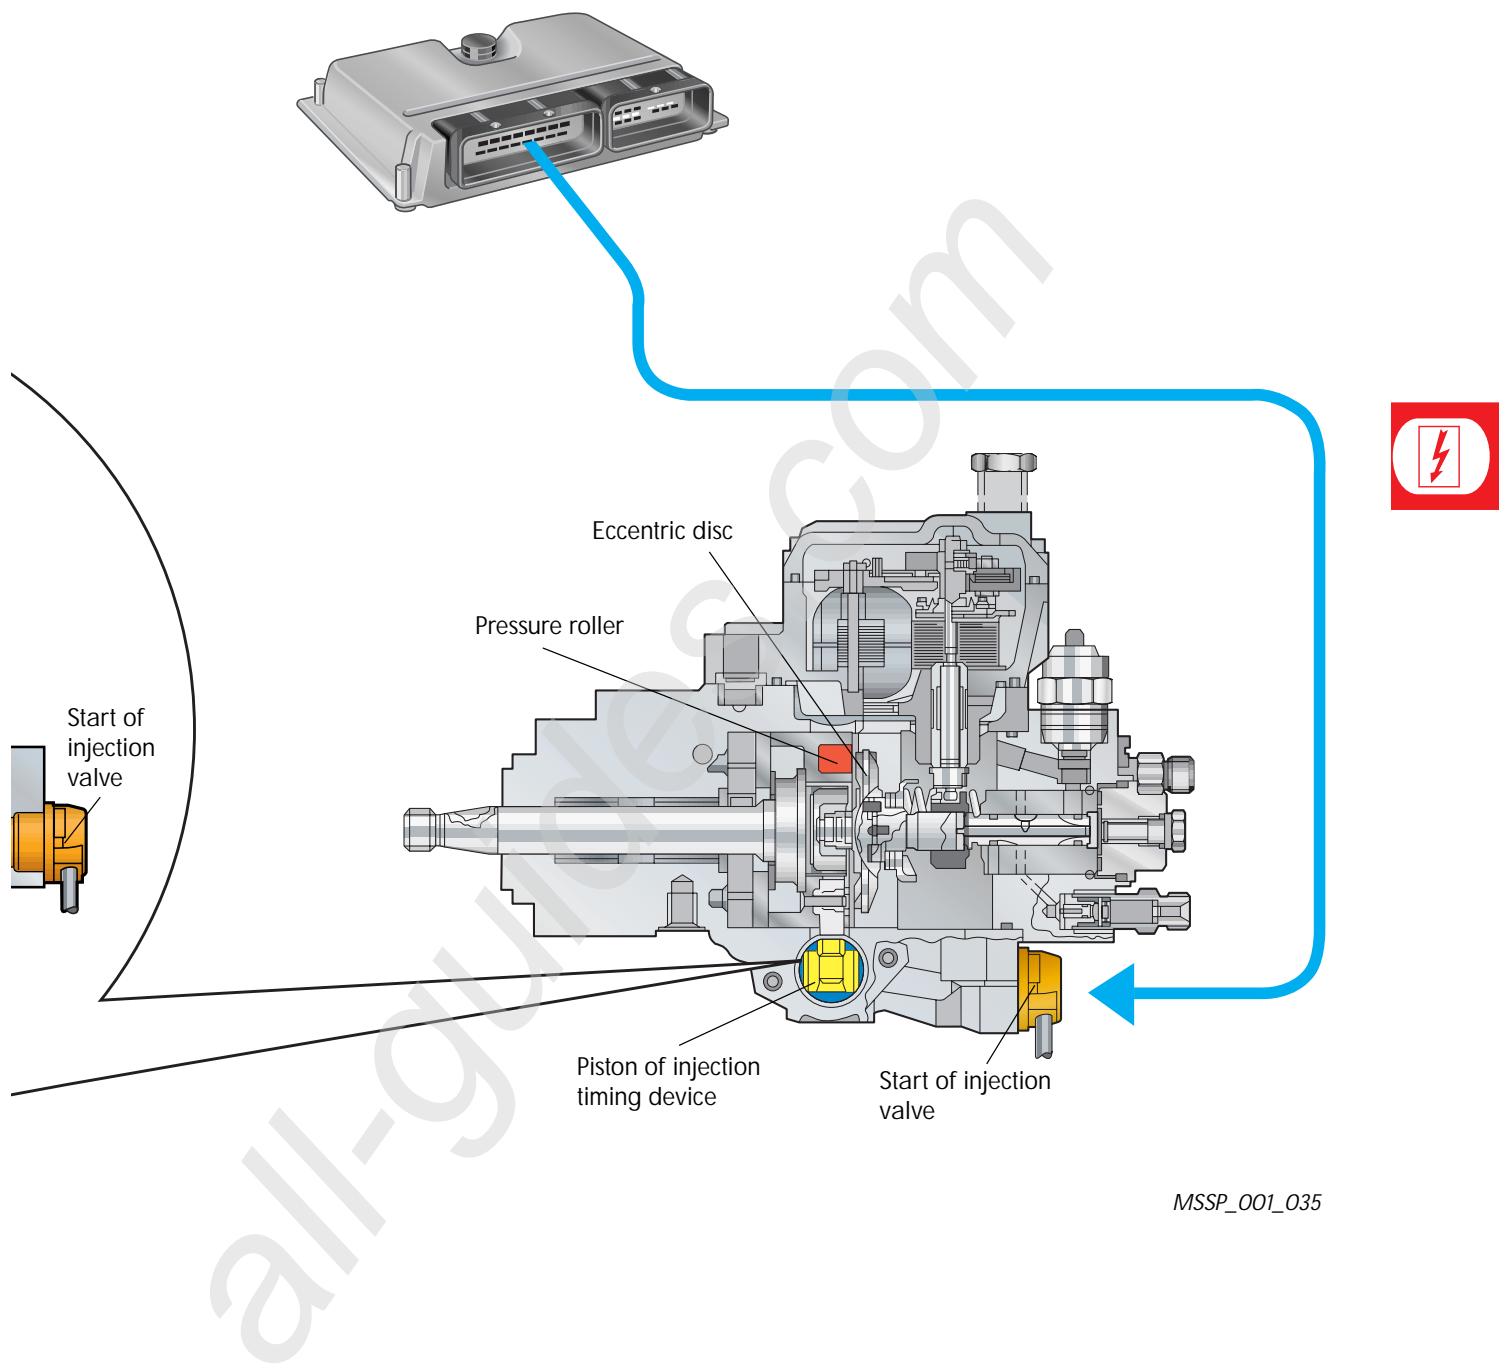

MSSP\_001\_035

# Engine electronic systems

## Internal functions in the engine control unit

With additional functions, the engine control unit ensures the engine runs smoothly during operation.



MSSP\_001\_106

### Idle speed control

Based on the engine speed signal that is supplied 5 times per crankshaft revolution, the engine control unit recognizes even the smallest deviation from the specified idle speed.



By way of changes in the metering adjuster control, the engine control unit can maintain a constant idle speed under all operating conditions.

### Smooth running control

In order to achieve particularly smooth, uniform engine operation, the injection volume of each cylinder is controlled in such a way as to avoid output differences between the individual cylinders.

This function is monitored by means of the signal from the engine speed sender that supplies the engine control unit with five signals per crankshaft revolution. If the signals are received in uniform rhythm this means all cylinders are performing the same amount of work. If the output of one cylinder is weaker, the crankshaft will be accelerated to a lesser extent. If the output of one cylinder is higher, it will accelerate the crankshaft to a greater extent.

Once the engine control unit has recognized an irregularity, a higher or lower injection volume is immediately supplied to the corresponding cylinder until the engine runs smoothly and uniformly again.

The injection volume deviation is indicated in the measured value block.

# Engine electronic systems

## Maximum engine speed governing

On reaching the maximum engine speed, the engine control unit reduces the injection volume in order to protect the engine.

## Start volume control

The injection volume required for starting is determined by the engine control unit corresponding to the coolant temperature. As a result, exhaust emission is kept low while still ensuring very good starting characteristics.

## Signal monitoring

During operation, the engine control unit monitors itself as well as the functions of the sensors and actuators. Occurrence of a malfunction is indicated visually by the indicator lamp illuminating and acoustically by a warning tone.



MSSP\_001\_032

# Engine electronic systems

## Function diagram

E190 - Emergency stop button  
 E354 - Oil extractor pump button

F36 - Neutral switch  
 F60 - Idling switch

G6 - Fuel pump (presupply pump)  
 G28 - Engine speed sender  
 G62 - Coolant temperature sender  
 G71 - Intake manifold pressure sender  
 G72 - Intake manifold temperature sender  
 G79 - Throttle lever position sender  
 G80 - Needle lift sender  
 G81 - Fuel temperature sender  
 G149 - Modulating piston movement sender

J17 - Fuel pump relay  
 J 52 - Glow plug relay  
 J248 - Diesel direct injection system control unit  
 J317 - Terminal 30a voltage supply relay  
 J593 - Fuel shut-off valve control relay


K29 - Glow period indicator lamp

N108- Start of injection valve  
 N146 - Metering adjuster


Q6 - Glow plugs (engine)

S81 - Fuel pump fuse  
 S125 - Glow plug fuse  
 S190 - Terminal 30 voltage supply fuse

Y19 - Multifunction display with engine speed

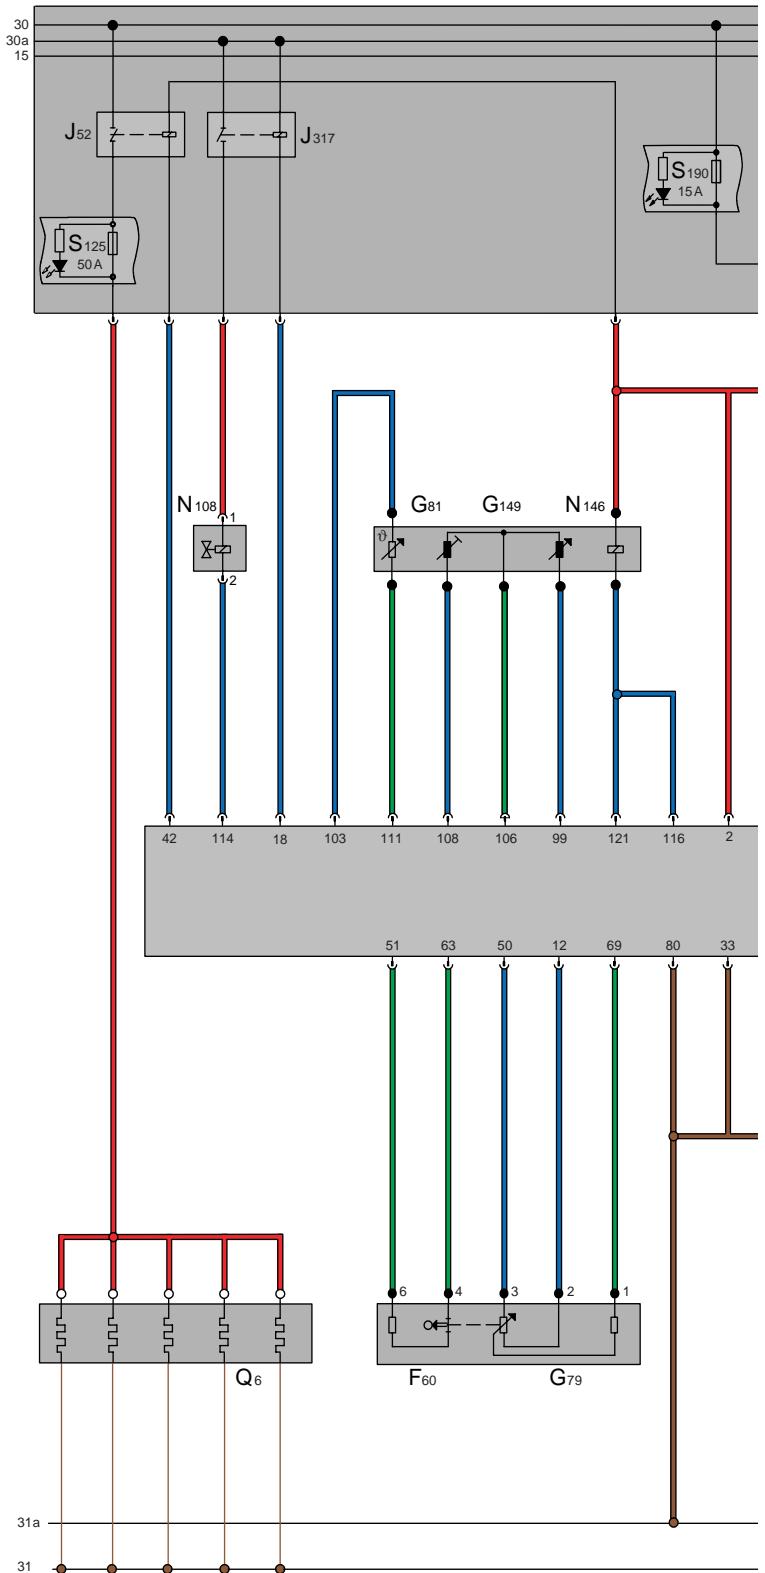

# Engine electronic systems

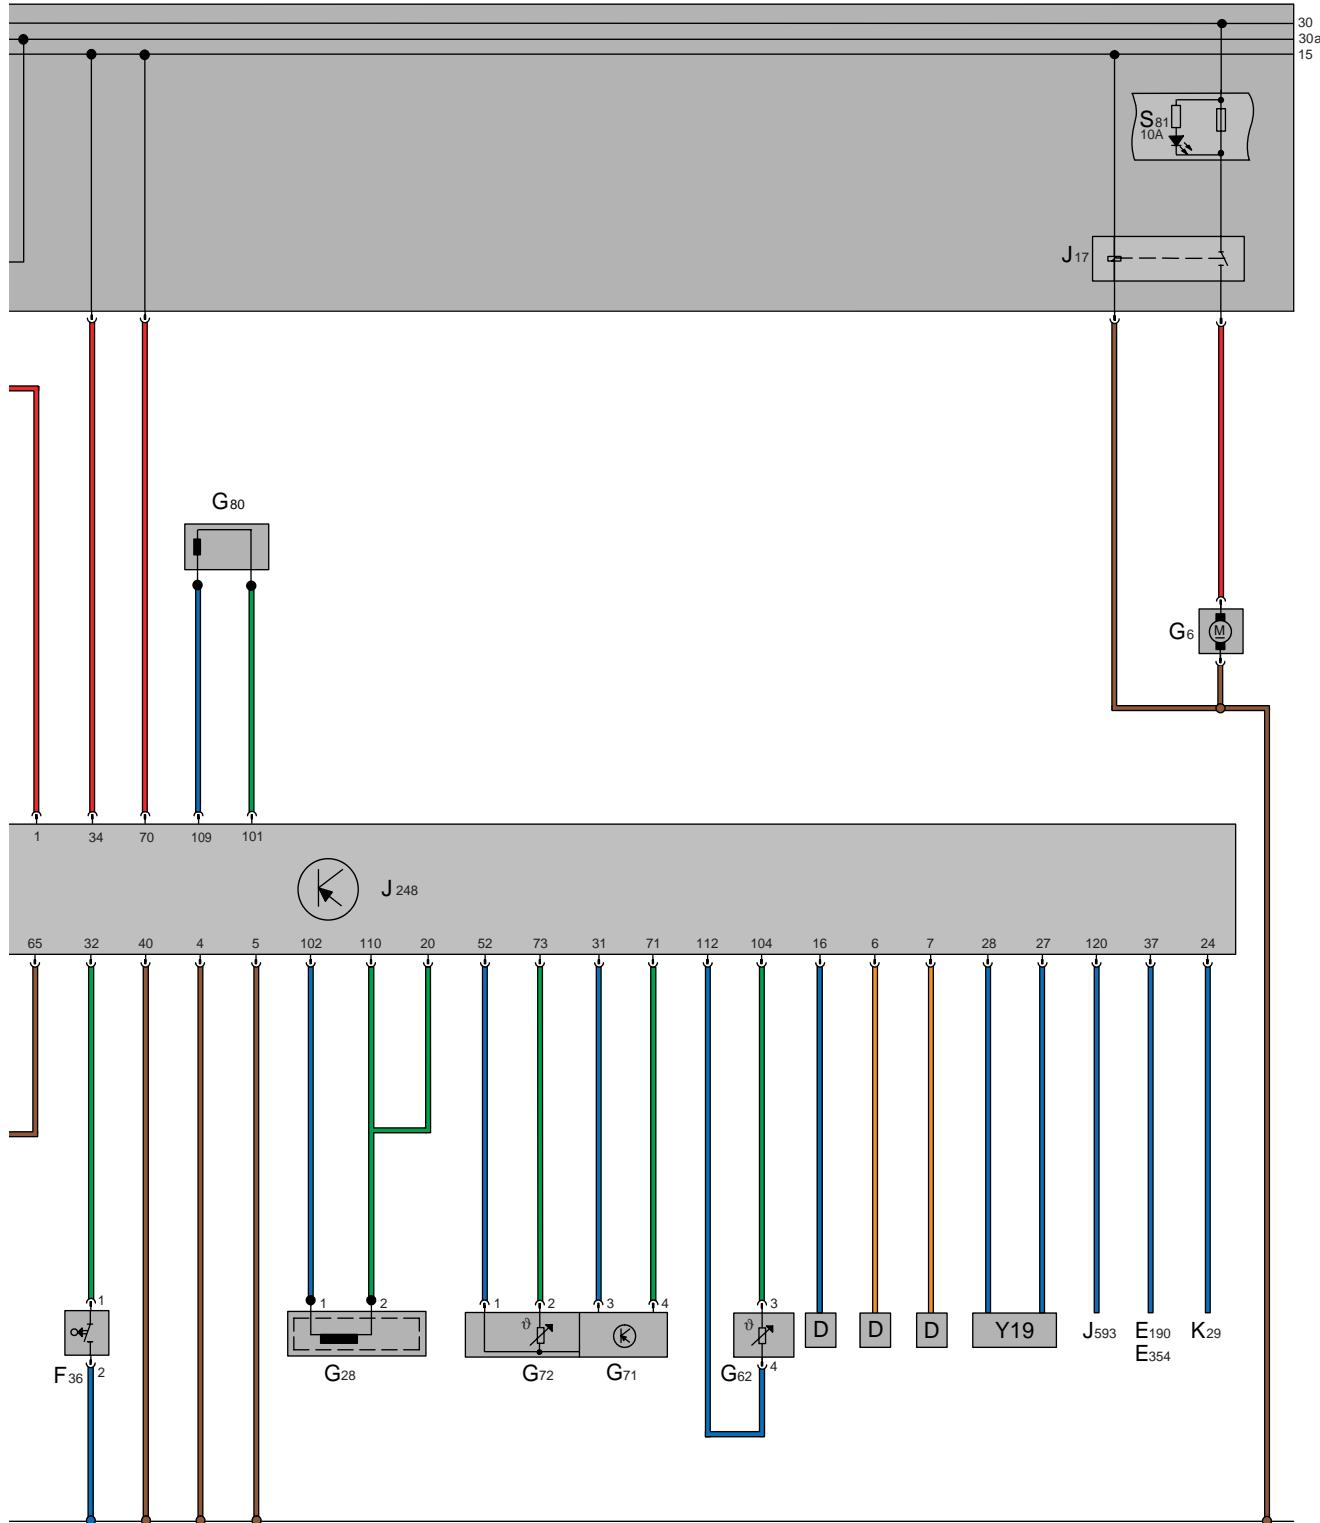

MSSP\_001\_048

# Fuel system


## Fuel supply

The fuel pump sucks the fuel out of the fuel tank directly via the circulation preliminary filter. The electric presupply pump supports the fuel pump located in the injection pump housing.

The fuel presupply pump is mounted on the engine below the central electrics.

It is arranged between the circulation filter and the fuel microfilter.

The fuel return is routed via the combined cooler. In this way, the return fuel is cooled and the fuel temperature in the fuel tank kept low.

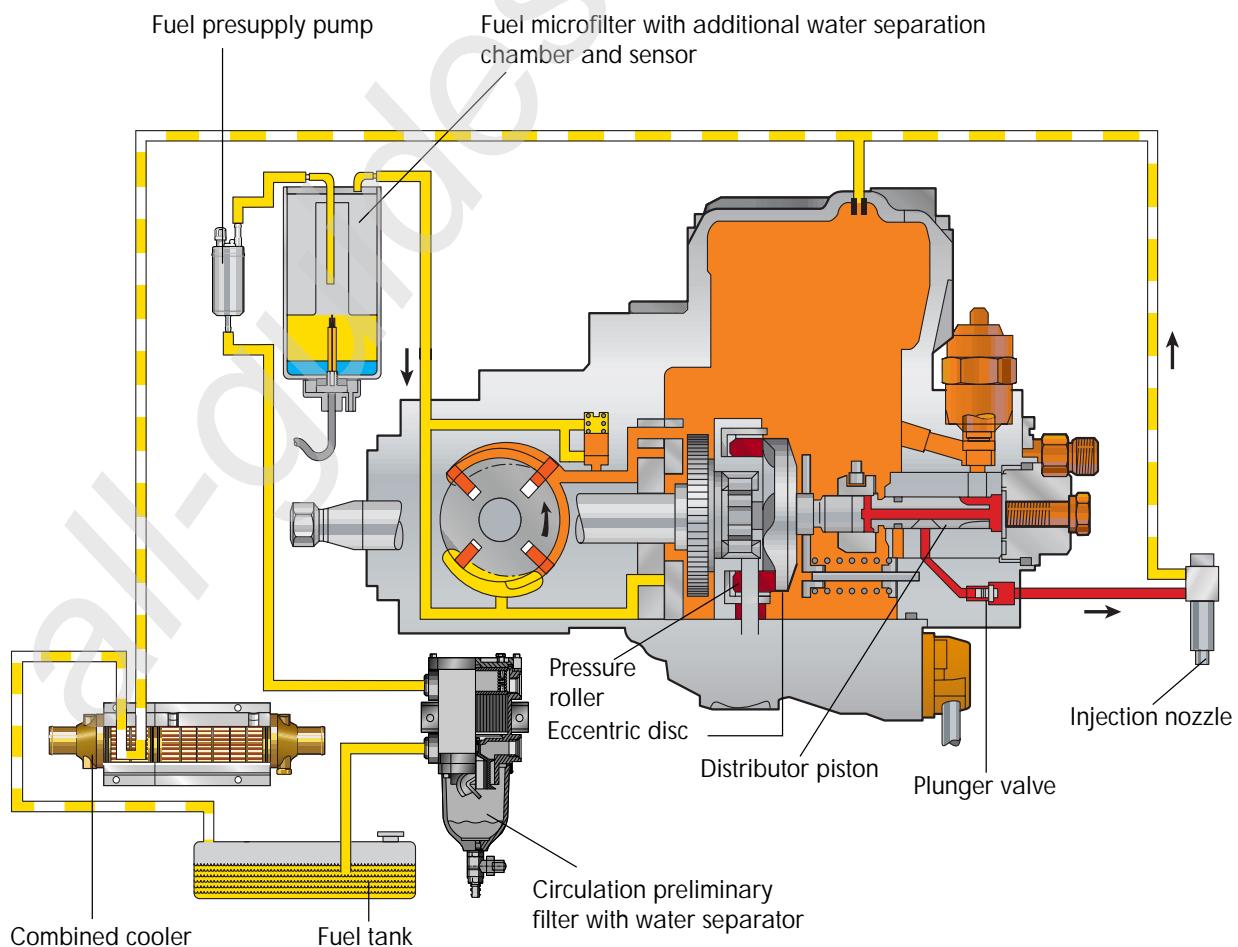


MSSP\_001\_036

# Fuel system

## Functional description

### Fuel intake


The vane pump sucks in the fuel and forces it into the pump housing. The rotor is mounted directly on the drive shaft. A pressure control valve is fitted for the purpose of maintaining the pressure increase within the permissible range as the engine speed increases.

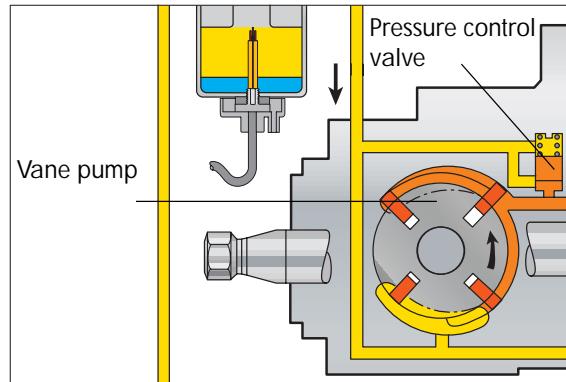

MSSP\_001\_037

### Filling high pressure chamber

With the aid of a claw clutch, the drive shaft of the vane pump causes the distributor piston to rotate and lift by means of an eccentric disc. The eccentric disc executes one lift movement per cylinder. During the delivery phase, the control slot opens the feed channel as the result of the rotary motion of the distributor piston and allows fuel to flow into the high pressure chamber.

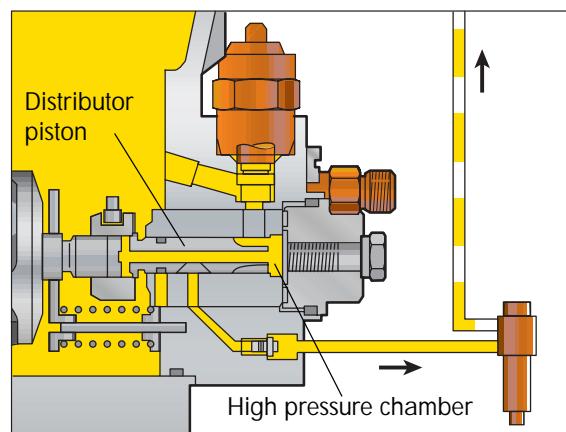


MSSP\_001\_038

### Start of injection

The distributor piston continues to turn so that the control slot closes the feed hole.

The following list movement exerts pressure on the fuel. As the distributor piston continues to rotate, the distributor groove is aligned flush with the outlet hole. The fuel under high pressure is forced to the injection nozzle.

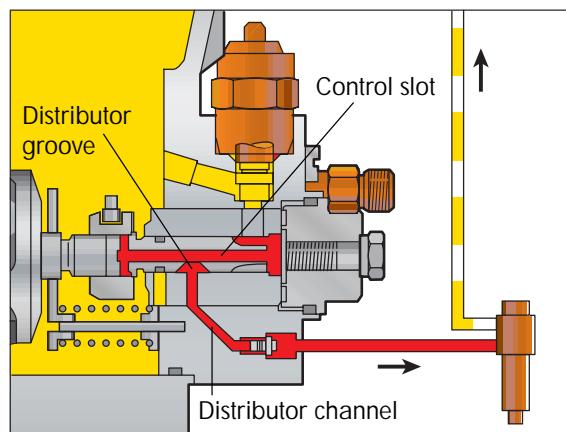

MSSP\_001\_039

# Fuel system

## Diesel fuel microfilter with water warning facility

The task of the fuel microfilter is to filter out the finest impurities in the fuel.


Thoroughly filtered fuel is of great significance for ensuring reliable operation.

Condensation water or water that enters the system while refuelling must be filtered out. Owing to its higher weight, water collects in the base of the filter.

A high proportion of water in the diesel fuel poses the risk of the water entering the fuel injection system. This would lead to internal corrosion and engine failure.



For this reason, diesel fuel microfilters in Volkswagen Marine boat engines feature a water warning facility. It informs the skipper of high water level in the fuel microfilter before it can place operational reliability at risk.

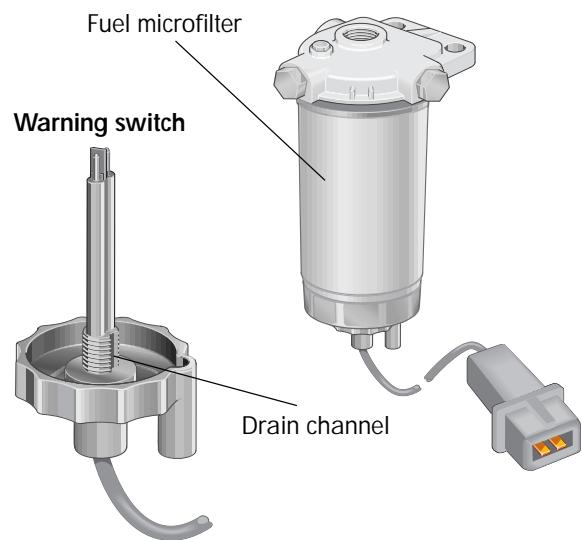


MSSP\_001\_040

# Fuel system

## Functional description

### Water level safe

The engine control unit sends a voltage to the contact pins of the warning switch located in the fuel microfilter. Only a low current flows if the contact pins are surrounded by diesel fuel.

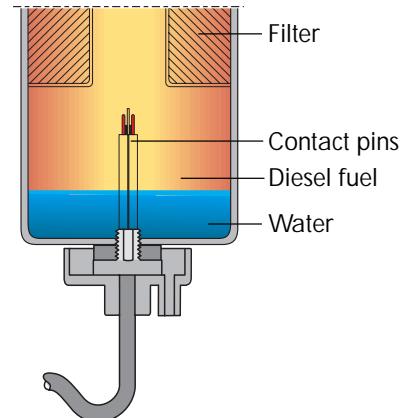


MSSP\_001\_041



### Water level dangerous


If the water level rises up to the contact pins, a higher current flows due to the better conductivity of the water. The engine control unit detects the higher current flow and by way of the indicator lamp in the control panel signals the high water level to the skipper.

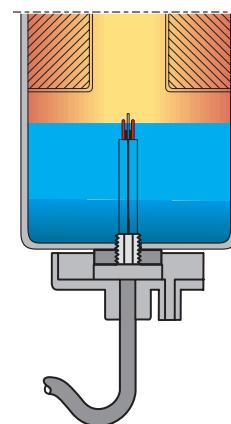

MSSP\_001\_042


### Drain fuel microfilter

A drainage facility is located on the underside of the fuel microfilter.



Please refer to the Owner's Handbook or the current Workshop Manual for the exact description of the water drainage procedure.

### Water drain valve

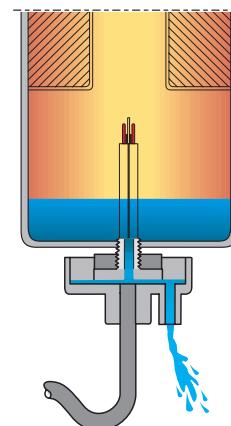

MSSP\_001\_043

# Fuel system

## Circulation preliminary filter with water separator (optional)

The circulation water separator is installed between the fuel tank and fuel presupply pump. The exact installation location depends on the type of boat.

### Functional description

The fuel flows through the inlet opening and an internal system of guide vanes. An intensive rotary motion is induced which forces the fuel into the bowl section.


Water droplets and heavy particles are expelled by the centrifugal force, they collect on the bowl walls and finally settle on the base of the bowl.

During the further course of the filter process, the fuel must pass through the guide vane system positioned on the outer housing.


Due to the different lengths of the deflection vanes and the double change in direction of flow, smaller water droplets and fine particles are expelled and also collect on the base of the bowl.

The considerable increase in cross section below the filter element causes the fuel to settle while the finest water droplets and particles are expelled.

The remaining particles and water are subsequently filtered out by a replaceable filter element.

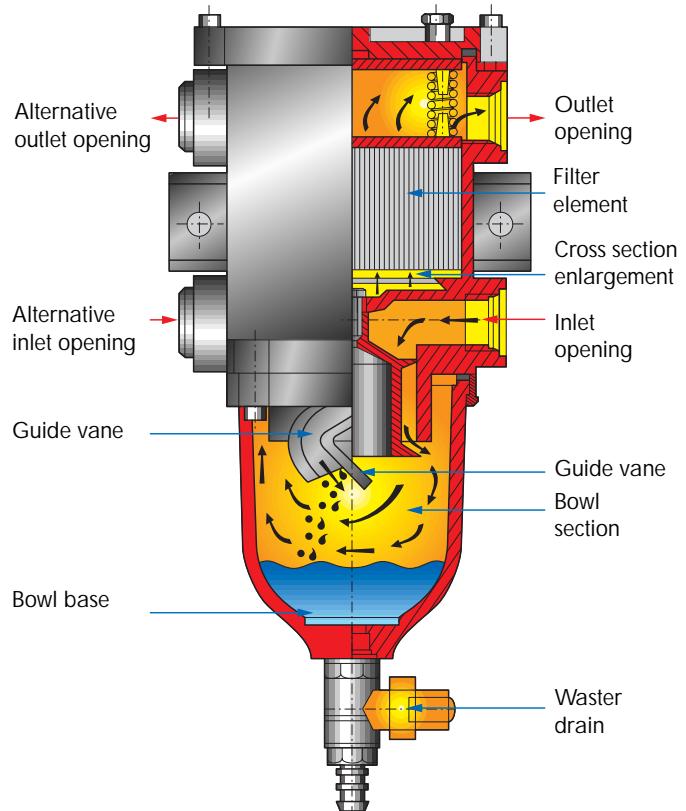

MSSP\_001\_044



Please refer to the Owner's Handbook or the current Workshop Manual for instructions on the maintenance and water draining procedure.

all-guides.com



# Emission characteristics

---

## Emission characteristics

The lowest possible level of environmental pollution renders necessary sophisticated design as well as extensive matching and tuning work.

In doing so, it is often necessary to consolidate conflicting requirements such as low pollutant emission and high engine power output.

All Volkswagen Marine boat engines comply with the Bodensee Schifffahrtsverordnung Stufe 2 (Lake Constance Shipping Ordinance, Stage 2) (BSO II).

## Pollutants in exhaust gas

The following exhaust gasses mainly occur in the exhaust emissions of diesel engines:

- **Carbon monoxide (CO)**

Carbon monoxide is produced by combusting fuels containing carbon. It is odourless and colourless, explosive and highly toxic. Carbon monoxide inhibits erythrocytes (red blood corpuscles) from transporting oxygen and is lethal even in small concentrations in breathing air. In the open it oxidizes to form carbon dioxide within a short space of time. Carbon dioxide is a constituent part of air.

- **Gaseous hydrocarbons (HC)**

They occur in the exhaust gas following incomplete combustion. Hydrocarbons irritate the sense organs and, depending on the type, can also cause cancer.

- **Soot particles**

Soot particles are produced by the combustion process in a diesel engine. The effects on the human body are currently not fully clarified.

- **Nitrogen oxide (NOx)**

Nitrogen oxide is produced by high pressure, high temperature and surplus oxygen during combustion.



# Emission characteristics

## Reducing pollutants

Measures designed to reduce soot particles and the formation of HC increase the percentage of nitrogen oxides. Attempts to reduce the nitrogen emission increase the proportion of other exhaust gas constituents.

In Volkswagen Marine boat engines, the lowest possible exhaust emission has been achieved by specific design of the combustion chamber and of the piston recess as well as the matching and coordination of the injection nozzles.

Electronically controlled and monitored engine management and variable start of injection control further ensure optimum combustion and low exhaust emissions.



MSSP\_001\_075



# Exhaust turbocharging

## Fundamental principle of exhaust turbocharging


The aims of supercharging by means of a turbocharger are:

- Higher torque and
- Increased engine output

By compressing the intake air, more air and thus increased levels of oxygen enter the combustion chamber with each intake stroke. The higher share of oxygen enables improved combustion. The power output is increased.

The movement and pressure energy contained in the exhaust gas is used to drive the turbine wheel of the turbocharger that is connected via a shaft to the compressor wheel.

The compressor wheel compresses the air and forces it into the combustion chamber. Since the air temperature increases during compression and the density thus decreases, the engine output can be further increased by cooling the air in an intercooler. The air density increases again.

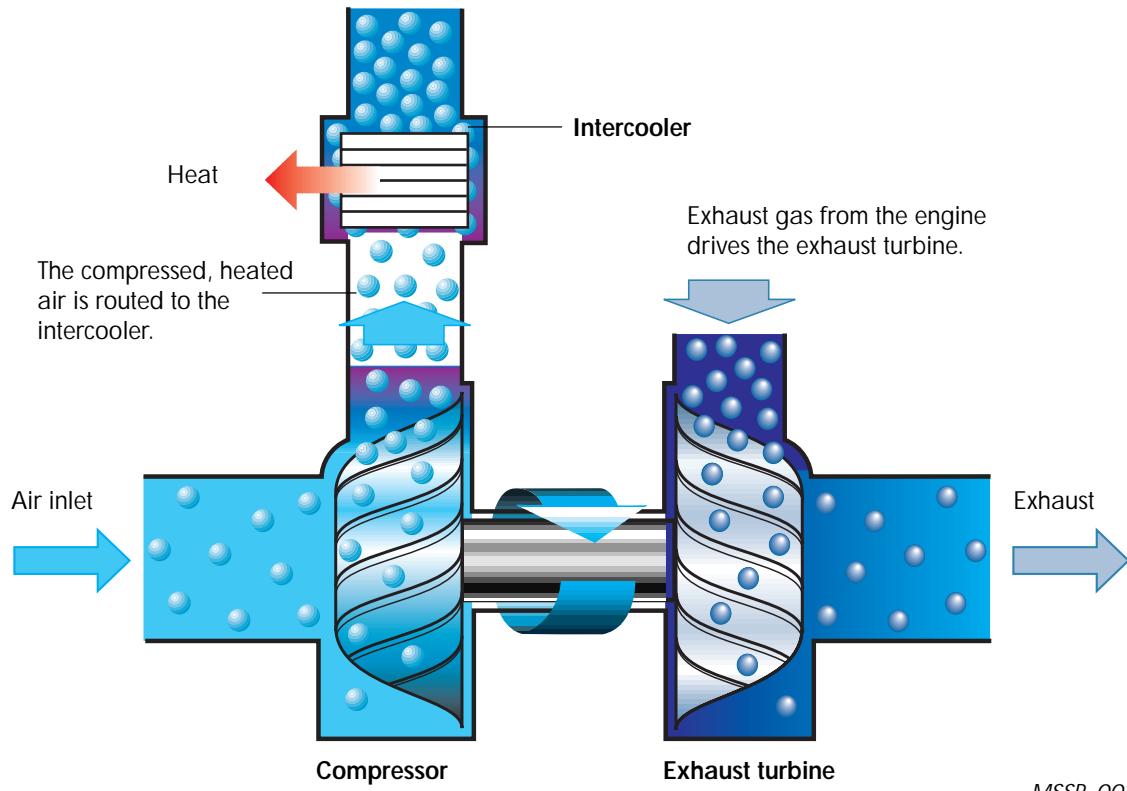


MSSP\_001\_051

# Exhaust turbocharging

There are two specific problems involved in the use of a conventional turbocharger.

- The energy of the exhaust gas is too low in the lower engine speed range. The turbine wheel does not reach the rotary speed necessary to sufficiently compress the air.
- The exhaust gas energy is very high in the upper engine speed range. The speed of the turbine wheel is therefore higher than necessary. The air is compressed too much.

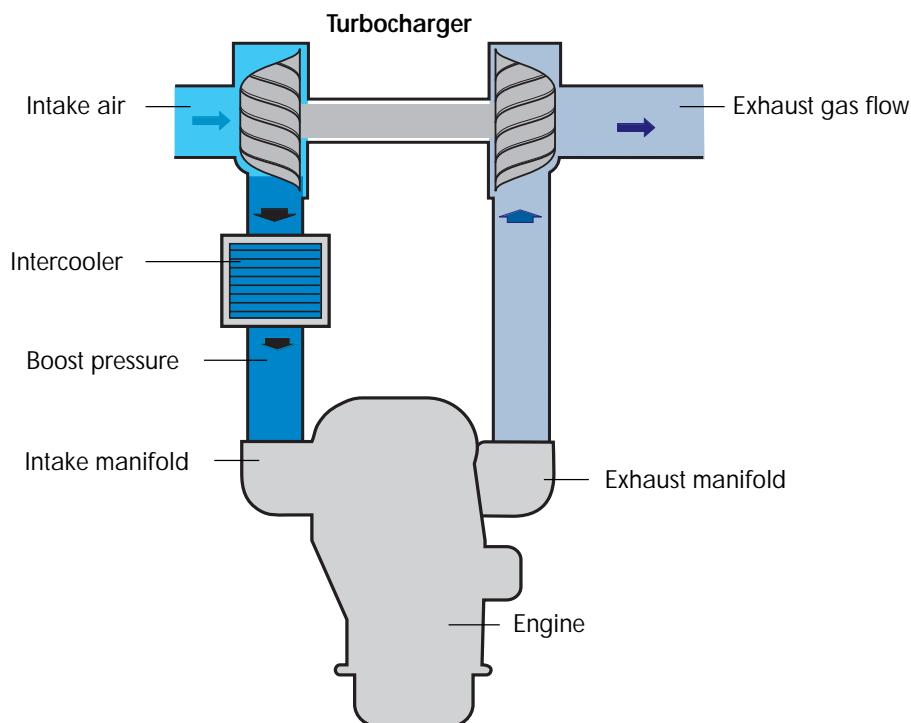

MSSP\_001\_052


# Exhaust turbocharging

## Turbocharger with variable turbine geometry

The turbocharger installed in Volkswagen Marine boat engines operates with variable guide vanes.

### Advantage

- By correspondingly influencing the exhaust flow, the optimum boost pressure is made available virtually over the entire engine speed range. This ensures improved combustion and lower exhaust emission values as well as high propelling power over the entire engine speed range.

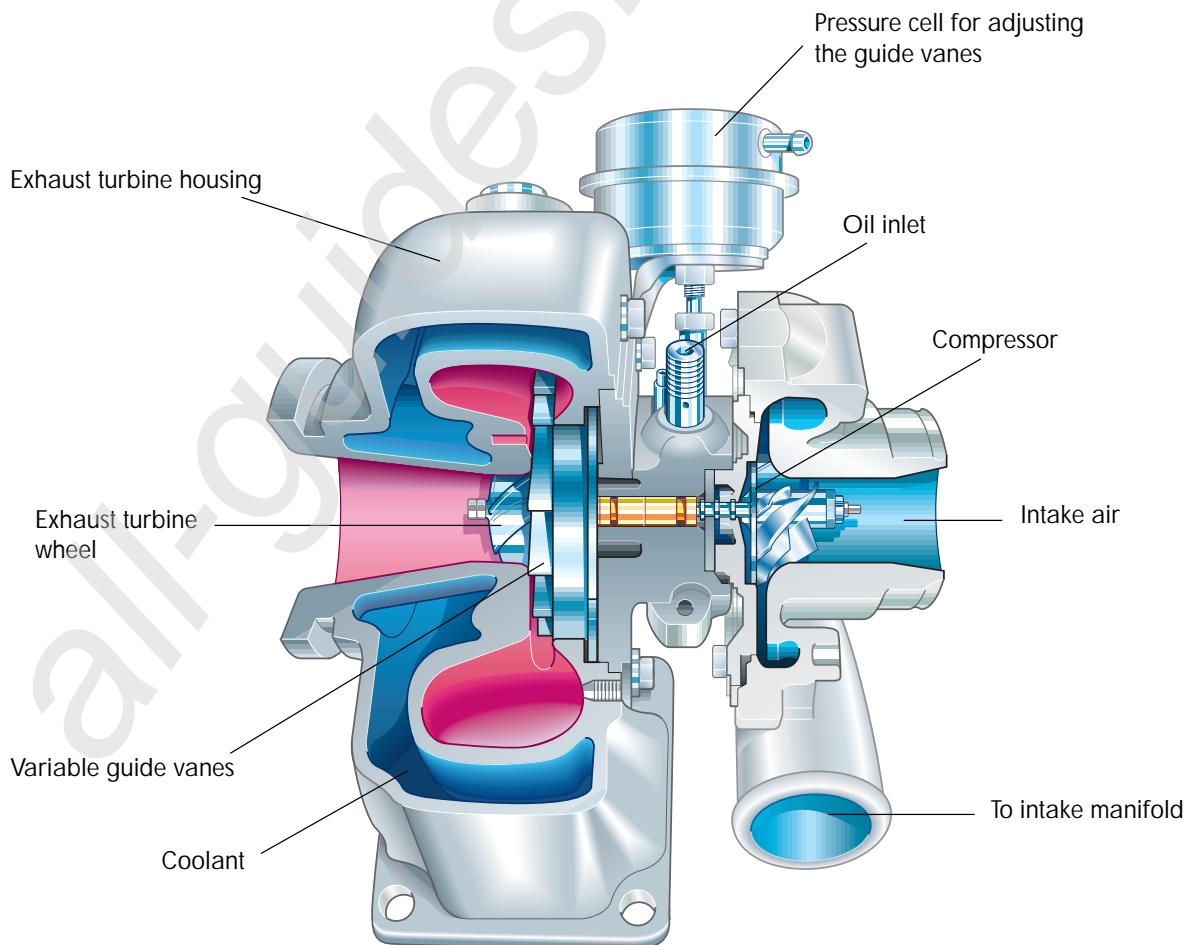

MSSP\_001\_061


# Exhaust turbocharging

## Functional description

### Fundamental principle

A gas flows through a narrow pipe faster than through a pipe without a constriction. The prerequisite is that the same pressure is applied in both pipes.

This physical principle is utilized by the turbocharger with variable turbine geometry for the purpose of achieving a constant boost pressure in virtually all engine speed ranges.

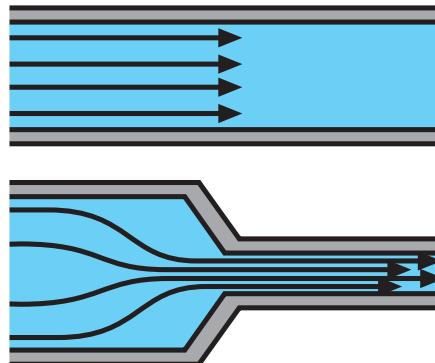


MSSP\_001\_053

### Low engine speed

The volume and speed of the exhaust gas are low. The cross section of the exhaust pipe is constricted before the turbine wheel by the guide vanes. The narrowed cross section forces the exhaust gas to flow faster thus increasing the speed of the turbine wheel.


The high rotary speed of the turbine guarantees optimum boost pressure also at low engine speed.

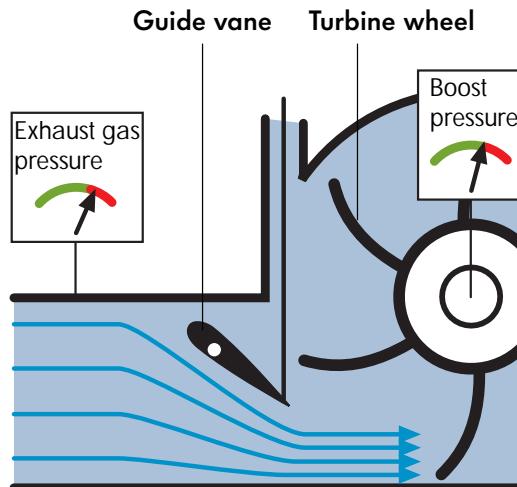

MSSP\_001\_054

### High engine speed

The exhaust volume and speed are high. The guide vanes enable a larger cross section. The maximum boost pressure is not exceeded.

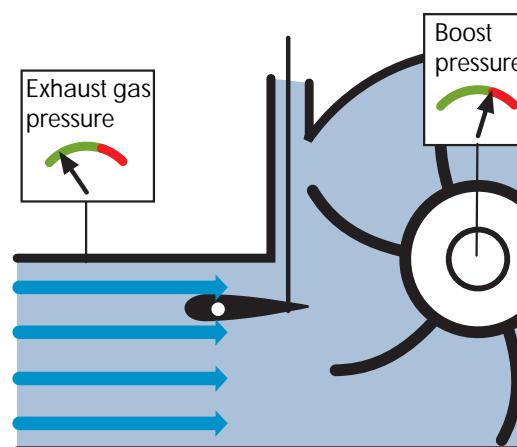


MSSP\_001\_055

# Exhaust gas turbocharging

## Control of variable guide vanes

The pressure cell is connected via a hose line to the intake pipe. The pressure in the pressure cell changes depending on the intake manifold pressure.

### Turbocharger with variable guide vanes

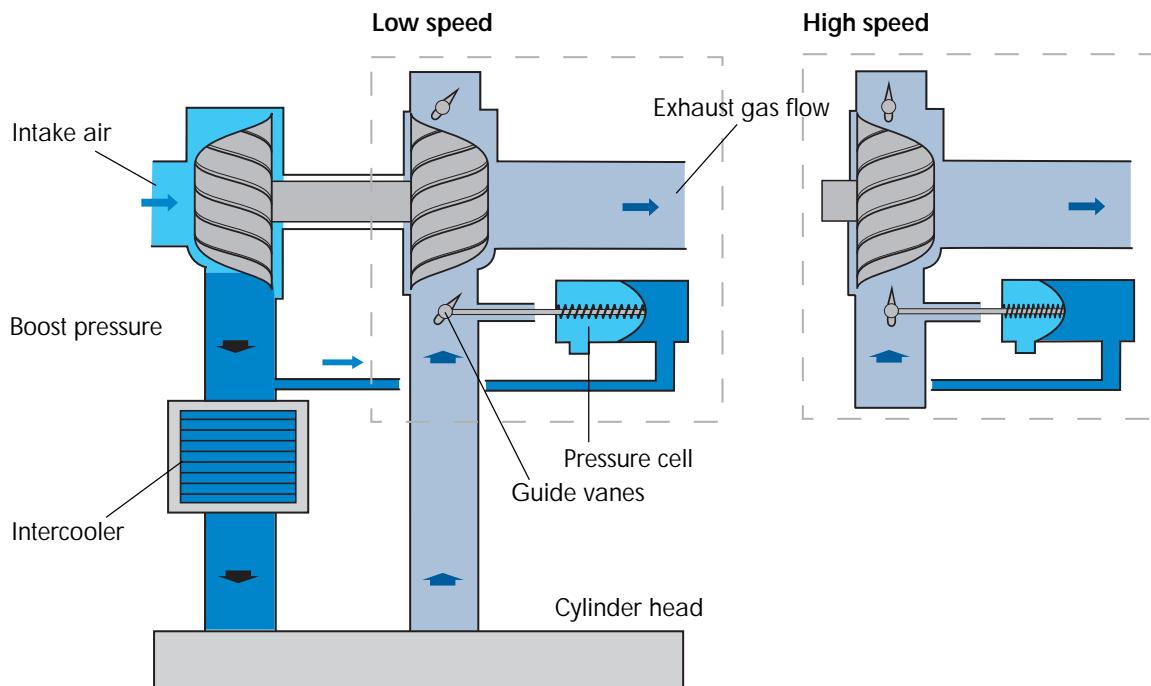

MSSP\_001\_057

At **low intake manifold pressure**, the diaphragm of the pressure cell is pushed back by the force of the spring. The guide vanes are set to a small inlet cross section.

At **high intake manifold pressure**, the pressure acting on the diaphragm in the pressure cell increases. The guide vanes are set to a large inlet cross section.


This control always makes available the boost pressure necessary for ensuring optimum power output.

# Exhaust turbocharging


## Guide vane adjustment

The guide vanes together with their shafts are mounted on the carrier ring. The guide vanes are connected by means of a shaft to the guide pin. This guide pin engages in the adjustment ring such that all guide vanes are adjusted simultaneously as the adjustment ring rotates.

The adjustment ring is turned by the vacuum cell in connection with the control linkage.

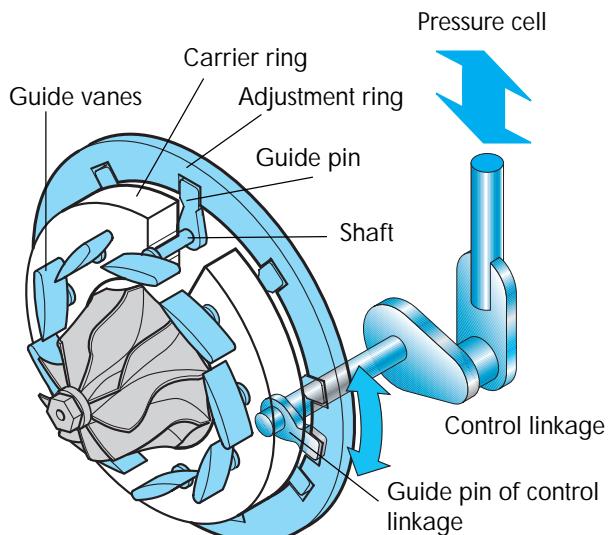

MSSP\_001\_049

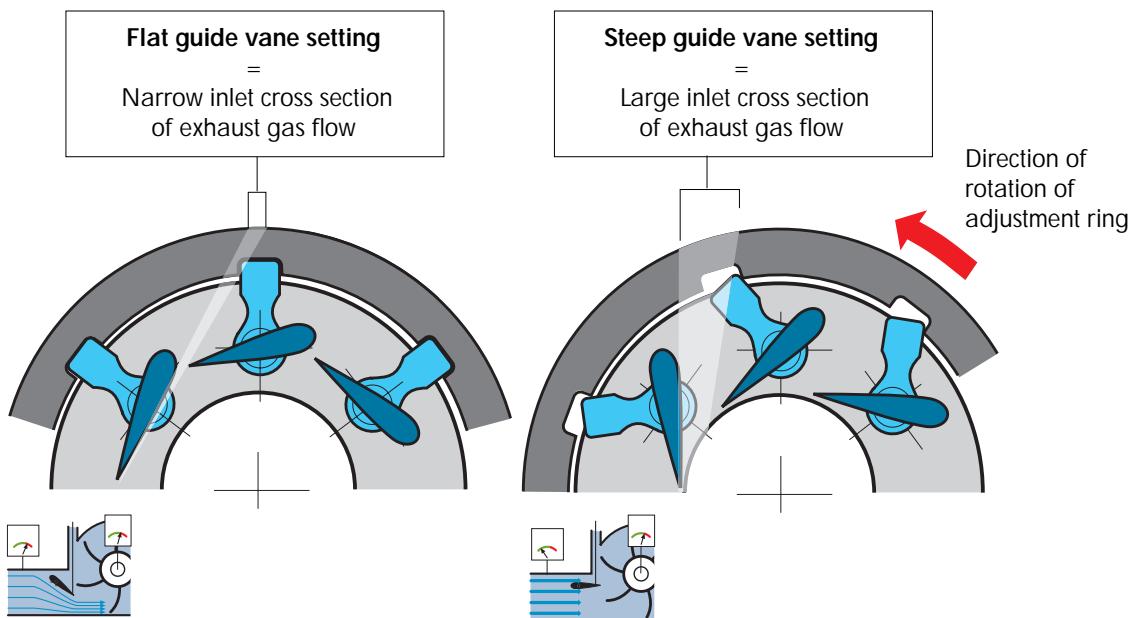

MSSP\_001\_074

In connection with the acceleration in the flow of the exhaust gas, the constricted inlet cross section results in a higher turbine speed.

The flow rate of the exhaust gas increases as the engine speed increases. The inlet cross section becomes larger so that the boost pressure and turbine output remain constant over a wide speed range.

# Cooling system

## Introduction to cooling system

While in a road vehicle the engine heat is given off via the cooling water to the air drawn in on the airstrain, the engine heat in a boat is transferred to the seawater.

In order to keep the engine clear of aggressive media such as saltwater, the Volkswagen Marine boat engines feature a dual-circuit cooling system.


In the same way as in passenger vehicles, the coolant in the primary circuit is made up of antifreeze, corrosion inhibitor and water and is designed as a closed circuit. The heat is transferred in a heat exchanger through which seawater flows.

The seawater circuit (secondary circuit) is an open circuit in which the seawater is drawn in and after having flowed through the heat exchangers, it is expelled again.

### The coolant circuit consists of

- Small coolant circuit (primary) – red closed freshwater circuit
- Large coolant circuit (primary) – blue closed freshwater circuit
- Seawater circuit (secondary) – green

## Overview of cooling circuit for SDI engines

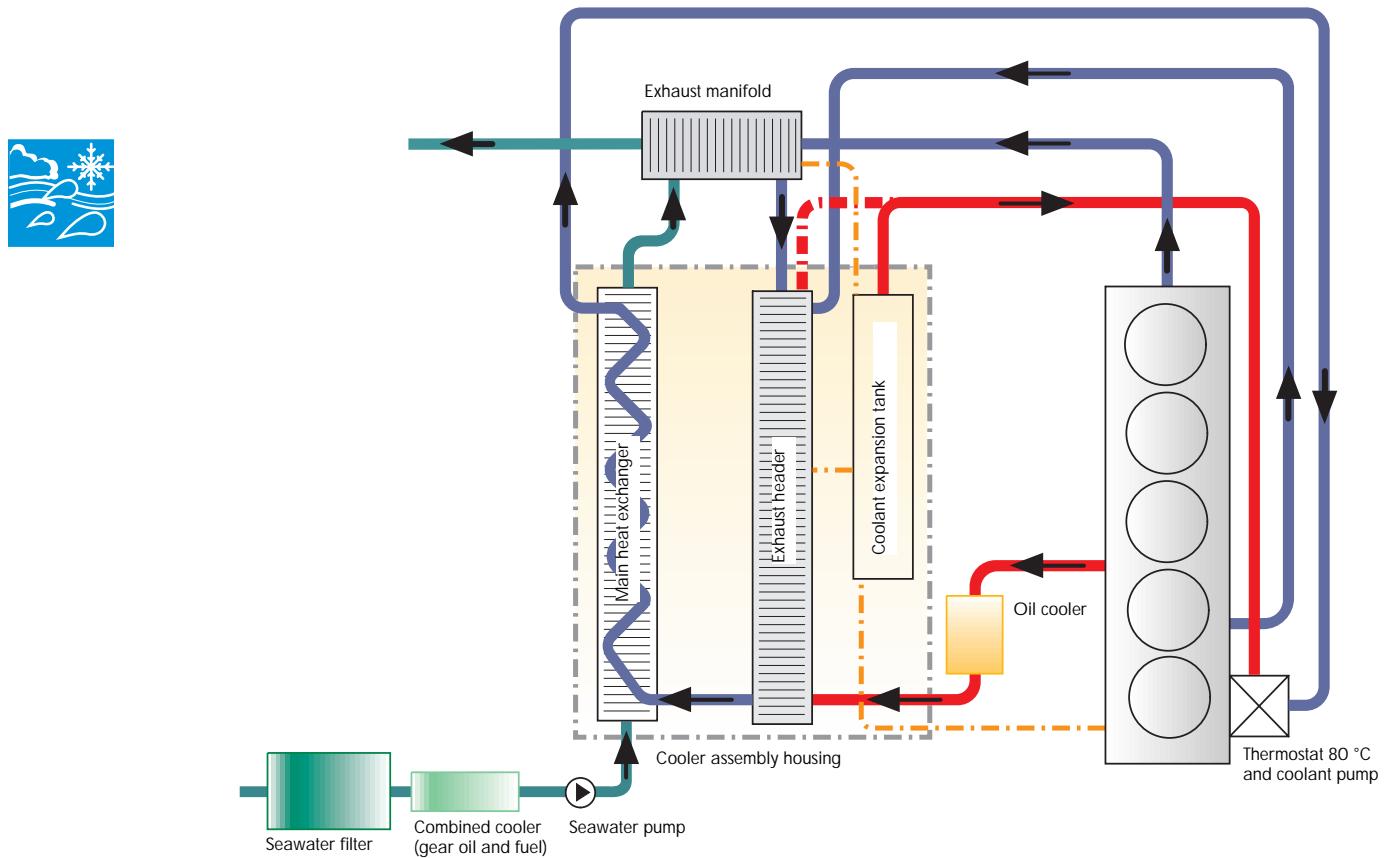

MSSP\_001\_058

# Cooling system

## Seawater circuit

Drawn in by the seawater pump, the seawater enters the system via the boat's hull. The seawater filter filters the impurities out of the incoming seawater.

The downstream combined cooler is a two-piece assembly. It cools the fuel flowing back to the fuel tank. On boats with power-assisted steering, the other part cools the hydraulic oil in the steering system as well as the gearbox oil on boats with a reversing gearbox.

In the heat exchanger, the seawater absorbs the heat of the coolant circuit and thus cools the engine. The seawater outlet takes place in the exhaust gas flow through the exhaust manifold (wet exhaust).



Provided the engine is running, the seawater always flows through the main heat exchanger and the exhaust manifold.

## Small coolant circuit

Driven by the coolant pump during the warm-up phase, the coolant circuit passes through the engine block, oil cooler, exhaust header and via the bypass back to the coolant pump. This ensures the engine quickly reaches its operating temperature.

## Large coolant circuit


Once the engine has reached its operating temperature, the thermostat opens the "large coolant circuit". The coolant now additionally flows through the main heat exchanger where it gives off the heat to the seawater.



Seawater circuit
Small coolant circuit (freshwater)
Large coolant circuit (freshwater)
Bypass
Ventilation line

# Cooling system

## Overview of cooling circuit for TDI engines

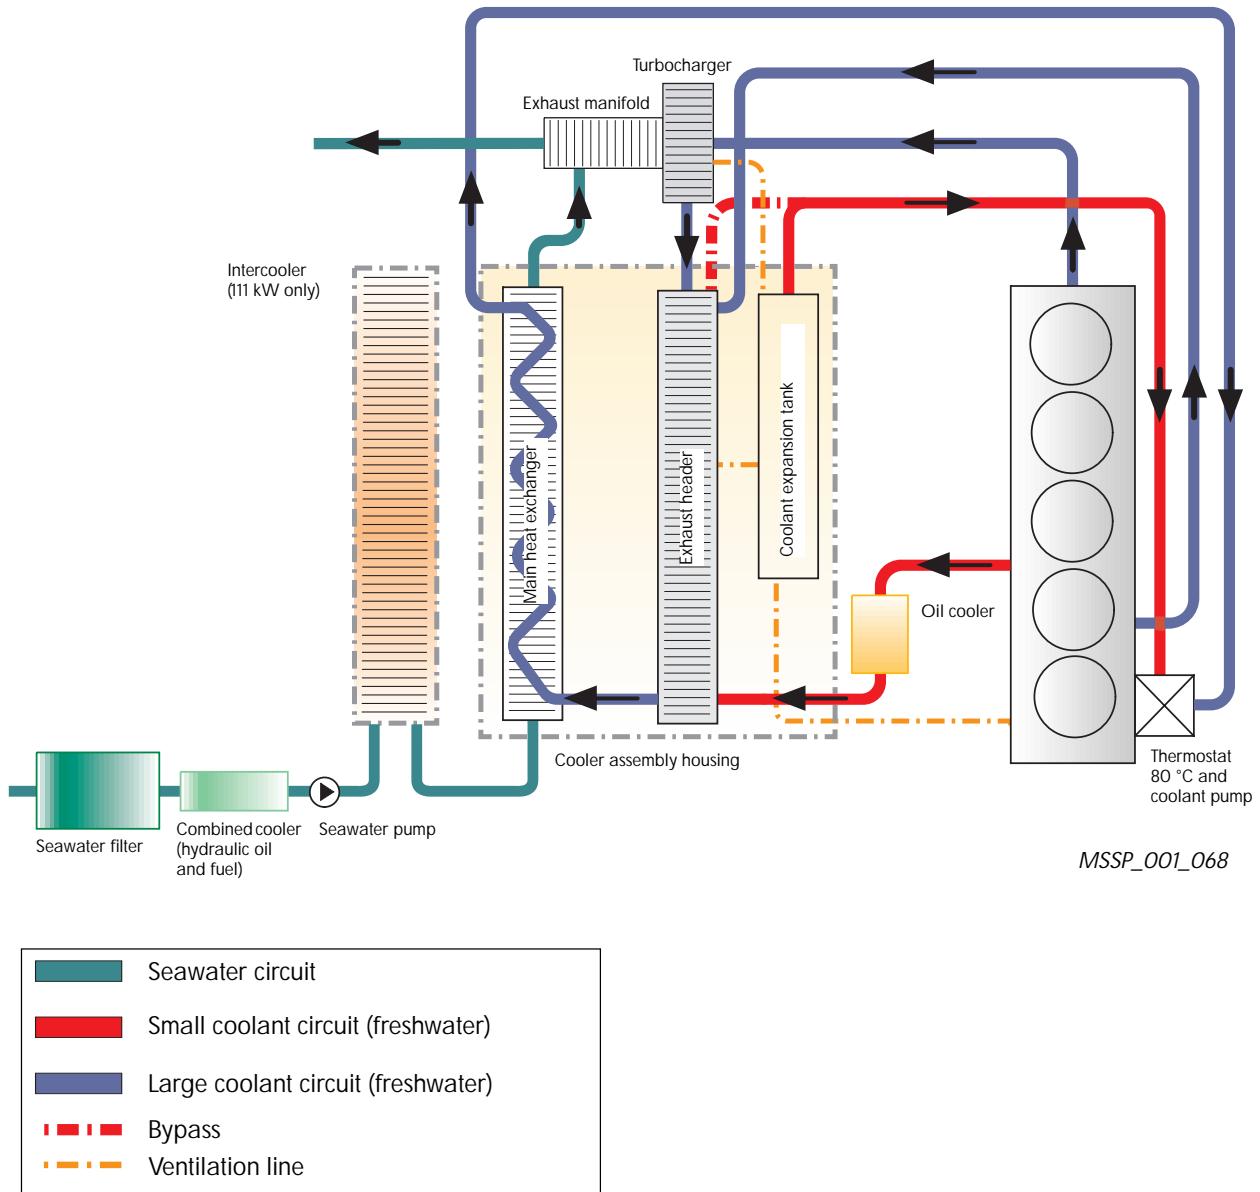

	Seawater circuit
	Small coolant circuit (freshwater)
	Large coolant circuit (freshwater)
	Bypass
	Ventilation line

# Cooling system

## Seawater circuit

Apart from the following changes, the seawater circuit of the TDI engines is the same as that of the SDI engines.

### Changes

On the TDI 150-5/150-5D, 108 kW and 111 kW TDI engines, the intercooler is located between the seawater pump and the main heat exchanger. In order to increase the air density, the compressed charge air from the turbocharger is cooled by the seawater.

The TDI 120-5, 88 kW engines as well as the TDI 100-5, 74 kW engines are not equipped with an intercooler.


## Large coolant circuit

High temperatures occur at the turbocharger during engine operation. For this reason, the "large coolant circuit" cools the turbocharger instead of the exhaust manifold as on the SDI.



# Cooling system


## Design of cooler assembly

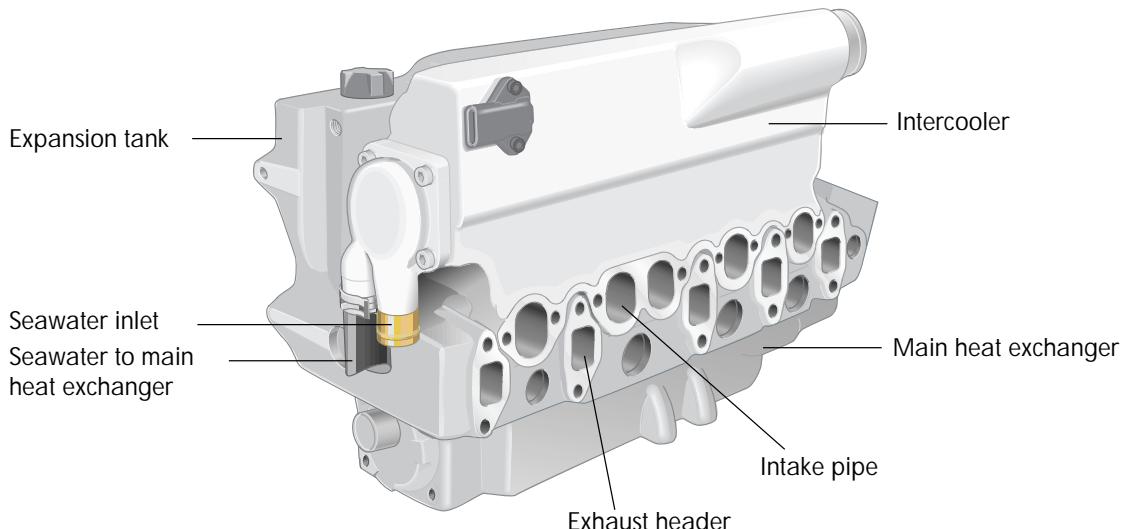

MSSP\_001\_100

## Intercooler (TDI 150-5/150-5D only)

The intercooler consists of the cooling pipe assembly and the housing. The seawater pump pumps the seawater through the intercooler, thus cooling the air compressed by the turbocharger. The air density increases.

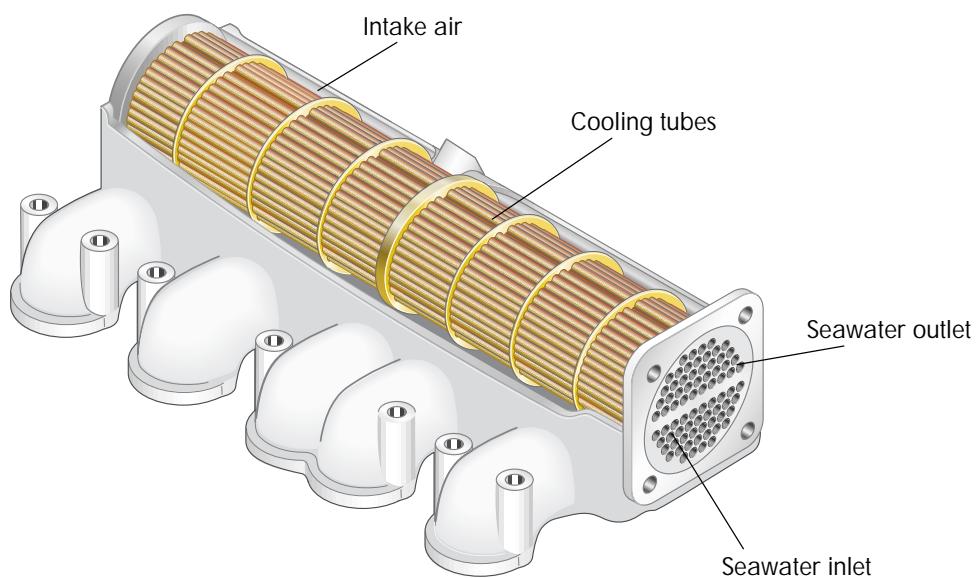


MSSP\_001\_072

# Cooling system

## Main heat exchanger

The heat from the engine is transferred via the coolant in the main heat exchanger to the seawater. The main heat exchanger and the expansion tank form one unit.

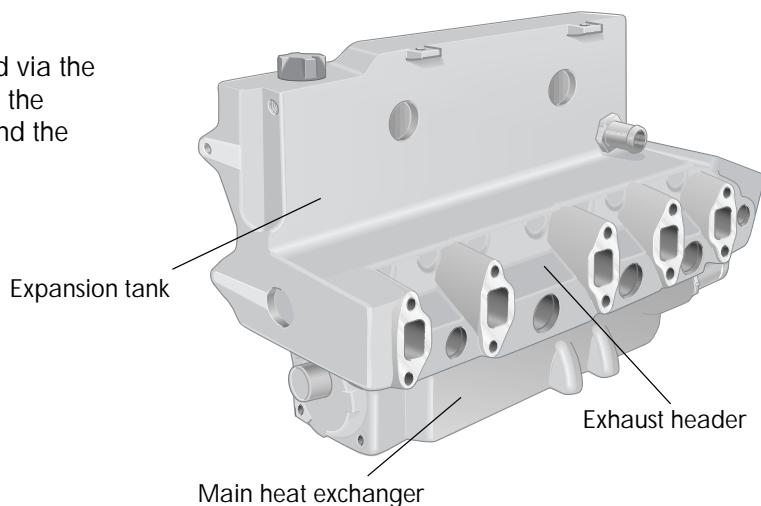


MSSP\_001\_105

## Exhaust header

Exhaust gas temperatures of a diesel engine can reach up to 800°C.

In order to keep the surface temperature at a low level, the exhaust header in Volkswagen Marine boat engines is cooled by the coolant circuit.

The dissipated heat is then transferred in the main heat exchanger to the seawater.

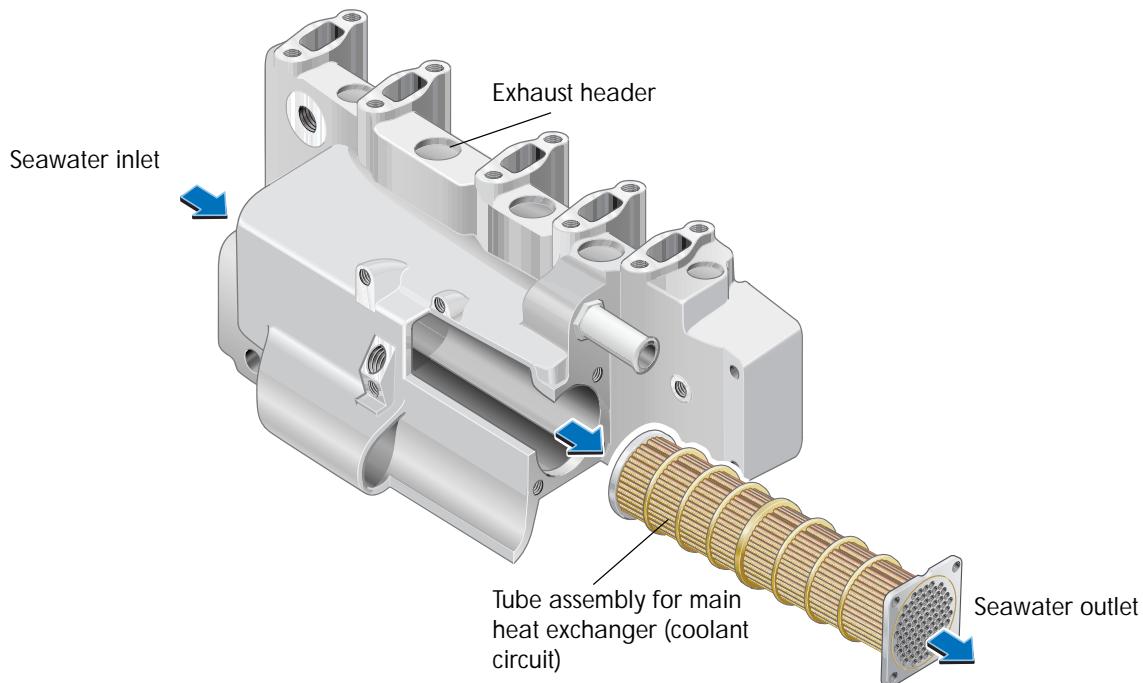


MSSP\_001\_099

# Cooling system

## Exhaust manifold

In the exhaust manifold, the seawater required for cooling is fed to the exhaust gas and routed via the exhaust system out of the boat (wet exhaust).

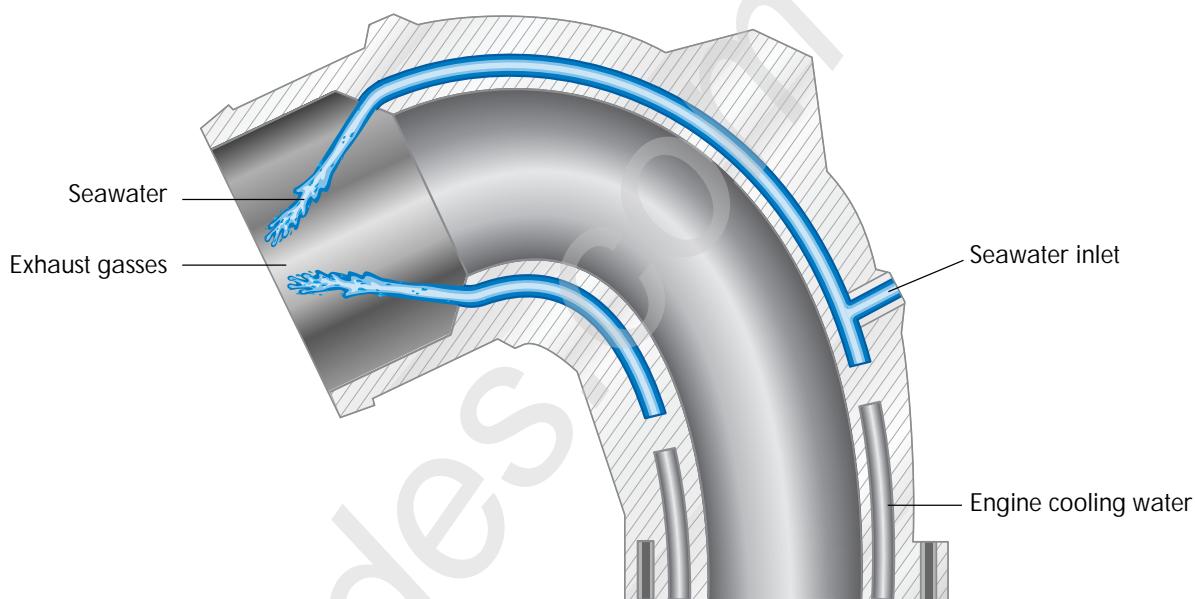


MSSP\_001\_102

## Combined cooler

The combined cooler is located below the central electrics on the engine on the side of the oil pan.



Due to its split design, it cools the fuel flowing back to the fuel tank and, depending on the boat's equipment, the hydraulic oil of the power-assisted steering or the gear oil of the reversing gearbox.

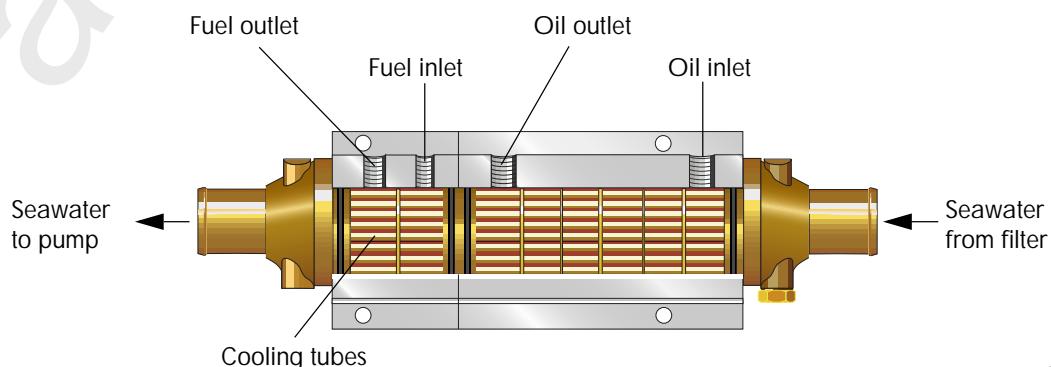

MSSP\_001\_069

# Cooling system

## Seawater pump

The seawater pump is driven by a ribbed V-belt. The star-shaped impeller pumps the seawater into the seawater circuit.


### Quick-release coupling of seawater hoses

The design of the hose couplings ensures easy assembly and disassembly.

The retaining springs on the connection pieces need only be unclipped in order to disconnect the seawater hoses from the pump.

The springs lock in again automatically when reconnecting the hoses.

The pump is made up of the following components:

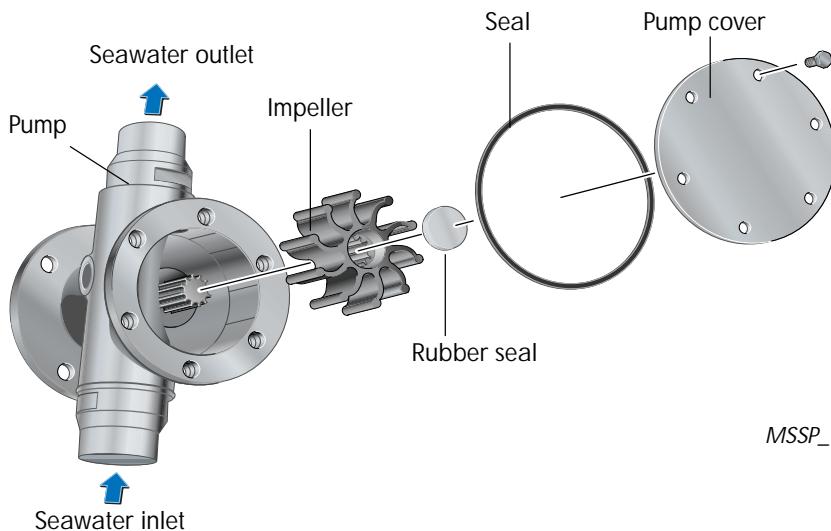

MSSP\_001\_060



The rubber impeller of the seawater pump should be inspected at the end of the season and replaced as required. Please refer to the Owner's Handbook and the current Workshop Manual.

# Cooling system

## Sacrificial anode

Due to the incoming seawater, disintegration in accordance with electrochemical series can occur on the materials with which the seawater comes in contact.


To ensure no engine component is affected, a reactive or sacrificial anode is located in the main heat exchanger. It disintegrates (sacrifices) itself, thus protecting the other components.

## Electrochemical series


Charge carrier exchange occurs between different metals in the presence of water. As the result of this exchange, the lower grade of both metals disintegrates.

The electrochemical series is obtained by arranging the metals in a series from the lower grade to the higher grade metal.


The further the metals are apart in the series the higher the charge carrier exchange and thus the disintegration.

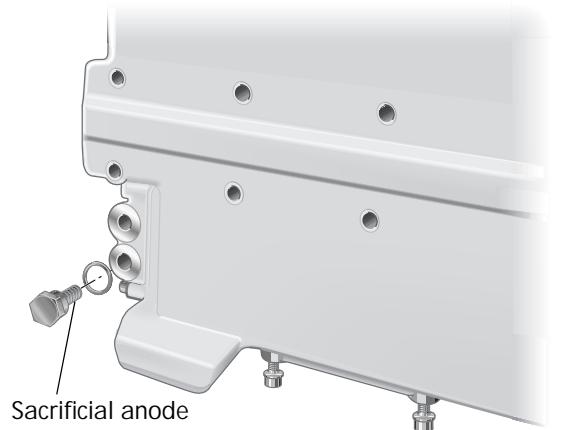

MSSP\_001\_070

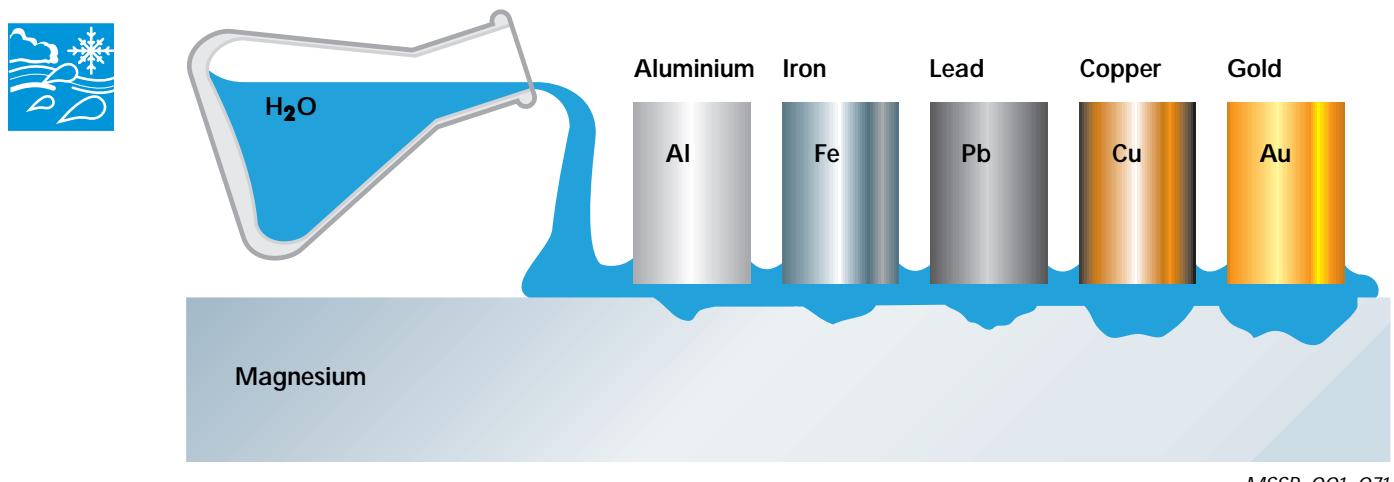

MSSP\_001\_071




Please refer to the Owner's Handbook or the current Workshop Manual for instructions on how to replace the sacrificial anode.

# Electrical system

## Central electrics unit

The central electrics unit based on pc-board design is located on the engine. It accommodates the engine control unit, relays, diode group, fuses for the glow plugs and the fuse for the fuel pump as well as the MDC main fuse.

Two electrical terminals connect the unit to the engine. In addition, there is also an oil and water resistant connecting cable leading to the control panel.

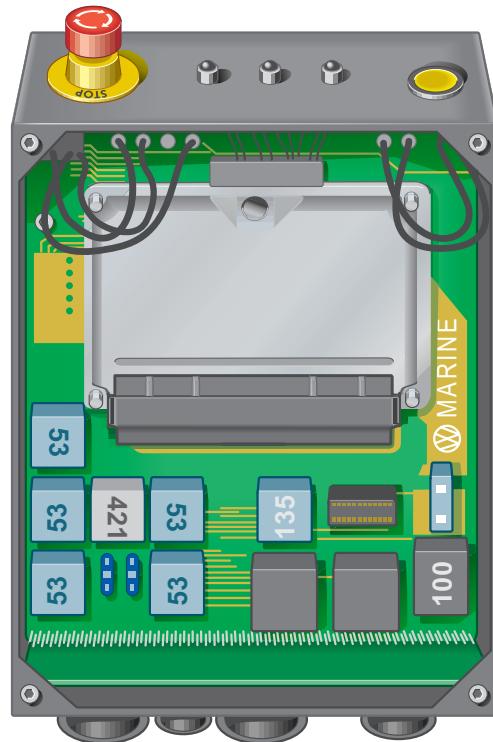


MSSP\_001\_050

## Earth cutout relay

The engine is earth-free in order to protect the drive train from galvanic corrosion.

The earth cutout relay closes when the engine is started. The engine is thus temporarily connected to earth for the purpose of powering the starter.

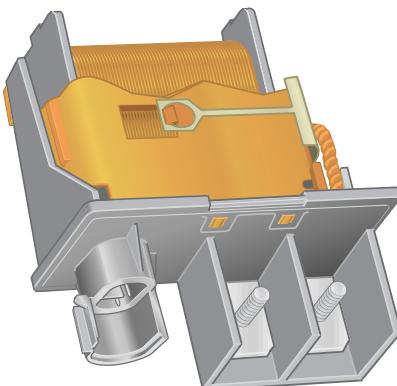

MSSP\_001\_101

# Electrical systems

## Multifunction display

The rev counter in the control panel is equipped with a multifunction display.

It contains the following information:

- **Operating hours**
- **Gearbox in neutral position**

- **Distance**

It can be displayed in  
 - Kilometres (km)  
 - Nautical miles (nm)  
 - Miles (m)

- **Fuel consumption**

Can be displayed in  
 - Litres (l)  
 - Gallons (g)

- **Current fuel consumption/average**

It can be displayed in  
 - l/km  
 - l/nm  
 - l/m  
 - g/km  
 - g/nm  
 - g/m

- **Range**

It can be displayed in  
 - Kilometres (km/l)  
 - Nautical miles (nm/l)  
 - Miles (m/l)

- **Speed**

It can be displayed in  
 - Kilometres per hour (km/h)  
 - Knots (kn)  
 - Miles per hour (mph)



MSSP\_001\_077



## Memory


The multifunction display is also equipped with an automatic memory.

It stores information relating to:

- Operating hours
- Distance covered
- Amount of fuel consumed
- Fuel consumption
- Range
- Speed

The memory collects the data of any number of individual journeys up to

- 9999 operating hours
- 9999 nautical miles
- 9999 litres fuel consumed

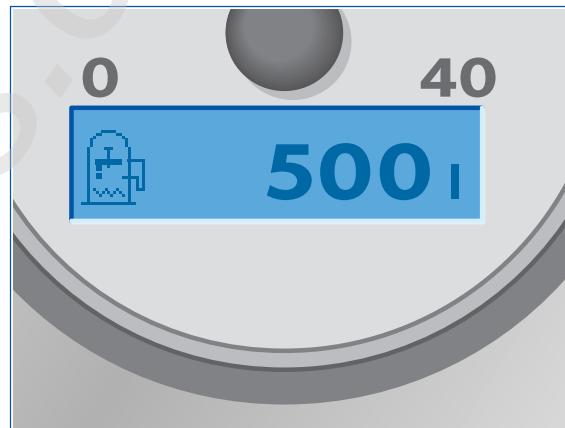

MSSP\_001\_079

The individual functions can be selected via the control switch.

All memory data are deleted (except for total operating hours) when the control switch is pressed for longer than 5 seconds or when the battery is disconnected.




MSSP\_001\_078

# Electrical systems

## Displays/indicators

### Rev counter

The rev counter provides information on the current engine speed. It receives the engine speed signal from the engine control unit.

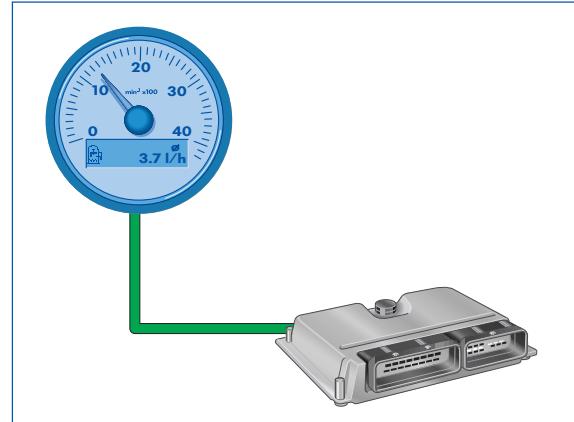

MSSP\_001\_080

### Voltmeter


The voltmeter provides information on the current system voltage. The information is provided by terminal 15 at the ignition starter switch.



MSSP\_001\_081

### Oil pressure gauge

It provides information on the current engine oil pressure. The information comes from the oil pressure sensor on the engine. The engine oil pressure should be between 1 bar and 5 bar. If the oil pressure drops below 1 bar, the oil pressure warning lamp comes on and an acoustic warning signal sounds. The engine should be shut off in order to avoid engine damage.

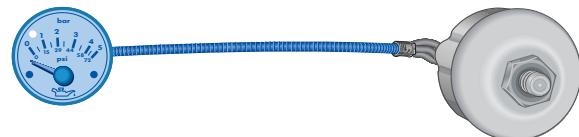

MSSP\_001\_082



## Diagnosis

The engine control unit features a system diagnosis function. Malfunctions that occur during operation are stored in the fault code memory and can then be read out with the Volkswagen diagnosis system tester V.A.G 1552.

Diagnosis with the fault readout unit V.A.G 1551 and the diagnosis system tester VAS 5051 is also possible.

It will also be possible to read out the data with the diagnosis system VAS 5052 that will be introduced at a later point in time.


The diagnosis interface is located behind the cover with the lettering "Marine" on the control panel. Another diagnosis connector is located in the central electrics unit.

After connecting the diagnosis system tester to the diagnosis interface, "fast data transmission" ensures the system diagnosis function is used optimally.

The diagnostic connection to the engine control unit is established by entering the "address word 01".

The system diagnosis contains the following functions:

- Function 01 – Check control unit version
- Function 02 – Check fault code memory
- Function 03 – Actuator diagnosis
- Function 04 – Basic setting
- Function 05 – Delete fault code memory
- Function 06 – End output
- Function 07 – Not used
- Function 08 – Read measured value block

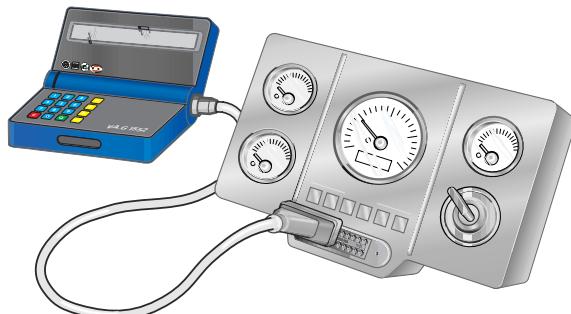

MSSP\_001\_083

### V.A.G SELF-DIAGNOSIS

### HELP

**1. – Fast data transmission\***

**2. – Flash code output\***



# Self-diagnosis

## Function 01 – Check control unit version

The control unit identification is shown on the display.

**Fast data transmission**

**HELP**

**Select function XX**

## Function 02 – Check fault code memory

This function serves to check the entries in the fault code memory.

After pressing the buttons 0 and 2, the number of stored fault codes is shown on the display. The stored fault codes are displayed in succession by pressing the → button.




The faults are output in text form and with a fault ID code. You will find detailed information on the fault codes under fault identification in the Workshop Manual for the engine control.

## Function 03 – Actuator diagnosis

This function serves to check the actuators.


After pressing the buttons 0 and 3 the actuators are activated in a defined sequence.



Please refer to the current Workshop Manual for the exact description of the function check procedure of the actuators and the activation sequence.

## Function 04 – Basic setting

The basic setting of the distributor-type injection pump is initiated with the function 04.



Please refer to the current Workshop manual for a detailed description of the basic setting function.

## Function 05 – Delete fault code memory

The fault code memory can be deleted by pressing the buttons 0 and 5.

It is only possible to delete the fault code memory if it was checked beforehand.

## Function 06 – End output

Communication with the engine control unit is ended by pressing the buttons 0 and 6.

Ending communication by disconnecting the diagnosis interface can cause temporary malfunctions in the engine control unit and is therefore not permitted.

## Function 07 – Not used

## Function 08 – Read measured value block

The engine operating data, e.g. current engine temperature, can be read out with the diagnosis system tester after pressing the button 0 and 8 and then entering a display group number.

The engine operating data are provided in display groups. Refer to the Workshop Manual for the list of display group numbers and the values shown on the display.



# Self-diagnosis

## Examples of fault code memory entries


### Solenoid valve controlled on negative side

#### Fault display in fault code memory:

No fault detected

#### Functional description

Depending on the activation of the solenoid valve by the computer, the self-diagnosis function alternately measures the **battery voltage** and **earth**

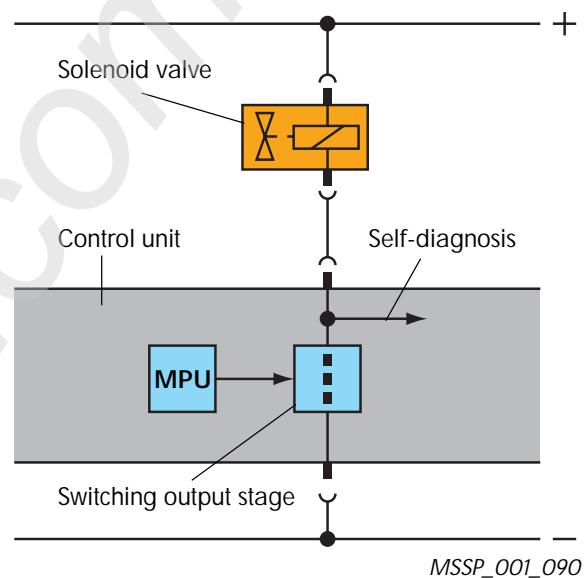


#### Fault display in fault code memory:

Short to positive

#### Functional description

There is a short to positive in the wiring harness, connector or in the component.

The self-diagnosis functions always measures **positive**.

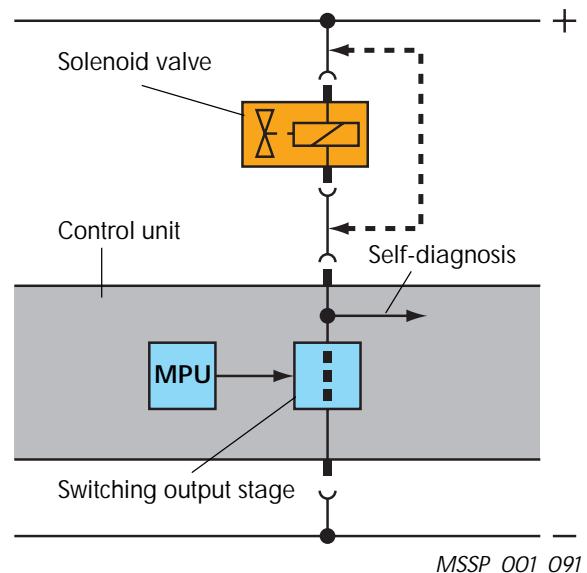

# Self-diagnosis


## Fault display in fault code memory

Break/short to earth

## Functional description

There is a wire break.

The self-diagnosis function always measures **0 Volt**.

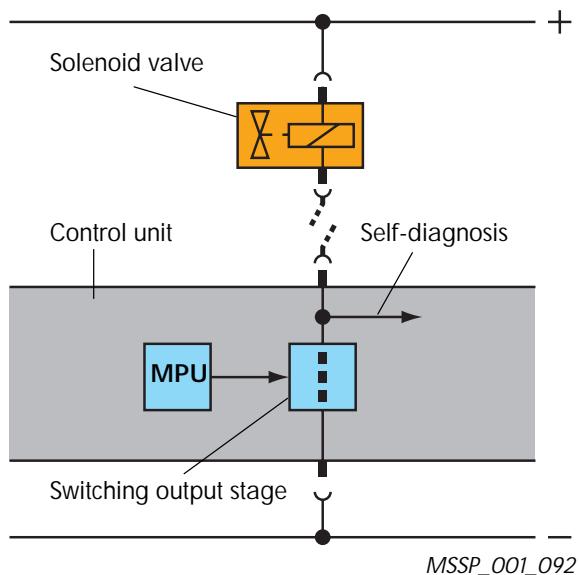


## Fault display in fault code memory:

Break/short to earth

## Functional description

There is a short to earth.

The self-diagnosis function always measures **0 Volt**.

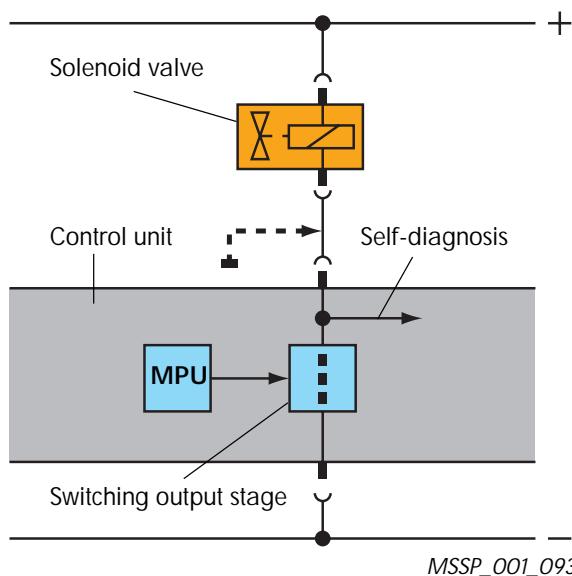

# Self-diagnosis


Monitored sensor, e.g. coolant temperature sender

## Fault display in fault code memory:

No fault detected

## Functional description

The self-diagnosis function measures a plausible signal voltage from the temperature sender between approx. 0.5 and 4.5 Volt.

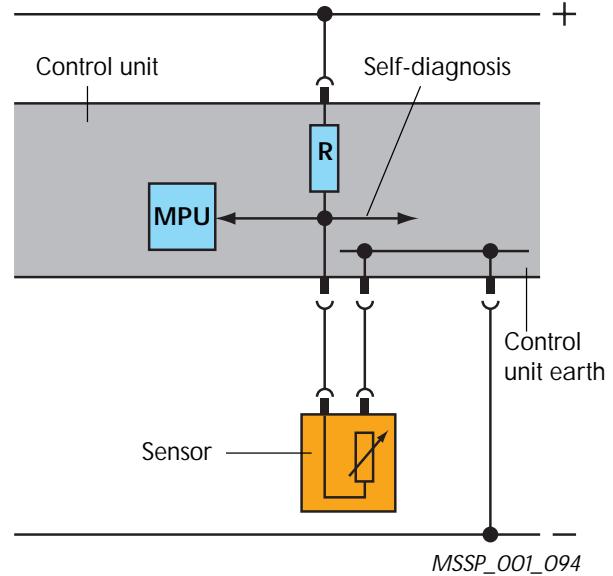


## Fault display in fault code memory:

Short to earth

## Functional description

There is a short to earth.

The self-diagnosis function always measures **0 Volt**.

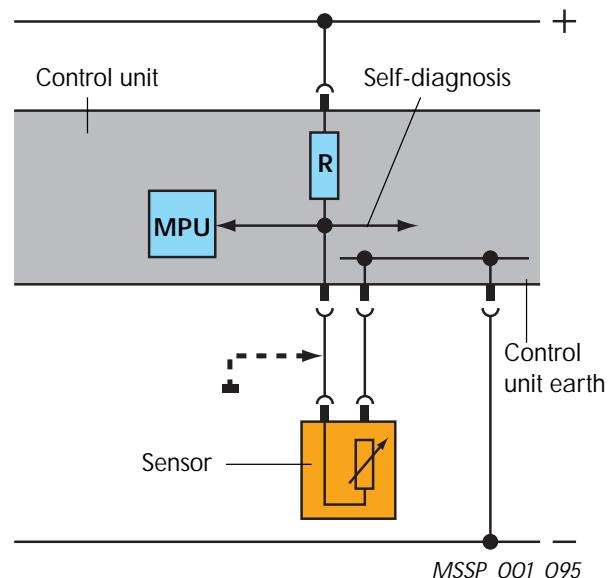

# Self-diagnosis


## Fault display in fault code memory:

Break/short to positive

## Functional description

There is a wire break.

The self-diagnosis function always measures  
**> 4.5 Volt.**

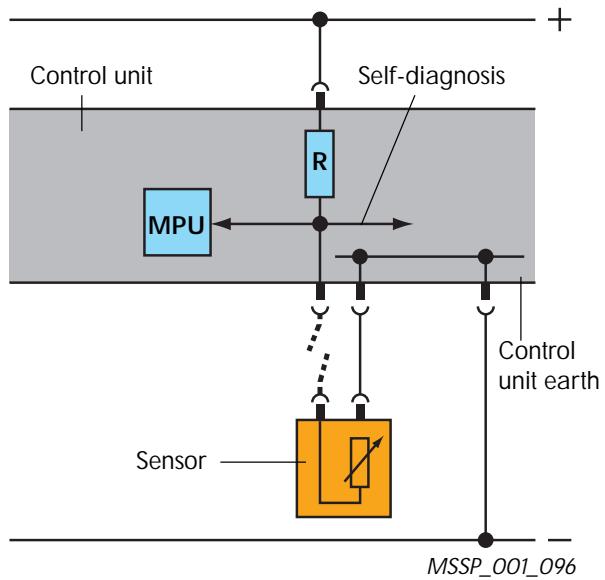


## Fault display in fault code memory:

Break/short to positive

## Functional description

There is a short to positive.

The self-diagnosis function always measures  
**> 4.5 Volt.**

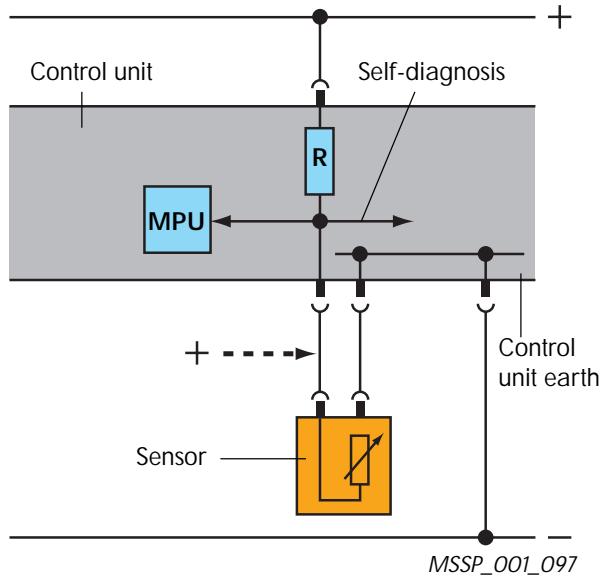


# Adaptation kits

---

## Gearbox bell housings


The following gearbox bell housings are available for the purpose of using different drive systems.

**Gearbox bell housing for Volvo SP-E/DP-E**

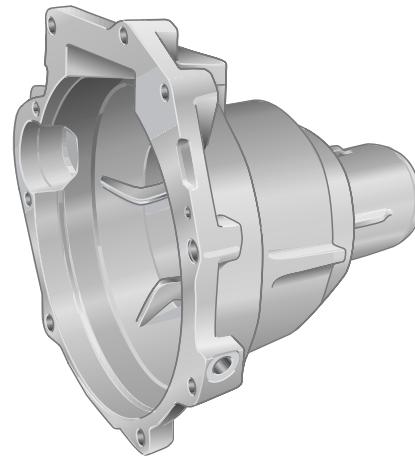

*MSSP\_001\_086*

**Gearbox bell housing for reversing gearbox  
(SAE-7)**

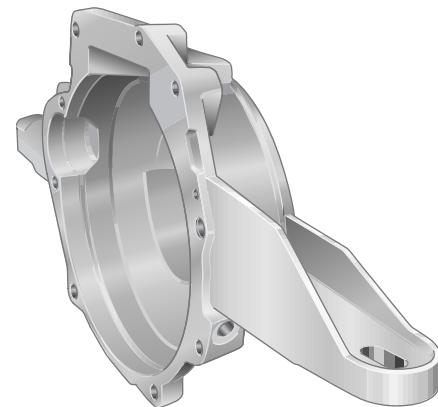


*MSSP\_001\_087*




# Adaptation kits

Gearbox bell housing for Mercruiser

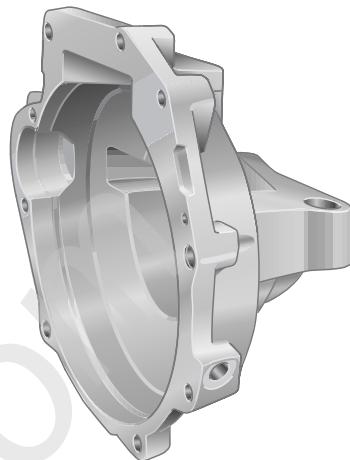

MSSP\_001\_088

Gearbox bell housing for Volvo SX/DP-S

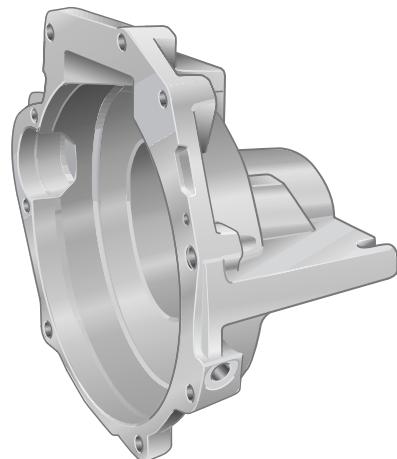

MSSP\_001\_089



Please refer to the technical documentation of your Volkswagen Marine dealer for the current order numbers.

# Abbreviations

---

## List of abbreviations used

### A

- A - Ampere  
Al - Aluminium  
Au - Gold

### B

- BSO - Bodensee Schifffahrtsverordnung  
(Lake Constance Shipping Ordinance)

### C

- $\text{cm}^3$  - Cubic centimetre  
Co - Carbon monoxide  
Cu - Copper

### F

- Fe - Iron

### G

- g - Grams or gallons

### H

- $\text{H}_2\text{O}$  - Water  
h - Hours  
HC - Hydrocarbon

### K

- KD-Literatur - Service literature  
kg - Kilograms  
km - Kilometre  
kn - Knots  
kW - Kilowatt

### I

- l - Litre

### M

- m - Miles  
MDC - Marine Diesel Control  
min - Minute  
mm - Millimetre  
mph - Miles per hour

### N

- nm - Nautical miles  
Nm - Newton meters  
NOx - Nitrogen oxide  
NTC - Negative Temperature Coefficient

### O

- OT - Top dead centre

### P

- Pb - Lead  
Pkw - Passenger vehicle  
PME - Vegetable oil methyl ester  
PS - Horse power

### R

- RME - Rape-seed oil fatty acid methyl ester

### U

- rpm - Revolutions per minute

### V

- V - Volt  
VTG - Variable Turbine Geometry

# Notes

## Self-study programme M001

© 2001 Volkswagen Marine

The texts, illustrations and standards in these instructions are based on the information available at the time of printing. Reprinting, duplication or translation, in whole or in part, is not permitted without the written approval of Volkswagen Marine. All rights in accordance with the copyright law are reserved expressly by Volkswagen Marine.  
Subject to modification without notice.

Copy deadline 04/01

P.O. Box 31 11 76, 38231 Salzgitter  
Edition 04/01, Publication number 065.991.T05.20

✿ This paper was manufactured from pulp bleached without using chlorine.