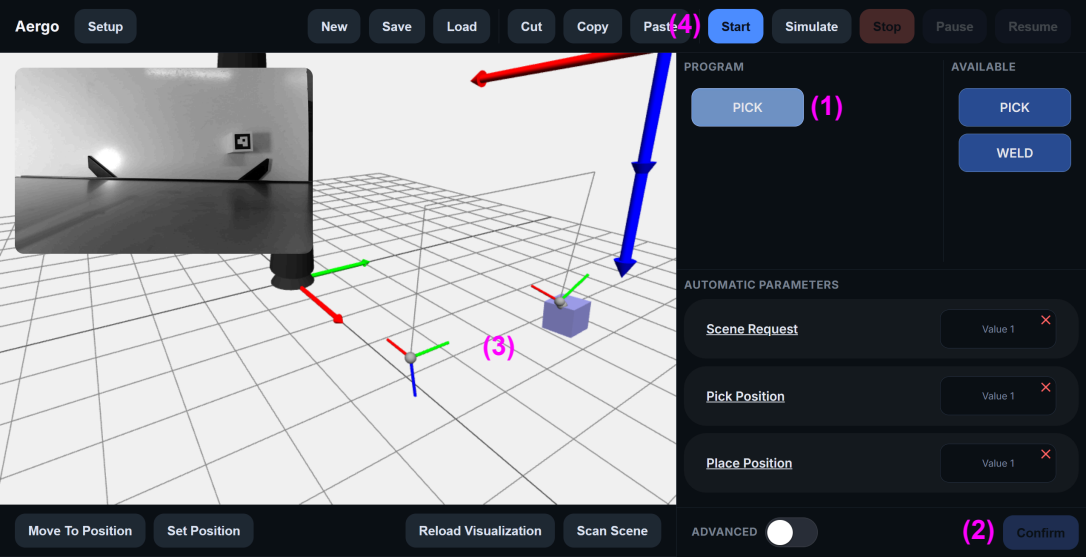
Aergo
Setup
New
Save
Load
Cut
Copy
Paste
(4)
Start
Simulate
Stop
Pause
Resume
PROGRAM
PICK
(1)
AVAILABLE
PICK
WELD
AUTOMATIC PARAMETERS
Scene Request
Value 1
Pick Position
Value 1
Place Position
Value 1
(3)
Move To Position
Set Position
Reload Visualization
Scan Scene
ADVANCED
(2)
Confirm