

Contents

Chapter 1. The basics	3
Introduction	3
Brief specifications	3
Important keys and shortcuts	4
Chapter 2. Getting started	6
Inserting the battery	6
Removing the battery	6
Inserting the SIM card	7
Locking and unlocking your phone	8
Making a call	8
Setting up a conference call	8
Adjusting the volume	9
Turning Bluetooth® on and off	9
Receiving files using Bluetooth®	9
Chapter 3. E-mail	10
Setting up an e-mail address	10
Composing and sending email messages	10
Deleting one or more email messages	11
Chapter 4. Troubleshooting	12
Repairing the phone	12
Running problem diagnostic report	12

Chapter 1. The basics

This section includes all basic details about the product.

Introduction

Welcome to Galaxy mobile phone user guide.

This user guide is focused on describing features and functionality of your mobile phone.

Brief specifications

Display

```
2.10" screen, 320 x 240 resolution
```

2.40" screen, 480 x 360 resolution

Dimensions

Height

110 mm

112.5 mm

Width

56.9 mm

61.2 mm

Thickness

11.7 mm

14 mm

Weight

112 g

120 g

Volume

74 cc

68 cc

Battery life

About 5h talk time and 488h stand by time

About 5.5h talk time and 488h stand by time

Camera

4MP, 2x digital zoom

5MP, 2x digital zoom

Memory

SDRAM Memory 32MB

Bluetooth

N/A

3.0

Important keys and shortcuts

The most important keys and shortcuts of your phone are listed here:

Table 1. Important keys

Keys on your phone keyboard		
(Send	Make a call Answer a call
	End/Power	 End a call Return to the home menu
A	Lock	Lock or unlock the phone
5	Escape	Close the menu Return to previous menu
MENU	Menu	Open the main menuSelect an item on click

Table 2. Phone shortcuts

Most used shortcuts

Check your voice mail Press and hold 1.

Change your ring tone Press and hold and then select *Phone Ring Tones*.

Turn on or turn Press the key.

off the speakers

Set the device on silent mode Press and hold the key.

Contact speed dial Press and hold the key you would like


to assign to contact for speed dial.

Chapter 2. Getting started

Inserting the battery

Before proceeding with these steps, make sure that your mobile phone is turned off.

1. Insert the battery into the battery compartment. See the following image:

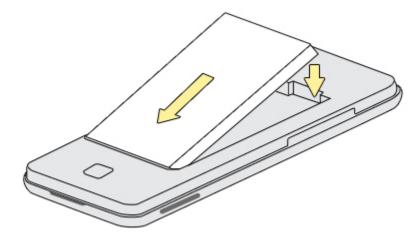


2. Put the back cover on. Make sure it is closed firmly.

Removing the battery

Before proceeding with these steps, make sure that your mobile phone is turned off.


- 1. Remove the back cover.
- 2. Lift out the battery from the notch as per the following image:

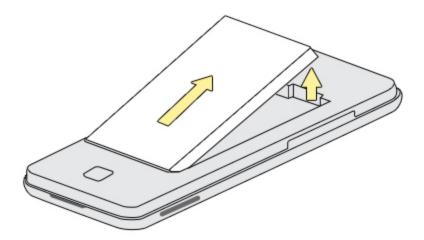


Inserting the SIM card

Make sure that your phone is turned off.


- 1. Remove the back cover.
- 2. Lift out the battery from the notch as per the following image:

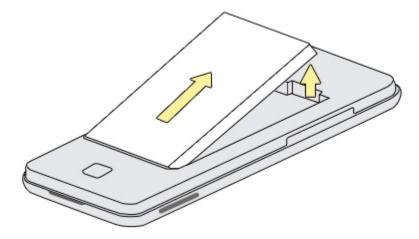

3. Insert the SIM card into the SIM card slot with the SIM card gold contacts facing down.

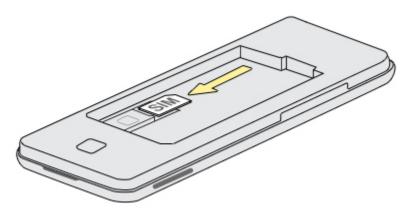

4. Insert the battery into the battery compartment. See the following image:

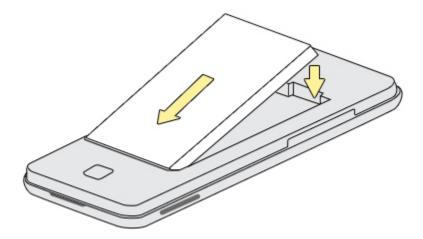

5. Put the back cover on. Make sure it is closed firmly.

Locking and unlocking your phone

You can lock the keyboard of your phone to avoid pressing keys or call accidentally.

- 1. To lock your phone, press the *Lock* key with this icon
- 2. To unlock the keyboard, press the *Lock* key again.

Making a call

Make sure that your phone is unlocked, otherwise press the *Unlock* key

- 1. Type a phone number or a go to Contacts and search for contact name
- 2. Press the Call key.
- 3. To end your call, press the Cancel key.

Setting up a conference call

You can easily set up a conference call with your family, friends, co-workers. Call the first participant and then join calls together as described in the following procedure.

Before starting, make sure that your SIM card is enabled for conference calls service.

- 1. Call the first participant. See Making a call (on page 8)
- 2. During the call, press key to add a participant. In this way the first participant in put on hold.
- 3. Type the participant phone number or search for in contacts.
- 4. Press the key.

- 5. To join also the first contact to the conference call, press the key again.
- 6. To join other contact to the conference, repeat steps 2 5.

Related information

Making a call (on page 8)

Adjusting the volume

You can adjust the volume level of your ring tone

- Press the Volume UP key on the left side of your phone from the keyboard, to increase the volume.
- Press the Volume DOWN key on the left side of your phone from the keyboard, to decrease the volume.
- If you press *Volume UP/Volume UP* button during a call, the volume for phone conversation is adjusted.

Turning Bluetooth® on and off

Turn off *Bluetooth* when you are not using it to save battery power. Also, turned it off in places where using a wireless device is not allowed (for example on board an aircraft).

- 1. From the home menu, select Bluetooth and then select Settings > Wireless & networks.
- 2. Select or clear the Bluetooth check box.

Receiving files using Bluetooth®

When a file is sent to your phone using Bluetooth® technology, a dialog box appears on your phone screen.

To perform this task, the Bluetooth® must be turned on. See Turning Bluetooth® on and off *(on page 9)*

- 1. In the dialog box that appears on your device, asking if you accept the transfer click Yes.
- 2. Choose a location where to save the file.
- 3. Click Save.
- 4. When the file is transferred, a notification message is displayed.

Chapter 3. E-mail

Setting up your e-mail account.

In this section you find out how to set up an e-mail account.

Setting up an e-mail address

You can use the Mail application to set up your email and other POP3 or IMAP email accounts.

From the home menu, select *Messaging -> Options -> Settings -> Email -> Mailboxes* and add a new mailbox. Then follow the wizard which walks you through the process. First choose *Start* to begin the process described below:

- Choose one of the options: If this is the first time your are setting up an e-mail account, select POP3/IMAP. If you have already added an email account, select *New account* and then select POP3/IMAP.
- 2. Type your email address and password and then press Next.
- 3. Enter your incoming mail server then choose Next
- 4. Insert your name and the account name. Give this mailbox a name. Make it meaningful, for example 'Gmail email' if your email provider is Gmail. When this details have been entered, choose *Done* and the following notification is displayed: 'Setup complete. Settings can be edited in e-mail settings section'. Click *OK*.
- 5. After you have received this confirmation message, you can view and manage your email messages, from the home menu, select the *Messages* icon.

Composing and sending email messages

- 1. On the home screen, click the Messages icon.
- 2. Press Compose Email key.
- 3. In the To field, fill in one or more recipients. typing an email address or a contact name. You can enter more than one email addresses separated by comma. As you enter email addresses, any matching addresses from your contacts list are displayed. You can also type as recipients a contact name or contact groups.
- 4. Select the Show Cc/Bcc icon if you want to fill in the Cc or a Bcc fields.
- 5. Enter the subject, and then compose your message.
- 6. To send the message, press the Send key.

Deleting one or more email messages

- To delete a message, select it and then press the *Delete* key.
- To delete more messages, select them by pressing and holding the *Shift* key. Then Release the *Shift* key and select *Delete Messages*.
- To delete a saved message, select *Menu-> Saved Messages*. Select the message you would like to delete and then press the *Delete* key. If necessary, delete the message from your message *Inbox* as well.

Chapter 4. Troubleshooting

Repairing the phone

This section contains a brief explanation that helps the technician to identify and troubleshoot the phone problems.

- 1. Take the back cover off and remove the battery (on page 6).
- 2. Inspect the phone main-board.
- 3. Look for signs of corrosion or moisture and, if found, replace the main-board.
- 4. Insert the battery.
- 5. Put the back cover on.

Running problem diagnostic report

If you have connectivity problems, you can run a diagnostic report that helps you to identity the issues the phone might have. To run the report, follow this procedure:

- 1. Select Menu > Settings.
- 2. Choose Advanced Settings > Problem diagnostic.
- 3. Press Run.
- 4. Look for out of range data.