RHYTHM PLUS FIRMWARE AG026 · CIRCUIT RHYTHM

Pattern Mutate, Track + and Granular

New ways to vary your patterns, to shape each track, and to turn a sample into grains. This manual shows every control, page and light.

Contents

1 · Pattern Mutate: overview and quick start 2
2 · The Mutate settings, page 1 3
3 · The Mutate settings, page 2 4
4 · Playing a mutate 5
5 · Ending a mutate, scenes and saving 6
6 · Pattern Mutate quick reference 7
7 · Track +: overview and layout 8
8 · The Parameter Editor (pad 26) 9
9 · The Pitch page (pad 29) 10
10 · Pitch page: shapes, rates and sounds 11
11 · The FX page (pad 31) 12
12 · Granular: what it does 13
13 · The Granular page (pad 30) 14
14 · Granular: the Shift knobs 15
15 · Granular: the settings (hold pad 30) 16
16 · Granular: Timing, Slice and Lock 17
17 · Granular: sounds to try 18
18 · Resetting values and pages 19

> The drawings show the pads and buttons of the Circuit Rhythm as a plan, not to scale. The colours are close to the colours on the unit; on the unit, a dim pad is darker than it is on paper.

CHAPTER 1

Pattern Mutate: overview and quick start

A mutate gives each track a new play list: a short run of that track's own patterns, in a random order. The track plays the list in a loop in place of its chain. Your patterns do not change. You can go back to the chains at any time.

Use it to find new variations of a groove: try a mutate, keep it if you like it, try another if you do not.

Quick start

1. Press **Patterns** to show the Patterns page. Press **Play**.
2. Hold **Shift** and tap **Duplicate**. Each track gets a new list. The lists start at each track's next pattern end.
3. Tap again for another mutate. Each tap makes new lists.
4. To go back to the chains: hold **Clear** and tap **Duplicate**.

The Duplicate button

On the Patterns page, **Duplicate** shows the state of the mutate:

Duplicate	Meaning
Its normal light	No button held: **Duplicate** copies patterns, as before.
Dim green	**Shift** is held: a tap mutates.
Full green	**Shift** + **Duplicate** is down.
Green, pulsing	The Mutate settings page is open.
Red	**Clear** is held and a track has a mutate: a tap ends every mutate.

The settings


Hold **Shift** and hold **Duplicate** for a moment to open the Mutate settings page. Tap **Duplicate** to close it. **Shift** + tap **Duplicate** on the page makes a mutate and keeps the page open. The settings are for all tracks and are saved with the project. Chapters 2 and 3 show each setting.

> A track's mutate stays until you end it, pick a pattern for that track, or change the scene (see chapter 5).

CHAPTER 2

The Mutate settings, page 1

Hold Shift and hold Duplicate to open the page. It opens on the Patterns, Mixer, Grid FX, FX and Sidechain pages; the knobs keep their jobs. Columns 3 to 6 are the settings; each pad in a column is one value. The chosen value is full, the other values are dim. Column 1 is Live, on both pages. Down shows page 2, Up shows page 1 again. Hold Patterns, Mixer or FX to look at that page, or Shift + a track button to look at that track (with Shift held, the track buttons show the tracks' colours, the selected track bright); when you let go, the settings page comes back. A tap goes to that page and closes the settings.

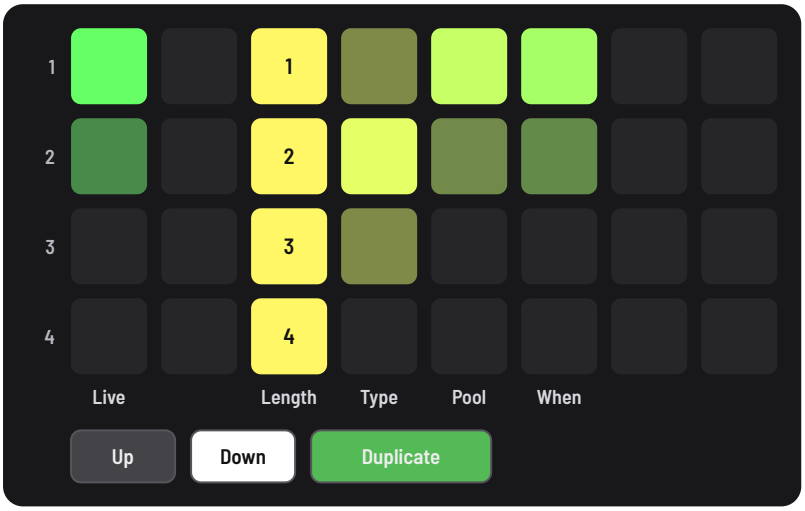

Page 1 with Live Off, Length 4, Length type Exact, Pool With steps and When On the tap.

Column	Setting	Pads, top to bottom	What it does
1	Live	Off (default) · On	The same setting on both pages. See chapter 3.
3	Length	1, 2, 3, 4 (5-8 on page 2)	How many slots a list has, when Length type is Exact or Random. Tap the last pad of the bar.
4	Length type	Same as the chain (default) · Exact · Random	Same as the chain: a list as long as the track's chain (the Length column is very dim, not used). Exact: always Length slots. Random: 1 to Length slots, new at each mutate.
5	Pool	With steps (default) · All	With steps: only the patterns that have notes. All: all 8 patterns, also empty ones.
6	When	On the tap (default) · Every chain end	On the tap: the list starts at the next pattern end and loops. Every chain end: the track waits for its chain's end, then gets a new list each time its list ends.

The track buttons on this page

Tap a track button to choose if that track mutates. Bright = it mutates, very dim = it keeps its chain. All tracks are on at first.


The Length bar

Length type	The bar in column 3
Same as the chain	Very dim: not used
Exact	Full up to the Length
Random	Dim, with the Length's pad full

CHAPTER 3

The Mutate settings, page 2

Press **Down** on the settings page. Column 1 is Live, as on page 1. Column 3 goes on with Length 5-8. Columns 4 to 6 are three more settings.

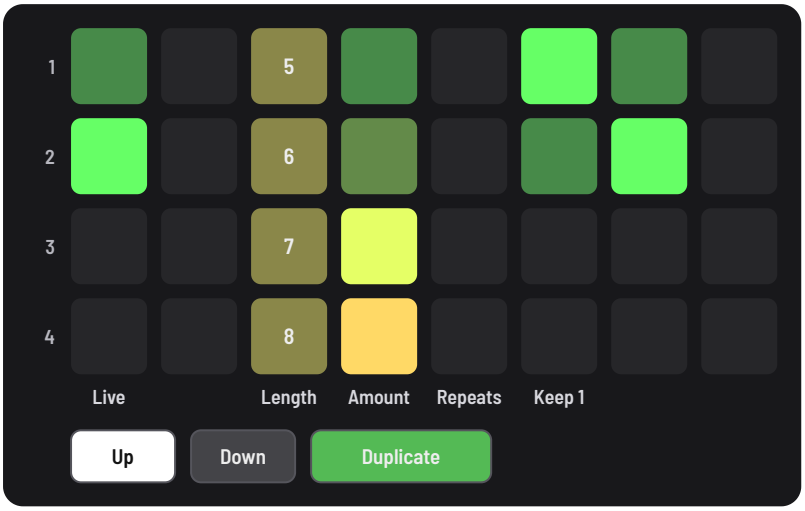

Page 2 with Live On, Amount Some, Repeats On and Keep slot 1 On.

Column	Setting	Pads, top to bottom	What it does
3	Length	5, 6, 7, 8	The Length bar goes on from page 1.
4	Amount	All (default) · Most · Some · A little	How much of the chain a mutate changes. The meter fills from the bottom up: more light, more change.
5	Repeats	On (default) · Off	Off: a list never plays the same pattern twice in a row (also not from its last slot back to slot 1). With only one pattern that has notes, it plays that one.
6	Keep slot 1	Off (default) · On	On: each list starts on the chain's first pattern, a home beat. Only the slots after it change.
1	Live	Off (default) · On	On: a setting change changes the lists that play, at once. It is the same mutation with the new setting.

Amount, step by step

Each slot of a list either keeps the chain's pattern at that place, or gets a random one. For a chain of 4 patterns:

Amount	Slots that change	Example: chain 1 · 2 · 3 · 4
All	4 of 4	7 · 6 · 2 · 5
Most	3 of 4	5 · 2 · 8 · 6
Some	2 of 4	1 · 6 · 3 · 2
A little	1 of 4	1 · 2 · 7 · 4

For other lengths the number is rounded, and at least one slot changes. Slots past the end of the chain are always random. With Keep slot 1 On, Amount counts only the slots after slot 1.


Live

Each mutate gives each track a seed. With Live On, a change to Length, Length type, Pool, Amount, Repeats or Keep slot 1 makes each list again from its seed. Set it back and the list comes back. Tracks that do not mutate keep their lists. Every chain end starts at once, with no tap.

CHAPTER 4

Playing a mutate

On the Patterns page, each column is a track and each pad is a pattern. A mutated track shows its list:

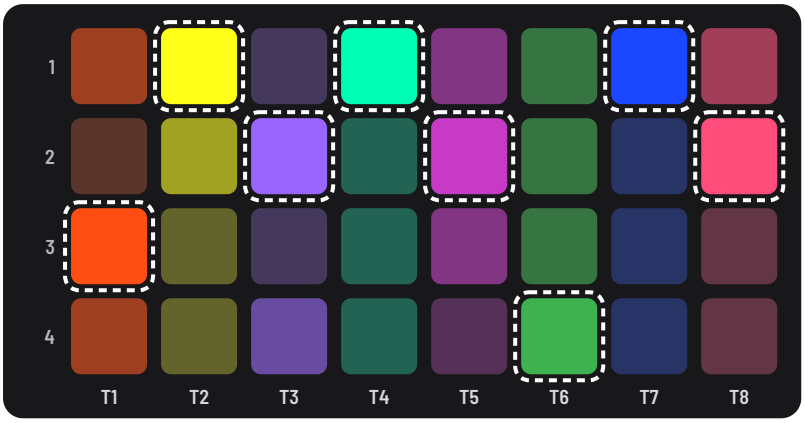

Tracks 1, 3 and 6 are mutated. The other tracks show their chains as before.

In the list Not in the list (very dark) The pattern playing (it pulses)

You do	Result
Play	Each mutated track starts on slot 1 of its list.
Shift + Play	Play goes on from where you stopped. Then the list goes on from slot 1.
Mutate while stopped	The mutated tracks show their whole new list. The pad of the old stop point shows again when you play.
Tap a pattern pad of a mutated track	That track's mutate ends. The stock pattern pick plays, as before.
Clear + pad, Duplicate + pad	Clear or copy a pattern, as before. The mutate stays.
Shift held	The track buttons show their normal Shift lights. The pads keep showing the lists.

View Lock

Hold Shift and press Patterns to turn View Lock on or off. When you turn it on, the patterns that play at that moment turn white and stay white.


With View Lock on	Result
Shift + a pad	That track's white pad moves to this pattern. The mutate and the chain do not change.
A pad without Shift	The track's mutate ends and the chain is picked, as before. The white pads stay.
Clear + a green track button	The track's mutate ends (chapter 5). The white pads stay.
View Lock off, then on	The white pads move to the patterns that play now.

CHAPTER 5

Ending a mutate, scenes and saving

See which tracks are mutated

Hold Clear on the Patterns page. The track buttons of the mutated tracks are green; the other track buttons are dark. Duplicate is red when there is a mutate to end.



Clear held: tracks 1, 3 and 6 are mutated.

You do	Result
Clear + a green track button	That track's mutate ends. Its button flashes red, then goes dark. The track goes back to its chain.
Clear + a dark track button	Nothing happens. The track is not selected.
Clear + Duplicate	Every mutate ends. The mutated tracks flash red. This also works on the Mixer, Grid FX, FX and Sidechain pages.
Clear held on the settings page	The pads show the Patterns page, so you can see each mutate. Duplicate keeps pulsing green, so you know that you are still on the settings page. The pads do nothing. Down / Up show the other page of patterns, as on the Patterns page. Clear + a track button ends that track's mutate.

On a track page, Clear + a track button is the track reset, as before.

Scenes

A scene keeps the mutate of each track: its seed, the settings that made its list and its chain. So a scene plays the exact lists that you heard when you saved it, and Live goes on from them.

On the Mixer page	Result
Shift + a scene pad	Saves the scene with each track's mutate.
A scene pad	Plays the scene with its saved lists. Stopped: at once. Playing: at the end of track 1's pattern. The mutate plays until then.
Duplicate + a scene pad, then another	Copies the scene, its mutate too.
Clear + a scene pad	Clears the scene, its mutate too.

A scene saved without a mutate plays its chains: a scene change ends the mutate of the tracks with no list in that scene.

In a scene chain, a track with a mutate is done when it plays the last slot of its list. The chain goes to the next scene when every track is done. With a scene chain set, Play starts on the chain's first scene, with that scene's own lists.

> With Pool With steps, a list uses only the patterns that have notes. If you add notes to an empty pattern, or clear a pattern, a saved list can change.

Saving

When you save the project, it keeps the Mutate settings, each track's current mutate and the mutate of each scene. A project from an earlier firmware opens with the default settings and no mutate.

CHAPTER 6

Pattern Mutate quick reference

Control	Where	Result
Shift + tap **Duplicate**	Patterns, Mixer, Grid FX, FX, Sidechain	Mutate (new lists with the settings)
Shift + hold **Duplicate**	Patterns, Mixer, Grid FX, FX, Sidechain	Open the Mutate settings page
Tap **Duplicate**	Settings page	Close the settings page
Shift + tap **Duplicate**	Settings page	Mutate, the page stays open
Down / **Up**	Settings page	Page 2 / page 1
A setting's pad	Settings page	Choose that value
A track button	Settings page	That track mutates or not
Clear held	Settings page	Show the mutate; pads do nothing
Clear + a track button	Settings page	End that track's mutate
Clear held	Patterns page	Mutated tracks' buttons green
Clear + a green track button	Patterns page	End that track's mutate
Clear + **Duplicate**	Patterns, Mixer, Grid FX, FX, Sidechain	End every mutate
A pattern pad	Patterns page	End that track's mutate, pick the pattern
Shift + a pad (View Lock on)	Patterns page	Move the white pad; the mutate stays
Play	Any page	Start the lists from slot 1
Shift + **Play**	Any page	Go on from the stop point
Shift + a scene pad	Mixer page	Save the scene with the mutate

Defaults


Setting	Default
Length	4
Length type	Same as the chain
Pool	With steps
When	On the tap
Amount	All
Repeats	On
Keep slot 1	Off
Live	Off
Tracks	All on

CHAPTER 7

Track +: overview and layout

Track + is the track menu. It shows the eight knobs of the selected track on pages: the stock's own parameters, the Pitch page, the Granular page and the FX page.

1. Select a track. Tap its track button again to open Track +.
2. Tap a page pad: 26, 29, 30 or 31. Each track keeps its own page.
3. Turn a knob. The bar shows its value. Tap the track button again to close Track +.

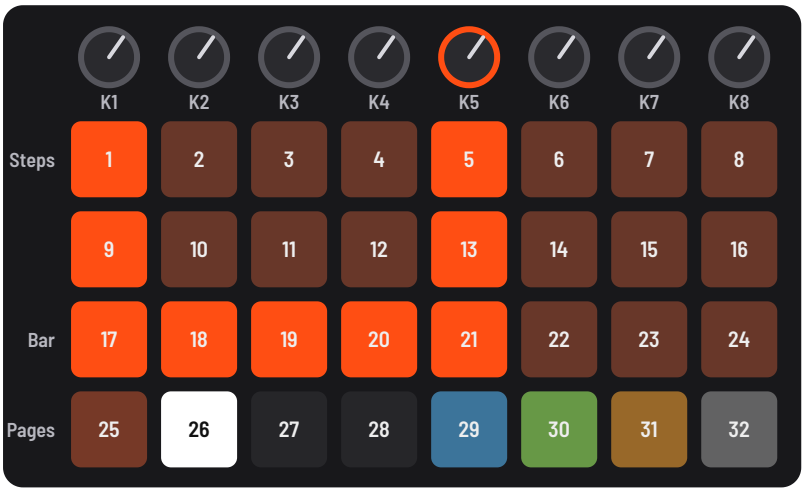

Track + on track 1, the Parameter Editor (pad 26) open, K5 shown on the bar.

Pads	Name	What they do
1-16	Steps	The steps of the pattern, as on the track page. Hold a step to view or lock its values.
17-24	Bar	The value of the shown knob.
25	Knob pick	Shows the page's next knob on the bar, without turning it.
26	Parameter Editor (white)	The stock's eight knobs of the track (chapter 8).
29	Pitch (sky blue)	Pitch envelope, vibrato, random pitch and glide (chapters 9 and 10).
30	Granular (lime)	The grain engine (chapters 12 to 17).
31	FX (amber)	Ring modulation and sample-start scan (chapter 11).
27, 28	-	Dark. They do nothing.
32	All	With **Clear** held: resets all pages (chapter 18).

Terms

Term	Meaning
Shown knob	The last knob that you turned, or the knob that you picked with pad 25. Its light is in the track's colour.
Reset	Hold **Clear** and turn the knob right until it stops. The value goes back to its default; the knob light turns blue.

Only the Parameter Editor's knobs can be automated and locked to steps (chapter 8).

CHAPTER 8

The Parameter Editor (pad 26)

These are the stock's parameters of the track. You can view, edit, automate, lock, reset and delete the automation of all eight.

Knob	Parameter	Shift + knob	Bar
K1	Pitch	-	From the middle
K2	Sample start	Fine start	2048 steps a pad
K3	Sample length	Fine length	2048 steps a pad
K4	Envelope: left of the middle = decay, middle = sustain, right = slow attack	-	From the middle
K5	Distortion	-	From the left
K6	High-pass filter	-	From the left
K7	Low-pass filter	-	From the left
K8	Resonance	-	From the left

View a step's value

Hold a step on pads 1-16. Each knob light turns red if that knob has automation on the step. If the shown knob has automation on the held step, the bar shows the step's value.

Automate and lock

To	Do this
Automate	Arm Record, play, turn the knob. The movement is recorded into the steps that play.
Lock	Arm Record, hold a step, turn the knob. The value goes into the held step, also while the pattern plays.
Delete automation	Hold Clear and turn the knob left until it stops. The knob's automation is deleted; the knob light turns red.


While Record is armed and you turn a knob, the bar is red. While you hold a step with Record armed, the step's pad is red.

> Sample start and Sample length also set the part of the sample that the Granular page uses.

CHAPTER 9

The Pitch page (pad 29)

The Pitch page moves the pitch of each note while it plays. It has four parts: an envelope that bends the pitch at the start of the note, a vibrato (the LFO), a random jump for each note, and a glide from the last note.

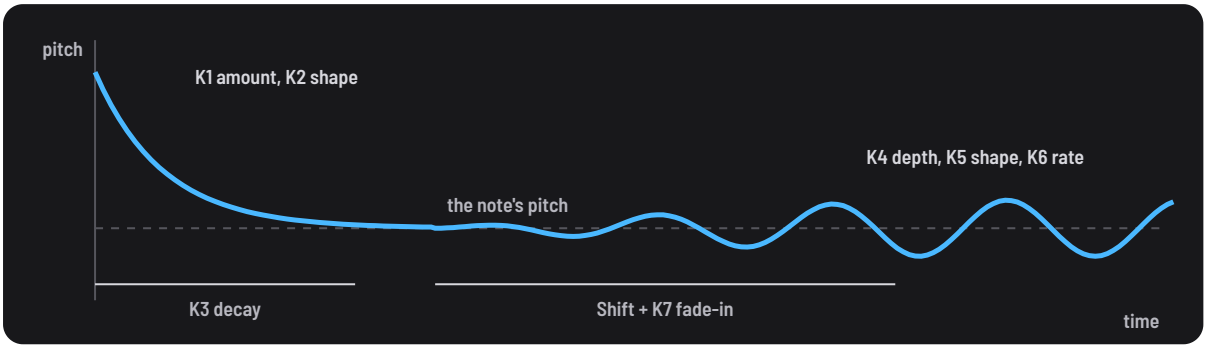

One note on the Pitch page: the envelope drops the pitch to the note, then the vibrato fades in.

Knob	Parameter	What it does	Shift + knob
K1	Envelope amount	How far the envelope bends the pitch. Right of the middle: the pitch starts high. Left: it starts low. Middle: off.	Fine
K2	Envelope shape	The path of the bend: 16 shapes (chapter 10).	2nd sweep
K3	Envelope decay	How long the bend takes. Left: a fast click. Right: a slow sweep.	Fine
K4	Vibrato depth	How far the vibrato moves the pitch. Left: off.	Fine
K5	Vibrato shape	The wave of the vibrato: 10 shapes (chapter 10).	2nd sweep
K6	Vibrato rate	Right of the middle: locked to the tempo. Left: free speed.	2nd sweep / fine
K7	Random pitch	Each note starts at a random pitch, up to 12 semitones up or down. Left: off.	Vibrato fade-in
K8	Glide	The pitch slides from the last note to the new one, up to about 1 second. Left: off.	Fine

Shift on this page


On a shape knob (K2, K5), or on K6 in its synced half, Shift + turn right goes to the same pad on the second sweep, and Shift + turn left goes back. On the other knobs, Shift + turn moves the value in fine steps.

Shift + K7 is the vibrato fade-in: at each note the vibrato starts at 0 and grows to the K4 depth, up to 2 seconds. K7 lights tan while Shift is held.

> The Pitch page's values are kept for each track and saved with the project. They have no automation and no step locks.

CHAPTER 10

Pitch page: shapes, rates and sounds

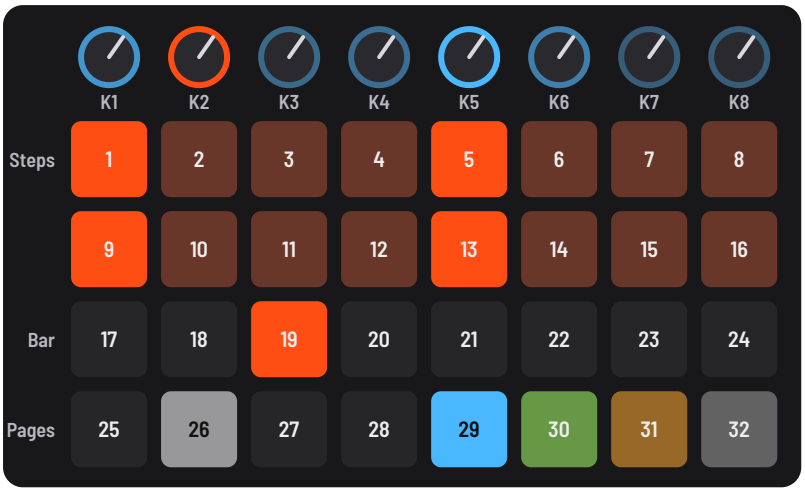

The Pitch page with K2 shown: the bar lights one pad for each shape. Here, shape 3.

A shape knob lights one pad on the bar. Pads 17-24 in the track's colour are shapes 1-8. Pads 17-24 in sky blue are the second sweep: shapes 9-16. A synced vibrato rate shows the same way: the first sweep is 8 bars to 1/16, the second sweep is the same values as triplets.

Pad	Envelope (K2)	
17	Drop	Overshoot
18	Fast drop	Bounce
19	Straight drop	Octave steps
20	Rise	Fifth and octave
21	Fast rise	Stairs
22	Up and down	Trill
23	Down and up	Random steps
24	Hold then drop	Swell

Pad	Vibrato (K5)	
17	Triangle	Smooth random
18	Sine	Bounce
19	Saw up	-
20	Saw down	-
21	Square	-
22	Narrow pulse	-
23	Stairs	-
24	Random steps	-

The second column of each table is the second sweep. Vibrato rate (K6) synced, pads 17-24: 8 bars, 4 bars, 2 bars, 1 bar, 1/2, 1/4, 1/8, 1/16.

Sounds to try

Sound	Settings
Kick with a punch	K1 far right, K2 drop, K3 a little right of the left end.
Laser or zap	K1 right, K2 fast drop, K3 at the middle.
Rising tom	K1 left of the middle: the pitch starts low and rises to the note. K2 drop, K3 at a third.
Slow, singing vibrato	K4 at a quarter, K5 sine, K6 at 1/8 synced, Shift + K7 at the middle.
Hats that never repeat	K7 at a quarter: each hit is a little higher or lower.
Sliding pitch	K8 at a third and K7 at a quarter: each note slides to its new random pitch.

CHAPTER 11

The FX page (pad 31)

The FX page adds a ring modulator and a scan that moves the sample's start point.

Knob	Parameter	What it does	Shift + knob
K1	Ring modulation amount	How much of the ring sound you hear. Left: off.	Fine
K2	Ring modulation frequency	The tone of the ring: low for a wobble, high for metal and bells.	Fine
K3-K6	-	Dark.	-
K7	Scan depth	How far the sample's start point moves.	Fine
K8	Scan speed	Right of the middle: locked to the tempo. Left: free speed.	2nd sweep / fine

How the bar reads


Knob type	The bar
Most knobs	Fills from the left (pad 17) to the right (pad 24).
Knobs with a middle (amounts, rates, Scan)	Fills from the middle out: right of the middle to the right, left of it to the left.
Shape knobs, synced rates	One pad for each value. Track colour: first sweep. Page colour: second sweep.

> The FX page's values are kept for each track and saved with the project. They have no automation and no step locks.

CHAPTER 12

Granular: what it does

The Granular page plays the track's sample as many very short pieces called grains. Each grain is a few milliseconds to half a second long, with a soft fade in and out. Many grains together make a new sound from the sample: a cloud, a drone, a stutter, or a chopped beat.

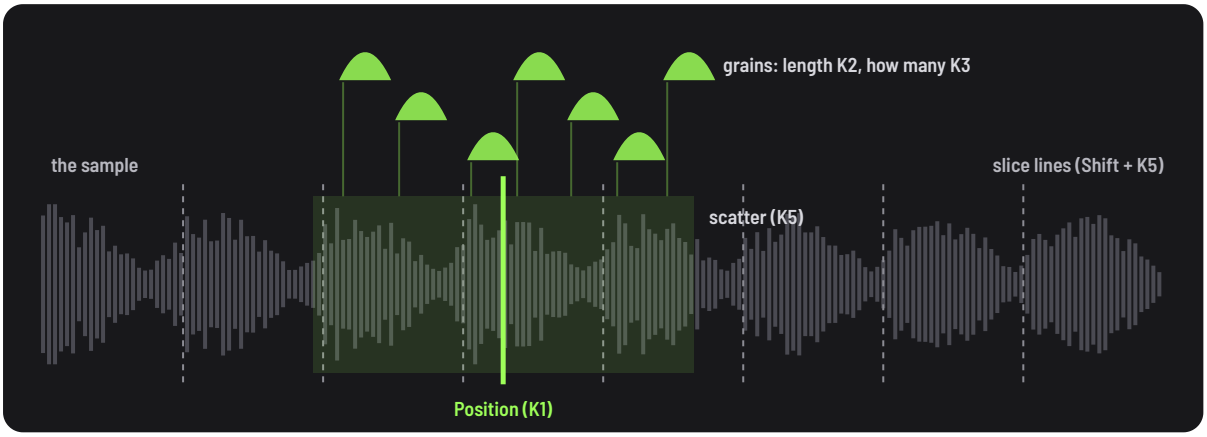

The sample, with Position, the scatter range around it, the grains that play, and the slice lines.

You choose where the grains come from (Position), how long they are (Size) and how many play (Density). Scan moves Position through the sample by itself. Scatter adds random changes to each grain. Slice, Lock and Timing turn the cloud into a rhythm.


Quick start

1. Select a track that has a sample. Tap its track button again to open Track +.
2. Tap pad 30. The Granular page opens and pad 30 lights lime.
3. Hold pad 30. Pads 17-22 show the settings. Tap pad 17 until it is green: Granular is on.
4. Still holding pad 30, tap pad 18 for amber: Texture plays all the time while the pattern plays. Let go of pad 30.
5. Press **Play**. Turn K2 Size, K3 Density and K4 Scan, and listen.

> After a reset, K4 Scan is a little right of the middle, so Position moves slowly forward. Turn K4 to the middle to stop it.

CHAPTER 13

The Granular page (pad 30)

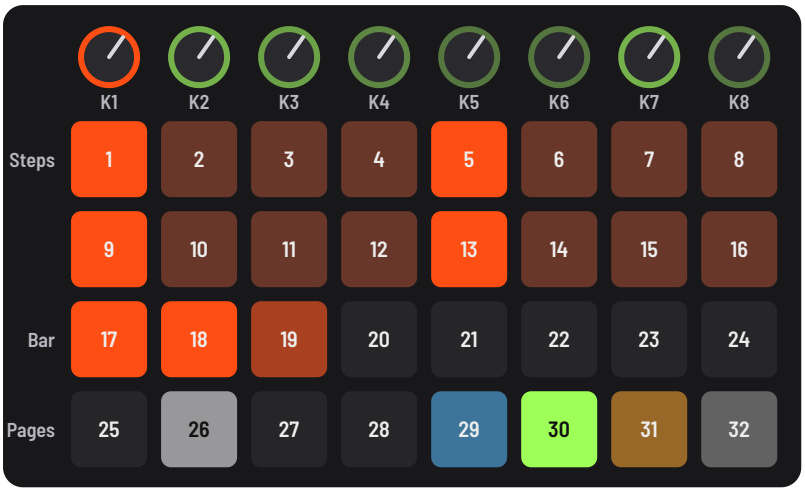

The Granular page on track 1, with K1 Position shown on the bar.

Knob	Parameter	What it does	Default
K1	Position	Where in the sample the grains start. Left: the start of the sample.	Left
K2	Size	The length of each grain: 5 ms at the left, 0.5 s at the right.	Middle
K3	Density	How many grains play at the same time: 1 to 16. With Timing on: the chance that a step plays a grain.	40 %
K4	Scan	Moves Position by itself. Middle: stop. Right: forward. Left: backward. Further from the middle: faster.	A little right
K5	Position scatter	Each grain starts at a random place near Position, up to half the sample away.	Left (off)
K6	Pitch scatter	Each grain gets a random pitch, up to 12 semitones up or down.	Left (off)
K7	Edge	The fades of each grain. Left: short and hard. Middle: smooth. Right: a fast start and a long fade out.	Middle
K8	Reverse	The chance that a grain plays backward. Right: all grains.	Left (off)

The knob lights show each knob's value in lime. The shown knob is in the track's colour, and the bar shows its value. K4 fills the bar from the middle out. Pad 25 does nothing on this page.

Position, Scan and Slice work inside the part of the sample that Sample start and Sample length (Parameter Editor K2, K3) set.

CHAPTER 14

Granular: the Shift knobs

Hold Shift on the Granular page. K1-K6 show the second set of knobs in lime, and the bar shows the turned knob in lime. K7 and K8 are dark.

Knob	Parameter	What it does
Shift + K1	Level	The volume of the grains, in fine steps. Default: the middle.
Shift + K2	Size scatter	Each grain is a random amount shorter. Right: up to its whole length.
Shift + K3	Timing	Middle: off, Density spaces the grains. Left: the grains come at a fixed time apart, from 0.5 s near the middle to 6 ms at the left. Right: the grains come on the tempo (chapter 16).
Shift + K4	Jitter	Moves each grain earlier or later, up to one gap between grains. It loosens a strict rhythm.
Shift + K5	Slice	Left: off. Right: cuts the sample into 2 to 16 equal parts. Each grain starts at the start of a part (chapter 16).
Shift + K6	Lock	Left: each grain is new. Right: the same 16 grains repeat in a loop. Between: some grains change each time round (chapter 16).

The bar with Shift held


Knob	The bar
Shift + K3 Timing	From the middle. On the tempo side, half a pad for each step: 1/2, 1/4, 1/4 triplet, 1/8, 1/8 triplet, 1/16, 1/16 triplet, 1/32.
Shift + K5 Slice	Half a pad for each part: 4 slices fill 2 pads, 16 slices fill all 8.
The other knobs	Fills from the left.

> To reset a Shift knob: hold Clear, then hold Shift, then turn the knob right until it stops. Press Clear first: Shift + Clear changes the metronome.

CHAPTER 15

Granular: the settings (hold pad 30)

Hold pad 30 for a moment. Pads 17-22 show the track's Granular settings. Tap a settings pad while you hold pad 30. Each pad sits under the knob it works with.

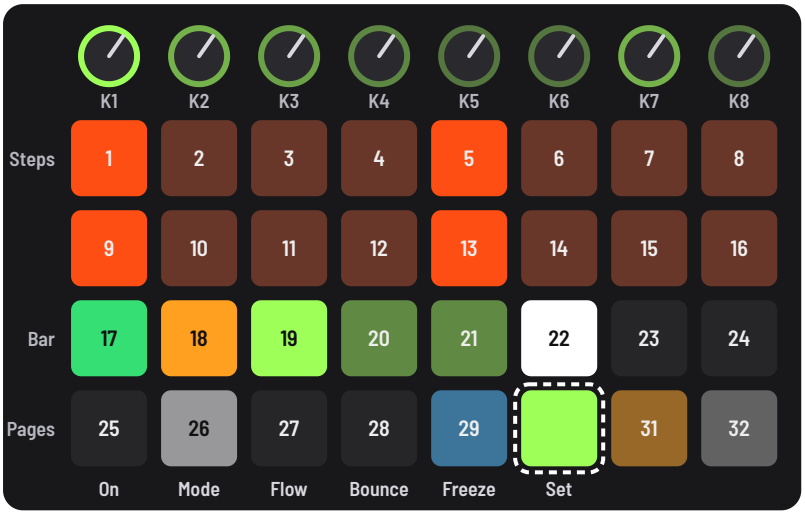

Pad 30 held: Granular on, Texture, Retrigger, Bounce off, Freeze off, Pitch Set Octaves.

Pad	Setting	Lights
17	Granular on or off	green: on · red: off. It blinks while it changes.
18	Mode	white: Triggered · amber: Texture
19	Flow or Retrigger (Texture only)	dim: Flow · bright: Retrigger
20	Bounce (under K4 Scan)	Dim: off · bright: on
21	Freeze (under K5)	Dim: off · bright: on
22	Pitch Set (under K6)	Tap to step: Off · Octaves · Fifths · Minor · Major

Setting	What it does
Triggered	Each note plays grains. The grains follow the note: a One Shot sample stops at its end, Gated and Loop stop at the note's end.
Texture	The grains play all the time while the pattern plays, with no notes. When the pattern stops, they stop with a soft tail. A muted track plays no new grains. While stopped, a pad plays the grains as in Triggered.
Retrigger	Each note from the pattern starts the grains again at Position.
Flow	Notes do not restart the grains. The texture flows on.
Bounce	Scan turns back at each end of the sample, in place of a jump to the other end.
Freeze	Holds the sound on one spot: Scan and Position scatter stop, and notes do not restart the grains.
Pitch Set	Pitch scatter (K6) picks only the notes of the set: octaves, fifths, a minor chord or a major chord.

CHAPTER 16

Granular: Timing, Slice and Lock

Timing (Shift + K3)

Right of the middle, each grain starts on a step of the tempo: from one grain each 1/2 note to one each 1/32 note. Density then sets the chance that a step plays: at the left only a few steps play, at the right every step plays. Low Density can leave a few steps in a row with no grain, so the sound stops for a moment. Turn Density up to fill the gaps.

Slice (Shift + K5)

Slice cuts the sample into equal parts and makes each grain start at the start of a part. On a drum loop cut to whole bars, the grains then start on the beat, not between the hits. Slice cuts the sample, not the grains: each grain keeps the length that K2 Size sets. To play one whole hit for each grain, set Size to about one part.

With Slice on	Result
K1 Position	Jumps from part to part. It does not slide.
K5 Position scatter	Each grain starts on a random part.
K4 Scan	Steps one part at a time, on the tempo. Middle: stop. Right: forward. Left: backward. Further from the middle: faster, from one part each 1/2 note to one each 1/32 note.

For a 2-bar loop cut into 16 parts, each part is an eighth note. Set Scan to step one part each 1/8 note, and the loop plays back in order, in time. Then add Position scatter to jump between the parts.

Lock (Shift + K6)

Lock repeats the random choices of the grains: position, pitch, length, timing and reverse. At the right, the same 16 grains play again and again. In the middle, some grains change each time round, so the pattern changes slowly. Lock needs something random to repeat: turn up K5, K6, Shift + K2 or Shift + K4.

> With Timing on the tempo, 16 grains at 1/16 make one bar. Lock at the right then repeats a one-bar pattern. For the clearest loop, set K4 Scan to the middle.

CHAPTER 17

Granular: sounds to try

Start each sound from a reset Granular page (Clear + pad 30), with Granular on.

Sound	Settings
Soft cloud	Texture. K2 Size right of the middle, K3 Density at the right, K4 Scan a little right, K5 at a third, K7 Edge at the middle.
Frozen drone	Texture, Freeze on. K2 Size at the right, K3 Density at the right. Move K1 Position to choose the spot.
Shimmer	As Soft cloud, plus K6 Pitch scatter at a third and Pitch Set Octaves.
Chord cloud	As Soft cloud, plus K6 at a half and Pitch Set Major or Minor.
Stutter	Triggered. K2 Size small, K3 Density low, Shift + K3 Timing at 1/16.
Chopped beat	A drum loop. K4 Scan at the middle. Shift + K5 Slice at 16. Shift + K3 Timing at 1/16. K5 at a half. K2 Size about one part.
Beat replay	A drum loop. Shift + K5 Slice at 16. K4 Scan right, one part each 1/8 note. Shift + K3 Timing at 1/8. K2 Size about one part.
Repeating glitch	As Chopped beat, plus K6 at a quarter, K8 Reverse at a quarter, and Shift + K6 Lock at the right.
Backward wash	Texture. K4 Scan left of the middle, K8 Reverse at the right, K2 Size at the right, K3 Density at the right.

CHAPTER 18

Resetting values and pages

One knob

Do this	Result
Clear + turn the knob right until it stops	The value goes back to its default. The knob light turns blue.
Clear + turn the knob left until it stops	Parameter Editor only: the knob's automation is deleted; the light turns red.
Clear, then Shift, + turn right	A Shift knob (Pitch Shift + K7, the Granular Shift knobs) goes back to its default.

Press Clear first: Shift + Clear changes the metronome.

A whole page

Do this	Result
Clear + tap pad 26	The eight stock parameters go back to their defaults, and their automation in the current pattern is deleted.
Clear + tap pad 29 or 31	All values of the Pitch or FX page go back to their defaults.
Clear + tap pad 30	All Granular knobs, Shift knobs, Level, Flow, Bounce, Freeze and Pitch Set go back to their defaults. Granular on or off and the mode stay.
Clear + tap pad 32	The stock parameters, their automation in the current pattern, and the Pitch and FX pages.

Page resets work on the selected track only. They do not change the sample, the mixer or the FX sends.

The whole track

On a track page, Clear + the track button resets the track as before. It also turns Granular off and resets its page.