

BMG Series

BACnet MS/TP Gateways for NT10 Series, NT50 Series, NC24A and NC24T RS-485 Networking Thermostats/Controllers

General

The BMG Series is a BACnet network gateway which routes communication traffic between BACnet MS/TP network and Modbus RTU network or Mega Controls proprietary FClink network.

While the gateway (master) communicates on a RS-485 network at its NET1 communication port using the BACnet MS/TP protocol, it can support up to 32 Mega Controls NT10, NT50, NC24A or NC24T RS-485 networking thermostats/controllers (slaves) on a RS-485 network at its NET2 communication port using Modbus RTU protocol or Mega Controls proprietary FClink protocol.

The gateway has 2 addresses. NET 2 address is always 0 which is the address of the Modbus RTU network or FClink network. NET 1 address is the MAC address of the BACnet MS/TP network which is set up for a maximum of 32 devices. The NET 1 address is set via DIP switches in the device.

If more than 32 masters are needed in the system, an additional network supervising device is required for the second BACnet MS/TP network.

Mounting

It is strongly recommended to mount the gateway inside a metal cabinet for EMI shielding protection, with 2 or 4 screws or rack-mounted in a DIN rail.



Ordering

To order, specify the complete gateway model number with specific communication protocol to suit applicable networking devices.

Specifications		
Gateway model numbers	BMG-NT-MC	BACnet MS/TP gateway for NT10 Series and NT50 Series RS-485 proprietary FClink networking room thermostats
	BMG-NT-MR	BACnet MS/TP gateway for NT10 Series and NT50 Series RS-485 Modbus RTU networking room thermostats
	BMG-NC24A	BACnet MS/TP gateway for NC24A RS-485 Modbus RTU networking controllers
	BMG-NC24T	BACnet MS/TP gateway for NC24T RS-485 Modbus RTU networking controllers
Power requirements	Voltage	22-28 V 50/60 Hz or 16-30 VDC
	Current	Maximum 200 mA
Technology	CPU	32-bit ARM at 48M clock
0,	ROM	256 kB Flash
	RAM	64 kB SRAM
	EEPROM	2 kB
NET 1 communication port	Physical	RS-485 with opto-coupler Isolation
	Baud rate	Field selectable 9600, 19200, 38400 or 76,800 bps set via DIP switches (factory set 38,400 bps)
	Protocol	BACnet MS/TP
	Indicators	Red LED for data receiving and green LED for data transmitting
	Device MAC address Maximum number	Set via DIP switches 32 BMG-xx in one BACnet MS/TP network
	Service supported	Whols, ReadProperty, ReadPropertyMultiple, WriteProperty
	Objects supported	Device, Analog Input, Analog Output, Analog Value, Binary Input, Binary
		Output, Multi-State Input, Multi-State Output
	Object names	Static
NET 2 communication port	Physical	RS-485 with opto-coupler Isolation
	Baud rate	Fixed at 19,200 bps
	Protocol	Mega Controls FClink or Modbus RTU
	Indicators	Red LED for data receiving and green LED for data transmitting
	Device address	Always 0
	Maximum number	32 slaves in one FClink or Modbus RTU network
Ambient/storage temperature limits	0 to 55 °C / -30 to 50 °C,	10 to 90% RH Non-condensing
Wiring class	Class II for 24 VAC Power	11.7
Connectors	Removable screw-type te	
Power wires		VG solid copper recommended
Communication wires		ominal Impedance twisted shielded pair (TSP) cable
Shipping weight	0.25 kg (1 lb)	
Dimensions	90 x 116 x 40 mm (W x L	x ט)

The performance specifications above are nominal and subject to tolerances and application variables of generally acceptable industry standards.

The manufacturer shall not be liable for damages resulting from misapplication or misuse of its products.

Language, Gateway Instance ID and Communication Protocol Setup Procedure

System Setting Objects

There are 2 objects for system setup defined as:

Object Name	Object	Value	Unit	Unit Object Type		Priority Array
*** SYS SELECT	yyyyyy.AV1 (*2)	*1	None	Analog Variable	R/W	None
*** SYS VALUE	yyyyyy.AV2 (*2)	*1	None	Analog Variable	R	None

Note: System setting can be changed by writing value to *** SYS SELECT.

Write property value to ***SYS SELECT	Function Descri	ption					
2012	_	Change all descriptions to CHINESE . New setting will take effect after entering a restart command 003 followed by reloading descriptors at the BMG Manager.					
2014		riptions to ENGLISH. New streloading descriptors at the B	setting will take effect after entering a res BMG Manager.	start command			
3003	Restart						
2004	This is a two-step to –1, then write MAC address is	To set device instance ID. This is a two-step operation: after writing 2004 to ***SYS SELECT, wait until *** SYS VALUE changes to −1, then write an integer 'n' (where 0≤n≤12799) to ***SYS SELECT. Assuming the DIP switches' MAC address is set as 'm', the device instance ID is 'n*100 + m'. New setting will take effect after entering a restart command 3003 followed by a discovering new devices at the BACnet workstation.					
2008	To set protocol model number. This is a two-step operation: after writing 2008 to ***SYS SELECT, wait until *** SYS VALUE changes to −2, then write an integer 'n' (where 0≤n≤3) to ***SYS SELECT. New setting will take effect after entering a restart command 3003 followed by reloading descriptors at the BMG Manager. NET2 communication protocol is configured as follows:						
	n Value	Gateway Model Number	Communication Protocol				
	0	BMG-NT-MR	For Modbus RTU NT10 and NT50				
	1	BMG-NT-MC	For FClink NT10 and NT50				
	2	BMG-NC24A	For Modbus RTU NC24A				
	3	BMG-NC24T	For Modbus RTU NC24T				

Derived Network Addressing (DNA)

The DNA DIP switch is set by factory default to ON position. This allows the gateway to automatically configure a BACnet instance ID number. This setting should not be changed unless an authorized agent is assigning a BACnet instance ID number through the system setup procedure. The BACnet instance ID number should not be confused with the gateway MAC address DIP switch setting, and each gateway must still have a unique DIP switch MAC address even when using software to define the gateway's instance ID number.

Example: If the MAC address of the upstream network router or controller is 8 and the gateway MAC address is set as 13, the gateway's DNA BACnet Instance ID is 80013 (8 x 10000 + 13).

Notes:

- *1 When DNA function is turned on (DIP switch set as 1), 2004 function is disabled. When DNA function is turned off (DIP switch set as 0), 2004 function is enabled. Disconnect power supply before changing DNA switch position.
- *2 yyyyy is the the BACnet instance ID number which can be either the DNA or a number assigned manually through the system setup procedure.

Gateway MAC Addressing

The DIP switch is a binary switch. Each individual DIP switch represents a unique value, which forms the gateway MAC address when added together. To set the address, simply move the switches that add up to the gateway's desired address to the ON position.

Example: If the gateway is to be address 7 on the network, set the switches numbered 1, 2 and 4 (equals 7) to the ON position.

Gateway Baud Rate Setting

Make sure that the baud rate of the gateway is set to match the network baud rate.

Example: If the network baud rate is 38,400 bps, set the DIP switches X2 and X4 to OFF and ON respectively.


Network, Cabling and Step-down Transformer Requirements


To ensure network stability and reliable communications, particularly at high speeds on a BACnet MS/TP network for a number of devices, it is imperative that the following network and cabling requirements are adhered to:

Item	Description
Cabling	It is recommended to use networking cabling that matches the following specifications: Balanced 100 to 120 ohms nominal impedance, 22 or 24 AWG Twisted Shielded Pair (TSP) Cable Nominal capacitance of 52 pF/m or lower Nominal velocity of propagation of 66% or higher Terminating the shield to ground at one end only for each isolated segment will prevent ground loops in the shield and drain RF energy to ground. Grounding at the BACnet router or controller is preferred.
Topology	Ensure the MS/TP network cable is installed as a daisy chain from one device to the next.
Maximum Nodes	The maximum number of devices is 32 per MS/TP network segment and 64 per network trunk with one Repeater.
Terminator	A terminator of 120-ohm impedance must be installed at each end of each MS/TP network segment, or two per MS/TP network. Ensure that this requirement is not overlooked in laying out the network architecture and ordering product.
Cable Shielding	Use a shielded, twisted pair cable for communications. Never directly ground wire in more than one point on the shield. Doing so can induce large currents and result in communication problem.
Repeater	A repeater is not necessary unless more than 32 nodes will be installed on a network or the MS/TP network is extended beyond 1,000 m.
Step-down Trans- former	A separate isolated double-wound transformer is recommended for supplying 24 VAC power to each BMG. If and when the same transformer is shared with other devices, observe the polarities of the power supply of all devices including the BMG.

Termination Diagram



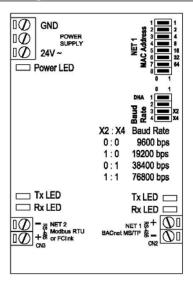

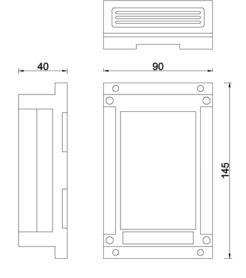

Dynamic Created Objects

The gateway spontaneously detects the presence of a NT10 ,NT50, NC24A or NC24T slave that goes online in its NET 2 network and automatically creates a number of pre-defined objects associated with this NT10 ,NT50, NC24A or NC24T slave's MAC address. When this NT10 ,NT50, NC24A or NC24T slave goes offline, these objects will be automatically deleted.

For NT10 and NT50 networking Room Thermostat with FClink Communication Protocol

If the NT10's or NT50's MAC address is xx, its associated objects are:

Object Name	Object	Value	Unit	Туре	Read/Write	Priority Array
#xxNT - Temperature Setpoint	ууууу.АОхх1	(5-35) / (41-95)	None	Analog Output	R/W	16
#xxNT - Operating Mode	yyyyy.BOxx1	Stop/Run	None	Binary Output	R/W	16
#xxNT - Control Mode	yyyyy.MOxx1	Heat/Cool/ Fan Only	None	Multi-State Output	R/W	16
#xxNT - Fan Speed Command	ууууу.МОхх2	High/Medium/Low	None	Multi-State Output	R/W	16
#xxNT - Ambient Temperature	yyyyy.Alxx1	(5-35) / (41-95)	None	Analog Input	R	None
#xxNT - Temperature Eng. Unit	yyyyy.Blxx1	°C/°F	None	Binary Input	R	None
#xxNT - Unoccupied Mode	yyyyy.Blxx2	Off/On	None	Binary Input	R	None
#xxNT - Binary Input	yyyyy.Blxx3	Open/Closed	None	Binary Input	R	None
*** SYSTEM SELECT	yyyyy.AV1	*1	None	Analog variable	R/W	None
*** SYSTEM SELECT	yyyyy.AV2	*1	None	Analog variable	R	None
BMG_MANAGER_yyyyy	yyyyy.DEVyyyyy	Operational	None	Device	R	None

For NT10 and NT50 networking Room Thermostat with Modbus RTU Communication Protocol

If the NT10's or NT50's MAC address is xx, its associated objects are:

Object Name	Object	Value	Unit	Туре	Read/Write	Priority Array
#xxNT - Temperature Setpoint	ууууу.АОхх1	(5-35) / (41-95)	None	Analog Output	R/W	16
#xxNT - Operating Mode	ууууу.ВОхх1	Stop/Run	None	Binary Output	R/W	16
#xxNT - Control Mode	yyyyy.MOxx1	Heat/Cool/ Fan Only/Auto	None	Multi-State Output	R/W	16
#xxNT - Fan Speed Command	yyyyy.MOxx2	High/Medium/ Low/Auto	None	Multi-State Output	R/W	16
#xxNT - Ambient Temperature	yyyyy.Alxx1	(5-35) / (41-95)	None	Analog Input	R	None
#xxNT - Valve 1 Output Status	yyyyy.Alxx2	(0-100)	%	Analog Input	R	None
#xxNT - Valve 2 Output Status	yyyyy.Alxx3	(0-100)	%	Analog Input	R	None
#xxNT - Temperature Eng. Unit	yyyyy.Blxx1	°C/°F	None	Binary Input	R	None
#xxNT - Unoccupied Mode	yyyyy.Blxx2	Off/On	None	Binary Input	R	None
#xxNT - Binary Input	ууууу.ВІхх3	Open/Closed	None	Binary Input	R	None
#xxNT - Window Mode ^a	yyyyy.Mlxx1	Off/On/None	None	Multi-State Input	R	None
#xxNT - Fan Totalizator	yyyyy.AVxx1	0-99999	hr	Analog variable	R/W	None
#xxNT - Cooling Totalizator	yyyyy.AVxx2	0-999999	hr	Analog variable	R/W	None
#xxNT - Heating Totalizator	yyyyy.AVxx3	0-999999	hr	Analog variable	R/W	None
*** SYSTEM SELECT	yyyyy.AV1	*1	None	Analog variable	R/W	None
*** SYSTEM SELECT	yyyyy.AV2	*1	None	Analog variable	R	None
BMG_MANAGER_yyyyy	yyyyy.DEVyyyyy	Operational	None	Device	R	None
^a The value of this object is displayed	as Off/On for NT10 Ser	ies or None for NT	50 Series the	rmostats.		

For NC24A Networking Controller with Modbus RTU Communication Protocol

If the NC24A's MAC address is xx, its associated objects are:

Object Name	Object	Value	Unit	Туре	Read/ Write	Priority Array
#xxNC - Controller Setpoint	yyyyy.AOxx1	-99 to 999	None	Analog Output	R/W	16
#xxNC - X1 Analog Input Value	yyyyy.Alxx1	-99 to 999	None	Analog Input	R	None
#xxNC - X2 Analog Input Value	yyyyy.Alxx2	-99 to 999	None	Analog Input	R	None
#xxNC - ECO Mode Status	yyyyy.Blxx1	Off/On	None	Binary Input	R	None
#xxNC - Day/Night Mode Status	yyyyy.Blxx2	Day/Night	None	Binary Input	R	None
#xxNC - Engineering Unit	yyyyy.Mlxx1	°C/°F/%/None	None	Multi-State Input	R	None
#xxNC - Application Number	yyyyy.AVxx1	1 to 9	None	Analog Variable	R	None
#xxNC - Setpoint Differential	yyyyy.AVxx2	(1 to 20)/(1 to 99)	None	Analog Variable	R	None
#xxNC - Control Bandwidth	yyyyy.AVxx3	-99 to 99	None	Analog Variable	R	None
#xxNC - Y1 Output Status	yyyyy.AVxx4	0 to 100	%	Analog Variable	R	None
#xxNC - Y2 Output Status	yyyyy.AVxx5	0 to 100	%	Analog Variable	R	None
#xxNC - Q1 Output Status	yyyyy.AVxx6	0 to 100	%	Analog Variable	R	None
#xxNC - Proportional Band	yyyyy.AVxx7	(1 to 20)/(1 to 99)	K	Analog Variable	R	None
#xxNC - Integral Time	yyyyy.AVxx8	0 to 30	min	Analog Variable	R	None
*** SYSTEM SELECT	yyyyy.AV1	*1	None	Analog Variable	R/W	None
*** SYSTEM SELECT	yyyyy.AV2	*1	None	Analog Variable	R	None
BMG_MANAGER_yyyyy	yyyyy.DEVyyyyy	Operational		Device	R	None

For NC24T Networking Controller with Modbus RTU Communication Protocol

If the NC24T's MAC address is xx, its associated objects are:

Object Name	Object	Value	Unit	Туре	Read/ Write	Priority Array
#xxNC - Controller Setpoint	ууууу.АОхх1	-99 to 999	None	Analog Output	R/W	16
#xxNC - X1 Analog Input Value	yyyyy.Alxx1	-99 to 999	None	Analog Input	R	None
#xxNC - X2 Analog Input Value	yyyyy.Alxx2	-99 to 999	None	Analog Input	R	None
#xxNC - ECO Mode Status	yyyyy.Blxx1	Off/On	None	Binary Input	R	None
#xxNC - Day/Night Mode Status	yyyyy.Blxx2	Day/Night	None	Binary Input	R	None
#xxNC - Engineering Unit	yyyyy.Mlxx1	°C/°F/%/None	None	Multi-State Input	R	None
#xxNC - Application Number	yyyyy.AVxx1	1 to 12	None	Analog Variable	R	None
#xxNC - Setpoint Differential	yyyyy.AVxx2	(1 to 20)/(1 to 99)	None	Analog Variable	R	None
#xxNC - Control Bandwidth	yyyyy.AVxx3	-99 to 99	None	Analog Variable	R	None
#xxNC - Main Output Status	yyyyy.AVxx4	0 to 100	%	Analog Variable	R	None
#xxNC - Secondary Output Status	yyyyy.AVxx5	0 to 100	%	Analog Variable	R	None
#xxNC - Valve Stroke Time	yyyyy.AVxx6	10 to 240	sec	Analog Variable	R	None
#xxNC - Proportional Band	yyyyy.AVxx7	(1 to 20)/(1 to 99)	K	Analog Variable	R	None
#xxNC - Integral Time	yyyyy.AVxx8	0 to 30	min	Analog Variable	R	None
*** SYSTEM SELECT	yyyyy.AV1	*1	None	Analog Variable	R/W	None
*** SYSTEM SELECT	yyyyy.AV2	*1	None	Analog Variable	R	None
BMG_MANAGER_yyyyy	yyyyy.DEVyyyyy	Operational		Device	R	None

Mega Controls Limited

Room 1521A, Star House

3 Salisbury Road, Tsimshatsui, Kowloon, Hong Kong

Phone: +852 6281 1320 Fax: +852 3741 7084 E-mail: sales@megacontrols.com Website: www.megacontrols.com