สัญลักษณ์ไฟบน Enphase Envoy (Gateway)



LED	ICON	PURPOSE	STATE	DESCRIPTION
Network communication LED		Information about internet connectivity and connection to the Enphase Cloud	Solid green	Connected to the Enphase Cloud
			Flashing green	Connecting to Enphase or Wi-Fi router
			Red	Only connected to the local network, that is, no internet
			Off	No network available
AP mode LED		Status of AP mode	Green	AP mode is enabled, and the IQ Gateway Wi-Fi network is available
			Off	AP mode is disabled
Power production LED		Information on power production by the microinverters	Green	All communicating microinverters are producing
			Flashing green	Microinverter upgrade in progress
			Red	At least one microinverter is not producing or third-party PV system
			Off	Microinverters are not communicating (low light or nighttime)
Device communications LED		Information on communication between IQ Gateway and microinverters	Solid green	All microinverters are communicating
			Flashing green	Device scan in progress
			Solid red	At least one device is not communicating
			Off	Devices are not communicating (low light or nighttime)
All			Flashing red in unison	The IQ Gateway is booting up
			Flashing green sequentially	Software update is in progress

สัญลักษณ์ไฟ LED บน Enphase Envoy (Gateway)

1. Network Communication การเชื่อมต่อ
   - เขียว — เชื่อมต่อถึง Enphase Cloud (Server)
   - เขียวกระพริบ — กำลังเชื่อมต่อ Wi-Fi หรือ Server
   - แดง — เชื่อมต่อแล้ว แต่ไม่มีสัญญาณ Internet
   - ไม่มีไฟ — ไม่มีการเชื่อมต่อ
2. AP Mode (Wi-Fi จากตัว Envoy สำหรับการเซ็ตค่า)
   - เขียว — Envoy กำลังกระจายสัญญาณ Wi-Fi
   - ไม่มีไฟ — ปิดการทำงาน AP Mode
3. Power Production การผลิตไฟฟ้า
   - เขียว — ระบบทำงานปกติ
   - เขียวกระพริบ — กำลังอัพเดต Microinverter
   - แดง — มี Microinverter อย่างน้อย 1 ตัวที่ไม่ทำงาน
   - ไม่มีไฟ — ระบบไม่ทำงาน (หรือมีแสงน้อย / กลางคืน)
4. Device Communications (การสื่อสารระหว่าง Micro / Envoy)
   - เขียว — ระบบทำงานปกติ
   - เขียวกระพริบ — ระบบกำลัง Scan อุปกรณ์
   - แดง — มีอุปกรณ์อย่างน้อย 1 ตัวไม่สื่อสาร
   - ไม่มีไฟ — ระบบไม่ทำงาน (หรือมีแสงน้อย / กลางคืน)
5. ทั้งหมด
   - แดงกระพริบพร้อมกัน — ระบบกำลังเริ่มการทำงาน / Boot
   - เขียวกระพริบทีละดวง — ระบบกำลังอัพเดต


การตั้งค่า Internet ระบบ Enphase

1. เปิดการเชื่อมต่อ IQ Envoy (Gateway)



2. เชื่อมต่อโทรศัพท์เข้ากับ IQ Envoy (Gateway)

Menu -> System -> Devices -> Gateway -> Configure Wi-Fi

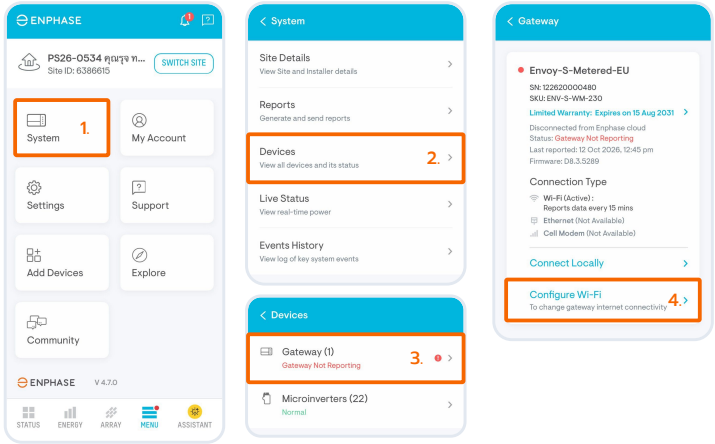

3. เชื่อมต่อ IQ Envoy (Gateway) เข้ากับ Internet บ้าน

เชื่อมต่อ Wi-Fi ของ Envoy -> เลือก Wi-Fi บ้าน -> กรอกรหัสผ่านให้ถูกต้อง

