metropolix

_travelers guide
_for mapping the metropolis

8 stages | **2 + 8** tracks + mod lanes | **64** presets

› then noon = 12 o'clock tags = the panel drawing

two note tracks read one set of sliders and switches · eight mod lanes · per-stage edits · 64 presets

01 what it is

mx_01

one sequence	eight stages: a pitch slider, a pulse count switch and a gate type switch each
two tracks	**trk 1** + **trk 2** play those stages their own way: order, length, clock, gates
8 mod lanes	eight more 8-stage voltage lanes, sent to an out or inside
memory	64 presets (8 banks × 8) · live settings survive power off

02 the three rows

mx_02 · fig.01

pitch	the stage's note, quantized to the scale + **[scale]**
pulse count	how many clock pulses the stage lasts · 1 – 8
gate type	hold = one long tied gate · multi = a gate per pulse · single = one gate · rest = none
not matching?	a pitch override, accum, aux or a loaded preset is winning · **[exit]** 1 s = sync to panel

10 first flight

mx_10 · first sequence

1. **[setup]** › clock › internal
2. **[bpm]** + stage 6 = 120 bpm
3. pulse count 1, gate type single on every stage
4. **trk 1** pitch + gate to a voice · **[run]**
5. move sliders · **[scale]** to pick the key
6. then **[order]** and pulse counts for rhythm

03 the edit pattern

mx_03 · the big idea · fig.02

1	**[trk 1]** or **[trk 2]** · pick the track
2	**[edit]** then a function: slide · skip · pitch · gate · ratch · prob · accum · cv
3	press a stage button · turn the encoder (slide + skip just toggle)
[alt] + turn	change every stage at once
undo	long-press the encoder = clear this stage · **[alt]** + long-press = all

_fig.02 : the edit pattern

edit › function › stage



stay on the screen and press other stage buttons to keep editing
lit stage buttons = stages with a setting · exit = home screens

04 per-stage edits

mx_04 · edit + …

[slide] **[skip]**	glide into the stage (red) · drop the stage and its pulses (orange)
[pitch] **[gate]**	a fixed note C0 – C5 (yellow) · gate rest, 1 – 99 % or 100 % hold (green)
[ratch] **[prob]**	1 – 8 repeats (cyan) · 0 – 100 % chance, per stage or per pulse (blue)
[accum]	adds scale degrees each stage, pulse or ratchet (magenta) · range on **[lim]**
[cv]	±5 V per stage · silent until an out is set to cv + **[a]** **[b]**


05 track settings

mx_05 · the bottom-left row

[order]	21 play orders (pendulum, hopscotch, pedal point, brownian, shuffle, random …) · push = reverse
[len]	stages 1 – 8 · **[alt]** + turn = offset · pulses 1 – 64 or auto
[div] **[swing]**	track clock divide · pulse count div · swing 50 – 78 %
[slide] **[gate]**	slide time + type (analog · tempo · acid) · gate length + gate scale
tip	give the two tracks different lengths or orders · instant counterpoint

_fig.01 : gate types

pulse count 3 · gate length 50 %

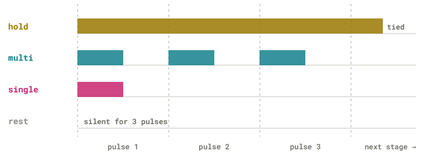

06 alt functions

mx_06 · alt, then a stage button

[load] **[save]**	turn = bank (by colour) · stage button = slot · save can also clear
[a] **[b]**	what out A / B sends: cv lane, a mod lane, first/last pulse, new stage, root, run, ctrl
[clk] **[mx]**	clock out /1 – /256 + offset · gates for a gx or qx expander
[lim] **[type]**	accum limits, polarity, reset · cv lane = voltage or gate toggle
[alt] + **[trk]**	track menu: transpose ±60, slider octaves 1 – 4, invert, gate stretching

07 run · reset · loopy

mx_07 · transport

[run]	start / stop · setup sets run/stop or run/pause
[reset]	back to the start stage · hold **[trk 1]** and press = that track only
[∞] + hold 1	loop from that stage for the loop pulses set on screen
[∞] + hold 2	loop between the two stages · press **[∞]** again to latch
stopped	the stage buttons play their notes like a keyboard
[∞] + **[trk]**	mute that track · or a stage button = mute that mod lane

08 mod · ctrl · aux

mx_08 · modulation

mod lanes — **[mod]** › **[edit]** + stage 1 – 8
that lane opens · stage buttons + encoder set ±5 V, push = step or ramp · press mod = its destination + track


ctrl 1 · 2 — its black button
pick a parameter and track · the knob sets the value directly

aux x y z — its button
±5 V in, attenuverter scales · offsets the value · on a gate target the knob alone flips it

randomize — alt › x · y · z
on any edit screen: x = random · y = nudge · z = back to before

_fig.03 : the panel

numbers match the legend

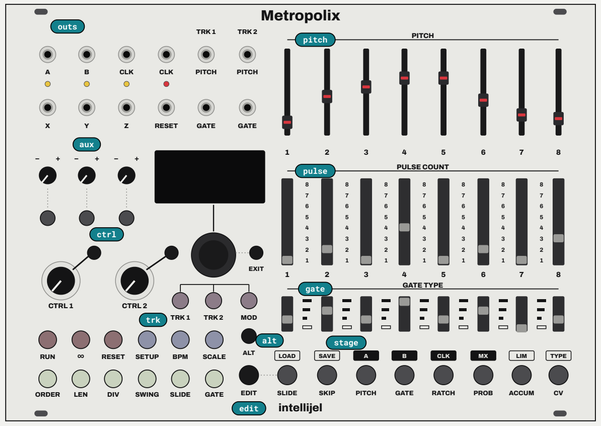

pitch **pitch sliders** · a note per stage
pulse **pulse count** · 1 – 8 clock pulses
gate **gate type** · hold · multi · single · rest
stage **stage buttons** · edit functions below · alt functions above
edit **edit** · then a function, then a stage
alt **alt** · then a stage button or trk button
trk **trk 1** · **trk 2** · **mod** · what you are editing
ctrl **ctrl 1** · **2** · button = assign · knob = value
aux **x** · **y** · **z** · cv in · attenuverter · assign button
outs **a** · **b** · **clk** · assignable outs + clock out

09 specs

mx_09

outs	pitch 1 V/oct · gates 0 / +5 V · A, B assignable
ins	clk · reset (or run) · aux x y z ±5 V
clock	internal 0.1 – 400 bpm · tap **[bpm]** · clk in or midi
midi	notes, cv + mod lanes as cc, clock · rear usb, backpack or solo kit
size	34 hp · 25 mm deep
power	95 mA +12 V · 10 mA –12 V