


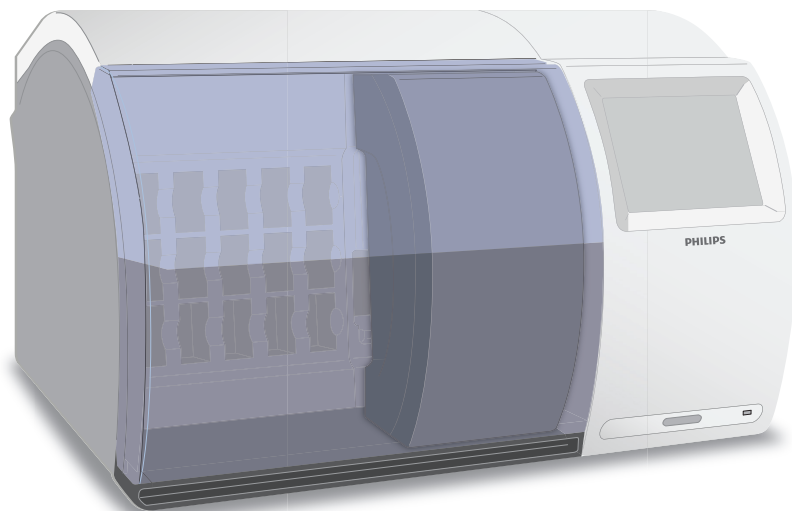

## Philips IntelliSite Pathology Solution

### Ultra Fast Scanner

#### Quick Reference Card

English


### Safety

Operation of the scanner described in this Quick Reference Card is to be performed by qualified and trained personnel only.


In case of emergency, unplug the power cord from the power outlet.




Turn ON

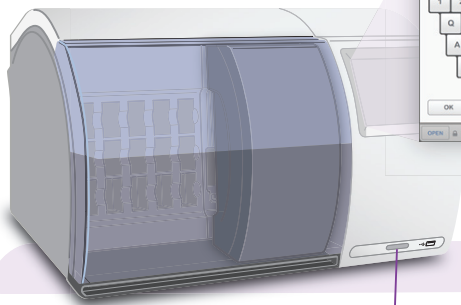


Login

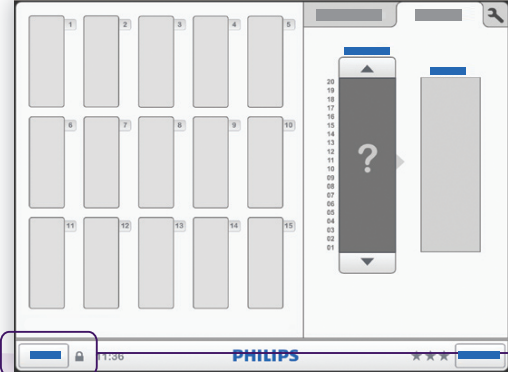

Empty storage

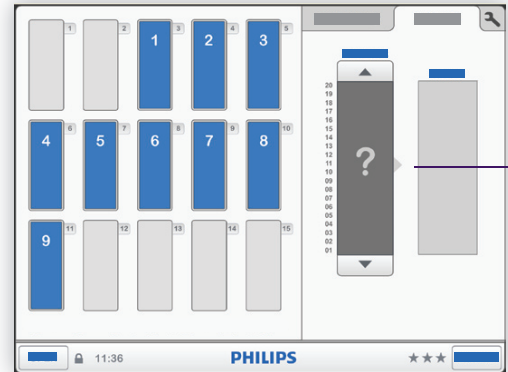


Racks in storage

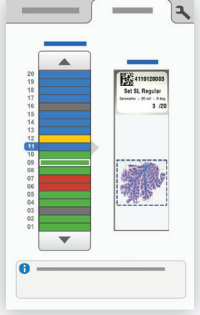

Check the scan result

You can add racks and remove finished racks while the scanner is in operation.

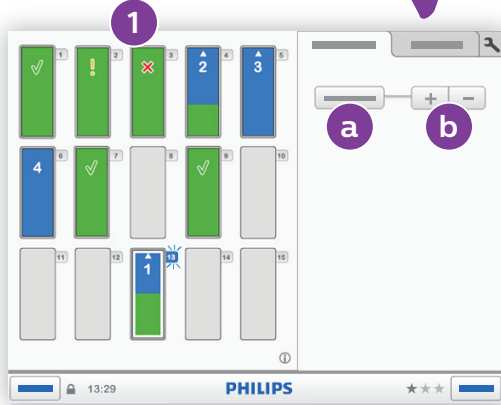

Change rack priority



- Select a virtual slide rack (1).
  - Press the [PRIORITY] button (a).
- The selected rack is moved to the front of the job queue and images are marked as priority images.

Change scan order


- Select a virtual slide rack (1).
  - Use the [+/-] button (b).
- The selected rack is moved one place up or down in the job queue.

Start scanning

Scanner starts automatically.

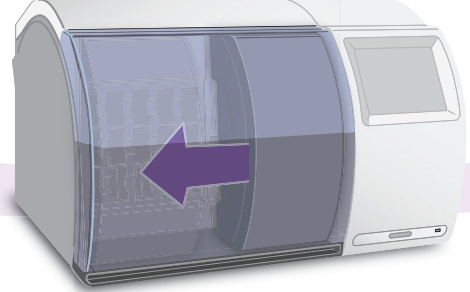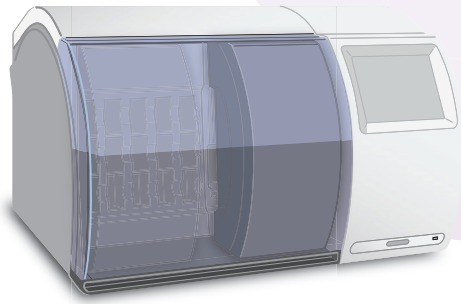

Open the door

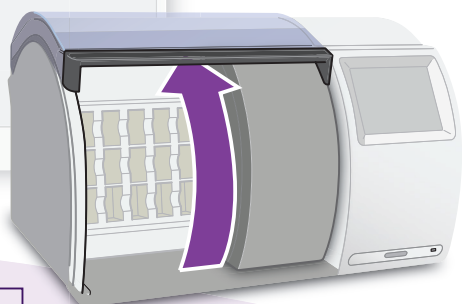



### status LED

- queued for scanning
- currently being scanned
- finished rack
- warning has occurred\*
- error (beep /5min)\*

\* Refer to the Instructions for Use


### Prepare the glass slide racks

- For proper slide preparation, refer to quick reference card *Slide preparation*.
- Make sure that the glass slide rack is undamaged and clean.
- Hold the glass slide by the label end side and place it with the label facing up in the glass slide rack.

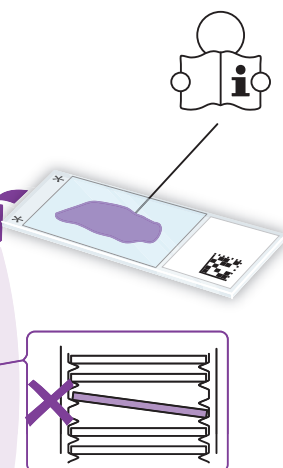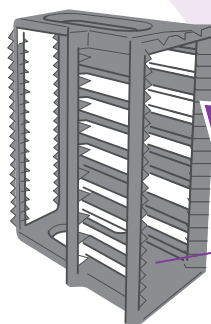


### Add/Remove racks


Never remove glass slide racks that are currently being scanned (white LED).

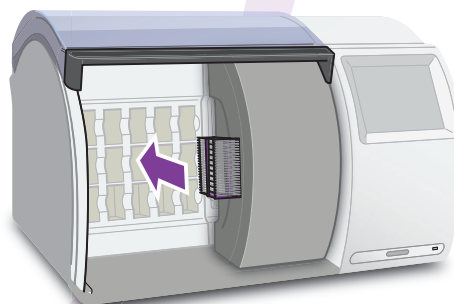

Close the door

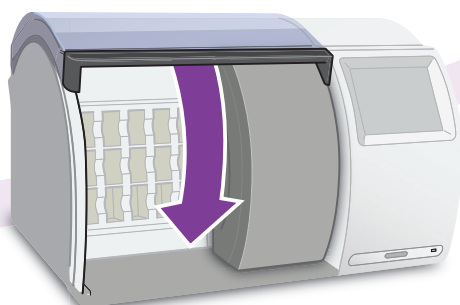

## Interface overview

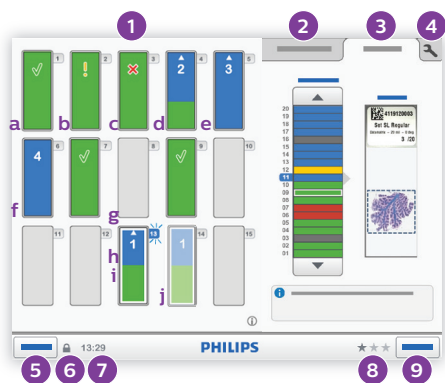


1. Storage overview
  2. Rack priority tab
  3. Scanned rack info
  4. Settings tab
  5. Unlock the scanner door button
  6. Door locked/unlocked indicator
  7. Actual time
  8. Authorization level of the user
  9. Login/logout button
- a. Finished rack
  - b. Finished rack with warning
  - c. Finished rack with error
  - d. Aborted rack (prioritized)
  - e. Unscanned rack (prioritized)
  - f. Unscanned rack
  - g. No rack in slot
  - h. Slide currently being scanned
  - i. Slide currently being transported
  - j. Rack removed from store

## Change rack priority

When a glass slide rack gets a higher priority than the current glass slide rack in scan process, the UFS interrupts scanning of the current rack when the current glass slide on the stage and the current glass slide in the slide handler (next in scan queue) have been processed.

## Check scan results

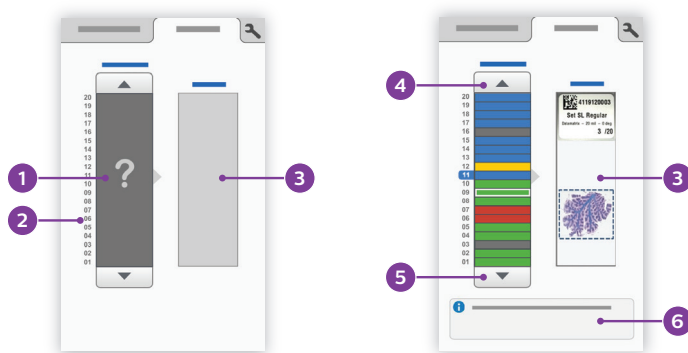

1. Storage rack overview
2. Slide position in rack
3. Slide scan preview
4. Slide selector (+1)
5. Slide selector (-1)
6. Status of selected slide

- selected slide (white border)
- not processed
- successfully processed
- warning
- error, skipped slide
- no slide in position

## Calibration

When a calibration aspect that affects the image quality is outside its tolerances, the user interface shows a 'uncalibrated scanner' message. The scanner will continue scanning. The *calibration icon* on the user interface depends on the calibration status:



calibrating

calibration failed

After a successful calibration no icon is shown.

## Start manual calibration

Scanner performs periodic calibrations. Users can start a manual calibration.



1. Make sure that the slide storage contains at least one slide to be scanned.
2. Open the *Settings* tab.
3. Select the *Maintenance* tab.
4. Press the *Calibrate* button, confirm the popup message.

Calibration will start and can take up approximately 1 hour. A calibration request cannot be undone. If the *Calibrate* button is pressed again during calibration, this will only re-start the calibration and will NOT result in stopping the calibration process.