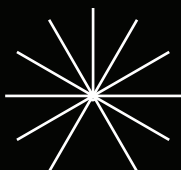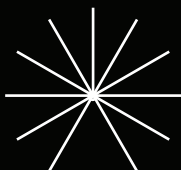# AD-AR

Attack

Decay/Release

Gate=AR
Trig=AD

Truncate

Env Out