2. Scheduled Maintenance

Fuel Filter

1. Remove luggage box (2-2)

2. Check fuel line for ageing or damage.

3. Replace with a new one in case damaged or leaking.

Throttle Lever Operation

1. Check throttle for proper operation.

2. Check throttle grip free play.
   Free play: 2-6mm (.078 in.-.236 in.).

3. Adjust free play using the adjusting nut in the throttle cable and the adjuster at the carburetor.

•Major adjustment should be made at carburetor.

•Adjust it by loosening the jam nut and rotating adjusting nut.

•Fine adjustment should be made at the throttle grip.

•Remove outer cover, loosen jam nut and rotate adjusting nut to adjust it.

2. Scheduled Maintenance


Air Filter

Filter Replacement

1. Remove air filter cap, fix screw and remove the air filter cap.

2. Check filter for dirt or damage. Replace as necessary.

Do not attempt to clean the filter element.

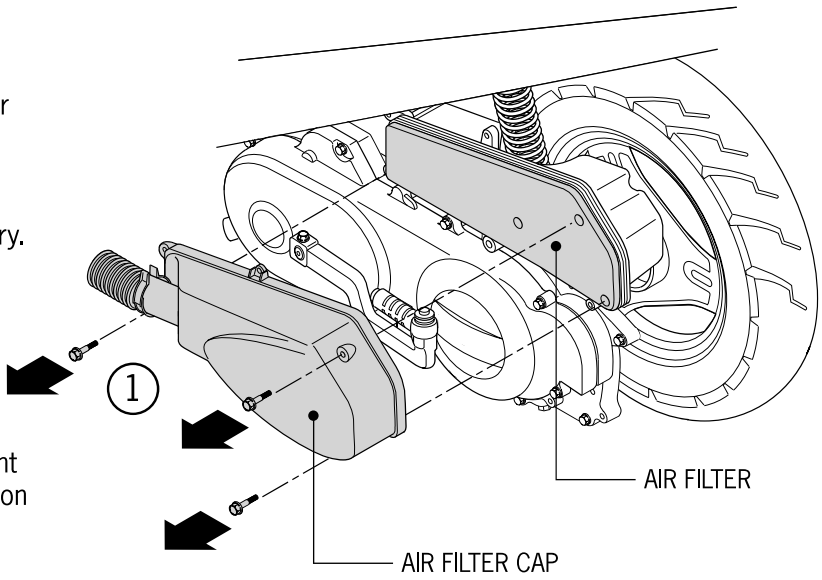

Replacing Frequency

1. More frequent replacement is required if vehicle is driven on dusty roads or in the rain.

2. Make sure the air filter cover is securely in place.

Spark Plug


1. Remove spark plug.

2. Check spark plug for burning, dirt or deposit.

3. Clean it with a spark-plug cleaner or steel brush in case of dirt or carbon deposits.

Specified spark plug:
NGK: C7HSA Champion
Check spark plug gap
Gap: 0.6-.07mm (.022-.024 in.)

4. Check plug for dirt, carbon build-up or cracking of insulator.

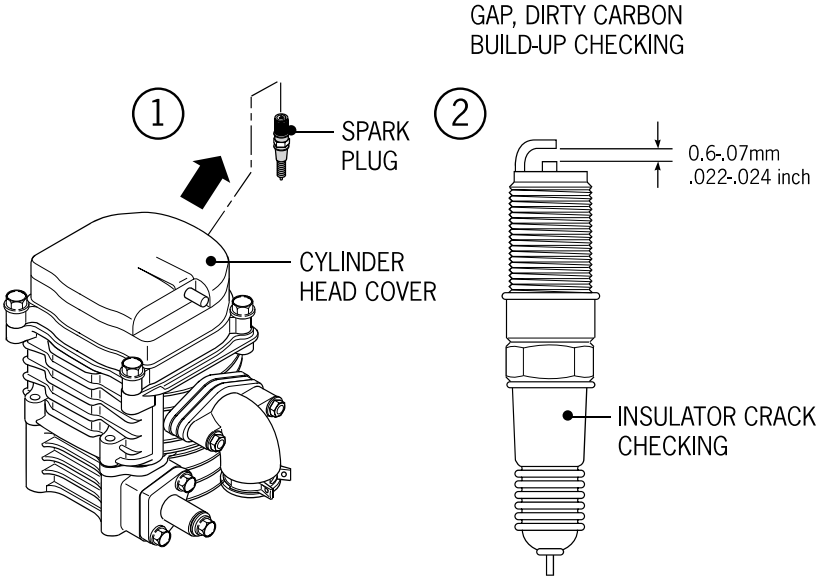

2. Scheduled Maintenance

Valve Adjustment

Always check and adjust with engine temperature lower than 35˚C (95˚F)

1. Remove cylinder head cover.

2. Rotate cooling fan to camshaft. Locate mark at center top, aligning magneto fly wheel mark with that on crankcase. Magneto “T” mark and box crankshaft mark.

   Valve gap checking and adjustment valve gap:
   IN: 0.05mm (.00197 in.)
   EX: 0.05mm (.00197 in.)

3. To adjust the valve gap, loosen am nut and rotate adjusting nut.

Valve Adjustment Wrench

Be sure to check valve gap again, after locking jam nut.

Carburetor Idle Speed

Idle adjustment should be made with the engine warmed up.

1. Remove cover.

2. After the engine warms up, connect it to an engine revolution counter.

3. Adjust idle screw until specified revolution is obtained.

   Minimum idling speed: 1900+190rpm

4. Readjust the screw if the idle speed is not steady or fuel cannot be properly applied.

