API Data Book

2026.1-2026.1.0

Generated by Doxygen 1.9.8

1 Revision History 1

2 Introduction 2

3 Overview 3

4 API Notes and Limitations 4

5 Defines 4

5.1 KYVP_TAP_GEOMETRY . . . 4
5.2 BITS_DEPTH_SHIFT_MODE . . . 5
5.3 SAVED_IMAGE_FORMAT . . . 5
5.4 KYVP_INFO_DATATYPE . . . 5
5.5 KYVP_TL_INFO_CMD . . . 6
5.6 KYVP_TL_INFO_CMD . . . 6
5.7 KYVP_DEVICE_INFO_CMD . . . 7
5.8 KYVP_ACQ_START_FLAGS . . . 7
5.9 KYVP_ACQ_STOP_FLAGS . . . 7
5.10 KYVP_STREAM_INFO_CMD . . . 7
5.11 KYVP_BUFFER_INFO_CMD . . . 8
5.12 KYVP_EVENT_TYPE . . . 11
5.13 KYVP_EVENT_INFO_CMD . . . 11
5.14 KYVP_EVENT_DATA_INFO_CMD . . . 11
5.15 KYVP_LINK_STATUS . . . 12
5.16 KYVP_LINK_STATUS_CMD . . . 12
5.17 KYVP_TAP_GEOMETRY . . . 12
5.18 DS_PACKED_DATA_MODE . . . 12
5.19 DS_PACKED_DATA_PROCESSING_MODE . . . 12

6 Foundation 12

6.1 KY_BOOL . . . 12

7 KYVPLibTL Library 13

7.1 KYVPLibTL Introduction . . . 13
7.2 KYVPLibTL Handles . . . 13
7.2.1 Library handles . . . 13
7.2.2 KYVP_TL_HANDLE . . . 13
7.2.3 KYVP_PCI_INTERFACE_HANDLE . . . 13
7.2.4 KYVP_DEVICE_HANDLE . . . 13
7.2.5 KYVP_REMOTE_DEVICE_HANDLE . . . 13
7.2.6 KYVP_STREAM_HANDLE . . . 14
7.2.7 KYVP_BUFFER_HANDLE . . . 14
7.3 KYVPLibTL Structs . . . 14
7.3.1 KYVPLIBTL_EVENT_NEW_BUFFER_DATA . . . 14

7.3.2 KYVPLibTL_GetPortUrl_Args . . . 14
7.3.3 KYVPLibTL_ReadPort_Args . . . 14
7.3.4 KYVPLibTL_WritePort_Args . . . 14
7.3.5 KYVPLibTL_PCIInterface_GetPortUrl_Args . . . 15
7.3.6 KYVPLibTL_PCIInterface_ReadPort_Args . . . 15
7.3.7 KYVPLibTL_PCIInterface_WritePort_Args . . . 15
7.3.8 KYVPLibTL_Device_GetPortUrl_Args . . . 15
7.3.9 KYVPLibTL_Device_ReadPort_Args . . . 15
7.3.10 KYVPLibTL_Device_WritePort_Args . . . 16
7.3.11 KYVPLibTL_RemoteDevice_GetPortUrl_Args . . . 16
7.3.12 KYVPLibTL_RemoteDevice_ReadPort_Args . . . 16
7.3.13 KYVPLibTL_RemoteDevice_WritePort_Args . . . 16
7.3.14 KYVPLibTL_Stream_GetPortUrl_Args . . . 16
7.3.15 KYVPLibTL_Stream_ReadPort_Args . . . 17
7.3.16 KYVPLibTL_Stream_WritePort_Args . . . 17
7.3.17 KYVPLibTL_TLOpen_Args . . . 17
7.3.18 KYVPLibTL_TLClose_Args . . . 17
7.3.19 KYVPLibTL_TLGetInfo_Args . . . 17
7.3.20 KYVPLibTL_TLGetNumInterfaces_Args . . . 18
7.3.21 KYVPLibTL_TLGetInterfaceID_Args . . . 18
7.3.22 KYVPLibTL_TLGetPCIInterfaceInfo_Args . . . 18
7.3.23 KYVPLibTL_TLOpenInterface_Args . . . 18
7.3.24 KYVPLibTL_TLUpdatePCIInterfaceList_Args . . . 18
7.3.25 KYVPLibTL_IFClose_Args . . . 19
7.3.26 KYVPLibTL_IFGetInfo_Args . . . 19
7.3.27 KYVPLibTL_IFGetNumDevices_Args . . . 19
7.3.28 KYVPLibTL_IFGetDeviceID_Args . . . 19
7.3.29 KYVPLibTL_IFUpdateDeviceList_Args . . . 19
7.3.30 KYVPLibTL_IFGetDeviceInfo_Args . . . 20
7.3.31 KYVPLibTL_IFOpenDevice_Args . . . 20
7.3.32 KYVPLibTL_IFRegisterEvent_Args . . . 20
7.3.33 KYVPLibTL_IFUnregisterEvent_Args . . . 20
7.3.34 KYVPLibTL_DevGetPort_Args . . . 21
7.3.35 KYVPLibTL_DevGetNumDataStreams_Args . . . 21
7.3.36 KYVPLibTL_DevGetDataStreamID_Args . . . 21
7.3.37 KYVPLibTL_DevOpenDataStream_Args . . . 21
7.3.38 KYVPLibTL_DevGetInfo_Args . . . 21
7.3.39 KYVPLibTL_DevClose_Args . . . 22
7.3.40 KYVPLibTL_DSAnnounceBuffer_Args . . . 22
7.3.41 KYVPLibTL_DSAllocAndAnnounceBuffer_Args . . . 22
7.3.42 KYVPLibTL_DSStartAcquisition_Args . . . 22
7.3.43 KYVPLibTL_DSStopAcquisition_Args . . . 23

7.3.44 KYVPLibTL_DSGetInfo_Args . . . 23
7.3.45 KYVPLibTL_DSGetBufferID_Args . . . 23
7.3.46 KYVPLibTL_DSClose_Args . . . 23
7.3.47 KYVPLibTL_DSRevokeBuffer_Args . . . 23
7.3.48 KYVPLibTL_DSQueueBuffer_Args . . . 24
7.3.49 KYVPLibTL_DSGetBufferInfo_Args . . . 24
7.3.50 KYVPLibTL_DSRegisterEvent_Args . . . 24
7.3.51 KYVPLibTL_DSUnregisterEvent_Args . . . 24
7.3.52 KYVPLibTL_EventGetData_Args . . . 24
7.3.53 KYVPLibTL_EventGetDataInfo_Args . . . 24
7.3.54 KYVPLibTL_EventGetInfo_Args . . . 25
7.3.55 KYVPLibTL_EventFlush_Args . . . 25
7.3.56 KYVPLibTL_EventKill_Args . . . 25
7.4 KYVPLibTL Functions . . . 25
7.4.1 KYVPLibTL System Functions . . . 26
7.4.2 KYVPLibTL Interface Functions . . . 28
7.4.3 KYVPLibTL Stream Functions . . . 31
7.4.4 KYVPLibTL Event Functions . . . 35

8 Parameters Handler Library **37**
8.1 KYVP_ParametersHandler Description . . . 37
8.2 Parameters Handler Library Structs . . . 37
8.2.1 KYVP_COLLECTION_HANDLE . . . 37
8.2.2 CALLBACK FUNCTIONS . . . 38
8.2.3 ENUM KYParametersHandler_TransportOperationType . . . 38
8.2.4 KYParametersHandler_TransportCallParams_Args . . . 38
8.2.5 KYParametersHandler_InitParameters . . . 38
8.2.6 KYParametersHandler_Initialize_Args . . . 38
8.2.7 KYParametersHandler_CreateParameterCollection_Args . . . 39
8.2.8 KYParametersHandler_DeleteParameterCollection_Args . . . 39
8.2.9 KYParametersHandler_RegisterParameterCollectionTransport_Args . . . 39
8.2.10 KYParametersHandler_UnregisterParameterCollectionTransport_Args . . . 40
8.2.11 KYParametersHandler_RegisterParameterCollectionCallback_Args . . . 40
8.2.12 KYParametersHandler_UnregisterParameterCollectionCallback_Args . . . 40
8.2.13 KYParametersHandler_InitializeParameterCollection_Args . . . 41
8.2.14 KYParametersHandler_GetNodeDescriptor_Args . . . 41
8.2.15 KYParametersHandler_GetNodeDescriptorsArray_Args . . . 41
8.2.16 KYParametersHandler_GetValue_Args . . . 42
8.2.17 KYParametersHandler_SetValue_Args . . . 42
8.2.18 KYParametersHandler_GetValueEnumAsString_Args . . . 42
8.2.19 KYParametersHandler_SetValueEnumByValueName_Args . . . 43
8.2.20 KYParametersHandler_InvalidateParameterCollection_Args . . . 43

8.2.21 KYParametersHandler_InvalidateParameter_Args . . . 43
8.2.22 KYParametersHandler_SaveToFile_Args . . . 44
8.2.23 KYParametersHandler_GetParameterAttributeValueArgs . . . 44
8.2.24 KYParametersHandler_IsParameterAvailableArgs . . . 44
8.3 KYVP Node Descriptor . . . 45
8.3.1 KYVP_NodeDescriptorType . . . 45
8.3.2 KYVP_ParameterInterfaceType . . . 45
8.3.3 KYVP_ParameterRepresentation . . . 45
8.3.4 KYVP_ParameterVisibility . . . 45
8.3.5 KYVP_NodeDescriptor . . . 46
8.3.6 KYVP_ParameterAttributeType . . . 46
8.4 Parameters Handler Functions . . . 47

9 Image Processing Library **47**
9.1 Introduction . . . 47
9.2 Image Processing Library Functions . . . 47
9.3 Image Processing Library Structs . . . 47
9.3.1 KYVP_VIDEO_PIXELIF . . . 47
9.3.2 KYVP_PIXEL_FORMAT . . . 48
9.3.3 KYIMGPROC_PIXEL_DECODER . . . 48
9.3.4 KYIMGPROC_VIDEO_RECORDER_HANDLE . . . 48
9.3.5 KYIMGPROC_IMAGE_CONVERTER_HANDLE . . . 48
9.3.6 VPImage . . . 49
9.3.7 PackedDataInfo . . . 49
9.3.8 KYIMGPROC_InitVideoRecorderArgs . . . 49
9.3.9 KYIMGPROC_DeleteVideoRecorderArgs . . . 49
9.3.10 KYIMGPROC_InitImageConverterArgs . . . 50
9.3.11 KYIMGPROC_DeleteImageConverterArgs . . . 50
9.3.12 KYIMGPROC_ConvertParam_Args . . . 50
9.3.13 KYIMGPROC_SaveImageArgs . . . 50
9.3.14 KYIMGPROC_SaveRawArgs . . . 50
9.3.15 KYIMGPROC_SaveVideoArgs . . . 50
9.3.16 KYIMGPROC_WriteVideoFrameArgs . . . 51
9.3.17 KYImgProc_StopVideoRecordArgs . . . 51
9.3.18 KYImgProc_GetPackedDataInfo_Args . . . 51
9.3.19 KYImgProc_PreproccessPackedData_Args . . . 51
9.3.20 KYImgProc_GetPixelFormat_Args . . . 52
9.3.21 KYImgProc_GetPixelFormatByName_Args . . . 52

10 Library Exiting **52**

11 API Examples **53**

12 Collecting Diagnostic information **55**

13 KYVPExtension **55**
13.1 KYVP_IO_AUX_DATA . . . 55
13.2 KYVP_FRAME_AUX_DATA . . . 56
13.3 KYVP_AUX_DATA . . . 56
13.4 KYVP_UPDATE_CALLBACK . . . 57
13.5 KYVP_DATA_STREAM_CALLBACK . . . 57
13.6 KYVP_AUX_DATA_CALLBACK . . . 57
13.7 KYVP_SERIAL_CALLBACK . . . 57
13.8 KYVP_PCI_INTERFACE_EVENT_CALLBACK . . . 57

14 KYVPExtension Structs **58**
14.1 KYVPExtension_RemoteDevice_DirectHWReadReg_Args . . . 58
14.2 KYVPExtension_RemoteDevice_DirectHWWriteReg_Args . . . 58
14.3 KYVPExtension_RemoteDevice_SetImageDetails_Args . . . 58
14.4 KYVPExtension_PCIInterface_DirectHWReadReg_Args . . . 58
14.5 KYVPExtension_PCIInterface_DirectHWWriteReg_Args . . . 58
14.6 KYVPExtension_PCIInterface_LockLink_Args . . . 59
14.7 KYVPExtension_PCIInterface_UnlockLink_Args . . . 59
14.8 KYVPExtension_PCIInterface_ReadLink_Args . . . 59
14.9 KYVPExtension_PCIInterface_WriteLink_Args . . . 59
14.10 KYVPExtension_PCIInterface_WriteLink_Args . . . 59
14.11 KYVPExtension_PCIInterface_LinkGetStatus_Args . . . 60
14.12 KYVPExtension_RemoteDevice_GetParamsCollectionHandle_Args . . . 60
14.13 DeviceLinkDefinition . . . 60
14.14 DeviceDefinition . . . 60
14.15 KYVPExtension_DetectDevicesManually_Args . . . 61

15 Topic Index **61**
15.1 Topics . . . 61

16 Data Structure Index **62**
16.1 Data Structures . . . 62

17 Topic Documentation **65**
17.1 Image processing Init functions . . . 65
17.1.1 Detailed Description . . . 65
17.1.2 Function Documentation . . . 65
17.1.3 KYImgProc_InitImageConverter() . . . 65
17.1.4 KYImgProc_InitVideoRecorder() . . . 66
17.2 Image processing Init functions . . . 66
17.2.1 Detailed Description . . . 66
17.2.2 Function Documentation . . . 66
17.2.3 KYImgProc_DeleteImageConverter() . . . 66
17.2.4 KYImgProc_DeleteVideoRecorder() . . . 67

17.3 Image processing Get functions . . . 67
17.3.1 Detailed Description . . . 67
17.3.2 Function Documentation . . . 68
17.3.3 KYImgProc_GetPixelFormat() . . . 68
17.3.4 KYImgProc_GetPixelFormatByName() . . . 68
17.4 Image processing Conversation functions . . . 69
17.4.1 Detailed Description . . . 69
17.4.2 Function Documentation . . . 69
17.4.3 KYImgProc_ConvertImage() . . . 69
17.4.4 KYImgProc_GetPackedDataInfo() . . . 70
17.4.5 KYImgProc_PreproccessPackedData() . . . 70
17.5 Image processing save and record functions . . . 71
17.5.1 Detailed Description . . . 71
17.5.2 Function Documentation . . . 71
17.5.3 KYImgProc_SaveImage() . . . 71
17.5.4 KYImgProc_SaveRawData() . . . 72
17.5.5 KYImgProc_StartVideoRecord() . . . 72
17.5.6 KYImgProc_StopVideoRecord() . . . 72
17.5.7 KYImgProc_WriteVideoFrame() . . . 73
17.6 Comparison Functions . . . 73
17.6.1 Detailed Description . . . 74
17.6.2 Function Documentation . . . 74
17.6.3 KYImgProc_ImageConverterHandleIsInvalid() . . . 74
17.6.4 KYImgProc_ImageConverterHandleIsNull() . . . 74
17.6.5 KYImgProc_ImageConverterHandlesIsEqual() . . . 75
17.6.6 KYImgProc_VideoRecorderHandleIsEqual() . . . 75
17.6.7 KYImgProc_VideoRecorderHandleIsInvalid() . . . 76
17.6.8 KYImgProc_VideoRecorderHandleIsNull() . . . 77
17.7 System module . . . 77
17.7.1 Detailed Description . . . 78
17.7.2 Function Documentation . . . 78
17.7.3 KYVPLibTL_CloseLib() . . . 78
17.7.4 KYVPLibTL_InitLib() . . . 78
17.8 Low level functions . . . 80
17.8.1 Detailed Description . . . 80
17.8.2 Function Documentation . . . 80
17.8.3 KYVPLibTL_Device_GetPortURL() . . . 80
17.8.4 KYVPLibTL_Device_ReadPort() . . . 81
17.8.5 KYVPLibTL_Device_WritePort() . . . 81
17.8.6 KYVPLibTL_GetPortURL() . . . 82
17.8.7 KYVPLibTL_PCIInterface_GetPortURL() . . . 82
17.8.8 KYVPLibTL_PCIInterface_ReadPort() . . . 83

17.8.9 KYVPLibTL_PCIInterface_WritePort() . . . 83
17.8.10 KYVPLibTL_ReadPort() . . . 84
17.8.11 KYVPLibTL_RemoteDevice_GetPortURL() . . . 84
17.8.12 KYVPLibTL_RemoteDevice_ReadPort() . . . 84
17.8.13 KYVPLibTL_RemoteDevice_WritePort() . . . 86
17.8.14 KYVPLibTL_Stream_GetPortURL() . . . 86
17.8.15 KYVPLibTL_Stream_ReadPort() . . . 87
17.8.16 KYVPLibTL_Stream_WritePort() . . . 87
17.8.17 KYVPLibTL_WritePort() . . . 88
17.9 Interface module . . . 88
17.9.1 Detailed Description . . . 89
17.9.2 Function Documentation . . . 89
17.9.3 KYVPLibTL_DevClose() . . . 89
17.9.4 KYVPLibTL_DevGetDataStreamID() . . . 89
17.9.5 KYVPLibTL_DevGetInfo() . . . 90
17.9.6 KYVPLibTL_DevGetNumDataStreams() . . . 90
17.9.7 KYVPLibTL_DevGetPort() . . . 91
17.9.8 KYVPLibTL_DevOpenDataStream() . . . 91
17.10 Stream module . . . 93
17.10.1 Detailed Description . . . 93
17.10.2 Function Documentation . . . 93
17.11 Event Interface . . . 94
17.11.1 Detailed Description . . . 95
17.11.2 Function Documentation . . . 95
17.12 Init functions . . . 95
17.12.1 Detailed Description . . . 96
17.12.2 Function Documentation . . . 96
17.12.3 KYParametersHandler_CreateParameterCollection() . . . 96
17.12.4 KYParametersHandler_Initialize() . . . 97
17.12.5 KYParametersHandler_InitializeParameterCollection() . . . 97
17.12.6 KYParametersHandler_RegisterParameterCollectionCallback() . . . 98
17.12.7 KYParametersHandler_RegisterParameterCollectionTransport() . . . 98
17.13 Uninit functions . . . 98
17.13.1 Detailed Description . . . 99
17.13.2 Function Documentation . . . 99
17.13.3 KYParametersHandler_DeleteParameterCollection() . . . 99
17.13.4 KYParametersHandler_UnregisterParameterCollectionCallback() . . . 99
17.13.5 KYParametersHandler_UnregisterParameterCollectionTransport() . . . 100
17.14 Set and Get functions . . . 100
17.14.1 Detailed Description . . . 101
17.14.2 Function Documentation . . . 101
17.14.3 KYParametersHandler_GetNodeDescriptor() . . . 101

17.14.4 KYParametersHandler_GetNodeDescriptorsArray() . . . 101
17.14.5 KYParametersHandler_GetParameterAttributeValue() . . . 102
17.14.6 KYParametersHandler_GetValue() . . . 102
17.14.7 KYParametersHandler_GetValueEnumAsString() . . . 103
17.14.8 KYParametersHandler_InvalidateParameter() . . . 103
17.14.9 KYParametersHandler_InvalidateParameterCollection() . . . 104
17.14.10 KYParametersHandler_IsParameterAvailable() . . . 104
17.14.11 KYParametersHandler_SaveToFile() . . . 105
17.14.12 KYParametersHandler_SetValue() . . . 105
17.14.13 KYParametersHandler_SetValueEnumByValueName() . . . 105
17.15 Comparison functions . . . 106
17.15.1 Detailed Description . . . 106
17.15.2 Function Documentation . . . 106
17.15.3 KYParametersHandler_CollectionHandleIsInvalid() . . . 106
17.15.4 KYParametersHandler_CollectionHandleIsNull() . . . 107
17.15.5 KYParametersHandler_CollectionHandlesIsEqual() . . . 107

18 Data Structure Documentation **108**
18.1 _DeviceDefinition Struct Reference . . . 108
18.1.1 Detailed Description . . . 108
18.1.2 Member Function Documentation . . . 108
18.2 _DeviceLinkDefinition Struct Reference . . . 109
18.2.1 Detailed Description . . . 110
18.2.2 Member Function Documentation . . . 110
18.3 _KY_RESULT Struct Reference . . . 110
18.3.1 Detailed Description . . . 110
18.3.2 Field Documentation . . . 111
18.4 _KYIMGPROC_ConvertParam_Args Struct Reference . . . 111
18.4.1 Detailed Description . . . 112
18.4.2 Member Function Documentation . . . 112
18.4.3 Field Documentation . . . 112
18.5 _KYIMGPROC_DeleteImageConverterArgs Struct Reference . . . 113
18.5.1 Detailed Description . . . 113
18.5.2 Member Function Documentation . . . 113
18.5.3 Field Documentation . . . 114
18.6 _KYIMGPROC_DeleteVideoRecorderArgs Struct Reference . . . 114
18.6.1 Detailed Description . . . 114
18.6.2 Member Function Documentation . . . 115
18.6.3 Field Documentation . . . 115
18.7 _KYImgProc_GetPackedDataInfo_Args Struct Reference . . . 115
18.7.1 Detailed Description . . . 116
18.7.2 Member Function Documentation . . . 116

18.8 _KYImgProc_GetPixelFormat_Args Struct Reference . . . 117
18.8.1 Detailed Description . . . 117
18.8.2 Member Function Documentation . . . 117
18.9 _KYImgProc_GetPixelFormatByName_Args Struct Reference . . . 118
18.9.1 Detailed Description . . . 118
18.9.2 Member Function Documentation . . . 118
18.10 _KYIMGPROC_IMAGE_CONVERTER_HANDLE Struct Reference . . . 119
18.10.1 Detailed Description . . . 119
18.10.2 Field Documentation . . . 119
18.11 _KYIMGPROC_InitImageConverterArgs Struct Reference . . . 119
18.11.1 Detailed Description . . . 120
18.11.2 Member Function Documentation . . . 120
18.12 _KYIMGPROC_InitVideoRecorderArgs Struct Reference . . . 120
18.12.1 Detailed Description . . . 121
18.12.2 Member Function Documentation . . . 121
18.13 _KYIMGPROC_PIXEL_DECODER Struct Reference . . . 121
18.13.1 Detailed Description . . . 122
18.13.2 Member Function Documentation . . . 122
18.14 _KYImgProc_PreproccessPackedData_Args Struct Reference . . . 122
18.14.1 Detailed Description . . . 123
18.14.2 Member Function Documentation . . . 123
18.15 _KYIMGPROC_SaveImageArgs Struct Reference . . . 124
18.15.1 Detailed Description . . . 124
18.15.2 Member Function Documentation . . . 124
18.16 _KYIMGPROC_SaveRawArgs Struct Reference . . . 125
18.16.1 Detailed Description . . . 126
18.16.2 Member Function Documentation . . . 126
18.17 _KYIMGPROC_SaveVideoArgs Struct Reference . . . 126
18.17.1 Detailed Description . . . 127
18.17.2 Member Function Documentation . . . 127
18.17.3 Field Documentation . . . 127
18.18 _KYImgProc_StopVideoRecordArgs Struct Reference . . . 128
18.18.1 Detailed Description . . . 129
18.18.2 Member Function Documentation . . . 129
18.18.3 Field Documentation . . . 129
18.19 _KYIMGPROC_VIDEO_RECORDER_HANDLE Struct Reference . . . 129
18.19.1 Detailed Description . . . 130
18.19.2 Field Documentation . . . 130
18.20 _KYIMGPROC_WriteVideoFrameArgs Struct Reference . . . 130
18.20.1 Detailed Description . . . 131
18.20.2 Member Function Documentation . . . 131
18.20.3 Field Documentation . . . 131

18.21 _KYParametersHandler_CreateParameterCollection_Args Struct Reference . . . 131
18.21.1 Detailed Description . . . 132
18.21.2 Member Function Documentation . . . 132
18.22 _KYParametersHandler_DeleteParameterCollection_Args Struct Reference . . . 133
18.22.1 Detailed Description . . . 133
18.22.2 Member Function Documentation . . . 133
18.23 _KYParametersHandler_GetNodeDescriptor_Args Struct Reference . . . 134
18.23.1 Detailed Description . . . 135
18.23.2 Member Function Documentation . . . 135
18.24 _KYParametersHandler_GetNodeDescriptorsArray_Args Struct Reference . . . 136
18.24.1 Detailed Description . . . 136
18.24.2 Member Function Documentation . . . 136
18.25 _KYParametersHandler_GetParameterAttributeValueArgs Struct Reference . . . 137
18.25.1 Detailed Description . . . 138
18.25.2 Member Function Documentation . . . 138
18.26 _KYParametersHandler_GetValue_Args Struct Reference . . . 139
18.26.1 Detailed Description . . . 140
18.26.2 Member Function Documentation . . . 140
18.27 _KYParametersHandler_GetValueEnumAsString_Args Struct Reference . . . 141
18.27.1 Detailed Description . . . 142
18.27.2 Member Function Documentation . . . 142
18.28 _KYParametersHandler_Initialize_Args Struct Reference . . . 143
18.28.1 Detailed Description . . . 143
18.28.2 Member Function Documentation . . . 143
18.29 _KYParametersHandler_InitializeParameterCollection_Args Struct Reference . . . 144
18.29.1 Detailed Description . . . 144
18.29.2 Member Function Documentation . . . 144
18.30 _KYParametersHandler_InitParameters Struct Reference . . . 145
18.30.1 Detailed Description . . . 145
18.30.2 Member Function Documentation . . . 146
18.31 _KYParametersHandler_InvalidateParameter_Args Struct Reference . . . 146
18.31.1 Detailed Description . . . 146
18.31.2 Member Function Documentation . . . 147
18.32 _KYParametersHandler_InvalidateParameterCollection_Args Struct Reference . . . 147
18.32.1 Detailed Description . . . 148
18.32.2 Member Function Documentation . . . 148
18.33 _KYParametersHandler_IsParameterAvailableArgs Struct Reference . . . 149
18.33.1 Detailed Description . . . 149
18.33.2 Member Function Documentation . . . 149
18.34 _KYParametersHandler_RegisterParameterCollectionCallback_Args Struct Reference . . . 150
18.34.1 Detailed Description . . . 151
18.34.2 Member Function Documentation . . . 151

18.35 _KYParametersHandler_RegisterParameterCollectionTransport_Args Struct Reference 152
18.35.1 Detailed Description 152
18.35.2 Member Function Documentation 153
18.36 _KYParametersHandler_SaveToFile_Args Struct Reference 154
18.36.1 Detailed Description 154
18.36.2 Member Function Documentation 154
18.37 _KYParametersHandler_SetValue_Args Struct Reference 155
18.37.1 Detailed Description 156
18.37.2 Member Function Documentation 156
18.38 _KYParametersHandler_SetValueEnumByValueName_Args Struct Reference 157
18.38.1 Detailed Description 158
18.38.2 Member Function Documentation 158
18.39 _KYParametersHandler_TransportCallParams_Args Struct Reference 159
18.39.1 Detailed Description 159
18.39.2 Member Function Documentation 159
18.40 _KYParametersHandler_UnregisterParameterCollectionCallback_Args Struct Reference 161
18.40.1 Detailed Description 161
18.40.2 Member Function Documentation 161
18.41 _KYParametersHandler_UnregisterParameterCollectionTransport_Args Struct Reference 162
18.41.1 Detailed Description 162
18.41.2 Member Function Documentation 163
18.42 _KYVP_AUX_DATA Struct Reference 164
18.42.1 Detailed Description 164
18.42.2 Field Documentation 165
18.43 _KYVP_BOARD_INFO Struct Reference 166
18.43.1 Detailed Description 166
18.43.2 Member Function Documentation 166
18.44 _KYVP_BUFFER_DATA_CHUNK Struct Reference 168
18.44.1 Detailed Description 168
18.44.2 Field Documentation 168
18.45 _KYVP_BUFFER_INFO Struct Reference 169
18.45.1 Detailed Description 170
18.45.2 Member Function Documentation 170
18.46 _KYVP_COLLECTION_HANDLE Struct Reference 171
18.46.1 Detailed Description 172
18.46.2 Field Documentation 172
18.47 _KYVP_CXP2_EVENT Struct Reference 172
18.47.1 Detailed Description 173
18.47.2 Member Function Documentation 173
18.47.3 Field Documentation 173
18.48 _KYVP_CXP2_HEARTBEAT Struct Reference 174
18.48.1 Detailed Description 174

18.48.2 Member Function Documentation . . . 174
18.48.3 Field Documentation . . . 174
18.49 _KYVP_DEVICE_IMAGE_DETAILS Struct Reference . . . 175
18.49.1 Detailed Description . . . 175
18.49.2 Member Function Documentation . . . 176
18.50 _KYVP_DEVICE_INFO Struct Reference . . . 177
18.50.1 Detailed Description . . . 178
18.50.2 Member Function Documentation . . . 178
18.51 _KYVP_FRAME_AUX_DATA Struct Reference . . . 180
18.51.1 Detailed Description . . . 181
18.51.2 Field Documentation . . . 181
18.52 _KYVP_IO_AUX_DATA Struct Reference . . . 181
18.52.1 Detailed Description . . . 182
18.52.2 Field Documentation . . . 182
18.53 _KYVP_NodeDescriptor Struct Reference . . . 183
18.53.1 Detailed Description . . . 184
18.53.2 Member Function Documentation . . . 184
18.54 _KYVP_PCI_CONFIG Struct Reference . . . 188
18.54.1 Detailed Description . . . 188
18.54.2 Member Function Documentation . . . 188
18.55 _KYVP_PCI_INTERFACE_INFO Struct Reference . . . 189
18.55.1 Detailed Description . . . 190
18.55.2 Member Function Documentation . . . 190
18.55.3 Field Documentation . . . 190
18.56 _KYVP_PCI_INTERFACE_SLOT Struct Reference . . . 191
18.56.1 Detailed Description . . . 191
18.56.2 Field Documentation . . . 191
18.57 _KYVP_PCIINTERFACE_EVENT_CXP2_EVENT Struct Reference . . . 192
18.57.1 Detailed Description . . . 192
18.57.2 Member Function Documentation . . . 193
18.57.3 Field Documentation . . . 193
18.58 _KYVP_PCIINTERFACE_EVENT_CXP2_HEARTBEAT Struct Reference . . . 193
18.58.1 Detailed Description . . . 194
18.58.2 Member Function Documentation . . . 194
18.58.3 Field Documentation . . . 194
18.59 _KYVP_PCIINTERFACE_EVENT_TEMPERATURE Struct Reference . . . 195
18.59.1 Detailed Description . . . 195
18.59.2 Member Function Documentation . . . 195
18.59.3 Field Documentation . . . 195
18.60 _KYVP_PCIINTERFACE_GENERIC_EVENT Struct Reference . . . 196
18.60.1 Detailed Description . . . 196
18.60.2 Member Function Documentation . . . 196

18.60.3 Field Documentation . . . 197
18.61 _KYVP_PIXEL_FORMAT Struct Reference . . . 198
18.61.1 Detailed Description . . . 198
18.61.2 Member Function Documentation . . . 198
18.62 _kyvp_update_status Struct Reference . . . 200
18.62.1 Detailed Description . . . 200
18.62.2 Field Documentation . . . 200
18.63 _KYVP_VIDEO_PIXELIF Struct Reference . . . 201
18.63.1 Detailed Description . . . 201
18.63.2 Field Documentation . . . 202
18.64 _KYVPExtension_AuxDataCallback_Register_Args Struct Reference . . . 202
18.64.1 Detailed Description . . . 203
18.64.2 Member Function Documentation . . . 203
18.65 _KYVPExtension_AuxDataCallback_Unregister_Args Struct Reference . . . 204
18.65.1 Detailed Description . . . 204
18.65.2 Member Function Documentation . . . 204
18.66 _KYVPExtension_DataStream_Callback_Register_Args Struct Reference . . . 205
18.66.1 Detailed Description . . . 205
18.66.2 Member Function Documentation . . . 205
18.67 _KYVPExtension_DataStream_Callback_Unregister_Args Struct Reference . . . 206
18.67.1 Detailed Description . . . 206
18.67.2 Member Function Documentation . . . 207
18.68 _KYVPExtension_DataStream_Close_Args Struct Reference . . . 207
18.68.1 Detailed Description . . . 207
18.68.2 Member Function Documentation . . . 208
18.69 _KYVPExtension_DataStream_Create_Args Struct Reference . . . 208
18.69.1 Detailed Description . . . 208
18.69.2 Member Function Documentation . . . 209
18.70 _KYVPExtension_DetectDevicesManually_Args Struct Reference . . . 209
18.70.1 Detailed Description . . . 210
18.70.2 Member Function Documentation . . . 210
18.71 _KYVPExtension_PCIInterface_CheckUpdateFile_Args Struct Reference . . . 211
18.71.1 Detailed Description . . . 212
18.71.2 Member Function Documentation . . . 212
18.72 _KYVPExtension_PCIInterface_DirectHWReadReg_Args Struct Reference . . . 214
18.72.1 Detailed Description . . . 214
18.72.2 Member Function Documentation . . . 215
18.73 _KYVPExtension_PCIInterface_DirectHWWriteReg_Args Struct Reference . . . 216
18.73.1 Detailed Description . . . 216
18.73.2 Member Function Documentation . . . 216
18.74 _KYVPExtension_PCIInterface_EventCallBackRegister_Args Struct Reference . . . 217
18.74.1 Detailed Description . . . 218

18.74.2 Member Function Documentation . . . 218
18.75 _KYVPExtension_PCIInterface_EventCallBackUnregister_Args Struct Reference . . . 219
18.75.1 Detailed Description . . . 219
18.75.2 Member Function Documentation . . . 219
18.76 _KYVPExtension_PCIInterface_FirmwareUpdate_Args Struct Reference . . . 220
18.76.1 Detailed Description . . . 220
18.76.2 Member Function Documentation . . . 220
18.77 _KYVPExtension_PCIInterface_LinkGetStatus_Args Struct Reference . . . 221
18.77.1 Detailed Description . . . 222
18.77.2 Member Function Documentation . . . 222
18.78 _KYVPExtension_PCIInterface_LockLink_Args Struct Reference . . . 223
18.78.1 Detailed Description . . . 223
18.78.2 Member Function Documentation . . . 224
18.79 _KYVPExtension_PCIInterface_ReadLink_Args Struct Reference . . . 224
18.79.1 Detailed Description . . . 225
18.79.2 Member Function Documentation . . . 225
18.80 _KYVPExtension_PCIInterface_SendLinkEvent_Args Struct Reference . . . 226
18.80.1 Detailed Description . . . 226
18.80.2 Member Function Documentation . . . 227
18.81 _KYVPExtension_PCIInterface_UnlockLink_Args Struct Reference . . . 228
18.81.1 Detailed Description . . . 228
18.81.2 Member Function Documentation . . . 228
18.82 _KYVPExtension_PCIInterface_WriteLink_Args Struct Reference . . . 229
18.82.1 Detailed Description . . . 229
18.82.2 Member Function Documentation . . . 230
18.83 _KYVPExtension_RemoteDevice_DirectHWReadReg_Args Struct Reference . . . 231
18.83.1 Detailed Description . . . 231
18.83.2 Member Function Documentation . . . 231
18.84 _KYVPExtension_RemoteDevice_DirectHWWriteReg_Args Struct Reference . . . 232
18.84.1 Detailed Description . . . 233
18.84.2 Member Function Documentation . . . 233
18.85 _KYVPExtension_RemoteDevice_GetParamsCollectionHandle_Args Struct Reference . . . 234
18.85.1 Detailed Description . . . 234
18.85.2 Member Function Documentation . . . 234
18.86 _KYVPExtension_RemoteDevice_SetImageDetails_Args Struct Reference . . . 235
18.86.1 Detailed Description . . . 236
18.86.2 Member Function Documentation . . . 236
18.86.3 Field Documentation . . . 236
18.87 _KYVPExtension_Serial_Callback_Register_Args Struct Reference . . . 236
18.87.1 Detailed Description . . . 237
18.87.2 Member Function Documentation . . . 237
18.88 _KYVPExtension_Serial_Callback_Unregister_Args Struct Reference . . . 238

18.88.1 Detailed Description . . . 238
18.88.2 Member Function Documentation . . . 238
18.89 _KYVPLIBTL_EVENT_NEW_BUFFER_DATA Struct Reference . . . 239
18.89.1 Detailed Description . . . 239
18.89.2 Member Function Documentation . . . 239
18.90 _PackedDataInfo Struct Reference . . . 240
18.90.1 Detailed Description . . . 240
18.90.2 Member Function Documentation . . . 241
18.91 _VPImage Struct Reference . . . 242
18.91.1 Detailed Description . . . 242
18.91.2 Member Function Documentation . . . 242

Index **245**

1 Revision History

Revision History

Version	Date	Notes
2024.1.0	09.2024	Initial release
2024.1.1	09.2024	Vision Point API release 2024.1 (service pack 1). The same document without changes
2024.1.2	10.2024	Vision Point API release 2024.1 (service pack 2) • KYParametersHandler_GetParameterAttributeValue() function was added to the KYVP ParametersHandler library. • KYFG_LoadFirmware(), KYFG_GetFirmareUpdateFileInfo() , KY_GetCameraPropertyParameterValue() and KY_GetGrabber↩ PropertyParameterValue() functions were added to the Vision Point API Adapter
2024.1.3	10.2024	The same document without changes
2025.1.0	12.2024	Vision Point API release 2025.1 • KYVPLibExtension library was added. • API Examples for Linux section was added. • Legacy Vision Point API Adapter section has been moved to the separate document titled "Vision Point Migration guide".
2025.1.1-1.3	01-04.2025	The same document without changes
2025.2.0 -2025.↩ 2.3	06-09.2025	The same document without changes
2025.2.4	11.2025	Added KYFoundation library section Added KY_RESULT section
2026.1.0	12.2025	API Examples section updated

Table 1 – Revision History

2 Introduction

Introduction

Safety precautions

With your KAYA's Frame Grabber in hand, please take the time to read through the precautions listed below to prevent preventable and unnecessary injuries and damage to you, other personnel, or property. Read these safety instructions carefully before your first use of the product, as these precautions contain safety instructions that must be observed. Be sure to follow this manual to prevent misuse of the product.

Caution! Read Carefully and do not disregard these instructions.
In the event of a failure, disconnect the power supply. Disconnect the power supply immediately and contact our sales personnel for repair. Continuing to use the product in this state may result in a fire or electric shock.
If an unpleasant smell or smoking occurs, disconnect the power supply. Disconnect the power supply immediately! Continuing to use the product in this state may result in a fire or electric shock. After verifying that no smoking is observed, contact our sales personnel for repair.
Do not disassemble, repair or modify the product. This may result in a fire or electric shock due to a circuit shortage or heat generation. Contact our sales personnel before inspection, modification or repair.
Do not place the product on unstable surfaces. Otherwise, it may drop or fall, resulting in injury to persons or the camera.
Do not use the product if dropped or damaged. Otherwise, a fire or electric shock may occur.
Do not touch the product with metallic objects. Otherwise, a fire or electric shock may occur.
Do not place the product in dusty or humid environments, nor where water may splash. Otherwise, a fire or electric shock may occur.
Do not wet the product or touch it with wet hands. Otherwise, the product may fail or it may cause a fire, smoking or electric shock.
Do not touch the gold-plated sections of the connectors on the product. Otherwise, the surface of the connector may be contaminated by sweat or skin-oil, resulting in contact failure of a connector, malfunction, fire or electric shock due to static electricity discharge.
Do not use or place the product in the following locations. • Unventilated areas such as closets or bookshelves. • Near oils, smoke or steam. • Next to heat sources. • A closed (and not running) car where the temperature becomes high. • Static electricity replete locations • Near water or chemicals. Otherwise, a fire, electric shock, accident or deformation may occur due to a short circuit or heat generation.

Caution! Read Carefully and do not disregard these instructions.
Do not place heavy objects on the product. Otherwise, the product may be damaged.
Be sure to discharge static electricity from the body before touching any sensitive electronic components. The electronic circuits in your computer and the circuits on the board are sensitive to static electricity and surges. Improper handling may seriously damage the circuits. In addition, do not let your clothing come in contact with the circuit boards or components. Otherwise, the product may be damaged.

Disclaimer

KAYA Instruments will assume no responsibility for any damage that may ensue by the use of this product for any purpose other than intended, as previously stated. Without detracting from what was previously written, please be advised that the company will take no responsibility for any damages caused by:

- Earthquake, thunderstrike, natural disasters, fire caused by use beyond our control, wilful and/or accidental misuse and/or use under other abnormal and/or unreasonable conditions.
- Secondary damages caused by the use of this product or its unusable state (business interruption or others).
- Use of this product in any manner that contradicts this manual or malfunctions that may occur due to connection to other devices. Damage to this product that is out of our control or failure due to modification
- Accidents and/or third parties that may be involved.

Additionally, **KAYA Instruments** assumes no responsibility or liability for:

- Erasure or corruption of data caused by the use of this product.
- Any consequences or other abnormalities following the use of this product

3 Overview

Overview

The purpose of this document is to list and demonstrate the provided functionality of KAYA Frame Grabbers' API.

This API is to be used with KAYA's Frame Grabbers hardware provided by KAYA Vision. This is a high-level API for connecting, configuring and capturing data streaming over 1, 2, 4 or 8 channels. KAYA's Frame Grabbers are capable of connecting to various cameras at various speeds and topologies.

Document Structure

This API guide is divided into few major topics each related to different functionalities:

- `KYVPLibTL library` implements the transport layer function.
- `KYVPParametersHandler` library provides access to devices' Gen<i>Cam parameters.
- KYVPLibExtension library enhances the functionality of the KYVPLibTL library.
- `KYVPImage Processing` library to perform various image processing tasks with acquired stream images.
- KYFoundation library to handling KY_RESULT
- `API examples`.

4 API Notes and Limitations

API Notes and Limitations

API Usage in Multi-Threaded Applications

Vision Point II API is NOT thread-safe. This means that if a calling application accesses the resources listed below from multiple threads, the serialization of such accesses should be implemented by that application. Resources that require serialized access are:

- KYVPLibTL Library accessed via an instance of KYVP_TL_HANDLE
- PCI Interface accessed via an instance KYVP_PCI_INTERFACE_HANDLE
- Local Device accessed via an instance of KYVP_DEVICE_HANDLE
- Stream accessed via an instance of KYVP_STREAM_HANDLE
- Event accessed via an instance KYVP_EVENT_HANDLE
- Remote Device accessed via an instance of KYVP_REMOTE_DEVICE_HANDLE
- ParametersHandler library accessed via an instance KYVP_COLLECTION_HANDLE
- A frame buffer accessed via an instance of KYVP_BUFFER_HANDLE

Important notes

1 **DllMain function:**

KAYA's API should **NOT** be used from DllMain function on Windows OS.

There are significant limits on what you can safely do at a DLL entry point. See General Best Practices for specific Windows APIs that are unsafe to call in DllMain. If more than the simplest initialization is required, it is recommended to perform it in an initialization function for the DLL. You can require applications to call the initialization function after DllMain has run and before they call any other functions in the DLL.

2 **KYVP ParametersHandler performance:**

Functions of KYVP ParametersHandler are inherently relatively slow because they utilize the Gen<I>Cam reference implementation. Therefore, we do not suggest using them in performance-critical parts of the code, such as the stream callback function, etc. Instead, we highly recommend using KYVPLibTL_DSGetBufferInfo() with a relevant command to retrieve the required information. Those functions can still be used in non-performance-critical parts for example at the system initialization, before or after acquisition sessions etc.

5 Defines

CXP standard.

ENUMS.

5.1 KYVP_TAP_GEOMETRY

Enumerator	Value	Description
TAP_GEOMETRY_1X_1Y	0x00	Geometry_1X_1Y: 1 X 1Y tap geometry
TAP_GEOMETRY_1X_2YE	0x41	Geometry_1X_2YE: 1 X 2YE tap geometry

5.2 BITS_DEPTH_SHIFT_MODE

Defines how pixel data with less than 16 bits per channel is aligned when expanded to 16 bits

Enumerator	Value	Description
BITS_DEPTH_SHIFT_MODE_UNKNOWN	0x00	Bit shift alignment mode is unspecified or unknown
BITS_DEPTH_SHIFT_MODE_LSB	0x01	Data is LSB-aligned: meaningful bits are in the least significant bits
BITS_DEPTH_SHIFT_MODE_MSB	0x02	Data is MSB-aligned: meaningful bits are in the most significant bits

5.3 SAVED_IMAGE_FORMAT

This enumeration defines the supported formats for saving images. It is used to specify the desired file format when exporting images to disk.

Enumerator	Value	Description
SAVED_IMAGE_FORMAT_UNKNOWN	0x00	Unknown image format. Used when the format cannot be determined or is invalid
SAVED_IMAGE_FORMAT_BMP	0x01	Bitmap image format (.bmp). Uncompressed format widely supported
SAVED_IMAGE_FORMAT_PNG	0x02	Portable Network Graphics format (.png). Lossless compression with transparency support
SAVED_IMAGE_FORMAT_TIF	0x03	Tagged Image File Format (.tif or .tiff). A flexible format commonly used in image analysis and processing

5.4 KYVP_INFO_DATATYPE

Defines the data type possible for the various Info functions. The data type itself may define its size. For buffer or string types the piSize parameter must be used to query the actual amount of data being written.

Enumerator	Value	Description
KYVP_INFO_DATATYPE_UNKNOWN	0	Unknown data type. This value is never returned from a function but can be used to initialize the variable to inquire the type.
KYVP_INFO_DATATYPE_STRING	1	0-terminated C string (encoding according to the TL_↩ INFO_CHAR_ENCODING info command)
KYVP_INFO_DATATYPE_STRINGLIST	2	Concatenated INFO_DATATYPE_STRING list. End of list is signaled with an additional 0
KYVP_INFO_DATATYPE_INT16	3	Signed 16 bit integer.
KYVP_INFO_DATATYPE_UINT16	4	Unsigned 16 bit integer
KYVP_INFO_DATATYPE_INT32	5	Signed 32 bit integer
KYVP_INFO_DATATYPE_UINT32	6	Unsigned 32 bit integer
KYVP_INFO_DATATYPE_INT64	7	Signed 64 bit integer

Enumerator	Value	Description
KYVP_INFO_DATATYPE_UINT64	8	Unsigned 64 bit integer
KYVP_INFO_DATATYPE_FLOAT64	9	Signed 64 bit floating point number
KYVP_INFO_DATATYPE_PTR	10	Pointer type (void∗). Size is platform dependent (32 bit on 32 bit platforms)
KYVP_INFO_DATATYPE_BOOL8	11	Boolean value occupying 8 bit. 0 for false and anything for true
KYVP_INFO_DATATYPE_SIZET	12	Platform dependent unsigned integer (32 bit on 32 bit platforms)
KYVP_INFO_DATATYPE_BUFFER	13	Like a INFO_DATATYPE_STRING but with arbitrary data and no 0 termination.
KYVP_INFO_DATATYPE_PTRDIFF	14	The type ptrdiff_t is a type that can hold the result of subtracting two pointers.

5.5 KYVP_TL_INFO_CMD

Field name	Data type	Description
KYVP_TL_INFO_CMD_ID	STRING	Unique ID identifying a GenTL
KYVP_TL_INFO_CMD_VENDOR	STRING	Vendor name
KYVP_TL_INFO_CMD_MODEL	STRING	Model name
KYVP_TL_INFO_CMD_VERSION	STRING	Producer version
KYVP_TL_INFO_CMD_TLTYPE	STRING	Transport layer technology that is supported
KYVP_TL_INFO_CMD_NAME	STRING	File name including extension of the library
KYVP_TL_INFO_CMD_PATHNAME	STRING	Full path including file name and extension of the library
KYVP_TL_INFO_CMD_DISPLAYNAME	STRING	User readable name
KYVP_TL_INFO_CMD_CHAR_ENCODING	INT32	The char encoding
KYVP_TL_INFO_CMD_GENTL_VER_MAJOR	INT32	Major version number of GenTL Standard Version this Producer complies with.
KYVP_TL_INFO_CMD_GENTL_VER_MINOR	INT32	Minor version number of GenTL Standard Version this Producer complies with.
KYVP_TL_INFO_CMD_API_VER_MAJOR	INT32	Software API major version.
KYVP_TL_INFO_CMD_API_VER_MINOR	INT32	Software API minor version.
KYVP_TL_INFO_CMD_API_VER_PATCH	INT32	Software API patch version.
KYVP_TL_INFO_CMD_API_VER_BUILD	INT32	Software API build (revision) version.
KYVP_TL_INFO_CMD_API_VER_ALPHA	BOOL	True if alpha build.
KYVP_TL_INFO_CMD_API_VER_BETA	BOOL	True if beta build.
KYVP_TL_INFO_CMD_API_VER_RC	BOOL	True if release candidate build.

5.6 KYVP_TL_INFO_CMD

Field name	Data type	Description
KYVP_INTERFACE_INFO_CMD_ID	STRING	Unique ID of the interface.
KYVP_INTERFACE_INFO_CMD_↩ DISPLAYNAME	STRING	User readable name of the interface.
KYVP_INTERFACE_INFO_CMD_TLTYPE	STRING	Transport layer technology that is supported
KYVP_INTERFACE_INFO_CMD_PCI_SLOT	STRING	Info about interface PCI slot
KYVP_INTERFACE_INFO_CMD_KYVP_↩ PCI_INTERFACE_INFO	PTR	Pointer to KYVP_PCI_INTERFACE_INFO struct

5.7 KYVP_DEVICE_INFO_CMD

Field name	Data type	Description
KYVP_DEVICE_INFO_CMD_ID	STRING	Unique ID of the device
KYVP_DEVICE_INFO_CMD_VENDOR	STRING	Device vendor name
KYVP_DEVICE_INFO_CMD_MODEL	STRING	Device model name
KYVP_DEVICE_INFO_CMD_TLTYPE	STRING	Transport layer technology that is supported
KYVP_DEVICE_INFO_CMD_DISPLAYNAME	STRING	User readable name of the device
KYVP_DEVICE_INFO_CMD_ACCESS_↩ STATUS	INT32	Gets the access status the Producer has on the device
KYVP_DEVICE_INFO_CMD_USER_↩ DEFINED_NAME	STRING	String containing the user defined name of the device
KYVP_DEVICE_INFO_CMD_SERIAL_↩ NUMBER	STRING	Serial number of the device in string format
KYVP_DEVICE_INFO_CMD_VERSION	STRING	Device version in string format
KYVP_DEVICE_INFO_CMD_TIMESTAMP_↩ FREQUENCY	UINT64	Tick frequency of the device's timestamp counter in ticks per second
KYVP_DEVICE_INFO_CMD_KYVP_↩ DEVICE_INFO	PTR	Pointer to KYVP_DEVICE_INFO struct. The pointed data must be treated as read-only↩ : modifying its contents is undefined behavior

5.8 KYVP_ACQ_START_FLAGS

Enumerator	Value	Description
KYVP_ACQ_START_FLAGS_DEFAULT	0	Default behavior

5.9 KYVP_ACQ_STOP_FLAGS

Enumerator	Value	Description
KYVP_ACQ_STOP_FLAGS_DEFAULT	0	Stops the acquisition engine when the currently running tasks like filling a buffer are completed
KYVP_ACQ_STOP_FLAGS_KILL	1	Stop the acquisition engine immediately. In case this results in a partially filled buffer the Producer will return the buffer through the regular mechanism to the user, indicating through the info function of that buffer that this buffer is not complete

5.10 KYVP_STREAM_INFO_CMD

Defines the data type possible for the various Info functions. The data type itself may define its size. For buffer or string types the piSize parameter must be used to query the actual amount of data being written.

Enumerator	Value	Type	Description
KYVP_STREAM_INFO_CMD_ID	0	STRING	Unique ID of the data stream
KYVP_STREAM_INFO_CMD_NUM_↩ DELIVERED	1	UINT64	Number of delivered buffers since last acquisition start
KYVP_STREAM_INFO_CMD_NUM_↩ UNDERRUN	2	UINT64	Number of lost frames due to queue underrun

Enumerator	Value	Type	Description
KYVP_STREAM_INFO_CMD_NUM_↩ ANNOUNCED	3	SIZET	Number of announced buffers
KYVP_STREAM_INFO_CMD_NUM_↩ QUEUED	4	SIZET	Number of buffers in the input pool plus the buffer(s) currently being filled
KYVP_STREAM_INFO_CMD_NUM_↩ AWAIT_DELIVERY	5	SIZET	Number of buffers in the output buffer queue
KYVP_STREAM_INFO_CMD_NUM_↩ STARTED	6	UINT64	Number of frames started in the acquisition engine
KYVP_STREAM_INFO_CMD_↩ PAYLOAD_SIZE	7	SIZET	Size of the expected data in bytes
KYVP_STREAM_INFO_CMD_IS_↩ GRABBING	8	BOOL	Flag indicating whether the acquisition engine is started or not
KYVP_STREAM_INFO_CMD_DEFINES↩ _PAYLOADSIZE	9	BOOL	Flag indicating that this data stream defines a payload size independent from the remote device
KYVP_STREAM_INFO_CMD_TLTYPE	10	STRING	Transport layer technology that is supported
KYVP_STREAM_INFO_CMD_NUM_↩ CHUNKS_MAX	11	SIZET	Maximum number of chunks to be expected in a buffer
KYVP_STREAM_INFO_CMD_BUF_↩ ANNOUNCE_MIN	12	SIZET	Minimum number of buffers to announce
KYVP_STREAM_INFO_CMD_BUF_↩ ALIGNMENT	13	SIZET	Alignment size in bytes of the buffer passed to DSAnnounceBuffer

5.11 KYVP_BUFFER_INFO_CMD

Enumerator	Value	Type	Description
KYVP_BUFFER_INFO_CMD_BASE	0	PTR	Base address of the buffer memory as passed to the KYVPLibTL_DSAnnounce↩ Buffer function
KYVP_BUFFER_INFO_CMD_SIZE	1	SIZET	Size of the buffer in bytes.
KYVP_BUFFER_INFO_CMD_USER_PTR	2	PTR	Private data pointer casted to an integer provided at buffer announcement using KYVPLibTL_DSAnnounceBuffer or KYVPLibTL_DSAllocAndAnnounceBuffer
KYVP_BUFFER_INFO_CMD_↩ TIMESTAMP	3	UINT64	Timestamp the buffer was acquired
KYVP_BUFFER_INFO_CMD_NEW_DATA	4	BOOL	Flag to indicate that the buffer contains new data since the last delivery
KYVP_BUFFER_INFO_CMD_IS_↩ QUEUED	5	BOOL	If this flag is set to true the buffer is in the input pool, the buffer is currently being filled or the buffer is in the output buffer queue. In case this value is true the buffer is owned by the GenTL Producer and it can not be revoked
KYVP_BUFFER_INFO_CMD_IS_↩ ACQUIRING	6	BOOL	Flag to indicate that the buffer is currently being filled with data
KYVP_BUFFER_INFO_CMD_IS_↩ INCOMPLETE	7	BOOL	Flag to indicate that a buffer was filled but an error occurred during that process
KYVP_BUFFER_INFO_CMD_TLTYPE	8	STRING	Transport layer technology that is supported

Enumerator	Value	Type	Description
KYVP_BUFFER_INFO_CMD_SIZE_↩ FILLED	9	SIZET	Number of bytes written into the buffer the last time it has been filled. This value is reset to 0 when the buffer is placed into the Input Buffer Pool.If the buffer is incomplete (such as if there are missing packets), only thenumber of bytes successfully writtento the buffer are reported. If the bufferis complete, the number equals to thesize reported throughKYVP_BUFFER↩ _INFO_DATA_SIZE
KYVP_BUFFER_INFO_CMD_WIDTH	10	SIZET	Width of the data in the buffer in number of pixels. This information refers for example to the width entry in the GigE Vision image stream data leader. For other technologies this is to be implemented accordingly
KYVP_BUFFER_INFO_CMD_HEIGHT	11	SIZET	Height of the data in the buffer in number of pixels as configured. For variable size images this is the maximum height of the buffer. For example this information refers to the height entry in the GigE Vision image stream data leader. For other technologies this is to be implemented accordingly
KYVP_BUFFER_INFO_CMD_XOFFSET	12	SIZET	XOffset of the data in the buffer in number of pixels from the image origin to handle areas of interest. This information refers for example to the information provided in the GigE Vision image stream data leader. For other technologies this is to be implemented accordingly
KYVP_BUFFER_INFO_CMD_YOFFSET	13	SIZET	YOffset of the data in the buffer in number of lines from the image origin to handle areas of interest. This information refers for example to the information provided in the GigE Vision image stream data leader. For other technologies this is to be implemented accordingly
KYVP_BUFFER_INFO_CMD_XPADDING	14	SIZET	XPadding of the data in the buffer in number of bytes. This information refers for example to the information provided in the GigE Vision image stream data leader. For other technologies this is may be implemented accordingly
KYVP_BUFFER_INFO_CMD_YPADDING	15	SIZET	YPadding of the data in the buffer in number of bytes. This information refers for example to the information provided in the GigE Vision image stream data leader. For other thechnologies this may be implemented accordingly
KYVP_BUFFER_INFO_CMD_FRAMEID	16	UINT64	A sequentially incremented number of the frame. This information refers for example to the information provided in the GigE Vision image stream block id. For other technologies this is to be implemented accordingly. The wrap around of this number is transportation technology dependent.

Enumerator	Value	Type	Description
KYVP_BUFFER_INFO_CMD_↩ IMAGEPRESENT	17	BOOL	Flag to indicate if the current data in the buffer contains image data
KYVP_BUFFER_INFO_CMD_↩ IMAGEOFFSET	18	SIZET	Offset of the image data from the beginning of the delivered buffer in bytes
KYVP_BUFFER_INFO_CMD_↩ PAYLOADTYPE	19	SIZET	Payload type of the data
KYVP_BUFFER_INFO_CMD_↩ PIXELFORMAT	20	UINT64	Pixelformat of the data
KYVP_BUFFER_INFO_CMD_↩ PIXELFORMAT_NAMESPACE	21	UINT64	
KYVP_BUFFER_INFO_CMD_↩ DELIVERED_IMAGEHEIGHT	22	SIZET	The number of lines in the current buffer as delivered by the transport mechanism
KYVP_BUFFER_INFO_CMD_↩ DELIVERED_CHUNKPAYLOADSIZE	23	SIZET	This information refers for example to the information provided in the GigE Vision image stream data trailer
KYVP_BUFFER_INFO_CMD_↩ CHUNKLAYOUTID	24	UINT64	This information refers for example to the information provided in the GigE Vision image stream data leader. The chunk layout id serves as an indicator that the chunk layout has changed and the application should reparse the chunk layout in the buffer. When a chunk layout (availability or position of individual chunks) changes since the last buffer delivered by the device through the same stream, the device must change the chunk layout id. As long as the chunk layout remains stable, the camera must keep the chunk layout id intact. When switching back to a layout, which was already used before, the camera can use the same id again or use a new id. A chunk layout id value of 0 is invalid. It is reserved for use by cameras not supporting the layout id functionality. The algorithm used to compute the chunk layout id is left as quality of implementation. For other technologies this is to be implemented accordingly.
KYVP_BUFFER_INFO_CMD_FILENAME	25	STRING	Filename in case the payload contains a file
KYVP_BUFFER_INFO_CMD_PIXEL_↩ ENDIANNESS	26	INT32	Endianness of the multi-byte pixel data in the buffer
KYVP_BUFFER_INFO_CMD_DATA_SIZE	27	SIZET	Size of the data intended to be written to the buffer last time it has been filled
KYVP_BUFFER_INFO_CMD_↩ TIMESTAMP_NS	28	UINT64	Timestamp the buffer was acquired, in units of 1 ns (1 000 000 000 ticks per second)
KYVP_BUFFER_INFO_CMD_DATA_↩ LARGER_THAN_BUFFER	29	BOOL	If this values is set to true it indicates that the payload transferred would not fit into the announced buffer and that therefore only parts of the payload or no payload
KYVP_BUFFER_INFO_CMD_↩ CONTAINS_CHUNKDATA	30	BOOL	If this values is set to true it indicates that the payload transferred contains chunk data
KYVP_BUFFER_INFO_CMD_BUFFERID	1001	UINT64	Buffer ID in buffers queue
KYVP_BUFFER_INFO_CMD_INSTANT↩ _FPS	1002	FLOAT64	Instant FPS counter

Enumerator	Value	Type	Description
KYVP_BUFFER_INFO_CMD_KYVP_↩ BUFFER_INFO	1003	PTR	Pointer to KYVP_BUFFER_INFO struct
KYVP_BUFFER_INFO_CMD_↩ TIMESTAMP_NS_CHRONO	1004	UINT64	Timestamp the interrupt for this buffer was received (std::chrono::steady_clock), in units of 1 ns (1 000 000 000 ticks per second)
KYVP_BUFFER_INFO_CMD_↩ TIMESTAMP_NS_HW	10001	UINT64	Timestamp the hw interrupt for this buffer was received (hardware register), in units of 1 ns (1 000 000 000 ticks per second). Used for debugging purposes; activated when the corresponding INTERNAL setting is enabled

5.12 KYVP_EVENT_TYPE

Enumerator	Value	Description
KYVP_EVENT_TYPE_ERROR_	0	Notification on module errors
KYVP_EVENT_TYPE_NEW_BUFFER	1	Notification on newly filled buffers
KYVP_EVENT_TYPE_FEATURE_INVALIDATE	2	Notification if a feature was changed by the Producer driver and thus needs to be invalidated
KYVP_EVENT_TYPE_FEATURE_CHANGE	3	Notification if the Producer driver wants to manually set a feature in the instance
KYVP_EVENT_TYPE_REMOTE_DEVICE	4	Notification if the Producer wants to inform the instance of the remote device that a GenApi compatible event was fired
KYVP_EVENT_TYPE_MODULE	5	Notification that one GenTL Producer module wants to inform the GenICam GenApi instance of this module that a GenApi compatible event was fired. This Event is to be registered on any module handle except on the Remote Device

5.13 KYVP_EVENT_INFO_CMD

Enumerator	Value	Description
KYVP_EVENT_INFO_CMD_TYPE	0	The event type of the event handle
KYVP_EVENT_INFO_CMD_NUM_IN_QUEUE	1	Number of events in the event data queue
KYVP_EVENT_INFO_CMD_NUM_FIRED	2	Number of events that were fired since the registration of the event
KYVP_EVENT_INFO_CMD_EVENT_SIZE_MAX	3	Maximum size in bytes of the event data provided by the event
KYVP_EVENT_INFO_CMD_INFO_DATA_↩ SIZE_MAX	4	Maximum size in bytes of the information output buffer

5.14 KYVP_EVENT_DATA_INFO_CMD

Enumerator	Value	Description
KYVP_EVENT_DATA_INFO_CMD_ID	0	Attribute in the event data to identifythe object or feature the event refers to
KYVP_EVENT_DATA_INFO_CMD_VALUE	1	Defines additional data to an ID

Enumerator	Value	Description
KYVP_EVENT_DATA_INFO_CMD_NUMID	2	Attribute in the event data to identify the object or feature the event refers to

5.15 KYVP_LINK_STATUS

Enumerator	Value	Description
KYVP_KYVP_LINK_STATUS_DISCONNECTED	0x00	The link is disconnected, no link has been established
KYVP_KYVP_LINK_STATUS_SYNCHRONIZED	0x01	The link is synchronized and awaiting connection
KYVP_KYVP_LINK_STATUS_CONNECTING	0x10	A connection is trying to be established on link
KYVP_KYVP_LINK_STATUS_CONNECTED	0x11	The link is connected and assigned to device

5.16 KYVP_LINK_STATUS_CMD

Enumerator	Value	Description
KYVP_LINK_STATUS_CMD_LINK_CONNECTION_STATUS	0x00	Return the link connection status
KYVP_LINK_STATUS_CMD_LINK_LOCK_STATUS	0x01	Return the link lock status

5.17 KYVP_TAP_GEOMETRY

Enumerator	Value	Description
KYVP_STREAM_BUFFERS_TYPE_QUEUED_BUFFERS	0x00	Data stream buffers type queued
KYVP_STREAM_BUFFERS_TYPE_CYCLIC_BUFFERS	0x01	Data stream buffers type cyclic

5.18 DS_PACKED_DATA_MODE

Enumerator	Value	Description
DS_PACKED_DATA_MODE_UNPACKED	0x00	Data unpacked
DS_PACKED_DATA_MODE_LINE32ALIGNED	0x01	Data packed row aligned 32
DS_PACKED_DATA_MODE_LINE32ALIGNED_REVERSE	0x01	Data packed row aligned 32 reverse

5.19 DS_PACKED_DATA_PROCESSING_MODE

Enumerator	Value	Description
DS_PACKED_DATA_PROCESSING_MODE_↩ MSB8	0x00	Trim packed data bits to most significant 8 bits
DS_PACKED_DATA_PROCESSING_MODE_↩ EXPAND16	0x01	Data packed bits expand to 16 bits

6 Foundation

6.1 KY_BOOL

Defines	Type	Value
KY_TRUE	uint8↩ _t	0x1
KY_FALSE	uint8↩ _t	0x0

7 KYVPLibTL Library

Overview of the KYVPLibTL library.

KYVPLibTL Introduction KYVPLibTL Handles KYVPLibTL Structs KYVPLibTL Functions

7.1 KYVPLibTL Introduction

7.2 KYVPLibTL Handles

7.2.1 Library handles

Handle	Name	Description
KYVP_TL_HANDLE	Library handle	Handle for System Module access
KYVP_PCI_INTERFACE_HANDLE	PCI Interface handle	Handle for PCI Interface Module access
KYVP_DEVICE_HANDLE	Local device handle	Handle for Local Device Module access
KYVP_REMOTE_DEVICE_HANDLE	Remote device handle	Handle for Remote Device Module access
KYVP_STREAM_HANDLE	Stream interface handle	Handle for Data Stream Module access
KYVP_BUFFER_HANDLE	Buffer interface handle	Handle for Buffer Module access

7.2.2 KYVP_TL_HANDLE

Structure Field	Description	Remarks
pNativePointer	Native pointer to handler	

7.2.3 KYVP_PCI_INTERFACE_HANDLE

Structure Field	Description	Remarks
pNativePointer	Native pointer to handler	

7.2.4 KYVP_DEVICE_HANDLE

Structure Field	Description	Remarks
pNativePointer	Native pointer to handler	

7.2.5 KYVP_REMOTE_DEVICE_HANDLE

Structure Field	Description	Remarks
pNativePointer	Native pointer to handler	

7.2.6 KYVP_STREAM_HANDLE

Structure Field	Description	Remarks
pNativePointer	Native pointer to handler	

7.2.7 KYVP_BUFFER_HANDLE

Structure Field	Description	Remarks
pNativePointer	Native pointer to handler	

7.3 KYVPLibTL Structs

NEW BUFFER KYVPLIBTL EVENT STRUCTURE.

7.3.1 KYVPLIBTL_EVENT_NEW_BUFFER_DATA

Structure Field	Type	Description	Remarks
hBufferHandle	KYVP_BUFFER_HANDLE	Buffer handle which contains new data	
pUserPointer	void*	User pointer provided at announcement of the buffer.	

7.3.2 KYVPLibTL_GetPortUrl_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hTLHandle	KYVP_TL_HANDLE	TL Handle	
pszURL	char*	Pointer to user allocated buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

7.3.3 KYVPLibTL_ReadPort_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hTLHandle	KYVP_TL_HANDLE	TL Handle	
iAddress	uint64_t	Port address	
pBuffer	void*	Pointer to user allocated buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

7.3.4 KYVPLibTL_WritePort_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hTLHandle	KYVP_TL_HANDLE	TL Handle	
iAddress	uint64_t	Port address	
pBuffer	void*	Pointer to user allocated const buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

7.3.5 KYVPLibTL_PCIInterface_GetPortUrl_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	Interface Handle	
pszURL	char*	Pointer to user allocated buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

7.3.6 KYVPLibTL_PCIInterface_ReadPort_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	Interface Handle	
iAddress	uint64_t	Port address	
pBuffer	void*	Pointer to user allocated buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

7.3.7 KYVPLibTL_PCIInterface_WritePort_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	Interface Handle	
iAddress	uint64_t	Port address	
pBuffer	void*	Pointer to user allocated const buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

7.3.8 KYVPLibTL_Device_GetPortUrl_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDevHandle	KYVP_DEVICE_HANDLE	Local device handle	
pszURL	char*	Pointer to user allocated buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

7.3.9 KYVPLibTL_Device_ReadPort_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	

Structure Field	Type	Description	Remarks
hDevHandle	KYVP_DEVICE_HANDLE	Local device handle	
iAddress	uint64_t	Port address	
pBuffer	void*	Pointer to user allocated buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

7.3.10 KYVPLibTL_Device_WritePort_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDevHandle	KYVP_DEVICE_HANDLE	Local device handle	
iAddress	uint64_t	Port address	
pBuffer	const void*	Pointer to user allocated const buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

7.3.11 KYVPLibTL_RemoteDevice_GetPortUrl_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDevHandle	KYVP_REMOTE_DEVICE_HANDLE	Remote device handle	
pszURL	char*	Pointer to user allocated buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

7.3.12 KYVPLibTL_RemoteDevice_ReadPort_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDevHandle	KYVP_REMOTE_DEVICE_HANDLE	Remote device handle	
pBuffer	void*	Pointer to user allocated buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

7.3.13 KYVPLibTL_RemoteDevice_WritePort_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDevHandle	KYVP_REMOTE_DEVICE_HANDLE	Remote device handle	
iAddress	uint64_t	Port Address	
pBuffer	const void*	Pointer to user allocated const buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

7.3.14 KYVPLibTL_Stream_GetPortUrl_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	

Structure Field	Type	Description	Remarks
hStreamHandle	KYVP_STREAM_HANDLE	Stream handle	
pszURL	char*	Pointer to user allocated buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

7.3.15 KYVPLibTL_Stream_ReadPort_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hStreamHandle	KYVP_STREAM_HANDLE	Stream handle	
iAddress	uint64_t	Port address	
pBuffer	void*	Pointer to user allocated buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

7.3.16 KYVPLibTL_Stream_WritePort_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hStreamHandle	KYVP_STREAM_HANDLE	Stream handle	
iAddress	uint64_t	Port address	
pBuffer	const void*	Pointer to user allocated const buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

7.3.17 KYVPLibTL_TLOpen_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
phTLHandle	KYVP_TL_HANDLE*	Pointer to KYVP_TL_HANDLE	

7.3.18 KYVPLibTL_TLClose_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
phTLHandle	KYVP_TL_HANDLE	KYVP_TL HANDLE	

7.3.19 KYVPLibTL_TLGetInfo_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
phTLHandle	KYVP_TL_HANDLE	KYVP_TL HANDLE	
eInfoCmd	KYVP_TL_INFO_CMD	Information to be retrieved as defined in KYVP_TL_INFO_CMD	

| pType | KYVP_INFO_DATATYPE | Data type of the pBuffer content as defined in the KYVP_INFO_DATATYPE | | pBuffer | void* | Pointer to a user allocated buffer to receive the requested information. If this parameter is NULL, piSize will contain the minimal size of pBuffer in bytes. If the iType is a string the size includes the terminating 0.| | piSize | size_t* | Number of bytes filled by the function | |

7.3.20 KYVPLibTL_TLGetNumInterfaces_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hTLHandle	KYVP_TL_HANDLE	KYVP_TL HANDLE	
piNumIfaces	uint32_t*	Pointer to user allocated uint32_t	

7.3.21 KYVPLibTL_TLGetInterfaceID_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hTLHandle	KYVP_TL_HANDLE	KYVP_TL HANDLE	
iIndex	uint32_t	Interface index	
pszID	char*	Pointer to user allocated char* buffer	
piSize	size_t*	Pointer to user allocated size_t* buffer	

7.3.22 KYVPLibTL_TLGetPCIInterfaceInfo_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hTLHandle	KYVP_TL_HANDLE	KYVP_TL HANDLE	
pszIfaceID	const char*	Interface ID from KYVPLibTL_TLGetInterfaceID func	
eInfoCmd	KYVP_INTERFACE_INFO_CMD	Information to be retrieved	
pType	KYVP_INFO_DATATYPE*	Data type of the pBuffer content	
pBuffer	void*	Pointer to a user allocated buffer	
piSize	size_t*	out: minimal size of pBuffer	

7.3.23 KYVPLibTL_TLOpenInterface_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hTLHandle	KYVP_TL_HANDLE	KYVP_TL HANDLE	
pszIfaceID	const char*	Unique interface ID to open as a 0-terminated C string	
phPCIInterfaceHandle	KYVP_PCI_INTERFACE_HANDLE*	Pointer to KYVP_PCI_INTERFACE_HANDLE	

7.3.24 KYVPLibTL_TLUpdatePCIInterfaceList_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hTLHandle	KYVP_TL_HANDLE	KYVP_TL HANDLE	
pbChanged	KY_BOOL*	Contains KY_TRUE if the internal list was changed and KY_FALSE otherwise. If set to NULL nothing is written to this parameter	
iTimeout	uint64_t	Timeout in ms.	

7.3.25 KYVPLibTL_IFClose_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hTLHandle	KYVP_PCI_INTERFACE_HANDLE	System module handle to close	

7.3.26 KYVPLibTL_IFGetInfo_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	Interface module to work on.	
eInfoCmd	KYVP_INTERFACE_INFO_CMD	Information to be retrieved	
pType	KYVP_INFO_DATATYPE *	Pointer to data type of the pBuffer content	
pBuffer	void*	Pointer to a user allocated buffer	

| piSize* | size_t* | Number of bytes filled by the function

7.3.27 KYVPLibTL_IFGetNumDevices_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	Interface module to work on.	
pNumDevices	uint32_t*	Number of devices	

7.3.28 KYVPLibTL_IFGetDeviceID_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	Interface module to work on.	
iIndex	uint32_t	Device index	
pszID	char*	Pointer to a user allocated C string buffer to receive the Device module ID at the given iIndex	
piSize	size_t*	Minimal size of pBuffer in bytes to hold all information	

7.3.29 KYVPLibTL_IFUpdateDeviceList_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	Interface module to work on.	
pbChanged	KY_BOOL*	Contains KY_TRUE if the internal list was changed and KY_FALSE otherwise.	
uTimeout	uint64_t	Timeout in ms	

7.3.30 KYVPLibTL_IFGetDeviceInfo_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	Interface module to work on.	
pszIfaceID	const char*	Unique ID of the device to inquire information about.	
eInfoCmd	KYVP_DEVICE_INFO_CMD	Information to be retrieved	
pType	KYVP_INFO_DATATYPE*	Data type of the pBuffer content	
pBuffer	void*	Pointer to a user allocated buffer	
piSize	size_t*	Number of bytes filled by the function	

7.3.31 KYVPLibTL_IFOpenDevice_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	Interface module to work on.	
pszDeviceID	const char*	Unique device ID to open as a 0-terminated C string.	
iOpenFlags	KYVP_DEVICE_ACCESS_FLAGS	Configures the open process	
phDeviceHandle	KYVP_DEVICE_HANDLE*	Device handle of the newly created Device module.	

7.3.32 KYVPLibTL_IFRegisterEvent_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	Module handle to access to register event to	
iEventID	KYVP_EVENT_TYPE	Event type to register	
phEvent	KYVP_EVENT_HANDLE*	New handle to an event object to work with	

7.3.33 KYVPLibTL_IFUnregisterEvent_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	Module handle to access to unregister event from	

Structure Field	Type	Description	Remarks
iEventID	KYVP_EVENT_TYPE	Event type to register	
phEvent	KYVP_EVENT_HANDLE*	New handle to an event object to work with	

7.3.34 KYVPLibTL_DevGetPort_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDevHandle	KYVP_DEVICE_HANDLE	Device module to work on.	
phRemoteDeviceHandle	KYVP_REMOTE_DEVICE_HANDLE*	Port handle for the remote device	

7.3.35 KYVPLibTL_DevGetNumDataStreams_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDevHandle	KYVP_DEVICE_HANDLE	Device module to work on.	
piNumDataStreams	uint32_t*	Number of data stream on this Device module.	

7.3.36 KYVPLibTL_DevGetDataStreamID_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDevHandle	KYVP_DEVICE_HANDLE	Device module to work on.	
iIndex	uint32_t	Zero-based index of the data stream on this device	
sDataStreamID	char*	Pointer to a user allocated C string buffer	
piSize	size_t*	Number of bytes filled by the function	

7.3.37 KYVPLibTL_DevOpenDataStream_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDevHandle	KYVP_DEVICE_HANDLE	Device module to work on.	
pszDataStreamID	const char*	Unique data stream ID to open as a 0-terminated C string	
phDataStream	KYVP_STREAM_HANDLE*	Data Stream module handle of the newly created stream	

7.3.38 KYVPLibTL_DevGetInfo_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDevHandle	KYVP_DEVICE_HANDLE	Device module to work on.	
iInfoCmd	KYVP_DEVICE_INFO_CMD	Information to be retrieved	
piType	KYVP_INFO_DATATYPE*	Data type of the pBuffer content	

Structure Field	Type	Description	Remarks
pBuffer	void*	Pointer to a user allocated buffer	
piSize	size_t*	Number of bytes filled by the function	

7.3.39 KYVPLibTL_DevClose_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDevHandle	KYVP_DEVICE_HANDLE	Device module handle to close	

7.3.40 KYVPLibTL_DSAnnounceBuffer_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDSHandle	KYVP_STREAM_HANDLE	Data Stream module to work on.	
pBuffer	void*	Pointer to buffer memory to announce	
iSize	size_t	Size of the pBuffer in bytes	
pPrivate	void*	Pointer to private data which will be passed to the GenTL Consumer on New Buffer events. This parameter may be NULL	
phBuffer	KYVP_BUFFER_HANDLE*	Buffer module handle of the newly announced buffer. I	

7.3.41 KYVPLibTL_DSAllocAndAnnounceBuffer_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDSHandle	KYVP_STREAM_HANDLE	Data Stream module to work on.	
iSize	size_t	Size of the buffer in bytes	
pPrivate	void*	Pointer to private data which will be passed to the Consumer on New Buffer events. This parameter may be NULL	
phBuffer	KYVP_BUFFER_HANDLE*	Buffer module handle of the newly announced buffer	

7.3.42 KYVPLibTL_DSStartAcquisition_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDSHandle	KYVP_STREAM_HANDLE	Data Stream module to work on	
iStartFlags	KYVP_ACQ_START_FLAGS	As defined in KYVP_ACQ_START_FLAGS	
iNumToAcquire	uint64_t	Sets the number of filled/delivered buffers after which the acquisition engine stops automatically if set 0 the acquisition continues until a call to KYVPLibTL_DSStopAcquisition	

7.3.43 KYVPLibTL_DSStopAcquisition_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDSHandle	KYVP_STREAM_HANDLE	Data Stream module to work on	
iStopFlags	KYVP_ACQ_STOP_FLAGS	Stops the acquisition as defined in KYVP_ACQ_STOP_FLAGS	

7.3.44 KYVPLibTL_DSGetInfo_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDSHandle	KYVP_STREAM_HANDLE	Data Stream module to work on	
eInfoCmd	KYVP_STREAM_INFO_CMD	Information to be retrieved	
pType	KYVP_INFO_DATATYPE∗	Data type of the pBuffer content	
pBuffer	void∗	Pointer to a user allocated buffer to receive the requested information	
piSize	size_t∗	number of bytes filled by the function	

7.3.45 KYVPLibTL_DSGetBufferID_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDSHandle	KYVP_STREAM_HANDLE	Data Stream module to work on	
iIndex	uint32_t	Zero-based index of the buffer on this data stream	
ppBufferHandle	KYVP_BUFFER_HANDLE∗	Buffer module handle of the given iIndex	

7.3.46 KYVPLibTL_DSClose_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDSHandle	KYVP_STREAM_HANDLE	Data Stream module to work on	

7.3.47 KYVPLibTL_DSRevokeBuffer_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDSHandle	KYVP_STREAM_HANDLE	Data Stream module to work on	
hBufferHandle	KYVP_BUFFER_HANDLE	Buffer handle to revoke	
ppBuffer	void∗∗	Pointer to the buffer memory This is for convenience ifConsumer allocated memory is used which is to befreed. If the buffer was allocated by the GenTL Producer NULL is to be returned. If the parameter is set to NULL it is ignored.	
ppPrivate	void∗∗	Pointer to the user data pointer given in the announce function. If the parameter is set to NULL it is ignored.	

7.3.48 KYVPLibTL_DSQueueBuffer_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDSHandle	KYVP_STREAM_HANDLE	Data Stream module to work on	
hBufferHandle	KYVP_BUFFER_HANDLE	Buffer handle to queue	

7.3.49 KYVPLibTL_DSGetBufferInfo_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDSHandle	KYVP_STREAM_HANDLE	Data Stream module to work on	
hBufferHandle	KYVP_BUFFER_HANDLE	Buffer handle to retrieve information about	
iInfoCmd	KYVP_BUFFER_INFO_CMD	Information to be retrieved	
piType	@refKYVP_INFO_DATATYPE∗	Data type of the pBuffer content	
pBuffer	void∗	Pointer to a user allocated buffer to receive the requested information	
piSize	size_t∗	number of bytes filled by the function	

7.3.50 KYVPLibTL_DSRegisterEvent_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDSHandle	KYVP_STREAM_HANDLE	Module handle to access to register event to	
iEventID	KYVP_EVENT_TYPE	Event type to register	
phEvent	KYVP_EVENT_HANDLE∗	New handle to an event object to work with	

7.3.51 KYVPLibTL_DSUnregisterEvent_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hDSHandle	KYVP_STREAM_HANDLE	Module handle to access to unregister event from	
iEventID	KYVP_EVENT_TYPE	Event type to register	

7.3.52 KYVPLibTL_EventGetData_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hEventHandle	KYVP_EVENT_HANDLE	PEvent handle to wait for	
void∗	pBuffer	Pointer to a user allocated buffer	
piSize	size_t∗	Size of the provided pBuffer in bytes	
iTimeout	uint64_t	Timeout for the wait in ms	

7.3.53 KYVPLibTL_EventGetDataInfo_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hEventHandle	KYVP_EVENT_HANDLE	Event handle to parse data from	
pInBuffer	const void*	Pointer to a buffer containing event data	
iInSize	size_t	Size of the provided pInBuffer in bytes	
iInfoCmd	KYVP_EVENT_DATA_INFO_CMD	Information to be retrieved	
piType	KYVP_INFO_DATATYPE*	Data type of the pOutBuffer content	
pOutBuffer	void*	Pointer to a user allocated buffer	
piOutSize	size_t*	number of bytes filled by the function	

7.3.54 KYVPLibTL_EventGetInfo_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hEventHandle	KYVP_EVENT_HANDLE	Event handle to parse data from	
iInfoCmd	KYVP_EVENT_INFO_CMD	Information to be retrieved	
piType	KYVP_INFO_DATATYPE*	Data type of the pBuffer content	
pBuffer	void*	Pointer to a user allocated buffer	
piSize	size_t*	Number of bytes filled by the function	

7.3.55 KYVPLibTL_EventFlush_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hEventHandle	KYVP_EVENT_HANDLE	Event handle	

7.3.56 KYVPLibTL_EventKill_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hEventHandle	KYVP_EVENT_HANDLE	Event handle	

7.4 KYVPLibTL Functions

Functional areas of the KYVPLibTL library.

- KYVPLibTL System Functions
- KYVPLibTL Interface Functions
- KYVPLibTL Stream Functions
- KYVPLibTL Event Functions

7.4.1 KYVPLibTL System Functions

Functions in System module of the KYVPLibTL library.

7.4.1.1 KYVPLibTL_TLOpen()

Opens the System module and puts the instance.

7.4.1.1.1 C

```
KY_RESULT KYVPLibTL_TLOpen(KYVPLibTL_TLOpen_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_TLOpen_Args

Returns

KY_RESULT Status and error report

7.4.1.2 KYVPLibTL_TLClose()

Close the System module and puts the instance.

7.4.1.2.1 C

```
KY_RESULT KYVPLibTL_TLClose(KYVPLibTL_TLClose_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_TLClose_Args

Returns

KY_RESULT Status and error report

7.4.1.3 KYVPLibTL_TLGetInfo()

Inquire information about the System module.

7.4.1.3.1 C

```
KY_RESULT KYVPLibTL_TLGetInfo(KYVPLibTL_TLGetInfo_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_TLGetInfo_Args

Returns

KY_RESULT Status and error report

7.4.1.4 KYVPLibTL_TLGetNumInterfaces()

Queries the number of available interfaces on this System module.

7.4.1.4.1 C

```
KY_RESULT KYVPLibTL_TLGetNumInterfaces(KYVPLibTL_TLGetNumInterfaces_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_TLGetNumInterfaces_Args

Returns

KY_RESULT Status and error report

7.4.1.5 KYVPLibTL_TLGetInterfaceID()

Queries the unique ID of the interface at iIndex in the internal interface list.

7.4.1.5.1 C

```
KY_RESULT KYVPLibTL_TLGetInterfaceID(KYVPLibTL_TLGetInterfaceID_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_TLGetInterfaceID_Args

Returns

KY_RESULT Status and error report

7.4.1.6 KYVPLibTL_TLGetInterfaceInfo()

Inquire information about an interface on the given System module.

7.4.1.6.1 C

```
KY_RESULT KYVPLibTL_TLGetInterfaceInfo(KYVPLibTL_TLGetInterfaceInfo_Struct _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_TLGetInterfaceInfo_Struct

Returns

KY_RESULT Status and error report

7.4.1.7 KYVPLibTL_TLOpenInterface()

Opens the given interface ID.

7.4.1.7.1 C

```
KY_RESULT KYVPLibTL_TLOpenInterface(KYVPLibTL_TLOpenInterface_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_TLOpenInterface_Args

Returns

KY_RESULT Status and error report

7.4.1.8 KYVPLibTL_TLUpdateInterfaceList()

Updates the internal list of available interfaces.

7.4.1.8.1 C

```
KY_RESULT KYVPLibTL_TLUpdateInterfaceList(KYVPLibTL_TLUpdateInterfaceList_Struct _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_TLUpdateInterfaceList_Struct

Returns

KY_RESULT Status and error report

7.4.2 KYVPLibTL Interface Functions

Functions in Interface module of the KYVPLibTL library.

7.4.2.1 KYVPLibTL_IFClose()

Closes the Interface module.

7.4.2.1.1 C

```
KY_RESULT KYVPLibTL_IFClose(KYVPLibTL_IFClose_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_IFClose_Args

Returns

KY_RESULT Status and error report

7.4.2.2 KYVPLibTL_IFGetInfo()

Inquires information about the Interface module.

7.4.2.2.1 C

```
KY_RESULT KYVPLibTL_IFGetInfo(KYVPLibTL_IFGetInfo_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_IFGetInfo_Args

Returns

KY_RESULT Status and error report

7.4.2.3 KYVPLibTL_IFGetNumDevices()

Queries the number of available devices on this Interface module.

7.4.2.3.1 C

```
KY_RESULT KYVPLibTL_IFGetNumDevices(KYVPLibTL_IFGetNumDevices_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_IFGetNumDevices_Args

Returns

KY_RESULT Status and error report

7.4.2.4 KYVPLibTL_IFGetDeviceID()

Queries the unique ID of the device at iIndex in the internal device list.

7.4.2.4.1 C

```
KY_RESULT KYVPLibTL_IFGetDeviceID(KYVPLibTL_IFGetDeviceID_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_IFGetDeviceID_Args

Returns

KY_RESULT Status and error report

7.4.2.5 KYVPLibTL_IFUpdateDeviceList()

Updates the internal list of available devices.

7.4.2.5.1 C

```
KY_RESULT KYVPLibTL_IFUpdateDeviceList(KYVPLibTL_IFUpdateDeviceList_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_IFUpdateDeviceList() Struct

Returns

KY_RESULT Status and error report

7.4.2.6 KYVPLibTL_IFGetDeviceInfo()

Inquires information about a device.

7.4.2.6.1 C

```
KY_RESULT KYVPLibTL_IFGetDeviceInfo(KYVPLibTL_IFGetDeviceInfo_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_IFGetDeviceInfo_Args

Returns

KY_RESULT Status and error report

7.4.2.7 KYVPLibTL_IFOpenDevice()

Opens the given sDeviceID with the given iOpenFlags.

7.4.2.7.1 C

```
KY_RESULT KYVPLibTL_IFOpenDevice(KYVPLibTL_IFOpenDevice_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_IFOpenDevice_Args

Returns

KY_RESULT Status and error report

7.4.2.8 KYVPLibTL_IFRegisterEvent()

Register event for PCI Interface.

7.4.2.8.1 C

```
KY_RESULT KYVPLibTL_IFRegisterEvent(KYVPLibTL_IFRegisterEvent_Args* _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_IFRegisterEvent_Args

Returns

KY_RESULT Status and error report

7.4.2.9 KYVPLibTL_IFUnregisterEvent()

Unregister event from PCI Interface.

7.4.2.9.1 C

```
KY_RESULT KYVPLibTL_IFUnregisterEvent(KYVPLibTL_IFUnregisterEvent_Args* _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_IFUnregisterEvent_Args

Returns

KY_RESULT Status and error report

7.4.3 KYVPLibTL Stream Functions

Functions in Stream module of the KYVPLibTL library.

7.4.3.1 KYVPLibTL_DSAnnounceBuffer()

This announces a GenTL Consumer allocated memory to the Data Stream associated with the hDataStream handle and returns a hBuffer handle which references that single buffer until the buffer is revoked.

7.4.3.1.1 C

```
KY_RESULT KYVPLibTL_DSAnnounceBuffer(KYVPLibTL_DSAnnounceBuffer_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DSAnnounceBuffer_Args

Returns

KY_RESULT Status and error report

7.4.3.2 KYVPLibTL_DSAllocAndAnnounceBuffer()

This function allocates the memory for a single buffer and announces this buffer to the Data Stream associated with the hDataStream handle and returns a hBuffer handle which references that single buffer until the buffer is revoked.

7.4.3.2.1 C

```
KY_RESULT KYVPLibTL_DSAllocAndAnnounceBuffer(KYVPLibTL_DSAllocAndAnnounceBuffer_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DSAllocAndAnnounceBuffer_Args

Returns

KY_RESULT Status and error report

7.4.3.3 KYVPLibTL_DSStartAcquisition()

Starts the acquisition engine on the host. After calling need to send command to remote device for start Acquisition

7.4.3.3.1 C

```
KY_RESULT KYVPLibTL_DSStartAcquisition(KYVPLibTL_DSStartAcquisition_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DSStartAcquisition_Args

Returns

KY_RESULT Status and error report

7.4.3.4 KYVPLibTL_DSStopAcquisition()

Stops the acquisition engine on the host. After calling need to send command to remote device for stop Acquisition

7.4.3.4.1 C

```
KY_RESULT KYVPLibTL_DSStopAcquisition(KYVPLibTL_DSStopAcquisition_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DSStopAcquisition_Args

Returns

KY_RESULT Status and error report

7.4.3.5 KYVPLibTL_DSGetInfo()

Inquires information about the Data Stream module associated with hDataStream.

7.4.3.5.1 C

```
KY_RESULT KYVPLibTL_DSGetInfo(KYVPLibTL_DSGetInfo_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DSGetInfo_Args

Returns

KY_RESULT Status and error report

7.4.3.6 KYVPLibTL_DSGetBufferID()

Queries the buffer handle for a given index iIndex.

7.4.3.6.1 C

```
KY_RESULT KYVPLibTL_DSGetBufferID(KYVPLibTL_DSGetBufferID_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DSGetBufferID_Args

Returns

KY_RESULT Status and error report

7.4.3.7 KYVPLibTL_DSClose()

Closes the Data Stream module associated with the given hDataStream handle.

7.4.3.7.1 C

```
KY_RESULT KYVPLibTL_DSClose(KYVPLibTL_DSClose_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DSClose_Args

Returns

KY_RESULT Status and error report

7.4.3.8 KYVPLibTL_DSRevokeBuffer()

Removes an announced buffer from the acquisition engine.

7.4.3.8.1 C

```
KY_RESULT KYVPLibTL_DSRevokeBuffer(KYVPLibTL_DSRevokeBuffer_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DSRevokeBuffer_Args

Returns

KY_RESULT Status and error report

7.4.3.9 KYVPLibTL_DSQueueBuffer()

This function queues a particular buffer for acquisition.

7.4.3.9.1 C

```
KY_RESULT KYVPLibTL_DSQueueBuffer(KYVPLibTL_DSQueueBuffer_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DSQueueBuffer_Args

Returns

KY_RESULT Status and error report

7.4.3.10 KYVPLibTL_DSGetBufferInfo()

Inquire information about the Buffer module associated with hBuffer on the hDataStream instance.

7.4.3.10.1 C

```
KY_RESULT KYVPLibTL_DSGetBufferInfo(KYVPLibTL_DSGetBufferInfo_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DSGetBufferInfo_Args

Returns

KY_RESULT Status and error report

7.4.3.11 KYVPLibTL_DSRegisterEvent()

Registers an event object to a certain iEventID. The implementation might change depending on the platform.

7.4.3.11.1 C

```
KY_RESULT KYVPLibTL_DSRegisterEvent(KYVPLibTL_DSRegisterEvent_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DSRegisterEvent_Args

Returns

KY_RESULT Status and error report

7.4.3.12 KYVPLibTL_DSUnregisterEvent()

A call to this function will unregister the given iEventID from the given hModule.

7.4.3.12.1 C

```
KY_RESULT KYVPLibTL_DSUnregisterEvent(KYVPLibTL_DSUnregisterEvent_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DSUnregisterEvent_Args

Returns

KY_RESULT Status and error report

7.4.4 KYVPLibTL Event Functions

Functions in Event module of the KYVPLibTL library.

7.4.4.1 KYVPLibTL_EventGetData()

Retrieves the next event data entry from the event data queue associated with the hEvent.

7.4.4.1.1 C

```
KY_RESULT KYVPLibTL_EventGetData(KYVPLibTL_EventGetData_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_EventGetData_Args

Returns

KY_RESULT Status and error report

7.4.4.2 KYVPLibTL_EventGetDataInfo()

Retrieves the next event data entry from the event data queue associated with the hEvent.

7.4.4.2.1 C

```
KY_RESULT KYVPLibTL_EventGetDataInfo(KYVPLibTL_EventGetDataInfo_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_EventGetDataInfo_Args

Returns

KY_RESULT Status and error report

7.4.4.3 KYVPLibTL_EventGetInfo()

Retrieves information about the given hEvent object.

7.4.4.3.1 C

```
KY_RESULT KYVPLibTL_EventGetInfo(KYVPLibTL_EventGetInfo_ Struct _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_EventGetInfo_ Struct

Returns

KY_RESULT Status and error report

7.4.4.4 KYVPLibTL_EventFlush()

Flushes all events in the given hEvent object.

7.4.4.4.1 C

```
KY_RESULT KYVPLibTL_EventFlush(KYVPLibTL_EventFlush_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_EventFlush_Args

Returns

KY_RESULT Status and error report

7.4.4.5 KYVPLibTL_EventKill()

Terminates a waiting operation on a previously registered event object.

7.4.4.5.1 C

```
KY_RESULT KYVPLibTL_EventKill(KYVPLibTL_EventKill_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_EventKill_Args

Returns

KY_RESULT Status and error report

8 Parameters Handler Library

KYVP_ParametersHandler Description
Parameters Handler Library Structs
KYVP_NodeDescriptor
Parameters Handler Functions

8.1 KYVP_ParametersHandler Description

8.2 Parameters Handler Library Structs

KYPARAMETERSHANDLER TRANSPORT.

8.2.1 KYVP_COLLECTION_HANDLE

Struct Field	Description
pNativePointer	Pointer to Collection Handle

8.2.2 CALLBACK FUNCTIONS

Callback function	Definition
TRANSPORT_FUNC	`typedef void (*TRANSPORT_FUNC)(KYParametersHandler_TransportCallParams_Args* _pArgs);`
PARAMETER_CALLBACK_FUNC	`typedef void (*PARAMETER_CALLBACK_FUNC)(const KYVP_NodeDescriptor* _pNodeDescriptor, void* _pContext);`

8.2.3 ENUM KYParametersHandler_TransportOperationType

Enum Field	Value	Description	Remarks
KYParametersHandler_TransportOperationType_Read	0x0	Read Action	
KYParametersHandler_TransportOperationType_Write	0x1	Write Action	
KYParametersHandler_TransportOperationType_GetResourceData	0x2	Get Resource Data	

8.2.4 KYParametersHandler_TransportCallParams_Args

Structure Field	Type	Description	Remarks
version	uint32_t	structure version	
eOperation	ENUM KYParametersHandler_TransportOperationType	Operation type Read, Write or GetResourceData file	
pData	void*	Pointer to current operation buffer	
pContext	void*	Pointer to context	
iAddress	uint64_t	Access address	
iSize	size_t	ResourceData file size in bytes	
bResourceDataZipped	KY_BOOL	Is ResourceData file zipped	
eResult	KYParametersHandler_↩ TransportOperationResult	Transport operation finished result	

8.2.5 KYParametersHandler_InitParameters

Structure Field	Type	Description	Remarks
uint32_t	version	Version of this structure definition, must be between 1 and KY_↩ MAX_INIT_VERSION	

8.2.6 KYParametersHandler_Initialize_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
pInitParameters	KYParametersHandler_InitParameters	pointer to KYParametersHandler_↩ InitParameters struct	

Structure Field	Type	Description	Remarks
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.7 KYParametersHandler_CreateParameterCollection_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
phCollectionHandle	KYVP_COLLECTION_HANDLE KYVP_COLLECTION_HANDLE*	Pointer to KYVP_COLLECTION_↩ HANDLE that will be filled	
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.8 KYParametersHandler_DeleteParameterCollection_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.9 KYParametersHandler_RegisterParameterCollectionTransport_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	
pTRANSPORT_FUNC	CALLBACK FUNCTIONS TRANSPORT_FUNC	Pointer to user transport function	
pContext	void*	Pointer to User context	

Structure Field	Type	Description	Remarks
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.10 KYParametersHandler_UnregisterParameterCollectionTransport_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.11 KYParametersHandler_RegisterParameterCollectionCallback_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	
pPARAMETER_CALLBACK↩ _FUNC	CALLBACK FUNCTIONS PARAMETER_CALLBACK_↩ FUNC	Pointer to user Callback function	
pContext	void*	Pointer to userContext	
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.12 KYParametersHandler_UnregisterParameterCollectionCallback_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	

Structure Field	Type	Description	Remarks
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.13 KYParametersHandler_InitializeParameterCollection_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.14 KYParametersHandler_GetNodeDescriptor_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	
pszParamName	const char*	Parameter name	
ppNodeDescriptor	KYVP_NodeDescriptor**	Pointer to Node Descriptor	
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.15 KYParametersHandler_GetNodeDescriptorsArray_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	
ppArray	const KYVP_NodeDescriptor**	Pointer to const Node Descriptors Array. The pointed data must be treated as read-only: modifying its contents is undefined behavior	
piSize	size_t*	Pointer to size_t number of elements in array	

Structure Field	Type	Description	Remarks
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.16 KYParametersHandler_GetValue_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	
pszParamName	const char*	Parameter name	
pParamValue	void*	Parameter value	
piParamValueSize	size_t*	Param value size in bytes	
pszErrorString	char*	pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	pointer to size_t variable with buffer size provided	

8.2.17 KYParametersHandler_SetValue_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	
pszParamName	const char*	Param name	
pParamValue	const void*	Param value	
piParamValueSize	size_t*	Param value size in bytes	
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.18 KYParametersHandler_GetValueEnumAsString_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	
pszEnumerationName	const char*	Enumeration param name	
pszParamValueString	char*	Buffer for current param name	
piParamValueStringSize	size_t*	Buffer value size in bytes	

Structure Field	Type	Description	Remarks
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.19 KYParametersHandler_SetValueEnumByValueName_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	
pszParamName	const char*	Param name	
pszParamValue	const char*	Param value	
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.20 KYParametersHandler_InvalidateParameterCollection_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.21 KYParametersHandler_InvalidateParameter_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	
pszParamName	const char*	Parameter name	
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	

Structure Field	Type	Description	Remarks
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.22 KYParametersHandler_SaveToFile_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	
pszFilePath	const char*	Path to file	
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.23 KYParametersHandler_GetParameterAttributeValueArgs

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	
pszParamName	const char*	Parameter name	
eAttributeType	KYVP_ParameterAttributeType	Attribute type	
pszPropertyValue	char*	Pointer toValue of attribute that should be filled	
stringSize	size_t*	Pointer value string size that should be filled	
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.2.24 KYParametersHandler_IsParameterAvailableArgs

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hCollectionHandle	KYVP_COLLECTION_HANDLE	Collection handle	
pszParamName	const char*	Parameter name	
bIsAvailable	KY_BOOL	KY_TRUE if the parameter is available in the collection	
pszErrorString	char*	Pointer to buffer for returning an error description. If an error occurs, the error message will be copied to the specified buffer. If the provided pointer is nullptr, the error string will not be copied.	

Structure Field	Type	Description	Remarks
piErrorStringSize	size_t*	Pointer to size_t variable with buffer size provided	

8.3 KYVP Node Descriptor

8.3.1 KYVP_NodeDescriptorType

Enum Field	Value	Description
KYVP_NodeDescriptorType_Invalid	0x1	
KYVP_NodeDescriptorType_NewNode	0x2	
KYVP_NodeDescriptorType_NewEnumEntry	0x3	
KYVP_NodeDescriptorType_UpdateNode	0x4	

8.3.2 KYVP_ParameterInterfaceType

Enum Field	Value	Description
KYVP_ParameterInterfaceType_IValue	0x0	
KYVP_ParameterInterfaceType_IBase	0x1	
KYVP_ParameterInterfaceType_IInteger	0x2	
KYVP_ParameterInterfaceType_IBoolean	0x3	
KYVP_ParameterInterfaceType_ICommand	0x4	
KYVP_ParameterInterfaceType_IFloat	0x5	
KYVP_ParameterInterfaceType_IString	0x6	
KYVP_ParameterInterfaceType_IRegister	0x7	
KYVP_ParameterInterfaceType_ICategory	0x8	
KYVP_ParameterInterfaceType_IEnumeration	0x9	
KYVP_ParameterInterfaceType_IEnumEntry	0xA	
KYVP_ParameterInterfaceType_IPort	0xB	
KYVP_ParameterInterfaceType_IUnknown	0xC	

8.3.3 KYVP_ParameterRepresentation

Enum Field	Value	Description
KYVP_ParameterRepresentation_Linear	0x0	
KYVP_ParameterRepresentation_Logarithmic	0x1	
KYVP_ParameterRepresentation_Boolean	0x2	
KYVP_ParameterRepresentation_PureNumber	0x3	
KYVP_ParameterRepresentation_HexNumber	0x4	
KYVP_ParameterRepresentation_IPV4Address	0x5	
KYVP_ParameterRepresentation_MACAddress	0x6	
KYVP_ParameterRepresentation_UndefinedRepresentation	0x7	

8.3.4 KYVP_ParameterVisibility

Enum Field	Value	Description
KYVP_ParameterVisibility_Beginner	0x0	Always visible
KYVP_ParameterVisibility_Expert	0x1	Visible for experts or Gurus
KYVP_ParameterVisibility_Guru	0x2	Visible for Gurus
KYVP_ParameterVisibility_Invisible	0x3	Not Visible
KYVP_ParameterVisibility_Undefined	0x99	Undefined
KYVP_ParameterVisibility_Developer	0x200	KAYA Extension

8.3.5 KYVP_NodeDescriptor

Structure Field	Type	Description	Remarks
m_nVersion	int		
m_eDescriptorType	KYVP_NodeDescriptorType		
m_eInterfaceType	KYVP_ParameterInterfaceType		
m_szParamName	const char* const		
m_szParamDisplayName	const char* const		
m_szToolTip	const char* const		
m_bIsAvailable	KY_BOOL		
m_bIsWritable	KY_BOOL		
m_bIsReadable	KY_BOOL		
m_bIsSelector	KY_BOOL		
m_eRepresentation	KYVP_ParameterRepresentation		
m_eVisibility	KYVP_ParameterVisibility		
m_nMinIntValue	int64_t		
m_nMaxIntValue	int64_t		
m_nIncIntValue	int64_t		
m_nCurIntValue	int64_t		
m_nIndent	int64_t		
m_fMinFloatValue	double		
m_fMaxFloatValue	double		
m_fIncFloatValue	double		
m_nFloatDisplayPrecision	int64_t		
m_fCurFloatValue	double		
m_bCurBoolValue	KY_BOOL		
m_szCurStringValue;	const char*		
m_pParentNode;	const struct KYVP_NodeDescriptor*		
m_szSelectorName;	const char* const		
m_nCurSelectorValue;	int64_t		
m_szDescription;	const char* const		
m_bTracing;	KY_BOOL		
m_szPhysicalUnitName	const char* const		

8.3.6 KYVP_ParameterAttributeType

Enum Field	Value	Description
KYVP_ParameterAttributeType_Invalidator	0x0	

8.4 Parameters Handler Functions

Init functions
Uninit functions
Set and Get functions
Comparison functions

9 Image Processing Library

Introduction
Image Processing Library Functions
Image Processing Library Structs

9.1 Introduction

9.2 Image Processing Library Functions

Image processing Init functions
Image processing Init functions
Image processing Conversation functions
Image processing save and record functions
Image processing Get functions
Comparison Functions

9.3 Image Processing Library Structs

9.3.1 KYVP_VIDEO_PIXELIF

The pixel format code is formed as shown in Table 24 of the JIIA CXP document. Note that the value 0x0000 is reserved for 'RAW' data that does not match any defined format, such as user-specific formats

```
typedef struct _kyvp_video_pixelif
{
KYVP_VIDEO_DATA_WIDTH data_width : 4; // Data Width
KYVP_VIDEO_DATA_SUBTYPE data_subtype : 4; // Sub-type
VIDEO_DATA_TYPE data_type : 8; // Data Type
}KYVP_VIDEO_PIXELIF;
```

Structure Field	Type	Description
data_width	KYVP_VIDEO_DATA_WIDTH	Data Width (4 bit value)
data_subtype	KYVP_VIDEO_DATA_SUBTYPE	Sub-type (4 bit value)
data_type	KYVP_VIDEO_DATA_TYPE	Data Type (8 bit value)

9.3.2 KYVP_PIXEL_FORMAT

Pixel format description

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	Must be between 1 and PIXEL_FORMAT_MAX↩ _VERSION
pszPFNCName	const char∗	PFNC pixel format name	
uPFNCValue	uint32_t	PFNC pixel format 32-bit value	https↩ ://www.emva.↩ org/wp-content/uploads/↩ GenICamPixel↩ FormatValues.pdf
szCxpName	const char∗	Pixel format CXP name	
uCxpValue	uint32_t	CXP pixel format 32-bit value	
bIsPacked	KY_BOOL	Packed or unpacked data for 10,12,14 bit	
bRGBReordered	KY_BOOL	It's BGR if true, else RGB	
uChannelsPerPixel	uint8_t	Number of channels per pixel	
KYVP_VIDEO_PIXELIF	KYVP_VIDEO_PIXELIF	VIDEO_PIXELIF structure	

9.3.3 KYIMGPROC_PIXEL_DECODER

Pixel format decoder struct

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
_uValue	uint32_t	PFNC 32-bit value or CXP 16-bit value	
_pszPixelFormatName	const char∗	PFNC Name value of pixel format	PFNC values read documentation↩ : https↩ ://www.emva.↩ org/wp-content/uploads/↩ GenICamPixel↩ FormatValues.pdf
_pVP_PIXEL_FORMAT	KYVP_PIXEL_FORMAT	Pointer to KYVP_↩ PIXEL_FORMAT struct	

9.3.4 KYIMGPROC_VIDEO_RECORDER_HANDLE

Structure Field	Description	Remarks
pNativePointer	Pointer to video recorder Handle	

9.3.5 KYIMGPROC_IMAGE_CONVERTER_HANDLE

Structure Field	Description	Remarks
pNativePointer	Pointer to image converter Handle	

9.3.6 VPImage

Structure Field	Type	Description	Remarks
uVersion	uint32_t	Struct version	Must be between 1 and VP_IMAGE_MAX_↩ VERSION
uWidth	uint32_t	Image width	
uHeight	uint32_t	Image height	
pBuffer	void∗	Image data buffer	Pointer to image data
uBufferSize	size_t	Image data buffer size bytes	Pointer to image data
pixelFormat	KYIMGPROC_PIXEL_↩ DECODER	pointer to KYIMGPROC_↩ PIXEL_DECODER struct	

9.3.7 PackedDataInfo

Structure Field	Type	Description	Remarks
uVersion	uint32_t	Version of the structure	
ePackedModeType	DS_PACKED_DATA_MODE	Type of the packed data format	
eProcessingModeType	DS_PACKED_DATA_↩ PROCESSING_MODE	The type of processing packed data (Trim to MSB8, expand bits to 16)	
pPixelFormat	const KYIMGPROC_PIXEL_↩ DECODER∗	The const pointer to KYIMGPROC_PIXEL_DECODER struct	
uWidth	size_t	Image width	
uHeight	size_t	Image height	
uUnpackedBufferSize	size_t	Size of buffer required to store unpacked data	

9.3.8 KYIMGPROC_InitVideoRecorderArgs

Structure Field	Type	Description	Remarks
uVersion	uint32_t	Version of the structure	
phRecordHandle	KYIMGPROC_VIDEO_↩ RECORDER_HANDLE∗	pointer to KYIMGPROC_VIDEO_RECORDER_HANDLE	

9.3.9 KYIMGPROC_DeleteVideoRecorderArgs

Structure Field	Type	Description	Remarks
uVersion	uint32_t	Version of the structure	
hRecordHandle	KYIMGPROC_VIDEO_↩ RECORDER_HANDLE	KYIMGPROC_VIDEO_RECORDER_HANDLE object	

9.3.10 KYIMGPROC_InitImageConverterArgs

Structure Field	Type	Description	Remarks
uVersion	uint32_t	Version of the structure	
hRecordHandle	KYIMGPROC_IMAGE_↩ CONVERTER_HANDLE	KYIMGPROC_IMAGE_CONVERTER_HANDLE object	

9.3.11 KYIMGPROC_DeleteImageConverterArgs

Structure Field	Type	Description	Remarks
uVersion	uint32_t	Version of the structure	
hRecordHandle	KYIMGPROC_IMAGE_↩ CONVERTER_HANDLE	KYIMGPROC_IMAGE_CONVERTER_HANDLE object	

9.3.12 KYIMGPROC_ConvertParam_Args

Structure Field	Type	Description	Remarks
uVersion	uint32_t	Version of the structure	
srcImage	VPImage	Pointer to source image struct	
dstImage	VPImage	Pointer to destination image struct	
h_ImgProcHandle	KYIMGPROC_IMAGE_↩ CONVERTER_HANDLE	The handle of an existing converter	

9.3.13 KYIMGPROC_SaveImageArgs

Structure Field	Type	Description	Remarks
uVersion	uint32_t	Version of the structure	
srcImage	VPImage*	Pointer to VPImage struct	
szFileName	const char*	FileName	

9.3.14 KYIMGPROC_SaveRawArgs

Structure Field	Type	Description	Remarks
uVersion	uint32_t	Version of the structure	
srcImage	VPImage*	Pointer to VPImage struct	
szFileName	const char*	FileName	

9.3.15 KYIMGPROC_SaveVideoArgs

Structure Field	Type	Description	Remarks
uVersion	uint32_t	Version of the structure	
hRecordHandle	KYIMGPROC_IMAGE_↩ CONVERTER_HANDLE	KYIMGPROC_IMAGE_CONVERTER_HANDLE object	
szFileName	const char*	File name	
srcPixelFormat	KYIMGPROC_PIXEL_DECODER*	Pointer to KYIMGPROC_PIXEL_DECODER	

9.3.16 KYIMGPROC_WriteVideoFrameArgs

Structure Field	Type	Description	Remarks
uVersion	uint32_t	Version of the structure	
vHandler	KYIMGPROC_VIDEO_↩ RECORDER_HANDLE	KYIMGPROC_VIDEO_RECORDER_HANDLE object	
pSrcImage	VPImage∗	Pointer to VPImage	

9.3.17 KYImgProc_StopVideoRecordArgs

Structure Field	Type	Description	Remarks
uVersion	uint32_t	Version of the structure	
vHandler	KYIMGPROC_VIDEO_↩ RECORDER_HANDLE	KYIMGPROC_VIDEO_RECORDER_HANDLE object	

9.3.18 KYImgProc_GetPackedDataInfo_Args

Structure Field	Type	Description	Remarks
uVersion	uint32_t	Version of the structure	
pPixelFormat	const KYIMGPROC_PIXEL_↩ DECODER∗	Pointer to a constant KYIMGPROC_PIXEL_DECODER structure describing the source image format	
ePackedModeType	DS_PACKED_DATA_MODE	Type of the packed data format	
eProcessingModeType	DS_PACKED_DATA_↩ PROCESSING_MODE	The type of processing packed data (Trim to MSB8, expand bits to 16)	
uWidth	size_t	Width of the source image (in pixels)	
uHeight	size_t	Height of the source image (in pixels)	
pPackedDataInfoStruct	PackedDataInfo∗	Pointer to an allocated structure that will be filled with unpacked data information	

9.3.19 KYImgProc_PreproccessPackedData_Args

Structure Field	Type	Description	Remarks
uVersion	uint32_t	Version of the structure	
pPackedDataInfoStruct	const PackedDataInfo∗	Pointer to a constant structure describing the packed data format	
pSourceData	const void∗	Pointer to the packed image data buffer	
uSourceDataSize	size_t	Size of the packed image data buffer (in bytes)	
pDestinationData	void∗	Pointer to the buffer that will receive the unpacked image data	

Structure Field	Type	Description	Remarks
uDestinationDataSize	size_t	Size of the unpacked image data buffer (in bytes)	

9.3.20 KYImgProc_GetPixelFormat_Args

Structure Field	Type	Description	Remarks
uVersion	uint32_t	Version of the structure	
uPixelFormatValue	uint32_t	PFNC 32-bit value or CXP 16-bit value	
pPixelFormatDecoder	KYIMGPROC_PIXEL_↩ DECODER*	Pointer to allocated decoder struct	

9.3.21 KYImgProc_GetPixelFormatByName_Args

Structure Field	Type	Description	Remarks
uVersion	uint32_t	Version of the structure	
pszPixelFormatName	const char*	Pointer to string buffer with PFNC pixel format name	
pPixelFormatDecoder	KYIMGPROC_PIXEL_↩ DECODER*	Pointer to allocated decoder struct	

10 Library Exiting

Library Exiting

During its operation, our KYVPLibTL library and KYVPParametersHandler library allocate certain resources that must be freed before the library is unloaded from the process:

Memory buffers

When KYVPLibTL_DSAllocAndAnnounceBuffer() used and memory buffers are allocated by our library, they are marked as such. These buffers are released by our library when the user calls KYVPLibTL_DSClose().

Background monitoring thread

There is a background monitoring thread started by our library when an application calls KYVPLibTL_TLOpen(). This thread is stopped when KYVPLibTL_TLClose() is called. Unloading the library without closing all grabber handles may lead to undefined behaviour (uncaught exceptions, etc.). The application must call KYVPLibTL_TLClose() before unloading the library.

NOTE about DllMain's DLL_PROCESS_DETACH in Windows

When our library is unloaded from the process it tries to release allocated resources, e.g., stop threads, unpin and release memory, etc. But there are significant limitations on what can be done at this stage – as it is stated in the "DllMain entry point" documentation", "There are significant limits on what you can safely do in a DLL entry point". Therefore, it is still responsibility of the user application to properly close the library and all used resourses before the DLL is unloaded.

11 API Examples

API Examples

The API samples provide practical examples to help developers efficiently integrate and utilize the API. These samples demonstrate common use cases, offer code snippets, and provide guidance on implementing various features, ensuring developers can quickly get started and optimize their applications with the Vision Point II.

Vision Point II API provides next examples:

Vision Point II API example	Description
KYFGLib_Adapter_ManualDetection_Example	Example of using Adapter to run Vision Point legacy code under Vision Point II API using Manual Detection feature.
KYFGLib_Adapter_Example	Example of using Adapter to run Vision Point legacy code under Vision Point II API with Queued Buffers approach.
KYFGLib_Example	Example of using Adapter to run Vision Point legacy code under Vision Point II API with Cyclic Buffers approach.
KYFGLibA.NET	Example of using Adapter to run Vision Point legacy code under Vision Point II API with Cyclic Buffers approach.
KYFGLibA.NET_Example_QueuedBuffers	Example of using Adapter to run Vision Point legacy code under Vision Point II API with Queued Buffers approach.
KYVP_FirmwareUpdate_Example	Example demonstrating KAYA PCIe device firmware update procedure.
KYVP_ManualDetection_Example	Example demonstrating the correct procedure for Define device manually.
KYVP_ParametersHandle_Example	Example shows how to handle cameras parameters using KYVP ParametersHandler library.
KYVP_QueuedBuffers_Example	Example for Queued Buffers image acquisition using KYVPLibTL and KYVP ParametersHandler library. Best API sample for acquitance with VP II API.
KYVPLibTL_Example	Example demonstrating transport layer operations. Requires camera registers to be specified.
SerialPort_Examples	Example of Serial Port API implementation. Refer to KYFGLibA_SerialPort_Example.cpp for full description.

Table 2 – Vision Point II API Examples

-
-
-

Building API example for Windows

1 Open an example project for Microsoft Visual Studio, provided in the download directory. The "API Samples" directory can be easily found using the shortcut on the desktop or Windows quick search.

Figure 5 – API Samples folder

2 Choose a solution platform according to the operating system, as shown in the image below.

Note: *The Vision Point software stack does not support Win32 platform with OS x64.*



Figure 6 – Visual Studio choosing a solution platform

3 Build a solution.

4 Run the application.

An example is shown in the image below:

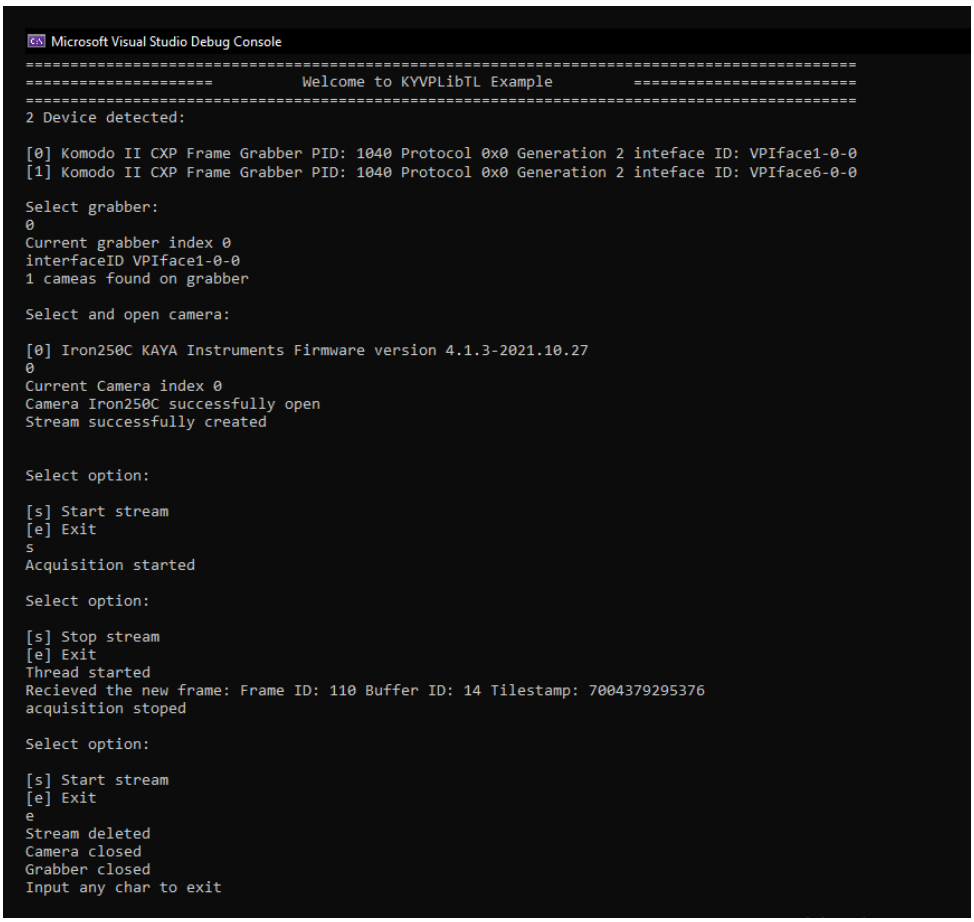


Figure 7 – Running an API example for Windows

Building API example for Linux

1 Open the Terminal and navigate to directory stored in environment variable $KAYA_VISION_POINT_2_↩ SAMPLE_API.

2 Change directory to KYVPLibTL_Example.

3 Type "make" and make sure the KYVPLibTL_Example executable file was created, in the same directory.

4 To run the API Example, simply type "./KYVPLibTL_Example" followed by "Enter".

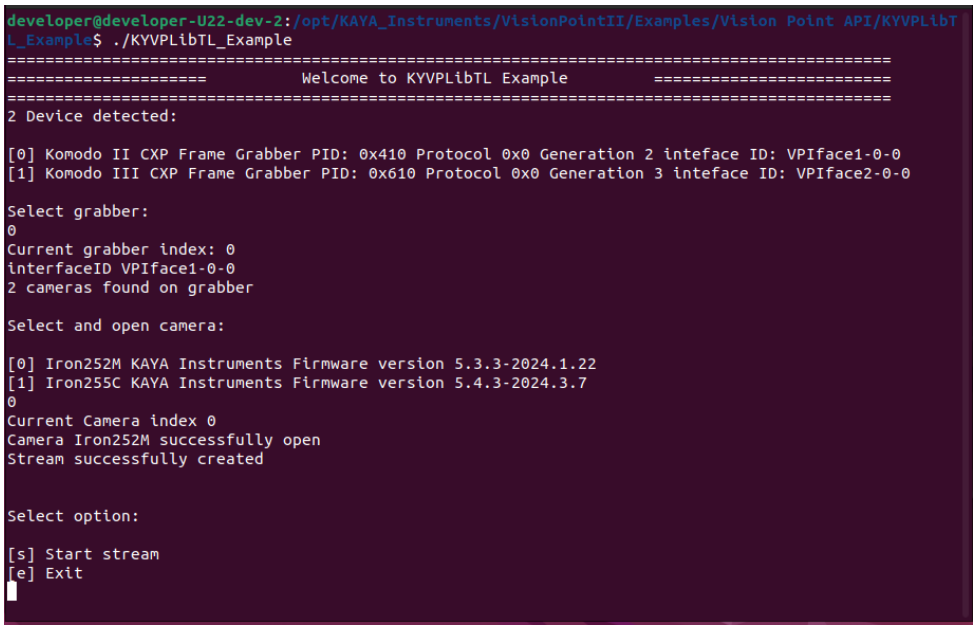


Figure 8 – Running an API example for Linux

12 Collecting Diagnostic information

13 KYVPExtension

CALLBACK FUNCTIONS.

13.1 KYVP_IO_AUX_DATA

Data portion interpretation of Auxiliary data structure, in case of callback issued by IO controller.

Structure Field	Type	Description
masked_data	uint64↩ _t	Indicates the state of the I/O controller feature that can generate an event according to the table in the remarks.
timestamp	uint64↩ _t	Event timestamp in units of nano-seconds (nsec)

Remarks

1. Additional macros are provided to help extract specific IO controller elements:

1.1. KYVP_IO_CONTROLLER_MASKED_IO - extract mask of GPIO triggers from IO Auxiliary masked data

1.2. KYVP_IO_CONTROLLER_MASKED_ENCODERS - extract mask of encoders triggers from IO Auxiliary masked data

1.3. KYVP_IO_CONTROLLER_MASKED_TIMERS - extract mask of timers triggers from IO Auxiliary masked data

1.4. KYVP_IO_CONTROLLER_MASKED_CAMERA_TRIGGERS - extract mask of camera triggers from IO Auxiliary masked data

1.5. KYVP_IO_CONTROLLER_MASKED_TRIGGERS - extract mask of stream triggers from IO Auxiliary masked data

Bit	Function	Bit	Function	Bit	Function
0	OptoCoupled Input 0	22	LVTTL 2	43	Encoder 3
2	OptoCoupled Input 1	23	LVTTL 3	44	Timer 0
3	OptoCoupled Input 3	24	LVTTL 4	45	Timer 1
4	OptoCoupled Input 4	25	LVTTL 5	46	Timer 2
5	OptoCoupled Input 5	26	LVTTL 6	47	Timer 3
6	OptoCoupled Input 6	27	LVTTL 7	48	Timer 4
7	OptoCoupled Input 7	28	OptoCoupled Output 0	49	Timer 5
8	LVDS Input 0	29	OptoCoupled Output 1	50	Timer 6
9	LVDS Input 1	30	OptoCoupled Output 2	51	Timer 7
10	LVDS Input 2	31	OptoCoupled Output 3	52	Camera Trigger 0
11	LVDS Input 3	32	OptoCoupled Output 4	53	Camera Trigger 1
12	TTL0	33	OptoCoupled Output 5	54	Camera Trigger 2
13	TTL1	34	OptoCoupled Output 6	55	Camera Trigger 3
14	TTL2	35	OptoCoupled Output 7	56	Camera Trigger 4
15	TTL3	36	LVDS Output 0	57	Camera Trigger 5
16	TTL4	37	LVDS Output 1	58	Camera Trigger 6
17	TTL5	38	LVDS Output 2	59	Camera Trigger 7
18	TTL6	39	LVDS Output 3	60	Acquisition Trigger 0
19	TTL7	40	Encoder 0	61	Acquisition Trigger 1
20	LVTTL 0	41	Encoder 1	62	Acquisition Trigger 2
21	LVTTL 1	42	Encoder 2	63	Acquisition Trigger 3

13.2 KYVP_FRAME_AUX_DATA

Data portion interpretation of Auxiliary data structure, in case of new frame arrival.

Structure Field	Type	Description
sequence_number	uint32↩ _t	Sequential index of the frame within the allocated frame buffer
timestamp	uint64↩ _t	Frame arrival timestamp in units of nano-seconds (nsec)

13.3 KYVP_AUX_DATA

Auxiliary data structure holding information of received Auxiliary message.

Structure Field	Type	Description
messageID	uint32_t	Unique ID of a received auxiliary data message. For possible values see Table 2.
reserved	KYBOOL	Unique ID of a received auxiliary data message. For possible values see Table 2.
dataSize	size_t	Size, in Bytes, of data delivered with Auxiliary message.
u_data	union	See remarks
data	uint8_t [AUX_DATA_MAX_SIZE]	Data portion interpretation with no context.
io_data	KYVP_IO_AUX_DATA	Data portion interpretation, in case of callback issued by IO controller
frame_data	KYVP_FRAME_AUX_DATA	Data portion interpretation, in case of new frame arrival

Remarks

Starting with version 6.0 the KYVP_AUX_DATA structure definition has changed. Usage of this structure requires client code changes - adding "u_data." to where these struct members are accessed, to avoid compilation warning about "nonstandard extension used: nameless struct/union".

Message identifier	Description
KYVP_AUX_MESSAGE_ID_IO_CONTROLLER	The message has been generated by IO Controller.

13.4 KYVP_UPDATE_CALLBACK

// Firmware update status callback

```
typedef KY_BOOL(KYVP_CALLCONV *KYVP_UPDATE_CALLBACK)(const KYVP_UPDATE_STATUS* UpdateStatus, void* context);
```

13.5 KYVP_DATA_STREAM_CALLBACK

// Data stream callback function

```
typedef void(KYVP_CALLCONV * KYVP_DATA_STREAM_CALLBACK)(KYVP_BUFFER_HANDLE _phBufferHandle, void*
      _pContext);
```

13.6 KYVP_AUX_DATA_CALLBACK

The callback function will be called when various auxiliary data is generated. Auxiliary data is passed to user callback as a pointer to the KYVP_AUX_DATA structure parameter. Each Auxiliary data will be interpreted differently according to context and message ID.

```
typedef void(KYVP_CALLCONV *KYVP_AUX_DATA_CALLBACK)(KYVP_AUX_DATA* pData, void* context);
```

13.7 KYVP_SERIAL_CALLBACK

Serial port (see clserkyi.h) callback

```
typedef void(KYVP_CALLCONV *KYVP_SERIAL_CALLBACK)(uint32_t _uChannel, uint16_t _uEventId, const void*
      _pData, uint32_t _uSize, void* _pContext);
```

13.8 KYVP_PCI_INTERFACE_EVENT_CALLBACK

PCI Interface events callback

```
typedef void(KY_CALLCONV* KYVP_PCI_INTERFACE_EVENT_CALLBACK)(KYVP_PCIINTERFACE_GENERIC_EVENT*
      _pGenericEventData, void* _pUserContext);
```

14 KYVPExtension Structs

14.1 KYVPExtension_RemoteDevice_DirectHWReadReg_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hRemoteDeviceHandle	KYVP_REMOTE_DEVICE_HANDLE	RemoteDevice Handle	
iAddress	uint64_t	Register address	
pBuffer	void*	Pointer to user allocated buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

14.2 KYVPExtension_RemoteDevice_DirectHWWriteReg_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hRemoteDeviceHandle	KYVP_REMOTE_DEVICE_HANDLE	RemoteDevice Handle	
iAddress	uint64_t	Register address	
pBuffer	void*	Pointer to user allocated const buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

14.3 KYVPExtension_RemoteDevice_SetImageDetails_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hRemoteDeviceHandle	KYVP_REMOTE_DEVICE_HANDLE	RemoteDevice Handle	
imageDetails	KYVP_DEVICE_IMAGE_DETAILS	Image details struct	

14.4 KYVPExtension_PCIInterface_DirectHWReadReg_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	PCI Interface Handle	
iBar	uint64_t	Address space (reserved for internal usage, must be 0)	
iAddress	uint64_t	Register address	
pBuffer	void*	Pointer to user allocated buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

14.5 KYVPExtension_PCIInterface_DirectHWWriteReg_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	

Structure Field	Type	Description	Remarks
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	Interface Handle	
iBar	uint64_t	Address space (reserved for internal usage, must be 0)	
iAddress	uint64_t	Register address	
pBuffer	void*	Pointer to user allocated const buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

14.6 KYVPExtension_PCIInterface_LockLink_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	PCI Interface Handle	
iLink	uint64_t	PCI Interface link index	

14.7 KYVPExtension_PCIInterface_UnlockLink_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	PCI Interface Handle	
iLink	uint64_t	PCI Interface link index	

14.8 KYVPExtension_PCIInterface_ReadLink_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	PCI Interface Handle	
iLink	uint64_t	PCI Interface link index	
iAddress	uint64_t	Register address	
pBuffer	void*	Pointer to user allocated buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

14.9 KYVPExtension_PCIInterface_WriteLink_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	PCI Interfacee Handle	
iLink	uint64_t	PCI Interface link index	
iAddress	uint64_t	Register address	
pBuffer	void*	Pointer to user allocated const buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

14.10 KYVPExtension_PCIInterface_WriteLink_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	PCI Interfacee Handle	
iLink	uint64_t	PCI Interface link index	
iEventId	uint16_t	Event ID	
pBuffer	void*	Pointer to user allocated const buffer	
piSize	size_t*	Pointer to user allocated size_t buffer	

14.11 KYVPExtension_PCIInterface_LinkGetStatus_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hIFHandle	KYVP_PCI_INTERFACE_HANDLE	PCI Interface Handle	
iLink	uint64_t	PCI Interface link index	
iInfoCmd	KYVP_LINK_STATUS_CMD	Information to be retrieved	
piType	KYVP_INFO_DATATYPE*	Data type of the pBuffer content	
pBuffer	void*	Pointer to a user allocated buffer	
piSize	size_t*	Number of bytes filled by the function	

14.12 KYVPExtension_RemoteDevice_GetParamsCollectionHandle_Args

Structure Field	Type	Description	Remarks
version	uint32_t	struct version	
hRemoteDeviceHandle	KYVP_REMOTE_DEVICE_HANDLE	RemoteDevice Handle	
phParamsCollectionHandle	KYVP_COLLECTION_↩ HANDLE*	Pointer to parameters collection handle	

14.13 DeviceLinkDefinition

Structure Field	Type	Description	Remarks
version	uint32↩ _t	Struct version	
uHostLink	uint32↩ _t	Host link index connected to the device link	

14.14 DeviceDefinition

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
eConnectionSpeed	KYVP_CXP_LINK_SPEED	Expected current connection speed of the device	
pDeviceLinkDefinitionArray	DeviceLinkDefinition*	Pointer to an allocated array of DeviceLinkDefinition structures	
uDeviceLinkDefinitionArray↩ Count	size_t	Number of elements in the allocated DeviceLinkDefinition array	

Structure Field	Type	Description	Remarks
bFound	KY_BOOL	Detection result flag - set to KY_TRUE if the device was found	
szID	char[]	Transport layer device ID, filled if the device was found	

14.15 KYVPExtension_DetectDevicesManually_Args

Structure Field	Type	Description	Remarks
version	uint32_t	Struct version	
hIFHandle	KYVP_PCI_INTERFACE_↩ HANDLE	Handle to the PCI interface instance	
pbChanged	KY_BOOL*	Pointer to a boolean flag that indicates if the device list has changed	
pDeviceDefinitionArray	DeviceDefinition*	Pointer to an array of Device↩ Definition structures describing the devices	
uDeviceDefinitionArrayCount	size_t	Number of elements in p↩ DeviceDefinitionArray	
bNoDevicesAccess	KY_BOOL	If true, no operations requiring access to remote device will be performed	

15 Topic Index

15.1 Topics

Here is a list of all topics with brief descriptions:

Image processing Init functions 65

Image processing Init functions 66

Image processing Get functions 67

Image processing Conversation functions 69

Image processing save and record functions 71

Comparison Functions 73

System module 77

Low level functions 80

Interface module 88

Stream module 93

Event Interface 94

Init functions 95

Uninit functions 98

Set and Get functions 100

Comparison functions 106

16 Data Structure Index

16.1 Data Structures

Here are the data structures with brief descriptions:

_DeviceDefinition 108

_DeviceLinkDefinition 109

_KY_RESULT
KY_RESULT STRUCT 110

_KYIMGPROC_ConvertParam_Args 111

_KYIMGPROC_DeleteImageConverterArgs 113

_KYIMGPROC_DeleteVideoRecorderArgs 114

_KYImgProc_GetPackedDataInfo_Args 115

_KYImgProc_GetPixelFormat_Args 117

_KYImgProc_GetPixelFormatByName_Args 118

_KYIMGPROC_IMAGE_CONVERTER_HANDLE 119

_KYIMGPROC_InitImageConverterArgs 119

_KYIMGPROC_InitVideoRecorderArgs 120

_KYIMGPROC_PIXEL_DECODER 121

_KYImgProc_PreproccessPackedData_Args 122

_KYIMGPROC_SaveImageArgs 124

_KYIMGPROC_SaveRawArgs 125

_KYIMGPROC_SaveVideoArgs 126

_KYImgProc_StopVideoRecordArgs 128

_KYIMGPROC_VIDEO_RECORDER_HANDLE 129

_KYIMGPROC_WriteVideoFrameArgs 130

_KYParametersHandler_CreateParameterCollection_Args 131

_KYParametersHandler_DeleteParameterCollection_Args 133

_KYParametersHandler_GetNodeDescriptor_Args 134

_KYParametersHandler_GetNodeDescriptorsArray_Args 136

_KYParametersHandler_GetParameterAttributeValueArgs 137

_KYParametersHandler_GetValue_Args 139

_KYParametersHandler_GetValueEnumAsString_Args 141

_KYParametersHandler_Initialize_Args 143

_KYParametersHandler_InitializeParameterCollection_Args 144

_KYParametersHandler_InitParameters 145

_KYParametersHandler_InvalidateParameter_Args 146

_KYParametersHandler_InvalidateParameterCollection_Args 147

_KYParametersHandler_IsParameterAvailableArgs 149

_KYParametersHandler_RegisterParameterCollectionCallback_Args 150

_KYParametersHandler_RegisterParameterCollectionTransport_Args 152

_KYParametersHandler_SaveToFile_Args 154

_KYParametersHandler_SetValue_Args 155

_KYParametersHandler_SetValueEnumByValueName_Args 157

_KYParametersHandler_TransportCallParams_Args 159

_KYParametersHandler_UnregisterParameterCollectionCallback_Args 161

_KYParametersHandler_UnregisterParameterCollectionTransport_Args 162

_KYVP_AUX_DATA 164

_KYVP_BOARD_INFO 166

_KYVP_BUFFER_DATA_CHUNK
A buffer data chunk 168

_KYVP_BUFFER_INFO 169

_KYVP_COLLECTION_HANDLE 171

_KYVP_CXP2_EVENT 172

_KYVP_CXP2_HEARTBEAT 174

_KYVP_DEVICE_IMAGE_DETAILS 175

_KYVP_DEVICE_INFO 177

_KYVP_FRAME_AUX_DATA 180

_KYVP_IO_AUX_DATA 181

_KYVP_NodeDescriptor 183

_KYVP_PCI_CONFIG 188

_KYVP_PCI_INTERFACE_INFO 189

_KYVP_PCI_INTERFACE_SLOT
KYVP_PCI_INTERFACE_SLOT 191

_KYVP_PCIINTERFACE_EVENT_CXP2_EVENT 192

_KYVP_PCIINTERFACE_EVENT_CXP2_HEARTBEAT 193

_KYVP_PCIINTERFACE_EVENT_TEMPERATURE 195

_KYVP_PCIINTERFACE_GENERIC_EVENT 196

_KYVP_PIXEL_FORMAT 198

_kyvp_update_status 200

_KYVP_VIDEO_PIXELIF 201

_KYVPExtension_AuxDataCallback_Register_Args 202

_KYVPExtension_AuxDataCallback_Unregister_Args 204

_KYVPExtension_DataStream_Callback_Register_Args 205

_KYVPExtension_DataStream_Callback_Unregister_Args 206

_KYVPExtension_DataStream_Close_Args 207

_KYVPExtension_DataStream_Create_Args 208

_KYVPExtension_DetectDevicesManually_Args 209

_KYVPExtension_PCIInterface_CheckUpdateFile_Args 211

_KYVPExtension_PCIInterface_DirectHWReadReg_Args 214

_KYVPExtension_PCIInterface_DirectHWWriteReg_Args 216

_KYVPExtension_PCIInterface_EventCallBackRegister_Args 217

_KYVPExtension_PCIInterface_EventCallBackUnregister_Args 219

_KYVPExtension_PCIInterface_FirmwareUpdate_Args 220

_KYVPExtension_PCIInterface_LinkGetStatus_Args 221

_KYVPExtension_PCIInterface_LockLink_Args 223

_KYVPExtension_PCIInterface_ReadLink_Args 224

_KYVPExtension_PCIInterface_SendLinkEvent_Args 226

_KYVPExtension_PCIInterface_UnlockLink_Args 228

_KYVPExtension_PCIInterface_WriteLink_Args 229

_KYVPExtension_RemoteDevice_DirectHWReadReg_Args 231

_KYVPExtension_RemoteDevice_DirectHWWriteReg_Args 232

_KYVPExtension_RemoteDevice_GetParamsCollectionHandle_Args 234

_KYVPExtension_RemoteDevice_SetImageDetails_Args 235

_KYVPExtension_Serial_Callback_Register_Args 236

_KYVPExtension_Serial_Callback_Unregister_Args 238

_KYVPLIBTL_EVENT_NEW_BUFFER_DATA 239

_PackedDataInfo 240

_VPImage 242

17 Topic Documentation

17.1 Image processing Init functions

KYIMGPROC API FUNCTIONS.

Functions

- KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_InitImageConverter (KYIMGPROC_InitImageConverterArgs *_pArgs)
- KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_InitVideoRecorder (KYIMGPROC_InitVideoRecorderArgs *_pArgs)

17.1.1 Detailed Description

KYIMGPROC API FUNCTIONS.

17.1.2 Function Documentation

KYImgProc_InitImageConverter()

```
KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_InitImageConverter (
            KYIMGPROC_InitImageConverterArgs * _pArgs )
```

17.1.3 KYImgProc_InitImageConverter()

Init new instance for image conversion

17.1.3.1 C

```
KY_RESULT KYImgProc_InitImageConverter(KYIMGPROC_InitImageConverterArgs* _InitImageConverterArg)
```

Parameters

in,out	*_InitImageConverterArgs*	pointer to KYIMGPROC_InitImageConverterArgs

Returns

KY_RESULT Status and error report

KYImgProc_InitVideoRecorder()

```
KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_InitVideoRecorder (
            KYIMGPROC_InitVideoRecorderArgs * _pArgs )
```

17.1.4 KYImgProc_InitVideoRecorder()

Init new instance for video recording

17.1.4.1 C

```
KY_RESULT KYImgProc_InitVideoRecorder(KYIMGPROC_InitVideoRecorderArgs* _args)
```

Parameters

in,out	*_args*	pointer to KYIMGPROC_InitVideoRecorderArgs

Returns

KY_RESULT Status and error report

17.2 Image processing Init functions

Functions

- KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_DeleteImageConverter (KYIMGPROC_DeleteImageConverte
  *_pArgs)
- KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_DeleteVideoRecorder (KYIMGPROC_DeleteVideoRecorderA
  *_pArgs)

17.2.1 Detailed Description

17.2.2 Function Documentation

KYImgProc_DeleteImageConverter()

```
KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_DeleteImageConverter (
            KYIMGPROC_DeleteImageConverterArgs * _pArgs )
```

17.2.3 KYImgProc_DeleteImageConverter()

Delete Image Converter Instance

17.2.3.1 C

```
KY_RESULT KYImgProc_DeleteImageConverter(KYIMGPROC_DeleteImageConverterArgs _DeleteImageConverterArgs)
```

Parameters

in,out	*_DeleteImageConverterArgs*	pointer to KYIMGPROC_DeleteImageConverterArgs

Returns

KY_RESULT Status and error report

KYImgProc_DeleteVideoRecorder()

```
KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_DeleteVideoRecorder (
            KYIMGPROC_DeleteVideoRecorderArgs * _pArgs )
```

17.2.4 KYImgProc_DeleteVideoRecorder()

Delete video recorder instance

17.2.4.1 C

```
KY_RESULT KYImgProc_DeleteVideoRecorder(KYIMGPROC_DeleteVideoRecorderArgs* _args)
```

Parameters

in,out	*_DeleteVireoRecorederArgs*	pointer to KYIMGPROC_DeleteVideoRecorderArgs

Returns

KY_RESULT Status and error report

17.3 Image processing Get functions

GET FUNCTIONS.

Functions

- KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_GetPixelFormat (KYImgProc_GetPixelFormat_Args *_pArgs)
- KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_GetPixelFormatByName (KYImgProc_GetPixelFormatByNam *_pArgs)

17.3.1 Detailed Description

GET FUNCTIONS.

17.3.2 Function Documentation

KYImgProc_GetPixelFormat()

```
KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_GetPixelFormat (
            KYImgProc_GetPixelFormat_Args * _pArgs )
```

17.3.3 KYImgProc_GetPixelFormat()

Get pixel format from specific uint_32t value. Fill KYIMGPROC_PIXEL_DECODER->_uValue by uint32_t from documentation https://www.emva.org/wp-content/uploads/GenICamPixelFormatValues.pdf and call function

17.3.3.1 C

```
KYImgProc_GetPixelFormat(KYIMGPROC_PIXEL_DECODER* resDecoderStruct)
```

Parameters

in,out	*resDecoderStruct*	Decoder struct

Returns

KY_RESULT Status and error report

KYImgProc_GetPixelFormatByName()

```
KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_GetPixelFormatByName (
            KYImgProc_GetPixelFormatByName_Args * _pArgs )
```

17.3.4 KYImgProc_GetPixelFormatByName()

Get pixel format from specific char* value. Fill KYIMGPROC_PIXEL_DECODER->_name by name from documentation https://www.emva.org/wp-content/uploads/GenICamPixelFormatValues.pdf and call function

17.3.4.1 C

```
KYImgProc_GetPixelFormat(KYIMGPROC_PIXEL_DECODER* resDecoderStruct)
```

Parameters

in,out	*resDecoderStruct*	Decoder struct

Returns

KY_RESULT Status and error report

17.4 Image processing Conversation functions

CONVERSATION FUNCTIONS.

Functions

- KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_ConvertImage (KYIMGPROC_ConvertParam_Args *_convertStruct)
- KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_GetPackedDataInfo (KYImgProc_GetPackedDataInfo_Args *_pArgs)
- KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_PreproccessPackedData (KYImgProc_PreproccessPackedDa *_pArgs)

17.4.1 Detailed Description

CONVERSATION FUNCTIONS.

17.4.2 Function Documentation

KYImgProc_ConvertImage()

```
KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_ConvertImage (
            KYIMGPROC_ConvertParam_Args * _convertStruct )
```

17.4.3 KYImgProc_ConvertImage()

convert image from source image to destination image

Note

Use CONVERT_PARAMS_DECL_AND_INIT(convertStruct) for create KYIMGPROC_ConvertParam_Args resources (plain C construction)

17.4.3.1 C

```
KYImgProc_ConvertImage(KYIMGPROC_ConvertParam_Args* convertStruct)
```

Parameters

in,out	*convertStruct*	conversation parameters struct

Returns

KY_RESULT Status and error report

KYImgProc_GetPackedDataInfo()

```
KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_GetPackedDataInfo (
            KYImgProc_GetPackedDataInfo_Args * _pArgs )
```

17.4.4 KYImgProc_GetPackedDataInfo()

Retrieves information about the packed image data and the corresponding unpacked image details.

17.4.4.1 C

```
KYImgProc_GetPackedDataInfo(KYIMGPROC_GetPackedDataInfo_Args* _pArgs)
```

Parameters

in	*_pArgs*	Pointer to the structure containing input parameters and a pointer to the output info structure.

Returns

KY_RESULT Status code indicating success or the type of error encountered.

KYImgProc_PreproccessPackedData()

```
KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_PreproccessPackedData (
            KYImgProc_PreproccessPackedData_Args * _pArgs )
```

17.4.5 KYImgProc_PreproccessPackedData()

Performs unpacking of packed image data and fills the destination buffer.

17.4.5.1 C

```
KYImgProc_PreproccessPackedData(KYImgProc_PreproccessPackedData_Args* _pArgs)
```

Parameters

in	*_pArgs*	Pointer to the structure containing parameters required for unpacking.

Returns

KY_RESULT Status code indicating success or the type of error encountered.

17.5 Image processing save and record functions

Save and Record functions.

Functions

- KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_SaveImage (KYIMGPROC_SaveImageArgs *_pArgs)
- KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_SaveRawData (KYIMGPROC_SaveRawArgs *_pArgs)
- KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_StartVideoRecord (KYIMGPROC_SaveVideoArgs *_pArgs)
- KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_StopVideoRecord (KYImgProc_StopVideoRecordArgs *_pArgs)
- KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_WriteVideoFrame (KYIMGPROC_WriteVideoFrameArgs *_pArgs)

17.5.1 Detailed Description

Save and Record functions.

17.5.2 Function Documentation

KYImgProc_SaveImage()

```
KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_SaveImage (
            KYIMGPROC_SaveImageArgs * _pArgs )
```

17.5.3 KYImgProc_SaveImage()

17.5.3.1 C

```
KY_RESULT KYImgProc_SaveImage(KYIMGPROC_SaveImageArgs* _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYIMGPROC_SaveImageArgs

Returns

KY_RESULT Status and error report

KYImgProc_SaveRawData()

```
KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_SaveRawData (
            KYIMGPROC_SaveRawArgs * _pArgs )
```

17.5.4 KYImgProc_SaveRawData()

return NOT_IMPLEMENTED if openCV is not compiled

17.5.4.1 C

```
KY_RESULT KYImgProc_SaveRawData(KYIMGPROC_SaveImageArgs* _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYIMGPROC_SaveImageArgs

Returns

KY_RESULT Status and error report

KYImgProc_StartVideoRecord()

```
KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_StartVideoRecord (
            KYIMGPROC_SaveVideoArgs * _pArgs )
```

17.5.5 KYImgProc_StartVideoRecord()

17.5.5.1 C

```
KY_RESULT KYImgProc_StartVideoRecord(KYIMGPROC_SaveVideoArgs* _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYIMGPROC_SaveVideoArgs

Returns

KY_RESULT Status and error report

KYImgProc_StopVideoRecord()

```
KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_StopVideoRecord (
            KYImgProc_StopVideoRecordArgs * _pArgs )
```

17.5.6 KYImgProc_StopVideoRecord()

17.5.6.1 C

```
KY_RESULT KYImgProc_StopVideoRecord(KYImgProc_StopVideoRecordArgs* _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYImgProc_StopVideoRecordArgs

Returns

KY_RESULT Status and error report

KYImgProc_WriteVideoFrame()

```
KYIMGPROC_API KY_RESULT KYVP_CALLCONV KYImgProc_WriteVideoFrame (
            KYIMGPROC_WriteVideoFrameArgs * _pArgs )
```

17.5.7 KYImgProc_WriteVideoFrame()

17.5.7.1 C

```
KY_RESULT KYImgProc_WriteVideoFrame(KYIMGPROC_WriteVideoFrame* _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYIMGPROC_WriteVideoFrame

Returns

KY_RESULT Status and error report

17.6 Comparison Functions

Comparison functions.

Functions

- KYIMGPROC_API KY_BOOL KYVP_CALLCONV KYImgProc_ImageConverterHandleIsInvalid (KYIMGPROC_IMAGE_CONVE _hHandle)
- KYIMGPROC_API KY_BOOL KYVP_CALLCONV KYImgProc_ImageConverterHandleIsNull (KYIMGPROC_IMAGE_CONVER _hHandle)
- KYIMGPROC_API KY_BOOL KYVP_CALLCONV KYImgProc_ImageConverterHandlesIsEqual (KYIMGPROC_IMAGE_CONV _hFirstHandle, KYIMGPROC_IMAGE_CONVERTER_HANDLE _hOtherHandle)
- KYIMGPROC_API KY_BOOL KYVP_CALLCONV KYImgProc_VideoRecorderHandleIsEqual (KYIMGPROC_VIDEO_RECORD _hFirstHandle, KYIMGPROC_VIDEO_RECORDER_HANDLE _hOtherHandle)
- KYIMGPROC_API KY_BOOL KYVP_CALLCONV KYImgProc_VideoRecorderHandleIsInvalid (KYIMGPROC_VIDEO_RECOR _hHandle)
- KYIMGPROC_API KY_BOOL KYVP_CALLCONV KYImgProc_VideoRecorderHandleIsNull (KYIMGPROC_VIDEO_RECORDE _hHandle)

17.6.1 Detailed Description

Comparison functions.

17.6.2 Function Documentation

KYImgProc_ImageConverterHandleIsInvalid()

```
KYIMGPROC_API KY_BOOL KYVP_CALLCONV KYImgProc_ImageConverterHandleIsInvalid (
            KYIMGPROC_IMAGE_CONVERTER_HANDLE _hHandle )
```

17.6.3 KYImgProc_ImageConverterHandleIsInvalid()

17.6.3.1 C

```
KY_BOOL KYImgProc_ImageConverterHandleIsInvalid(KYIMGPROC_IMAGE_CONVERTER_HANDLE _hHandle)
```

Parameters

in	*h_libHandle*	KYIMGPROC_IMAGE_CONVERTER_HANDLE

Returns

KY_BOOL Comparison result

KYImgProc_ImageConverterHandleIsNull()

```
KYIMGPROC_API KY_BOOL KYVP_CALLCONV KYImgProc_ImageConverterHandleIsNull (
            KYIMGPROC_IMAGE_CONVERTER_HANDLE _hHandle )
```

17.6.4 KYImgProc_ImageConverterHandleIsNull()

17.6.4.1 C

```
KY_BOOL KYImgProc_ImageConverterHandleIsNull(KYIMGPROC_IMAGE_CONVERTER_HANDLE _hHandle)
```

Parameters

in	*h_libHandle*	KYIMGPROC_IMAGE_CONVERTER_HANDLE

Returns

KY_BOOL Comparison result

KYImgProc_ImageConverterHandlesIsEqual()

```
KYIMGPROC_API KY_BOOL KYVP_CALLCONV KYImgProc_ImageConverterHandlesIsEqual (
```

```
            KYIMGPROC_IMAGE_CONVERTER_HANDLE _hFirstHandle,
            KYIMGPROC_IMAGE_CONVERTER_HANDLE _hOtherHandle )
```

17.6.5 KYImgProc_ImageConverterHandlesIsEqual()

17.6.5.1 C

```
KY_BOOL KYImgProc_ImageConverterHandlesIsEqual(KYIMGPROC_IMAGE_CONVERTER_HANDLE _hFirstHandle,
      KYIMGPROC_IMAGE_CONVERTER_HANDLE _hOtherHandle)
```

Parameters

in	*h_libHandle*	KYIMGPROC_IMAGE_CONVERTER_HANDLE
in	*h_libHandle*	KYIMGPROC_IMAGE_CONVERTER_HANDLE

Returns

KY_BOOL Comparison result

KYImgProc_VideoRecorderHandleIsEqual()

```
KYIMGPROC_API KY_BOOL KYVP_CALLCONV KYImgProc_VideoRecorderHandleIsEqual (
            KYIMGPROC_VIDEO_RECORDER_HANDLE _hFirstHandle,
            KYIMGPROC_VIDEO_RECORDER_HANDLE _hOtherHandle )
```

17.6.6 KYImgProc_VideoRecorderHandleIsEqual()

17.6.6.1 C

```
KY_BOOL KYImgProc_VideoRecorderHandleIsEqual(KYIMGPROC_VIDEO_RECORDER_HANDLE _hFirstHandle,
      KYIMGPROC_VIDEO_RECORDER_HANDLE _hOtherHandle)
```

Parameters

in	*h_libHandle*	KYIMGPROC_VIDEO_RECORDER_HANDLE
in	*h_libHandle*	KYIMGPROC_VIDEO_RECORDER_HANDLE

Returns

KY_BOOL Comparison result

KYImgProc_VideoRecorderHandleIsInvalid()

```
KYIMGPROC_API KY_BOOL KYVP_CALLCONV KYImgProc_VideoRecorderHandleIsInvalid (
            KYIMGPROC_VIDEO_RECORDER_HANDLE _hHandle )
```

17.6.7 KYImgProc_VideoRecorderHandleIsInvalid()

17.6.7.1 C

```
KY_BOOL KYImgProc_VideoRecorderHandleIsInvalid(KYIMGPROC_VIDEO_RECORDER_HANDLE _hHandle)
```

Parameters

in	*h_libHandle*	KYIMGPROC_VIDEO_RECORDER_HANDLE

Returns

KY_BOOL Comparison result

KYImgProc_VideoRecorderHandleIsNull()

```
KYIMGPROC_API KY_BOOL KYVP_CALLCONV KYImgProc_VideoRecorderHandleIsNull (
            KYIMGPROC_VIDEO_RECORDER_HANDLE _hHandle )
```

17.6.8 KYImgProc_VideoRecorderHandleIsNull()

17.6.8.1 C

```
KY_BOOL KYImgProc_VideoRecorderHandleIsNull(KYIMGPROC_VIDEO_RECORDER_HANDLE _hHandle)
```

Parameters

in	*h_libHandle*	KYIMGPROC_VIDEO_RECORDER_HANDLE

Returns

KY_BOOL Comparison result

17.7 System module

KYVPLIBTL API FUNCTIONS.

Functions

- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVP_CALLCONV KYVPLibTL_CloseLib (void)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVP_CALLCONV KYVPLibTL_InitLib (void)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_TLClose (KYVPLibTL_TLClose_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_TLGetInfo (KYVPLibTL_TLGetInfo_Args *_p↩ Args)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_TLGetInterfaceID (KYVPLibTL_TLGet↩ InterfaceID_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_TLGetInterfaceInfo (KYVPLibTL_TLGet↩ PCIInterfaceInfo_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_TLGetNumInterfaces (KYVPLibTL_TLGet↩ NumInterfaces_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_TLOpen (KYVPLibTL_TLOpen_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_TLOpenInterface (KYVPLibTL_TLOpen↩ Interface_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_TLUpdateInterfaceList (KYVPLibTL_↩ TLUpdatePCIInterfaceList_Args *_pArgs)

17.7.1 Detailed Description

KYVPLIBTL API FUNCTIONS.

17.7.2 Function Documentation

KYVPLibTL_CloseLib()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVP_CALLCONV KYVPLibTL_CloseLib (
             void  )
```

17.7.3 KYVPLibTL_CloseLib()

Closes the System module associated with the given hSystem handle. This closes the whole GenTL Producer driver and frees all resources

17.7.3.1 C

```
KY_RESULT KYVPLibTL_CloseLib()
```

Returns

KY_RESULT Status and error report

KYVPLibTL_InitLib()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVP_CALLCONV KYVPLibTL_InitLib (
             void  )
```

17.7.4 KYVPLibTL_InitLib()

This function must be called prior to any other function call to allow global initialization of the GenTL Producer driver. This function is necessary since automated initialization functionality like within DllMain on MS Windows platforms is very limited

17.7.4.1 C

```
KY_RESULT KYVPLibTL_InitLib()
```

Returns

KY_RESULT Status and error report

KYVPLibTL_TLClose()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_TLClose (
             KYVPLibTL_TLClose_Args * _pArgs )
```

KYVPLibTL_TLGetInfo()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_TLGetInfo (
             KYVPLibTL_TLGetInfo_Args * _pArgs )
```

KYVPLibTL_TLGetInterfaceID()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_TLGetInterfaceID (
             KYVPLibTL_TLGetInterfaceID_Args * _pArgs )
```

KYVPLibTL_TLGetInterfaceInfo()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_TLGetInterfaceInfo (
             KYVPLibTL_TLGetPCIInterfaceInfo_Args * _pArgs )
```

KYVPLibTL_TLGetNumInterfaces()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_TLGetNumInterfaces (
             KYVPLibTL_TLGetNumInterfaces_Args * _pArgs )
```

KYVPLibTL_TLOpen()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_TLOpen (
             KYVPLibTL_TLOpen_Args * _pArgs )
```

KYVPLibTL_TLOpenInterface()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_TLOpenInterface (
             KYVPLibTL_TLOpenInterface_Args * _pArgs )
```

KYVPLibTL_TLUpdateInterfaceList()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_TLUpdateInterfaceList (
             KYVPLibTL_TLUpdatePCIInterfaceList_Args * _pArgs )
```

17.8 Low level functions

Functions

- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_Device_GetPortURL (KYVPLibTL_Device_GetPortUrl_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_Device_ReadPort (KYVPLibTL_Device_ReadPort_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_Device_WritePort (KYVPLibTL_Device_WritePort_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_GetPortURL (KYVPLibTL_GetPortUrl_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_PCIInterface_GetPortURL (KYVPLibTL_PCIInterface_GetPortUrl_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_PCIInterface_ReadPort (KYVPLibTL_PCIInterface_ReadPort_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_PCIInterface_WritePort (KYVPLibTL_PCIInterface_WritePort_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_ReadPort (KYVPLibTL_ReadPort_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_RemoteDevice_GetPortURL (KYVPLibTL_RemoteDevice_GetPortUrl_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_RemoteDevice_ReadPort (KYVPLibTL_RemoteDevice_ReadPort_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_RemoteDevice_WritePort (KYVPLibTL_RemoteDevice_WritePort_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_Stream_GetPortURL (KYVPLibTL_Stream_GetPortUrl_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_Stream_ReadPort (KYVPLibTL_Stream_ReadPort_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_Stream_WritePort (KYVPLibTL_Stream_WritePort_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_WritePort (KYVPLibTL_WritePort_Args *_pArgs)

17.8.1 Detailed Description

17.8.2 Function Documentation

KYVPLibTL_Device_GetPortURL()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_Device_GetPortURL (
            KYVPLibTL_Device_GetPortUrl_Args * _pArgs )
```

17.8.3 KYVPLibTL_Device_GetPortURL()

Retrieves a URL list with the source description for the given hPort

17.8.3.1 C

```
KY_RESULT KYVPLibTL_Device_GetPortURL(KYVPLibTL_Device_GetPortUrl_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_Device_GetPortUrl_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_Device_ReadPort()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_Device_ReadPort (
            KYVPLibTL_Device_ReadPort_Args * _pArgs )
```

17.8.4 KYVPLibTL_Device_ReadPort()

Reads a number of bytes from a given iAddress.

17.8.4.1 C

```
KY_RESULT KYVPLibTL_Device_ReadPort(KYVPLibTL_Device_ReadPort_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_Device_ReadPort_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_Device_WritePort()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_Device_WritePort (
            KYVPLibTL_Device_WritePort_Args * _pArgs )
```

17.8.5 KYVPLibTL_Device_WritePort()

Writes a number of bytes at the given iAddress.

17.8.5.1 C

```
KY_RESULT KYVPLibTL_Device_WritePort(KYVPLibTL_Device_WritePort_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_Device_WritePort_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_GetPortURL()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_GetPortURL (
            KYVPLibTL_GetPortUrl_Args * _pArgs )
```

17.8.6 KYVPLibTL_GetPortURL()

GCGetPortURL retrieves a URL list with the XML description for the given hPort

17.8.6.1 C

```
KY_RESULT KYVPLibTL_GetPortURL(KYVPLibTL_GetPortUrl_Args* _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_GetPortUrl_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_PCIInterface_GetPortURL()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_PCIInterface_GetPortURL (
            KYVPLibTL_PCIInterface_GetPortUrl_Args * _pArgs )
```

17.8.7 KYVPLibTL_PCIInterface_GetPortURL()

GCGetPortURL retrieves a URL list with the XML description for the given hPort

17.8.7.1 C

```
KY_RESULT KYVPLibTL_PCIInterface_GetPortURL(KYVPLibTL_PCIInterface_GetPortUrl_Args* _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_PCIInterface_GetPortUrl_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_PCIInterface_ReadPort()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_PCIInterface_ReadPort (
            KYVPLibTL_PCIInterface_ReadPort_Args * _pArgs )
```

17.8.8 KYVPLibTL_PCIInterface_ReadPort()

Reads a number of bytes from a given iAddress from the specified hPort.

17.8.8.1 C

```
KY_RESULT KYVPLibTL_PCIInterface_ReadPort(KYVPLibTL_PCIInterface_ReadPort_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_PCIInterface_ReadPort_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_PCIInterface_WritePort()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_PCIInterface_WritePort (
            KYVPLibTL_PCIInterface_WritePort_Args * _pArgs )
```

17.8.9 KYVPLibTL_PCIInterface_WritePort()

Writes a number of bytes at the given iAddress to the specified hPort.

17.8.9.1 C

```
KY_RESULT KYVPLibTL_PCIInterface_WritePort(KYVPLibTL_PCIInterface_WritePort_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_PCIInterface_WritePort_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_ReadPort()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_ReadPort (
            KYVPLibTL_ReadPort_Args * _pArgs )
```

17.8.10 KYVPLibTL_ReadPort()

Reads a number of bytes from a given iAddress from the specified hPort.

17.8.10.1 C

```
KY_RESULT KYVPLibTL_ReadPort(KYVPLibTL_ReadPort_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_ReadPort_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_RemoteDevice_GetPortURL()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_RemoteDevice_GetPortURL (
            KYVPLibTL_RemoteDevice_GetPortUrl_Args * _pArgs )
```

17.8.11 KYVPLibTL_RemoteDevice_GetPortURL()

Retrieves a URL list with the source description.

17.8.11.1 C

```
KY_RESULT KYVPLibTL_RemoteDevice_GetPortURL(KYVPLibTL_RemoteDevice_GetPortUrl_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_RemoteDevice_GetPortUrl_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_RemoteDevice_ReadPort()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_RemoteDevice_ReadPort (
            KYVPLibTL_RemoteDevice_ReadPort_Args * _pArgs )
```

17.8.12 KYVPLibTL_RemoteDevice_ReadPort()

Reads a number of bytes from a given iAddress.

17.8.12.1 C

```
KY_RESULT KYVPLibTL_RemoteDevice_ReadPort(KYVPLibTL_RemoteDevice_ReadPort_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_RemoteDevice_ReadPort_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_RemoteDevice_WritePort()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_RemoteDevice_WritePort (
            KYVPLibTL_RemoteDevice_WritePort_Args * _pArgs )
```

17.8.13 KYVPLibTL_RemoteDevice_WritePort()

Writes a number of bytes at the given iAddress.

17.8.13.1 C

```
KY_RESULT KYVPLibTL_RemoteDevice_WritePort(KYVPLibTL_RemoteDevice_WritePort_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_RemoteDevice_WritePort_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_Stream_GetPortURL()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_Stream_GetPortURL (
            KYVPLibTL_Stream_GetPortUrl_Args * _pArgs )
```

17.8.14 KYVPLibTL_Stream_GetPortURL()

Retrieves a URL list with the source description.

17.8.14.1 C

```
KY_RESULT KYVPLibTL_Stream_GetPortURL(KYVPLibTL_Stream_GetPortUrl_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_Stream_GetPortUrl_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_Stream_ReadPort()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_Stream_ReadPort (
            KYVPLibTL_Stream_ReadPort_Args * _pArgs )
```

17.8.15 KYVPLibTL_Stream_ReadPort()

Reads a number of bytes from a given iAddress.

17.8.15.1 C

```
KY_RESULT KYVPLibTL_Stream_ReadPort(KYVPLibTL_Stream_ReadPort_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_Stream_ReadPort_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_Stream_WritePort()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_Stream_WritePort (
            KYVPLibTL_Stream_WritePort_Args * _pArgs )
```

17.8.16 KYVPLibTL_Stream_WritePort()

Writes a number of bytes at the given iAddress.

17.8.16.1 C

```
KY_RESULT KYVPLibTL_Stream_WritePort(KYVPLibTL_Stream_WritePort_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_Stream_WritePort_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_WritePort()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_WritePort (
            KYVPLibTL_WritePort_Args * _pArgs )
```

17.8.17 KYVPLibTL_WritePort()

Writes a number of bytes at the given iAddress to the specified hPort.

17.8.17.1 C

```
KY_RESULT KYVPLibTL_WritePort(KYVPLibTL_WritePort_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_WritePort_Args

Returns

KY_RESULT Status and error report

17.9 Interface module

Functions

- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DevClose (KYVPLibTL_DevClose_Args *_p↩ Args)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DevGetDataStreamID (KYVPLibTL_DevGet↩ DataStreamID_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DevGetInfo (KYVPLibTL_DevGetInfo_Args *↩ _pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DevGetNumDataStreams (KYVPLibTL_Dev↩ GetNumDataStreams_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DevGetPort (KYVPLibTL_DevGetPort_Args *↩ _pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DevOpenDataStream (KYVPLibTL_DevOpen↩ DataStream_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFClose (KYVPLibTL_IFClose_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFGetDeviceID (KYVPLibTL_IFGetDeviceID_↩ Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFGetDeviceInfo (KYVPLibTL_IFGetDevice↩ Info_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFGetInfo (KYVPLibTL_IFGetInfo_Args *_p↩ Args)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFGetNumDevices (KYVPLibTL_IFGetNum↩ Devices_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFOpenDevice (KYVPLibTL_IFOpenDevice_↩ Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFRegisterEvent (KYVPLibTL_IFRegister↩ Event_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFUnregisterEvent (KYVPLibTL_IFUnregister↩ Event_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFUpdateDeviceList (KYVPLibTL_IFUpdate↩ DeviceList_Args *_pArgs)

17.9.1 Detailed Description

17.9.2 Function Documentation

KYVPLibTL_DevClose()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DevClose (
            KYVPLibTL_DevClose_Args * _pArgs )
```

17.9.3 KYVPLibTL_DevClose()

Closes the Device module associated with the given hDevice handle.

17.9.3.1 C

```
KY_RESULT KYVPLibTL_DevClose(KYVPLibTL_DevClose_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DevClose_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_DevGetDataStreamID()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DevGetDataStreamID (
            KYVPLibTL_DevGetDataStreamID_Args * _pArgs )
```

17.9.4 KYVPLibTL_DevGetDataStreamID()

Queries the unique ID of the data stream at iIndex in the internal data stream list.

17.9.4.1 C

```
KY_RESULT KYVPLibTL_DevGetDataStreamID(KYVPLibTL_DevGetDataStreamID_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DevGetDataStreamID_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_DevGetInfo()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DevGetInfo (
            KYVPLibTL_DevGetInfo_Args * _pArgs )
```

17.9.5 KYVPLibTL_DevGetInfo()

Inquires information about a device.

17.9.5.1 C

```
KY_RESULT KYVPLibTL_DevGetInfo(KYVPLibTL_DevGetInfo_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DevGetInfo_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_DevGetNumDataStreams()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DevGetNumDataStreams (
            KYVPLibTL_DevGetNumDataStreams_Args * _pArgs )
```

17.9.6 KYVPLibTL_DevGetNumDataStreams()

Queries the number of available data streams on this Device module.

17.9.6.1 C

```
KY_RESULT KYVPLibTL_DevGetNumDataStreams(KYVPLibTL_DevGetNumDataStreams_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DevGetNumDataStreams_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_DevGetPort()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DevGetPort (
            KYVPLibTL_DevGetPort_Args * _pArgs )
```

17.9.7 KYVPLibTL_DevGetPort()

Retrieves the port handle for the associated remote device.

17.9.7.1 C

```
KY_RESULT KYVPLibTL_DevGetPort(KYVPLibTL_DevGetPort_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DevGetPort_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_DevOpenDataStream()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DevOpenDataStream (
            KYVPLibTL_DevOpenDataStream_Args * _pArgs )
```

17.9.8 KYVPLibTL_DevOpenDataStream()

Opens the given sDataStreamID on the given hDevice.

17.9.8.1 C

```
KY_RESULT KYVPLibTL_DevOpenDataStream(KYVPLibTL_DevOpenDataStream_Args _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYVPLibTL_DevOpenDataStream_Args

Returns

KY_RESULT Status and error report

KYVPLibTL_IFClose()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFClose (
            KYVPLibTL_IFClose_Args * _pArgs )
```

KYVPLibTL_IFGetDeviceID()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFGetDeviceID (
            KYVPLibTL_IFGetDeviceID_Args * _pArgs )
```

KYVPLibTL_IFGetDeviceInfo()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFGetDeviceInfo (
             KYVPLibTL_IFGetDeviceInfo_Args * _pArgs )
```

KYVPLibTL_IFGetInfo()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFGetInfo (
             KYVPLibTL_IFGetInfo_Args * _pArgs )
```

KYVPLibTL_IFGetNumDevices()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFGetNumDevices (
             KYVPLibTL_IFGetNumDevices_Args * _pArgs )
```

KYVPLibTL_IFOpenDevice()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFOpenDevice (
             KYVPLibTL_IFOpenDevice_Args * _pArgs )
```

KYVPLibTL_IFRegisterEvent()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFRegisterEvent (
             KYVPLibTL_IFRegisterEvent_Args * _pArgs )
```

KYVPLibTL_IFUnregisterEvent()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFUnregisterEvent (
             KYVPLibTL_IFUnregisterEvent_Args * _pArgs )
```

KYVPLibTL_IFUpdateDeviceList()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_IFUpdateDeviceList (
             KYVPLibTL_IFUpdateDeviceList_Args * _pArgs )
```

17.10 Stream module

Functions

- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSAllocAndAnnounceBuffer (KYVPLibTL_↩ DSAllocAndAnnounceBuffer_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSAnnounceBuffer (KYVPLibTL_DSAnnounce↩ Buffer_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSClose (KYVPLibTL_DSClose_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSGetBufferID (KYVPLibTL_DSGetBufferID↩ _Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSGetBufferInfo (KYVPLibTL_DSGetBuffer↩ Info_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSGetInfo (KYVPLibTL_DSGetInfo_Args *_↩ pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSQueueBuffer (KYVPLibTL_DSQueue↩ Buffer_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSRevokeBuffer (KYVPLibTL_DSRevoke↩ Buffer_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSStartAcquisition (KYVPLibTL_DSStart↩ Acquisition_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSStopAcquisition (KYVPLibTL_DSStop↩ Acquisition_Args *_pArgs)

17.10.1 Detailed Description

17.10.2 Function Documentation

KYVPLibTL_DSAllocAndAnnounceBuffer()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSAllocAndAnnounceBuffer (
            KYVPLibTL_DSAllocAndAnnounceBuffer_Args * _pArgs )
```

KYVPLibTL_DSAnnounceBuffer()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSAnnounceBuffer (
            KYVPLibTL_DSAnnounceBuffer_Args * _pArgs )
```

KYVPLibTL_DSClose()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSClose (
            KYVPLibTL_DSClose_Args * _pArgs )
```

KYVPLibTL_DSGetBufferID()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSGetBufferID (
            KYVPLibTL_DSGetBufferID_Args * _pArgs )
```

KYVPLibTL_DSGetBufferInfo()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSGetBufferInfo (
            KYVPLibTL_DSGetBufferInfo_Args * _pArgs )
```

KYVPLibTL_DSGetInfo()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSGetInfo (
            KYVPLibTL_DSGetInfo_Args * _pArgs )
```

KYVPLibTL_DSQueueBuffer()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSQueueBuffer (
            KYVPLibTL_DSQueueBuffer_Args * _pArgs )
```

KYVPLibTL_DSRevokeBuffer()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSRevokeBuffer (
            KYVPLibTL_DSRevokeBuffer_Args * _pArgs )
```

KYVPLibTL_DSStartAcquisition()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSStartAcquisition (
            KYVPLibTL_DSStartAcquisition_Args * _pArgs )
```

KYVPLibTL_DSStopAcquisition()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSStopAcquisition (
            KYVPLibTL_DSStopAcquisition_Args * _pArgs )
```

17.11 Event Interface

Functions

- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSRegisterEvent (KYVPLibTL_DSRegister↩ Event_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSUnregisterEvent (KYVPLibTL_DSUnregister↩ Event_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_EventFlush (KYVPLibTL_EventFlush_Args *↩ _pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_EventGetData (KYVPLibTL_EventGetData_↩ Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_EventGetDataInfo (KYVPLibTL_EventGet↩ DataInfo_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_EventGetInfo (KYVPLibTL_EventGetInfo_Args *_pArgs)
- KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_EventKill (KYVPLibTL_EventKill_Args *_pArgs)

17.11.1 Detailed Description

17.11.2 Function Documentation

KYVPLibTL_DSRegisterEvent()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSRegisterEvent (
            KYVPLibTL_DSRegisterEvent_Args * _pArgs )
```

KYVPLibTL_DSUnregisterEvent()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_DSUnregisterEvent (
            KYVPLibTL_DSUnregisterEvent_Args * _pArgs )
```

KYVPLibTL_EventFlush()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_EventFlush (
            KYVPLibTL_EventFlush_Args * _pArgs )
```

KYVPLibTL_EventGetData()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_EventGetData (
            KYVPLibTL_EventGetData_Args * _pArgs )
```

KYVPLibTL_EventGetDataInfo()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_EventGetDataInfo (
            KYVPLibTL_EventGetDataInfo_Args * _pArgs )
```

KYVPLibTL_EventGetInfo()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_EventGetInfo (
            KYVPLibTL_EventGetInfo_Args * _pArgs )
```

KYVPLibTL_EventKill()

```
KYVPTL_API KY_RESULT KYVP_CALLCONV KYVPLibTL_EventKill (
            KYVPLibTL_EventKill_Args * _pArgs )
```

17.12 Init functions

KYPARAMETERSHANDLER API FUNCTIONS.

Functions

- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_CreateParameterCollection (KYParametersHandler_CreateParameterCollection_Args *_pArgs)

  Create instance of ParameterCollection.
- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_Initialize (KYParametersHandler_Initialize_Args *_pArgs)

  Initializes KYParametersHandler library.
- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_InitializeParameterCollection (KYParametersHandler_InitializeParameterCollection_Args *_pArgs)

  Initialize parameter collection. Mandatory to call before using collection.
- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_RegisterParameterCollectionCallback (KYParametersHandler_RegisterParameterCollectionCallback_Args *_pArgs)

  Register PARAMETER_CALLBACK_FUNC to parameter collection for updating about parameter changes.
- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_RegisterParameterCollectionTransport (KYParametersHandler_RegisterParameterCollectionTransport_Args *_pArgs)

  Register TRANSPORT_FUNC to parameter collection for perform operations.

17.12.1 Detailed Description

KYPARAMETERSHANDLER API FUNCTIONS.

17.12.2 Function Documentation

KYParametersHandler_CreateParameterCollection()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_CreateParameterCollection (
            KYParametersHandler_CreateParameterCollection_Args * _pArgs )
```

Create instance of ParameterCollection.

17.12.3 KYParametersHandler_CreateParameterCollection()

17.12.3.1 C

```
KYParametersHandler_CreateParameterCollection(KYParametersHandler_CreateParameterCollection_Args* _pArgs);
```

Parameters

in,out	*_pArgs*	pointer to KYParametersHandler_CreateParameterCollection_Args KYParametersHandler_CreateParameterCollection_Args

Returns

KY_RESULT Status and error report

KYParametersHandler_Initialize()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_Initialize (
```

```
            KYParametersHandler_Initialize_Args * _pArgs )
```

Initializes KYParametersHandler library.

17.12.4 KYParametersHandler_Initialize()

17.12.4.1 C

```
KYParametersHandler_Initialize(KYParametersHandler_Initialize_Args* _pArgs);
```

Parameters

in,out	*_pArgs*	pointer to KYParametersHandler_Initialize_Args KYParametersHandler_Initialize_Args

Returns

KY_RESULT Status and error report

KYParametersHandler_InitializeParameterCollection()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_InitializeParameterCollection (
            KYParametersHandler_InitializeParameterCollection_Args * _pArgs )
```

Initialize parameter collection. Mandatory to call before using collection.

17.12.5 KYParametersHandler_InitializeParameterCollection()

17.12.5.1 C

```
KYParametersHandler_InitializeParameterCollection(KYParametersHandler_InitializeParameterCollection_Args*
    _pArgs);
```

Parameters

in,out	*_pArgs*	pointer to KYParametersHandler_InitializeParameterCollection_Args

Returns

KY_RESULT Status and error report

KYParametersHandler_RegisterParameterCollectionCallback()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_RegisterParameterCollection↩
Callback (
            KYParametersHandler_RegisterParameterCollectionCallback_Args * _pArgs )
```

Register PARAMETER_CALLBACK_FUNC to parameter collection for updating about parameter changes.

17.12.6 KYParametersHandler_RegisterParameterCollectionCallback()

17.12.6.1 C

```
KYParametersHandler_RegisterParameterCollectionCallback(KYParametersHandler_RegisterParameterCollectionCallback_Args*
    _pArgs);
```

Parameters

in,out	*_pArgs*	pointer to KYParametersHandler_RegisterParameterCollectionCallback_Args

Returns

KY_RESULT Status and error report

KYParametersHandler_RegisterParameterCollectionTransport()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_RegisterParameterCollection↩
Transport (
            KYParametersHandler_RegisterParameterCollectionTransport_Args * _pArgs )
```

Register TRANSPORT_FUNC to parameter collection for perform operations.

17.12.7 KYParametersHandler_RegisterParameterCollectionTransport()

17.12.7.1 C

```
KYParametersHandler_RegisterParameterCollectionTransport(KYParametersHandler_RegisterParameterCollectionTransport_Args*
    _pArgs);
```

Parameters

in,out	*_pArgs*	pointer to KYParametersHandler_RegisterParameterCollectionTransport_Args KYParametersHandler_RegisterParameterCollectionTransport_Args

Returns

KY_RESULT Status and error report

17.13 Uninit functions

Functions

- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_DeleteParameterCollection (KYParametersHandler_DeleteParameterCollection_Args *_pArgs)

  Delete instance of ParameterCollection and release all resources.
- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_UnregisterParameterCollectionCallback (KYParametersHandler_UnregisterParameterCollectionCallback_Args *_pArgs)

  Unregister PARAMETER_CALLBACK_FUNC in parameter collection.
- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_UnregisterParameterCollectionTransport (KYParametersHandler_UnregisterParameterCollectionTransport_Args *_pArgs)

  Unregister TRANSPORT_FUNC in parameter collection.

17.13.1 Detailed Description

17.13.2 Function Documentation

KYParametersHandler_DeleteParameterCollection()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_DeleteParameterCollection (
            KYParametersHandler_DeleteParameterCollection_Args * _pArgs )
```

Delete instance of ParameterCollection and release all resources.

17.13.3 KYParametersHandler_DeleteParameterCollection()

17.13.3.1 C

```
KYParametersHandler_DeleteParameterCollection(KYParametersHandler_DeleteParameterCollection_Args* _pArgs);
```

Parameters

in,out	*_pArgs*	pioner to KYParametersHandler_DeleteParameterCollection_Args

Returns

KY_RESULT Status and error report

KYParametersHandler_UnregisterParameterCollectionCallback()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_UnregisterParameterCollection↩
Callback (
            KYParametersHandler_UnregisterParameterCollectionCallback_Args * _pArgs )
```

Unregister PARAMETER_CALLBACK_FUNC in parameter collection.

17.13.4 KYParametersHandler_UnregisterParameterCollectionCallback()

17.13.4.1 C

```
KYParametersHandler_UnregisterParameterCollectionCallback(KYParametersHandler_UnregisterParameterCollectionCallback_Args*
    _pArgs)
```

Parameters

in,out	*_pArgs*	poiner to KYParametersHandler_UnregisterParameterCollectionCallback_Args

Returns

KY_RESULT Status and error report

KYParametersHandler_UnregisterParameterCollectionTransport()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_UnregisterParameterCollection↩
Transport (
            KYParametersHandler_UnregisterParameterCollectionTransport_Args * _pArgs )
```

Unregister TRANSPORT_FUNC in parameter collection.

17.13.5 KYParametersHandler_UnregisterParameterCollectionTransport()

17.13.5.1 C

```
KYParametersHandler_UnregisterParameterCollectionTransport(KYParametersHandler_UnregisterParameterCollectionTransport_Args*
    _pArgs);
```

Parameters

in,out	*_pArgs*	pointer to KYParametersHandler_UnregisterParameterCollectionTransport_Args

Returns

KY_RESULT Status and error report

17.14 Set and Get functions

Functions

- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_GetNodeDescriptor (KYParametersHandler_GetNodeDescriptor_Args *_pArgs)

  Get requested KY_NodeDescriptor for parameter collection by param name.
- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_GetNodeDescriptorsArray (KYParametersHandler_GetNodeDescriptorsArray_Args *_pArgs)

  Get array of KY_NodeDescriptors for parameter collection.
- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_GetParameterAttributeValue (KYParametersHandler_GetParameterAttributeValueArgs *_pArgs)

  Get attribute of parameters.
- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_GetValue (KYParametersHandler_GetValue_A *_pArgs)

  Get value of collection parameter.
- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_GetValueEnumAsString (KYParametersHandler_GetValueEnumAsString_Args *_pArgs)

  Get enum current value as string.
- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_InvalidateParameter (KYParametersHandler_InvalidateParameter_Args *_pArgs)

  Invalidate the collection parameter.
- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_InvalidateParameterCollection (KYParametersHandler_InvalidateParameterCollection_Args *_pArgs)

  Invalidate the all collection parameters.
- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_IsParameterAvailable (KYParametersHandler_IsParameterAvailableArgs *_pArgs)

  Get attribute of parameters.

- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_SaveToFile (KYParametersHandler_SaveToFile_Args *_pArgs)

  Save loaded data to file.
- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_SetValue (KYParametersHandler_SetValue_Args *_pArgs)

  Set value of collection parameter.
- KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_SetValueEnumByValueName (KYParametersHandler_SetValueEnumByValueName_Args *_pArgs)

  Set value of collection parameter.

17.14.1 Detailed Description

17.14.2 Function Documentation

KYParametersHandler_GetNodeDescriptor()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_GetNodeDescriptor (
            KYParametersHandler_GetNodeDescriptor_Args * _pArgs )
```

Get requested KY_NodeDescriptor for parameter collection by param name.

17.14.3 KYParametersHandler_GetNodeDescriptor()

17.14.3.1 C

```
KYParametersHandler_GetNodeDescriptor(KYParametersHandler_GetNodeDescriptor_Args* _pArgs);
```

Parameters

in,out	*_pArgs*	pointer to KYParametersHandler_GetNodeDescriptor_Args

Returns

KY_RESULT Status and error report

KYParametersHandler_GetNodeDescriptorsArray()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_GetNodeDescriptorsArray (
            KYParametersHandler_GetNodeDescriptorsArray_Args * _pArgs )
```

Get array of KY_NodeDescriptors for parameter collection.

17.14.4 KYParametersHandler_GetNodeDescriptorsArray()

17.14.4.1 C

```
KYParametersHandler_GetNodeDescriptorsArray(KYParametersHandler_GetNodeDescriptorsArray_Args* _pArgs);
```

Parameters

in,out	*_pArgs*	pointer to KYParametersHandler_GetNodeDescriptorsArray_Args

Returns

KY_RESULT Status and error report

KYParametersHandler_GetParameterAttributeValue()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_GetParameterAttributeValue (
            KYParametersHandler_GetParameterAttributeValueArgs * _pArgs )
```

Get attribute of parameters.

17.14.5 KYParametersHandler_GetParameterAttributeValue()

17.14.5.1 C

```
KYParametersHandler_GetParameterAttributeValue(KYParametersHandler_GetParameterAttributeValueArgs* _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYParametersHandler_GetParameterAttributeValueArgs

Returns

KY_RESULT Status and error report

KYParametersHandler_GetValue()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_GetValue (
            KYParametersHandler_GetValue_Args * _pArgs )
```

Get value of collection parameter.

17.14.6 KYParametersHandler_GetValue()

17.14.6.1 C

```
KYParametersHandler_GetValue(KYParametersHandler_GetValue_Args* _pArgs);
```

Parameters

in,out	*_pArgs*	poiner to KYParametersHandler_GetValue_Args

Returns

KY_RESULT Status and error report

KYParametersHandler_GetValueEnumAsString()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_GetValueEnumAsString (
            KYParametersHandler_GetValueEnumAsString_Args * _pArgs )
```

Get enum current value as string.

17.14.7 KYParametersHandler_GetValueEnumAsString()

17.14.7.1 C

```
KYParametersHandler_GetValueEnumAsString(KYParametersHandler_GetValueEnumAsString_Args* _pArgs);
```

Parameters

in,out	*_pArgs*	pointer to KYParametersHandler_GetValueEnumAsString()

Returns

KY_RESULT Status and error report

KYParametersHandler_InvalidateParameter()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_InvalidateParameter (
            KYParametersHandler_InvalidateParameter_Args * _pArgs )
```

Invalidate the collection parameter.

17.14.8 KYParametersHandler_InvalidateParameter()

17.14.8.1 C

```
KYParametersHandler_InvalidateParameter(KYParametersHandler_InvalidateParameter_Args* _pArgs);
```

Parameters

in,out	*_pArgs*	pointer to KYParametersHandler_InvalidateParameter_Args

Returns

KY_RESULT Status and error report

KYParametersHandler_InvalidateParameterCollection()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_InvalidateParameterCollection (
            KYParametersHandler_InvalidateParameterCollection_Args * _pArgs )
```

Invalidate the all collection parameters.

17.14.9 KYParametersHandler_InvalidateParameterCollection()

17.14.9.1 C

```
KYParametersHandler_InvalidateParameterCollection(KYParametersHandler_InvalidateParameterCollection_Args*
    _pArgs);
```

Parameters

in,out	*_pArgs*	pointer to KYParametersHandler_InvalidateParameterCollection_Args

Returns

KY_RESULT Status and error report

KYParametersHandler_IsParameterAvailable()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_IsParameterAvailable (
            KYParametersHandler_IsParameterAvailableArgs * _pArgs )
```

Get attribute of parameters.

17.14.10 KYParametersHandler_IsParameterAvailable()

17.14.10.1 C

```
KYParametersHandler_IsParameterAvailable(KYParametersHandler_IsParameterAvailableArgs* _pArgs)
```

Parameters

in,out	*_pArgs*	pointer to KYParametersHandler_IsParameterAvailableArgs

Returns

KY_RESULT Status and error report

KYParametersHandler_SaveToFile()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_SaveToFile (
            KYParametersHandler_SaveToFile_Args * _pArgs )
```

Save loaded data to file.

17.14.11 KYParametersHandler_SaveToFile()

17.14.11.1 C

```
KYParametersHandler_SaveToFile(KYParametersHandler_SaveToFiles_Struct* _pArgs);
```

Parameters

in,out	*_pArgs*	pointer to KYParametersHandler_SaveToFile_Args

Returns

KY_RESULT Status and error report

KYParametersHandler_SetValue()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_SetValue (
            KYParametersHandler_SetValue_Args * _pArgs )
```

Set value of collection parameter.

17.14.12 KYParametersHandler_SetValue()

17.14.12.1 C

```
KYParametersHandler_SetValue(KYParametersHandler_SetValue_Args* _pArgs);
```

Parameters

in,out	*_pArgs*	pointer to KYParametersHandler_SetValue_Args

Returns

KY_RESULT Status and error report

KYParametersHandler_SetValueEnumByValueName()

```
KYVPPARAMLIB_API KY_RESULT KYVP_CALLCONV KYParametersHandler_SetValueEnumByValueName (
            KYParametersHandler_SetValueEnumByValueName_Args * _pArgs )
```

Set value of collection parameter.

17.14.13 KYParametersHandler_SetValueEnumByValueName()

17.14.13.1 C

```
KYParametersHandler_SetValueEnumByValueName(KYParametersHandler_SetValueEnumByValueName_Args* _pArgs);
```

Parameters

in,out	*_pArgs*	pointer to KYParametersHandler_SetValueEnumByValueName_Args

Returns

KY_RESULT Status and error report

17.15 Comparison functions

KYPARAMETERSHANDLER API FUNCTIONS HANDLE COMPARISON.

Functions

- KYVPPARAMLIB_API KY_BOOL KYVP_CALLCONV KYParametersHandler_CollectionHandleIsInvalid (KYVP_COLLECTION_HANDLE _hCollectionHandle)

  Check if Collection Handle is Invalid.
- KYVPPARAMLIB_API KY_BOOL KYVP_CALLCONV KYParametersHandler_CollectionHandleIsNull (KYVP_COLLECTION_HANDLE _hCollectionHandle)

  Check if Collection Handle is NULL.
- KYVPPARAMLIB_API KY_BOOL KYVP_CALLCONV KYParametersHandler_CollectionHandlesIsEqual (KYVP_COLLECTION_HANDLE _hCollectionHandleFirst, KYVP_COLLECTION_HANDLE _hCollection↩HandleSecond)

  Check if Collection Handles is equals.

17.15.1 Detailed Description

KYPARAMETERSHANDLER API FUNCTIONS HANDLE COMPARISON.

17.15.2 Function Documentation

KYParametersHandler_CollectionHandleIsInvalid()

```
KYVPPARAMLIB_API KY_BOOL KYVP_CALLCONV KYParametersHandler_CollectionHandleIsInvalid (
            KYVP_COLLECTION_HANDLE _hCollectionHandle )
```

Check if Collection Handle is Invalid.

17.15.3 KYParametersHandler_CollectionHandleIsInvalid()

17.15.3.1 C

```
KYParametersHandler_CollectionHandleIsInvalid(KYVP_COLLECTION_HANDLE _hCollectionHandle);
```

Parameters

in,out	*_hCollectionHandleo*	KYVP_COLLECTION_HANDLE structure

Returns

KY_BOOL Comparison result

KYParametersHandler_CollectionHandleIsNull()

```
KYVPPARAMLIB_API KY_BOOL KYVP_CALLCONV KYParametersHandler_CollectionHandleIsNull (
            KYVP_COLLECTION_HANDLE _hCollectionHandle )
```

Check if Collection Handle is NULL.

17.15.4 KYParametersHandler_CollectionHandleIsNull()

17.15.4.1 C

```
KYParametersHandler_CollectionHandleIsNull(KYVP_COLLECTION_HANDLE _hCollectionHandle);
```

Parameters

in,out	*_hCollectionHandle*	KYVP_COLLECTION_HANDLE structure

Returns

KY_BOOL Comparison result

KYParametersHandler_CollectionHandlesIsEqual()

```
KYVPPARAMLIB_API KY_BOOL KYVP_CALLCONV KYParametersHandler_CollectionHandlesIsEqual (
            KYVP_COLLECTION_HANDLE _hCollectionHandleFirst,
            KYVP_COLLECTION_HANDLE _hCollectionHandleSecond )
```

Check if Collection Handles is equals.

17.15.5 KYParametersHandler_CollectionHandlesIsEqual()

17.15.5.1 C

```
KYParametersHandler_CollectionHandlesIsEqual(KYVP_COLLECTION_HANDLE _hCollectionHandleFirst,
     KYVP_COLLECTION_HANDLE _hCollectionHandleSecond);
```

Parameters

in,out	*_hCollectionHandleFirst*	KYVP_COLLECTION_HANDLE structure
in,out	*_hCollectionHandleSecond*	KYVP_COLLECTION_HANDLE structure


Returns

KY_BOOL Comparison result

18 Data Structure Documentation

18.1 _DeviceDefinition Struct Reference

Collaboration diagram for _DeviceDefinition:

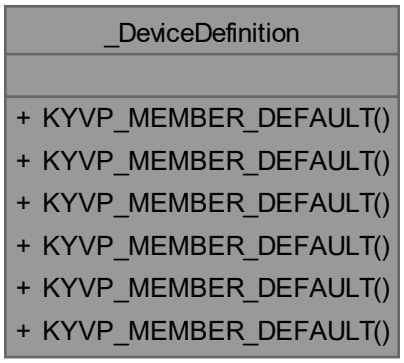

Public Member Functions

- size_t uDeviceLinkDefinitionArrayCount KYVP_MEMBER_DEFAULT (0)
- KY_BOOL bFound KYVP_MEMBER_DEFAULT (KY_FALSE)
- KYVP_CXP_LINK_SPEED eConnectionSpeed KYVP_MEMBER_DEFAULT (KYVP_CXP_LINK_SPEED_↩ CXP0)
- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYVPEXTENSION_DEVICEDEFINITION_VERSION)
- DeviceLinkDefinition *pDeviceLinkDefinitionArray KYVP_MEMBER_DEFAULT (nullptr)
- char szID[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT ({0})

18.1.1 Detailed Description

Definition at line 721 of file KYVPLibExtension.h.

18.1.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
size_t uDeviceLinkDefinitionArrayCount KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
KY_BOOL bFound KYVP_MEMBER_DEFAULT (
             KY_FALSE  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
KYVP_CXP_LINK_SPEED eConnectionSpeed KYVP_MEMBER_DEFAULT (
             KYVP_CXP_LINK_SPEED_CXP0  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
             KYVPEXTENSION_DEVICEDEFINITION_VERSION  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
DeviceLinkDefinition *pDeviceLinkDefinitionArray KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/6]


```
char szID[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT (
             {0}  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.2 _DeviceLinkDefinition Struct Reference

Collaboration diagram for _DeviceLinkDefinition:

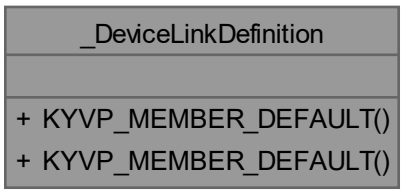

Public Member Functions

- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYVPEXTENSION_DEVICELINKDEFINITION_VERSION)
- uint32_t uHostLink KYVP_MEMBER_DEFAULT (uint32_t(-1))

18.2.1 Detailed Description

Definition at line 694 of file KYVPLibExtension.h.

18.2.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/2]

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
             KYVPEXTENSION_DEVICELINKDEFINITION_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/2]

```
uint32_t uHostLink KYVP_MEMBER_DEFAULT (
             uint32_t(-1)  )
```


The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.3 _KY_RESULT Struct Reference

KY_RESULT STRUCT.

Collaboration diagram for _KY_RESULT:

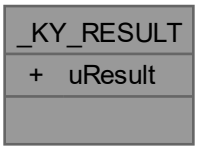

Data Fields

- uint32_t uResult

18.3.1 Detailed Description

KY_RESULT STRUCT.

Definition at line 55 of file KYFoundation_Errors.h.

18.3.2 Field Documentation

uResult

```
uint32_t uResult
```


Definition at line 57 of file KYFoundation_Errors.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYFoundation_Errors.h

18.4 _KYIMGPROC_ConvertParam_Args Struct Reference

Collaboration diagram for _KYIMGPROC_ConvertParam_Args:

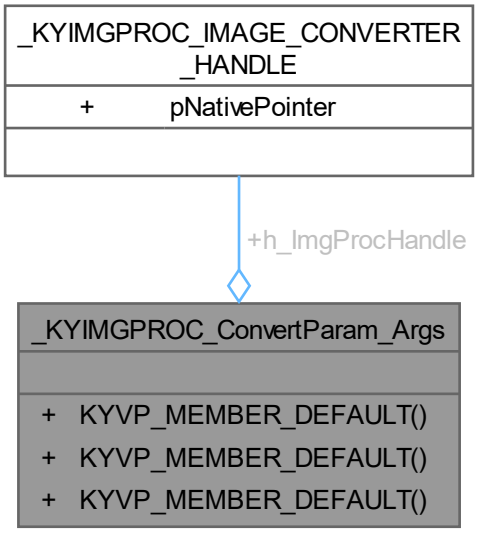

Public Member Functions

- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYIMGPROC_CONVERTPARAM_STRUCT_VERSION)
- VPImage ∗srcImage KYVP_MEMBER_DEFAULT (nullptr)
- VPImage ∗dstImage KYVP_MEMBER_DEFAULT (nullptr)

Data Fields

- KYIMGPROC_IMAGE_CONVERTER_HANDLE h_ImgProcHandle

18.4.1 Detailed Description

Definition at line 417 of file KYVPImageProcessing.h.

18.4.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/3]

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
             KYIMGPROC_CONVERTPARAM_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/3]

```
VPImage *srcImage KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [3/3]

```
VPImage *dstImage KYVP_MEMBER_DEFAULT (
             nullptr  )
```

18.4.3 Field Documentation

h_ImgProcHandle

```
KYIMGPROC_IMAGE_CONVERTER_HANDLE h_ImgProcHandle
```


Definition at line 423 of file KYVPImageProcessing.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.5 _KYIMGPROC_DeleteImageConverterArgs Struct Reference

Collaboration diagram for _KYIMGPROC_DeleteImageConverterArgs:

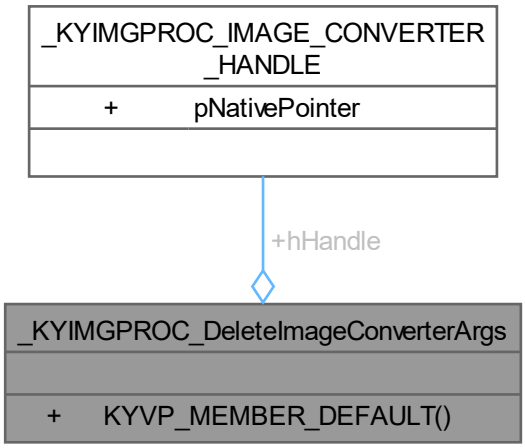

Public Member Functions

- uint32_t uVersion KYVP_MEMBER_DEFAULT (0)

Data Fields

- KYIMGPROC_IMAGE_CONVERTER_HANDLE hHandle

18.5.1 Detailed Description

Definition at line 392 of file KYVPImageProcessing.h.

18.5.2 Member Function Documentation

KYVP_MEMBER_DEFAULT()

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
             0  )
```

18.5.3 Field Documentation

hHandle

```
KYIMGPROC_IMAGE_CONVERTER_HANDLE hHandle
```


Definition at line 395 of file KYVPImageProcessing.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.6 _KYIMGPROC_DeleteVideoRecorderArgs Struct Reference

Collaboration diagram for _KYIMGPROC_DeleteVideoRecorderArgs:

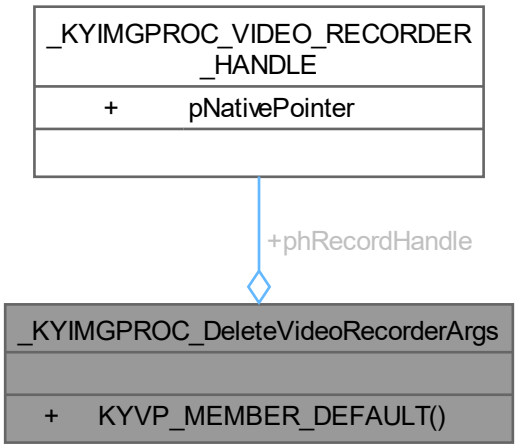

Public Member Functions

- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYIMGPROC_DELETEVIDEORECORDER_STRUCT_↩ VERSION)

Data Fields

- KYIMGPROC_VIDEO_RECORDER_HANDLE phRecordHandle

18.6.1 Detailed Description

Definition at line 346 of file KYVPImageProcessing.h.

18.6.2 Member Function Documentation

KYVP_MEMBER_DEFAULT()

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
            KYIMGPROC_DELETEVIDEORECORDER_STRUCT_VERSION  )
```

18.6.3 Field Documentation

phRecordHandle

```
KYIMGPROC_VIDEO_RECORDER_HANDLE phRecordHandle
```


Definition at line 349 of file KYVPImageProcessing.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.7 _KYImgProc_GetPackedDataInfo_Args Struct Reference

Collaboration diagram for _KYImgProc_GetPackedDataInfo_Args:

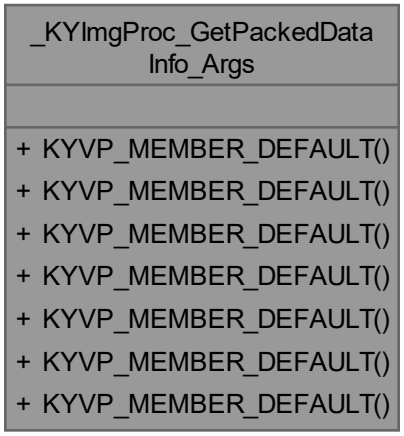

Public Member Functions

- size_t uWidth KYVP_MEMBER_DEFAULT (0)
- size_t uHeight KYVP_MEMBER_DEFAULT (0)
- DS_PACKED_DATA_MODE ePackedModeType KYVP_MEMBER_DEFAULT (DS_PACKED_DATA_MODE↩ _UNPACKED)
- DS_PACKED_DATA_PROCESSING_MODE eProcessingModeType KYVP_MEMBER_DEFAULT (DS_↩ PACKED_DATA_PROCESSING_MODE_EXPAND16)
- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYIMGPROC_GETPACKEDDATAINFO_STRUCT_↩ VERSION)
- const KYIMGPROC_PIXEL_DECODER *pPixelFormat KYVP_MEMBER_DEFAULT (nullptr)
- PackedDataInfo *pPackedDataInfoStruct KYVP_MEMBER_DEFAULT (nullptr)

18.7.1 Detailed Description

Definition at line 583 of file KYVPImageProcessing.h.

18.7.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/7]

```
size_t uWidth KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/7]

```
size_t uHeight KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [3/7]

```
DS_PACKED_DATA_MODE ePackedModeType KYVP_MEMBER_DEFAULT (
             DS_PACKED_DATA_MODE_UNPACKED  )
```

KYVP_MEMBER_DEFAULT() [4/7]

```
DS_PACKED_DATA_PROCESSING_MODE eProcessingModeType KYVP_MEMBER_DEFAULT (
             DS_PACKED_DATA_PROCESSING_MODE_EXPAND16  )
```

KYVP_MEMBER_DEFAULT() [5/7]

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
             KYIMGPROC_GETPACKEDDATAINFO_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [6/7]

```
const KYIMGPROC_PIXEL_DECODER *pPixelFormat KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [7/7]


```
PackedDataInfo *pPackedDataInfoStruct KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.8 _KYImgProc_GetPixelFormat_Args Struct Reference

Collaboration diagram for _KYImgProc_GetPixelFormat_Args:

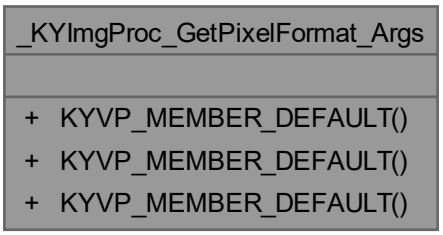

Public Member Functions

- uint32_t uPixelFormatValue KYVP_MEMBER_DEFAULT (0)
- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYIMGPROC_GETPIXELFORMAT_STRUCT_VERSION)
- KYIMGPROC_PIXEL_DECODER *pPixelFormatDecoder KYVP_MEMBER_DEFAULT (nullptr)

18.8.1 Detailed Description

Definition at line 643 of file KYVPImageProcessing.h.

18.8.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/3]

```
uint32_t uPixelFormatValue KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/3]

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
             KYIMGPROC_GETPIXELFORMAT_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [3/3]


```
KYIMGPROC_PIXEL_DECODER *pPixelFormatDecoder KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.9 _KYImgProc_GetPixelFormatByName_Args Struct Reference

Collaboration diagram for _KYImgProc_GetPixelFormatByName_Args:

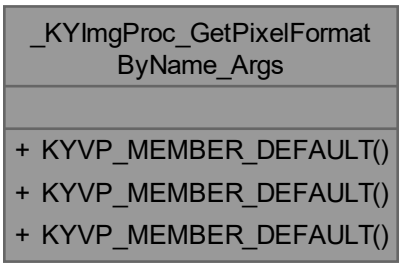

Public Member Functions

- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYIMGPROC_GETPIXELFORMATBYNAME_STRUCT_↩ VERSION)
- const char ∗pszPixelFormatName KYVP_MEMBER_DEFAULT (nullptr)
- KYIMGPROC_PIXEL_DECODER ∗pPixelFormatDecoder KYVP_MEMBER_DEFAULT (nullptr)

18.9.1 Detailed Description

Definition at line 668 of file KYVPImageProcessing.h.

18.9.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/3]

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
             KYIMGPROC_GETPIXELFORMATBYNAME_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/3]

```
const char *pszPixelFormatName KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [3/3]


```
KYIMGPROC_PIXEL_DECODER *pPixelFormatDecoder KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.10 _KYIMGPROC_IMAGE_CONVERTER_HANDLE Struct Reference

Collaboration diagram for _KYIMGPROC_IMAGE_CONVERTER_HANDLE:

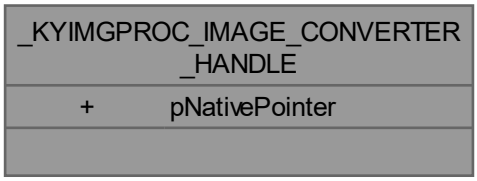

Data Fields

- void * pNativePointer

18.10.1 Detailed Description

Definition at line 168 of file KYVPImageProcessing.h.

18.10.2 Field Documentation

pNativePointer

```
void* pNativePointer
```


Definition at line 185 of file KYVPImageProcessing.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.11 _KYIMGPROC_InitImageConverterArgs Struct Reference

Collaboration diagram for _KYIMGPROC_InitImageConverterArgs:

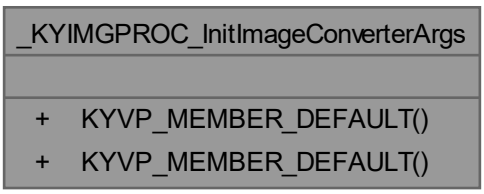

Public Member Functions

- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYIMGPROC_INITIMAGECONVERTER_STRUCT_↩ VERSION)
- KYIMGPROC_IMAGE_CONVERTER_HANDLE ∗phImageProcHandle KYVP_MEMBER_DEFAULT (nullptr)

18.11.1 Detailed Description

Definition at line 369 of file KYVPImageProcessing.h.

18.11.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/2]

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
            KYIMGPROC_INITIMAGECONVERTER_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/2]


```
KYIMGPROC_IMAGE_CONVERTER_HANDLE *phImageProcHandle KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.12 _KYIMGPROC_InitVideoRecorderArgs Struct Reference

Collaboration diagram for _KYIMGPROC_InitVideoRecorderArgs:

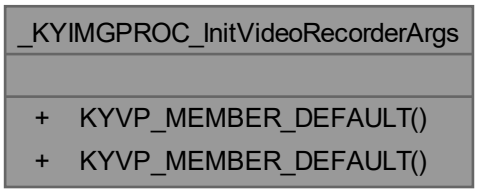

Public Member Functions

- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYIMGPROC_INITVIDEORECORDER_STRUCT_↩ VERSION)
- KYIMGPROC_VIDEO_RECORDER_HANDLE ∗phRecordHandle KYVP_MEMBER_DEFAULT (nullptr)

18.12.1 Detailed Description

Definition at line 323 of file KYVPImageProcessing.h.

18.12.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/2]

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
             KYIMGPROC_INITVIDEORECORDER_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/2]


```
KYIMGPROC_VIDEO_RECORDER_HANDLE *phRecordHandle KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.13 _KYIMGPROC_PIXEL_DECODER Struct Reference

Collaboration diagram for _KYIMGPROC_PIXEL_DECODER:

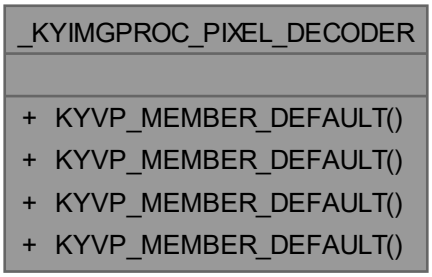

Public Member Functions

- uint32_t uValue KYVP_MEMBER_DEFAULT (0)
- uint32_t version KYVP_MEMBER_DEFAULT (KYIMGPROC_PIXEL_DECODER_STRUCT_VERSION)
- const char *pszPixelFormatName KYVP_MEMBER_DEFAULT (nullptr)
- KYVP_PIXEL_FORMAT *pVP_PIXEL_FORMAT KYVP_MEMBER_DEFAULT (nullptr)

18.13.1 Detailed Description

Definition at line 140 of file KYIMGPROC_PixelFormatDecoder_Defines.h.

18.13.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/4]

```
uint32_t uValue KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/4]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYIMGPROC_PIXEL_DECODER_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [3/4]

```
const char *pszPixelFormatName KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/4]


```
KYVP_PIXEL_FORMAT *pVP_PIXEL_FORMAT KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYIMGPROC_PixelFormatDecoder_Defines.h

18.14 _KYImgProc_PreproccessPackedData_Args Struct Reference

Collaboration diagram for _KYImgProc_PreproccessPackedData_Args:

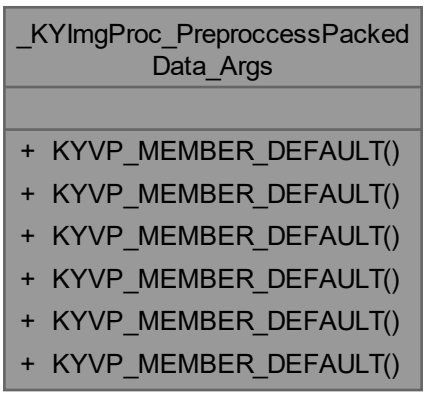

Public Member Functions

- size_t uSourceDataSize KYVP_MEMBER_DEFAULT (0)
- size_t uDestinationDataSize KYVP_MEMBER_DEFAULT (0)
- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYIMGPROC_PREPROCCESSPACKEDDATA_STRUCT_↩ VERSION)
- const PackedDataInfo *pPackedDataInfoStruct KYVP_MEMBER_DEFAULT (nullptr)
- const void *pSourceData KYVP_MEMBER_DEFAULT (nullptr)
- void *pDestinationData KYVP_MEMBER_DEFAULT (nullptr)

18.14.1 Detailed Description

Definition at line 615 of file KYVPImageProcessing.h.

18.14.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
size_t uSourceDataSize KYVP_MEMBER_DEFAULT (
            0  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
size_t uDestinationDataSize KYVP_MEMBER_DEFAULT (
            0  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
            KYIMGPROC_PREPROCCESSPACKEDDATA_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
const PackedDataInfo *pPackedDataInfoStruct KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
const void *pSourceData KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/6]


```
void *pDestinationData KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.15 _KYIMGPROC_SaveImageArgs Struct Reference

Collaboration diagram for _KYIMGPROC_SaveImageArgs:

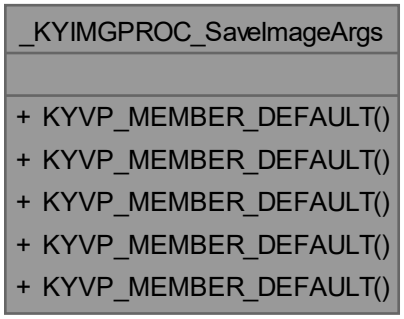

Public Member Functions

- BITS_DEPTH_SHIFT_MODE eBitsDepthShiftMode KYVP_MEMBER_DEFAULT (BITS_DEPTH_SHIFT_↩ MODE_UNKNOWN)
- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYIMGPROC_SAVEIMAGE_STRUCT_VERSION)
- VPImage *srcImage KYVP_MEMBER_DEFAULT (nullptr)
- const char *szFileName KYVP_MEMBER_DEFAULT (nullptr)
- SAVED_IMAGE_FORMAT eImageFormat KYVP_MEMBER_DEFAULT (SAVED_IMAGE_FORMAT_↩ UNKNOWN)

18.15.1 Detailed Description

Definition at line 445 of file KYVPImageProcessing.h.

18.15.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/5]

```
BITS_DEPTH_SHIFT_MODE eBitsDepthShiftMode KYVP_MEMBER_DEFAULT (
            BITS_DEPTH_SHIFT_MODE_UNKNOWN  )
```

KYVP_MEMBER_DEFAULT() [2/5]

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
            KYIMGPROC_SAVEIMAGE_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [3/5]

```
VPImage *srcImage KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/5]

```
const char *szFileName KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/5]


```
SAVED_IMAGE_FORMAT eImageFormat KYVP_MEMBER_DEFAULT (
            SAVED_IMAGE_FORMAT_UNKNOWN  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.16 _KYIMGPROC_SaveRawArgs Struct Reference

Collaboration diagram for _KYIMGPROC_SaveRawArgs:

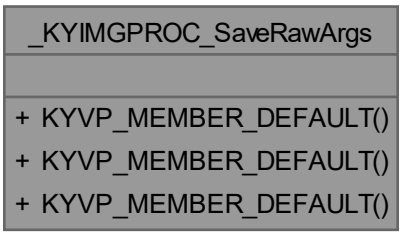

Public Member Functions

- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYIMGPROC_SAVERAW_STRUCT_VERSION)
- VPImage *srcImage KYVP_MEMBER_DEFAULT (nullptr)
- const char *szFileName KYVP_MEMBER_DEFAULT (nullptr)

18.16.1 Detailed Description

Definition at line 473 of file KYVPImageProcessing.h.

18.16.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/3]

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
            KYIMGPROC_SAVERAW_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/3]

```
VPImage *srcImage KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [3/3]


```
const char *szFileName KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.17 _KYIMGPROC_SaveVideoArgs Struct Reference

Collaboration diagram for _KYIMGPROC_SaveVideoArgs:

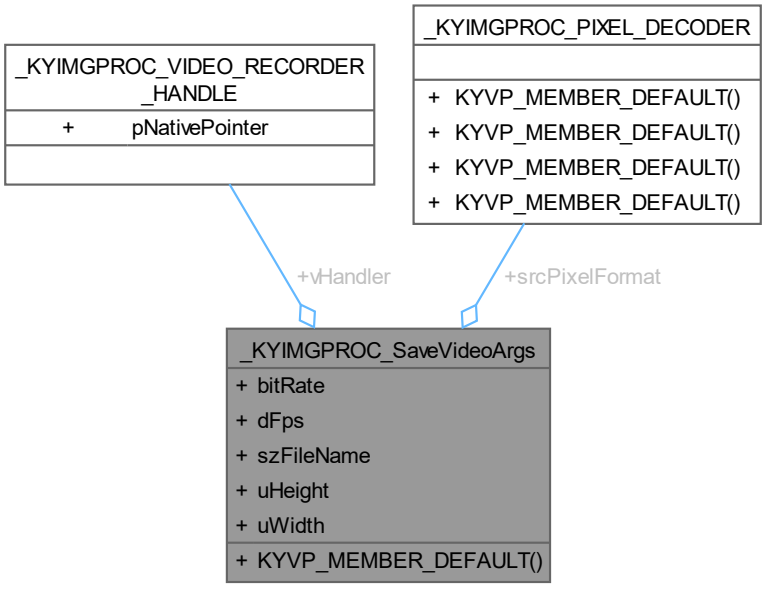

Public Member Functions

- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYIMGPROC_SAVEVIDEO_STRUCT_VERSION)

Data Fields

- uint32_t bitRate
- double dFps
- KYIMGPROC_PIXEL_DECODER * srcPixelFormat
- const char * szFileName
- uint32_t uHeight
- uint32_t uWidth
- KYIMGPROC_VIDEO_RECORDER_HANDLE vHandler

18.17.1 Detailed Description

Definition at line 501 of file KYVPImageProcessing.h.

18.17.2 Member Function Documentation

KYVP_MEMBER_DEFAULT()

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
            KYIMGPROC_SAVEVIDEO_STRUCT_VERSION  )
```

18.17.3 Field Documentation

bitRate

```
uint32_t bitRate
```

Definition at line 507 of file KYVPImageProcessing.h.

dFps

```
double dFps
```

Definition at line 508 of file KYVPImageProcessing.h.

srcPixelFormat

```
KYIMGPROC_PIXEL_DECODER* srcPixelFormat
```

Definition at line 506 of file KYVPImageProcessing.h.

szFileName

```
const char* szFileName
```

Definition at line 505 of file KYVPImageProcessing.h.

uHeight

```
uint32_t uHeight
```

Definition at line 510 of file KYVPImageProcessing.h.

uWidth

```
uint32_t uWidth
```

Definition at line 509 of file KYVPImageProcessing.h.

vHandler

```
KYIMGPROC_VIDEO_RECORDER_HANDLE vHandler
```


Definition at line 504 of file KYVPImageProcessing.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.18 _KYImgProc_StopVideoRecordArgs Struct Reference

Collaboration diagram for _KYImgProc_StopVideoRecordArgs:

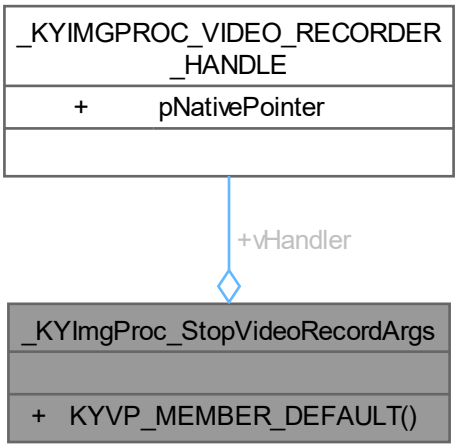

Public Member Functions

- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYIMGPROC_STOPVIDEORECORD_STRUCT_VERSION)

Data Fields

- KYIMGPROC_VIDEO_RECORDER_HANDLE vHandler

18.18.1 Detailed Description

Definition at line 555 of file KYVPImageProcessing.h.

18.18.2 Member Function Documentation

KYVP_MEMBER_DEFAULT()

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
             KYIMGPROC_STOPVIDEORECORD_STRUCT_VERSION  )
```

18.18.3 Field Documentation

vHandler

```
KYIMGPROC_VIDEO_RECORDER_HANDLE vHandler
```


Definition at line 558 of file KYVPImageProcessing.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.19 _KYIMGPROC_VIDEO_RECORDER_HANDLE Struct Reference

Collaboration diagram for _KYIMGPROC_VIDEO_RECORDER_HANDLE:

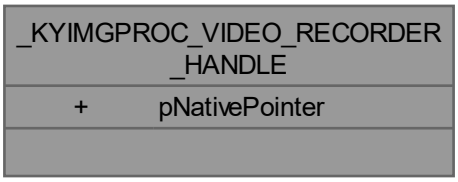

Data Fields

- void * pNativePointer

18.19.1 Detailed Description

Definition at line 131 of file KYVPImageProcessing.h.

18.19.2 Field Documentation

pNativePointer

```
void* pNativePointer
```


Definition at line 144 of file KYVPImageProcessing.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.20 _KYIMGPROC_WriteVideoFrameArgs Struct Reference

Collaboration diagram for _KYIMGPROC_WriteVideoFrameArgs:

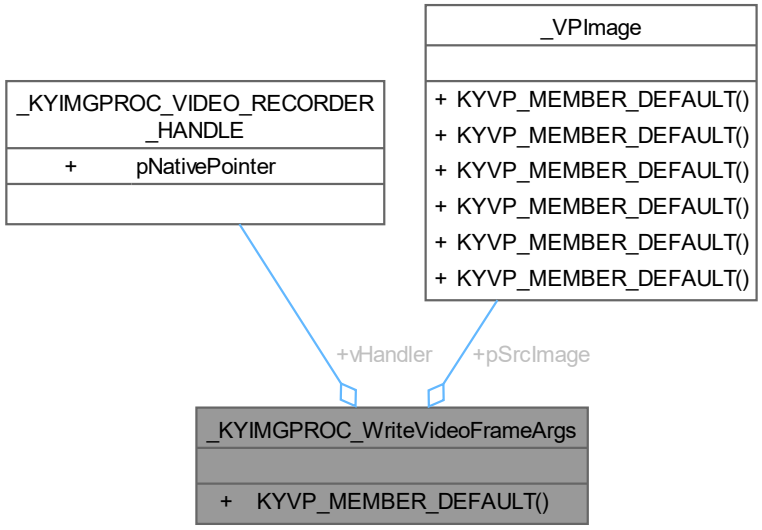

Public Member Functions

- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYIMGPROC_WRITEVIDEOFRAME_STRUCT_VERSION)

Data Fields

- VPImage * pSrcImage
- KYIMGPROC_VIDEO_RECORDER_HANDLE vHandler

18.20.1 Detailed Description

Definition at line 531 of file KYVPImageProcessing.h.

18.20.2 Member Function Documentation

KYVP_MEMBER_DEFAULT()

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
             KYIMGPROC_WRITEVIDEOFRAME_STRUCT_VERSION  )
```

18.20.3 Field Documentation

pSrcImage

```
VPImage* pSrcImage
```

Definition at line 535 of file KYVPImageProcessing.h.

vHandler

```
KYIMGPROC_VIDEO_RECORDER_HANDLE vHandler
```


Definition at line 534 of file KYVPImageProcessing.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.21 _KYParametersHandler_CreateParameterCollection_Args Struct Reference

Collaboration diagram for _KYParametersHandler_CreateParameterCollection_Args:

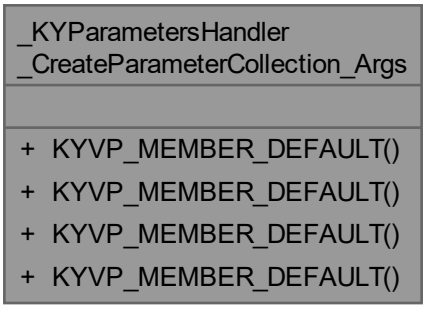

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_CREATEPARAMETERCOLLECTION↩ _STRUCT_VERSION)
- KYVP_COLLECTION_HANDLE ∗phCollectionHandle KYVP_MEMBER_DEFAULT (nullptr)
- char ∗pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t ∗piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.21.1 Detailed Description

Definition at line 234 of file KYVPParametersHandler.h.

18.21.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/4]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYPARAMETERSHANDLER_CREATEPARAMETERCOLLECTION_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/4]

```
KYVP_COLLECTION_HANDLE *phCollectionHandle KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [3/4]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/4]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.22 _KYParametersHandler_DeleteParameterCollection_Args Struct Reference

Collaboration diagram for _KYParametersHandler_DeleteParameterCollection_Args:

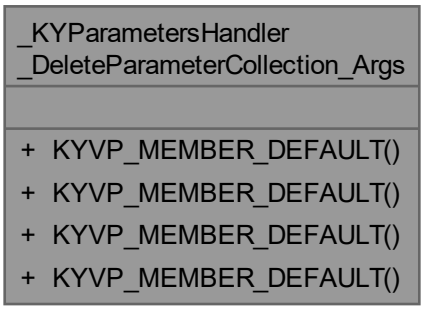

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_DELETEPARAMETERCOLLECTION↩ _STRUCT_VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩ HANDLE_INVALID)
- char ∗pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t ∗piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.22.1 Detailed Description

Definition at line 260 of file KYVPParametersHandler.h.

18.22.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/4]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYPARAMETERSHANDLER_DELETEPARAMETERCOLLECTION_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/4]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
            KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/4]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/4]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.23 _KYParametersHandler_GetNodeDescriptor_Args Struct Reference

Collaboration diagram for _KYParametersHandler_GetNodeDescriptor_Args:

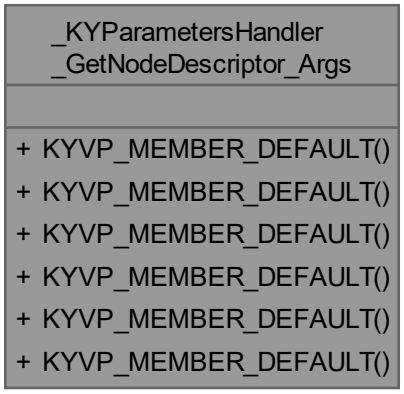

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_GETNODEDESCRIPTOR_↩ STRUCT_VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩ HANDLE_INVALID)
- const char *pszParamName KYVP_MEMBER_DEFAULT (nullptr)
- KYVP_NodeDescriptor **ppNodeDescriptor KYVP_MEMBER_DEFAULT (nullptr)
- char *pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.23.1 Detailed Description

Definition at line 426 of file KYVPParametersHandler.h.

18.23.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYPARAMETERSHANDLER_GETNODEDESCRIPTOR_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
            KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
const char *pszParamName KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
KYVP_NodeDescriptor **ppNodeDescriptor KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/6]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.24 _KYParametersHandler_GetNodeDescriptorsArray_Args Struct Reference

Collaboration diagram for _KYParametersHandler_GetNodeDescriptorsArray_Args:

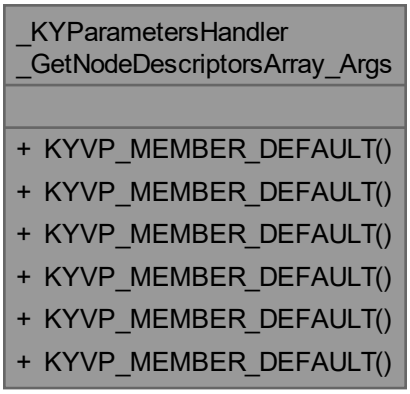

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_GETNODEDESCRIPTORSARRAY↩ _STRUCT_VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩ HANDLE_INVALID)
- const KYVP_NodeDescriptor **ppArray KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piSize KYVP_MEMBER_DEFAULT (nullptr)
- char *pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.24.1 Detailed Description

Definition at line 456 of file KYVPParametersHandler.h.

18.24.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYPARAMETERSHANDLER_GETNODEDESCRIPTORSARRAY_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
            KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
const KYVP_NodeDescriptor **ppArray KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
size_t *piSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/6]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.25 _KYParametersHandler_GetParameterAttributeValueArgs Struct Reference

Collaboration diagram for _KYParametersHandler_GetParameterAttributeValueArgs:

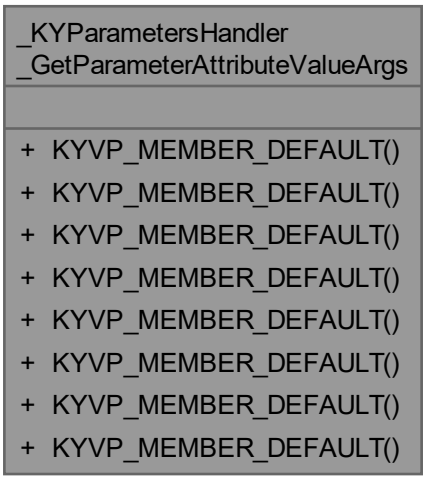

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_SAVETOFILE_STRUCT_↩ VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩ HANDLE_INVALID)
- KYVP_ParameterAttributeType eAttributeType KYVP_MEMBER_DEFAULT (KYVP_ParameterAttribute↩ Type_Invalidator)
- const char *pszParamName KYVP_MEMBER_DEFAULT (nullptr)
- char *pszPropertyValue KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piPropertyValueSize KYVP_MEMBER_DEFAULT (nullptr)
- char *pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.25.1 Detailed Description

Definition at line 694 of file KYVPParametersHandler.h.

18.25.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/8]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYPARAMETERSHANDLER_SAVETOFILE_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/8]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
            KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/8]

```
KYVP_ParameterAttributeType eAttributeType KYVP_MEMBER_DEFAULT (
            KYVP_ParameterAttributeType_Invalidator  )
```

KYVP_MEMBER_DEFAULT() [4/8]

```
const char *pszParamName KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/8]

```
char *pszPropertyValue KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/8]

```
size_t *piPropertyValueSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [7/8]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [8/8]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.26 _KYParametersHandler_GetValue_Args Struct Reference

Collaboration diagram for _KYParametersHandler_GetValue_Args:

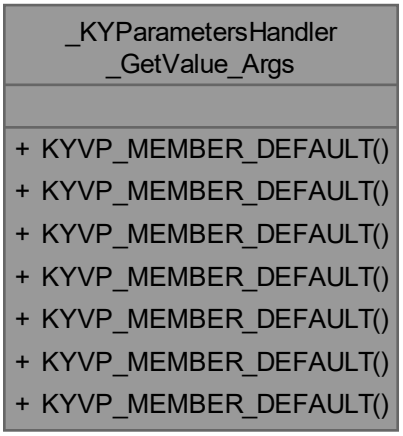

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_GETVALUE_STRUCT_↩ VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩ HANDLE_INVALID)
- const char *pszParamName KYVP_MEMBER_DEFAULT (nullptr)
- void *pParamValue KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piParamValueSize KYVP_MEMBER_DEFAULT (nullptr)
- char *pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.26.1 Detailed Description

Definition at line 487 of file KYVPParametersHandler.h.

18.26.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/7]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYPARAMETERSHANDLER_GETVALUE_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/7]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
             KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/7]

```
const char *pszParamName KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/7]

```
void *pParamValue KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/7]

```
size_t *piParamValueSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/7]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [7/7]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.27 _KYParametersHandler_GetValueEnumAsString_Args Struct Reference

Collaboration diagram for _KYParametersHandler_GetValueEnumAsString_Args:

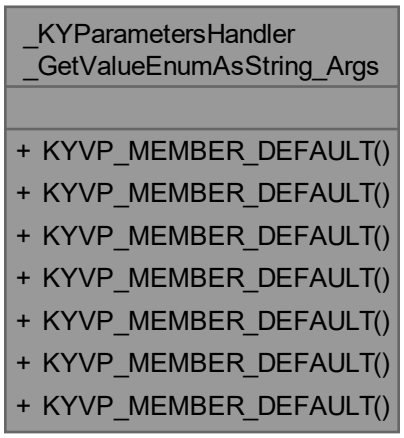

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_GETVALUEENUMASSTRING↩ _STRUCT_VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩ HANDLE_INVALID)
- const char ∗pszEnumerationName KYVP_MEMBER_DEFAULT (nullptr)
- char ∗pszParamValueString KYVP_MEMBER_DEFAULT (nullptr)
- size_t ∗piParamValueStringSize KYVP_MEMBER_DEFAULT (nullptr)
- char ∗pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t ∗piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.27.1 Detailed Description

Definition at line 551 of file KYVPParametersHandler.h.

18.27.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/7]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYPARAMETERSHANDLER_GETVALUEENUMASSTRING_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/7]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
             KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/7]

```
const char *pszEnumerationName KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/7]

```
char *pszParamValueString KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/7]

```
size_t *piParamValueStringSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/7]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [7/7]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.28 _KYParametersHandler_Initialize_Args Struct Reference

Collaboration diagram for _KYParametersHandler_Initialize_Args:

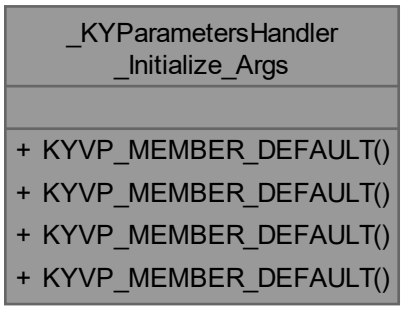

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_INITIALIZE_STRUCT_↩ VERSION)
- KYParametersHandler_InitParameters ∗pInitParameters KYVP_MEMBER_DEFAULT (nullptr)
- char ∗pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t ∗piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.28.1 Detailed Description

Definition at line 208 of file KYVPParametersHandler.h.

18.28.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/4]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYPARAMETERSHANDLER_INITIALIZE_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/4]

```
KYParametersHandler_InitParameters *pInitParameters KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [3/4]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/4]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.29 _KYParametersHandler_InitializeParameterCollection_Args Struct Reference

Collaboration diagram for _KYParametersHandler_InitializeParameterCollection_Args:

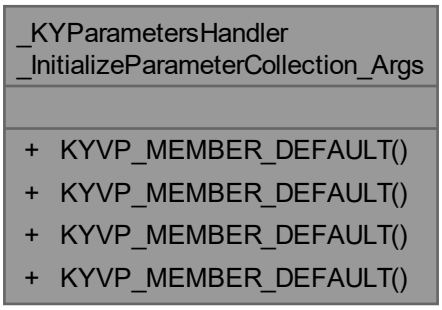

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_INITIALIZEPARAMETERCOLLECTION↩ _STRUCT_VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩ HANDLE_INVALID)
- char *pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.29.1 Detailed Description

Definition at line 398 of file KYVPParametersHandler.h.

18.29.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/4]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYPARAMETERSHANDLER_INITIALIZEPARAMETERCOLLECTION_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/4]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
            KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/4]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/4]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.30 _KYParametersHandler_InitParameters Struct Reference

Collaboration diagram for _KYParametersHandler_InitParameters:

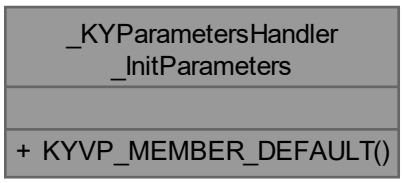

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_INITPARAMETERS_↩ STRUCT_VERSION)

18.30.1 Detailed Description

Definition at line 185 of file KYVPParametersHandler.h.

18.30.2 Member Function Documentation

KYVP_MEMBER_DEFAULT()


```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYPARAMETERSHANDLER_INITPARAMETERS_STRUCT_VERSION  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.31 _KYParametersHandler_InvalidateParameter_Args Struct Reference

Collaboration diagram for _KYParametersHandler_InvalidateParameter_Args:

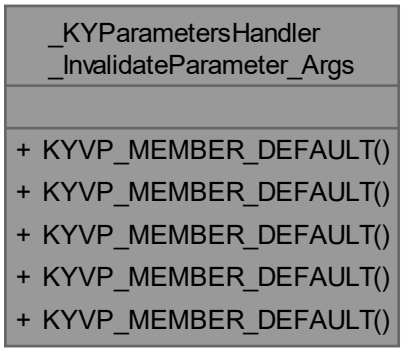

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_INVALIDATEPARAMETER_↩ STRUCT_VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩ HANDLE_INVALID)
- const char ∗pszParamName KYVP_MEMBER_DEFAULT (nullptr)
- char ∗pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t ∗piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.31.1 Detailed Description

Definition at line 637 of file KYVPParametersHandler.h.

18.31.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/5]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYPARAMETERSHANDLER_INVALIDATEPARAMETER_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/5]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
            KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/5]

```
const char *pszParamName KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/5]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/5]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.32 _KYParametersHandler_InvalidateParameterCollection_Args Struct Reference

Collaboration diagram for _KYParametersHandler_InvalidateParameterCollection_Args:

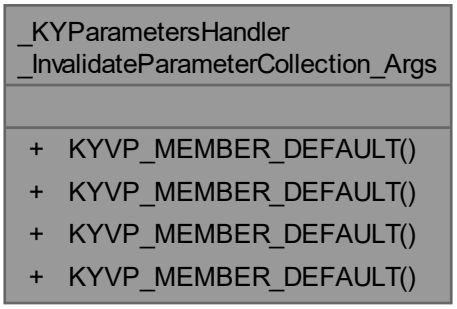

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_INVALIDATEPARAMETERCOLLECTION↩ _STRUCT_VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩ HANDLE_INVALID)
- char ∗pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t ∗piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.32.1 Detailed Description

Definition at line 610 of file KYVPParametersHandler.h.

18.32.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/4]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYPARAMETERSHANDLER_INVALIDATEPARAMETERCOLLECTION_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/4]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
            KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/4]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/4]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.33 _KYParametersHandler_IsParameterAvailableArgs Struct Reference

Collaboration diagram for _KYParametersHandler_IsParameterAvailableArgs:

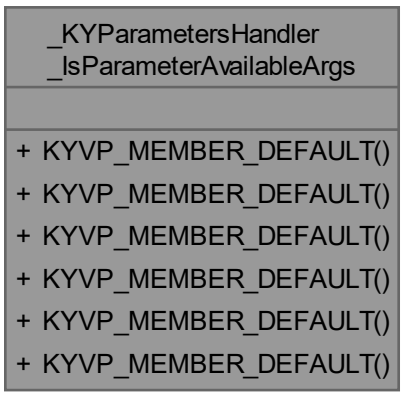

Public Member Functions

- KY_BOOL bIsAvailable KYVP_MEMBER_DEFAULT (KY_FALSE)
- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_SAVETOFILE_STRUCT_↩ VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩ HANDLE_INVALID)
- const char *pszParamName KYVP_MEMBER_DEFAULT (nullptr)
- char *pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.33.1 Detailed Description

Definition at line 720 of file KYVPParametersHandler.h.

18.33.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
KY_BOOL bIsAvailable KYVP_MEMBER_DEFAULT (
            KY_FALSE  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYPARAMETERSHANDLER_SAVETOFILE_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
            KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
const char *pszParamName KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/6]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.34 _KYParametersHandler_RegisterParameterCollectionCallback_Args Struct Reference

Collaboration diagram for _KYParametersHandler_RegisterParameterCollectionCallback_Args:

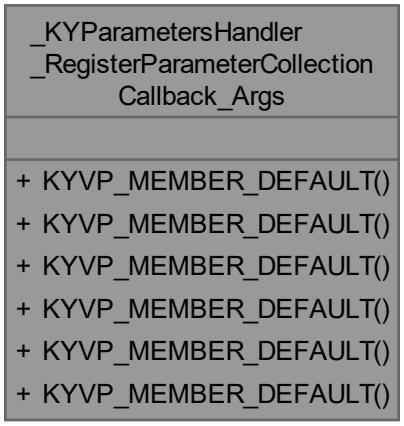

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_REGISTERPARAMETERCOLLECTIONCALLBAC
  _STRUCT_VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩
  HANDLE_INVALID)
- PARAMETER_CALLBACK_FUNC pPARAMETER_CALLBACK_FUNC KYVP_MEMBER_DEFAULT (nullptr)
- void ∗pContext KYVP_MEMBER_DEFAULT (nullptr)
- char ∗pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t ∗piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.34.1 Detailed Description

Definition at line 344 of file KYVPParametersHandler.h.

18.34.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYPARAMETERSHANDLER_REGISTERPARAMETERCOLLECTIONCALLBACK_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
            KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
PARAMETER_CALLBACK_FUNC pPARAMETER_CALLBACK_FUNC KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
void *pContext KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/6]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.35 _KYParametersHandler_RegisterParameterCollectionTransport_Args Struct Reference

Collaboration diagram for _KYParametersHandler_RegisterParameterCollectionTransport_Args:

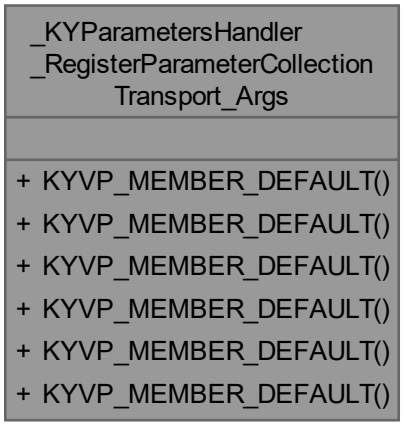

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_REGISTERPARAMETERCOLLECTIONTRANSPO
  _STRUCT_VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩
  HANDLE_INVALID)
- TRANSPORT_FUNC pTRANSPORT_FUNC KYVP_MEMBER_DEFAULT (nullptr)
- void *pContext KYVP_MEMBER_DEFAULT (nullptr)
- char *pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.35.1 Detailed Description

Definition at line 288 of file KYVPParametersHandler.h.

18.35.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYPARAMETERSHANDLER_REGISTERPARAMETERCOLLECTIONTRANSPORT_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
            KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
TRANSPORT_FUNC pTRANSPORT_FUNC KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
void *pContext KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/6]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.36 _KYParametersHandler_SaveToFile_Args Struct Reference

Collaboration diagram for _KYParametersHandler_SaveToFile_Args:

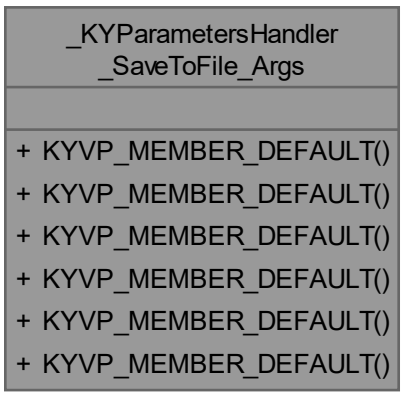

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_SAVETOFILE_STRUCT_↩ VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩ HANDLE_INVALID)
- const char *pszFilePath KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piFilePathSize KYVP_MEMBER_DEFAULT (nullptr)
- char *pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.36.1 Detailed Description

Definition at line 667 of file KYVPParametersHandler.h.

18.36.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYPARAMETERSHANDLER_SAVETOFILE_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
            KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
const char *pszFilePath KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
size_t *piFilePathSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/6]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.37 _KYParametersHandler_SetValue_Args Struct Reference

Collaboration diagram for _KYParametersHandler_SetValue_Args:

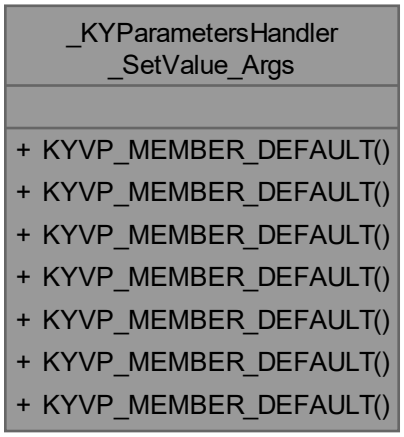

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_SETVALUE_STRUCT_↩ VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩ HANDLE_INVALID)
- const char ∗pszParamName KYVP_MEMBER_DEFAULT (nullptr)
- const void ∗pParamValue KYVP_MEMBER_DEFAULT (nullptr)
- size_t ∗piParamValueSize KYVP_MEMBER_DEFAULT (nullptr)
- char ∗pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t ∗piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.37.1 Detailed Description

Definition at line 519 of file KYVPParametersHandler.h.

18.37.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/7]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYPARAMETERSHANDLER_SETVALUE_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/7]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
             KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/7]

```
const char *pszParamName KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/7]

```
const void *pParamValue KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/7]

```
size_t *piParamValueSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/7]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [7/7]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.38 _KYParametersHandler_SetValueEnumByValueName_Args Struct Reference

Collaboration diagram for _KYParametersHandler_SetValueEnumByValueName_Args:

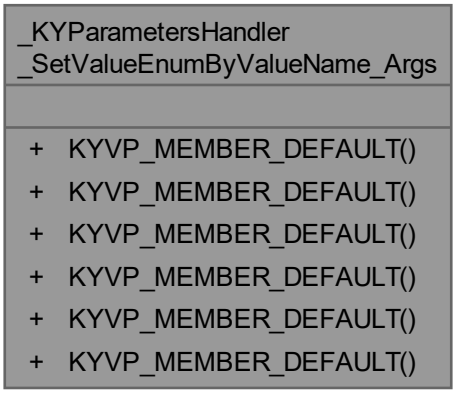

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_SETVALUE_STRUCT_↩ VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩ HANDLE_INVALID)
- const char *pszParamName KYVP_MEMBER_DEFAULT (nullptr)
- const char *pszParamValue KYVP_MEMBER_DEFAULT (nullptr)
- char *pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.38.1 Detailed Description

Definition at line 582 of file KYVPParametersHandler.h.

18.38.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYPARAMETERSHANDLER_SETVALUE_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
             KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
const char *pszParamName KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
const char *pszParamValue KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/6]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.39 _KYParametersHandler_TransportCallParams_Args Struct Reference

Collaboration diagram for _KYParametersHandler_TransportCallParams_Args:

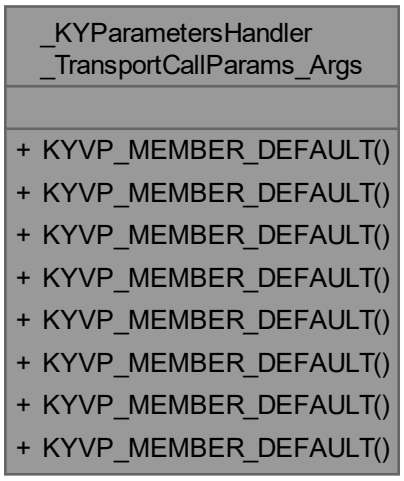

Public Member Functions

- uint64_t iAddress KYVP_MEMBER_DEFAULT (0)
- size_t iSize KYVP_MEMBER_DEFAULT (0)
- KY_BOOL bResourceDataZipped KYVP_MEMBER_DEFAULT (KY_FALSE)
- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_TRANSPORTCALLPARAMS↩ _STRUCT_VERSION)
- KYParametersHandler_TransportOperationResult eResult KYVP_MEMBER_DEFAULT (KYParameters↩ Handler_TransportOperationResult_Failed)
- KYParametersHandler_TransportOperationType eOperation KYVP_MEMBER_DEFAULT (KYParameters↩ Handler_TransportOperationType_Read)
- void ∗pData KYVP_MEMBER_DEFAULT (nullptr)
- void ∗pContext KYVP_MEMBER_DEFAULT (nullptr)

18.39.1 Detailed Description

Definition at line 152 of file KYVPParametersHandler.h.

18.39.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/8]

```
uint64_t iAddress KYVP_MEMBER_DEFAULT (
            0  )
```

KYVP_MEMBER_DEFAULT() [2/8]

```
size_t iSize KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [3/8]

```
KY_BOOL bResourceDataZipped KYVP_MEMBER_DEFAULT (
             KY_FALSE  )
```

KYVP_MEMBER_DEFAULT() [4/8]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYPARAMETERSHANDLER_TRANSPORTCALLPARAMS_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [5/8]

```
KYParametersHandler_TransportOperationResult eResult KYVP_MEMBER_DEFAULT (
             KYParametersHandler_TransportOperationResult_Failed  )
```

KYVP_MEMBER_DEFAULT() [6/8]

```
KYParametersHandler_TransportOperationType eOperation KYVP_MEMBER_DEFAULT (
             KYParametersHandler_TransportOperationType_Read  )
```

KYVP_MEMBER_DEFAULT() [7/8]

```
void *pData KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [8/8]


```
void *pContext KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.40 _KYParametersHandler_UnregisterParameterCollectionCallback_Args Struct Reference

Collaboration diagram for _KYParametersHandler_UnregisterParameterCollectionCallback_Args:

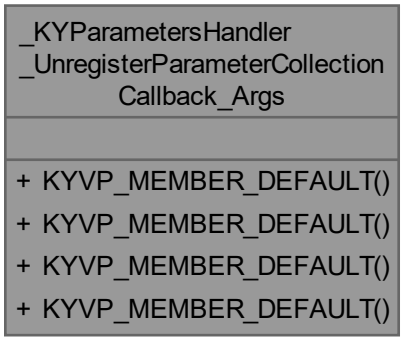

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_UNREGISTERPARAMETERCOLLECTIONCALLB _STRUCT_VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩ HANDLE_INVALID)
- char ∗pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t ∗piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.40.1 Detailed Description

Definition at line 372 of file KYVPParametersHandler.h.

18.40.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/4]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYPARAMETERSHANDLER_UNREGISTERPARAMETERCOLLECTIONCALLBACK_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/4]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
            KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/4]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/4]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.41 _KYParametersHandler_UnregisterParameterCollectionTransport_Args Struct Reference

Collaboration diagram for _KYParametersHandler_UnregisterParameterCollectionTransport_Args:

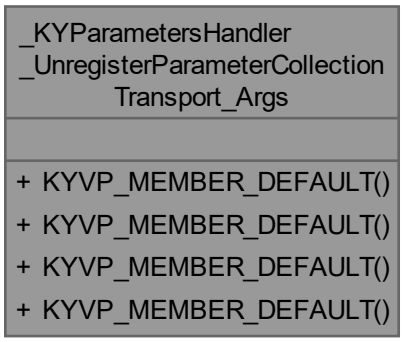

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYPARAMETERSHANDLER_UNREGISTERPARAMETERCOLLECTIONTRANS
  _STRUCT_VERSION)
- KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (KYVP_COLLECTION_↩
  HANDLE_INVALID)
- char *pszErrorString KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (nullptr)

18.41.1 Detailed Description

Definition at line 316 of file KYVPParametersHandler.h.

18.41.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/4]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYPARAMETERSHANDLER_UNREGISTERPARAMETERCOLLECTIONTRANSPORT_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/4]

```
KYVP_COLLECTION_HANDLE hCollectionHandle KYVP_MEMBER_DEFAULT (
            KYVP_COLLECTION_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/4]

```
char *pszErrorString KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/4]


```
size_t *piErrorStringSize KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.42 _KYVP_AUX_DATA Struct Reference

Collaboration diagram for _KYVP_AUX_DATA:

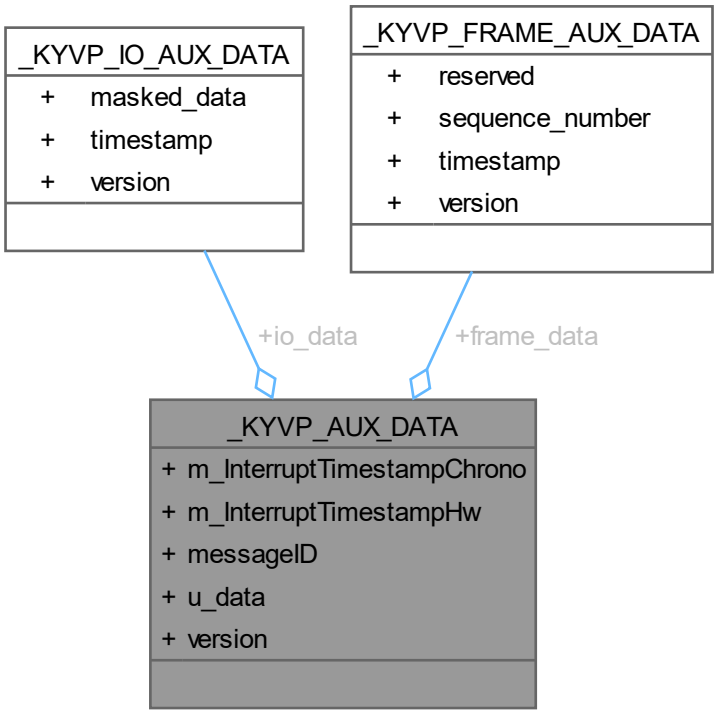

Data Fields

- uint64_t m_InterruptTimestampChrono
- uint64_t m_InterruptTimestampHw
- uint32_t messageID
- union {
  KYVP_FRAME_AUX_DATA frame_data
  KYVP_IO_AUX_DATA io_data
  } u_data

- uint8_t version

18.42.1 Detailed Description

Definition at line 156 of file KYVPDefines.h.

18.42.2 Field Documentation

frame_data

```
KYVP_FRAME_AUX_DATA frame_data
```

Definition at line 166 of file KYVPDefines.h.

io_data

```
KYVP_IO_AUX_DATA io_data
```

Definition at line 165 of file KYVPDefines.h.

m_InterruptTimestampChrono

```
uint64_t m_InterruptTimestampChrono
```

Definition at line 170 of file KYVPDefines.h.

m_InterruptTimestampHw

```
uint64_t m_InterruptTimestampHw
```

Definition at line 169 of file KYVPDefines.h.

messageID

```
uint32_t messageID
```

Definition at line 161 of file KYVPDefines.h.

[union]

```
union { ... } u_data
```

version

```
uint8_t version
```


Definition at line 158 of file KYVPDefines.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPDefines.h

18.43 _KYVP_BOARD_INFO Struct Reference

Collaboration diagram for _KYVP_BOARD_INFO:

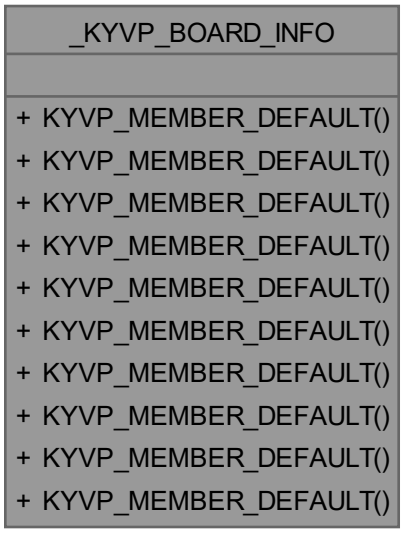

Public Member Functions

- uint64_t m_uFlags KYVP_MEMBER_DEFAULT (0)
- uint8_t m_uVersion KYVP_MEMBER_DEFAULT (KYVP_MAX_BOARD_INFO_VERSION)
- KYVP_PCI_INTERFACE_PROTOCOL m_Protocol KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE↩ _PROTOCOL_Mixed)
- uint32_t m_uDevicePID KYVP_MEMBER_DEFAULT (UINT32_MAX)
- uint32_t m_uPhysicalLinks KYVP_MEMBER_DEFAULT (UINT32_MAX)
- uint8_t m_uDeviceGeneration KYVP_MEMBER_DEFAULT (UINT8_MAX)
- uint8_t m_uRevision KYVP_MEMBER_DEFAULT (UINT8_MAX)
- KYVP_PCI_INTERFACE_SLOT m_Slot KYVP_MEMBER_DEFAULT ({})
- KYVP_PCI_CONFIG m_ActivePCIConfig KYVP_MEMBER_DEFAULT ({})
- KYVP_PCI_CONFIG m_MinimalPCIConfig KYVP_MEMBER_DEFAULT ({})

18.43.1 Detailed Description

Definition at line 338 of file KYVPDefines.h.

18.43.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/10]

```
uint64_t m_uFlags KYVP_MEMBER_DEFAULT (
            0  )
```

KYVP_MEMBER_DEFAULT() [2/10]

```
uint8_t m_uVersion KYVP_MEMBER_DEFAULT (
             KYVP_MAX_BOARD_INFO_VERSION  )
```

KYVP_MEMBER_DEFAULT() [3/10]

```
KYVP_PCI_INTERFACE_PROTOCOL m_Protocol KYVP_MEMBER_DEFAULT (
             KYVP_PCI_INTERFACE_PROTOCOL_Mixed  )
```

KYVP_MEMBER_DEFAULT() [4/10]

```
uint32_t m_uDevicePID KYVP_MEMBER_DEFAULT (
             UINT32_MAX  )
```

KYVP_MEMBER_DEFAULT() [5/10]

```
uint32_t m_uPhysicalLinks KYVP_MEMBER_DEFAULT (
             UINT32_MAX  )
```

KYVP_MEMBER_DEFAULT() [6/10]

```
uint8_t m_uDeviceGeneration KYVP_MEMBER_DEFAULT (
             UINT8_MAX  )
```

KYVP_MEMBER_DEFAULT() [7/10]

```
uint8_t m_uRevision KYVP_MEMBER_DEFAULT (
             UINT8_MAX  )
```

KYVP_MEMBER_DEFAULT() [8/10]

```
KYVP_PCI_INTERFACE_SLOT m_Slot KYVP_MEMBER_DEFAULT (
             {}  )
```

KYVP_MEMBER_DEFAULT() [9/10]

```
KYVP_PCI_CONFIG m_ActivePCIConfig KYVP_MEMBER_DEFAULT (
             {}  )
```

KYVP_MEMBER_DEFAULT() [10/10]

```
KYVP_PCI_CONFIG m_MinimalPCIConfig KYVP_MEMBER_DEFAULT (
            {}  )
```


The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPDefines.h

18.44 _KYVP_BUFFER_DATA_CHUNK Struct Reference

A buffer data chunk.

Collaboration diagram for _KYVP_BUFFER_DATA_CHUNK:

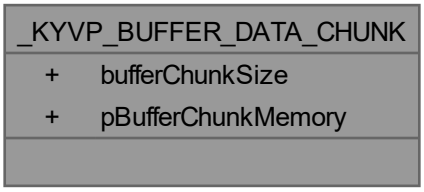

Data Fields

- size_t bufferChunkSize
- void * pBufferChunkMemory

18.44.1 Detailed Description

A buffer data chunk.

Definition at line 265 of file KYVPDefines.h.

18.44.2 Field Documentation

bufferChunkSize

```
size_t bufferChunkSize
```

Definition at line 268 of file KYVPDefines.h.

pBufferChunkMemory

```
void* pBufferChunkMemory
```


Definition at line 267 of file KYVPDefines.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPDefines.h

18.45 _KYVP_BUFFER_INFO Struct Reference

Collaboration diagram for _KYVP_BUFFER_INFO:

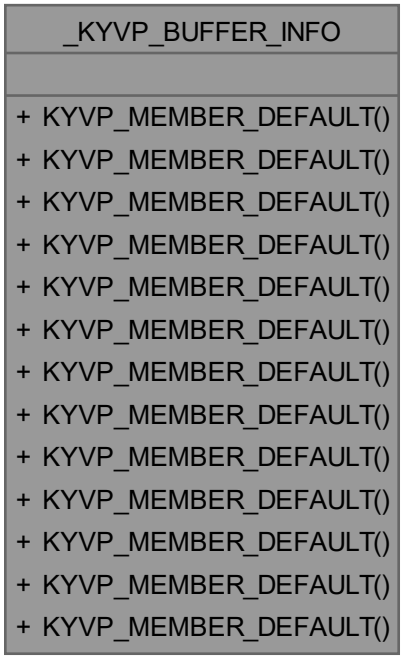

Public Member Functions

- uint32_t m_uVersion KYVP_MEMBER_DEFAULT (KYVP_BUFFER_INFO_VERSION)
- const uint64_t ∗m_puFrameId KYVP_MEMBER_DEFAULT (nullptr)
- const uint64_t ∗m_puBufferId KYVP_MEMBER_DEFAULT (nullptr)
- const uint64_t ∗m_puTimestampNS KYVP_MEMBER_DEFAULT (nullptr)
- const double ∗m_puInstantFPS KYVP_MEMBER_DEFAULT (nullptr)
- const void ∗m_pBase KYVP_MEMBER_DEFAULT (nullptr)
- const size_t ∗m_puSize KYVP_MEMBER_DEFAULT (nullptr)
- const void ∗m_pContext KYVP_MEMBER_DEFAULT (nullptr)
- const size_t ∗m_puWidth KYVP_MEMBER_DEFAULT (nullptr)
- const size_t ∗m_puHeight KYVP_MEMBER_DEFAULT (nullptr)
- const uint64_t ∗m_puPixelFormat KYVP_MEMBER_DEFAULT (nullptr)
- const uint64_t ∗m_puTimestampNS_HW KYVP_MEMBER_DEFAULT (nullptr)
- const uint64_t ∗m_puTimestampNS_CHRONO KYVP_MEMBER_DEFAULT (nullptr)

18.45.1 Detailed Description

Definition at line 480 of file KYVPDefines.h.

18.45.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/13]

```
uint32_t m_uVersion KYVP_MEMBER_DEFAULT (
             KYVP_BUFFER_INFO_VERSION  )
```

KYVP_MEMBER_DEFAULT() [2/13]

```
const uint64_t *m_puFrameId KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [3/13]

```
const uint64_t *m_puBufferId KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/13]

```
const uint64_t *m_puTimestampNS KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/13]

```
const double *m_puInstantFPS KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/13]

```
const void *m_pBase KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [7/13]

```
const size_t *m_puSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [8/13]

```
const void *m_pContext KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [9/13]

```
const size_t *m_puWidth KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [10/13]

```
const size_t *m_puHeight KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [11/13]

```
const uint64_t *m_puPixelFormat KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [12/13]

```
const uint64_t *m_puTimestampNS_HW KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [13/13]


```
const uint64_t *m_puTimestampNS_CHRONO KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPDefines.h

18.46 _KYVP_COLLECTION_HANDLE Struct Reference

Collaboration diagram for _KYVP_COLLECTION_HANDLE:

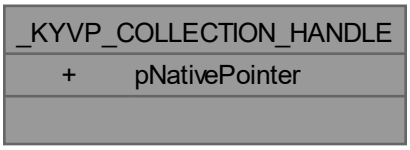

Data Fields

- void * pNativePointer

18.46.1 Detailed Description

Definition at line 63 of file KYVPParametersHandler.h.

18.46.2 Field Documentation

pNativePointer

```
void* pNativePointer
```

Definition at line 80 of file KYVPParametersHandler.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPParametersHandler.h

18.47 _KYVP_CXP2_EVENT Struct Reference

Collaboration diagram for _KYVP_CXP2_EVENT:



Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYVP_CXP2_EVENT_VERSION)

Data Fields

- uint16_t uDataSize
- uint32_t uDataWordsArr [KY_CXP_EVENT_MAX_DATA_SIZE/4]
- uint32_t uMasterHostConnectionID
- uint8_t uTag

18.47.1 Detailed Description

Definition at line 219 of file KYVPDefines.h.

18.47.2 Member Function Documentation

KYVP_MEMBER_DEFAULT()

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYVP_CXP2_EVENT_VERSION  )
```

18.47.3 Field Documentation

uDataSize

```
uint16_t uDataSize
```

Definition at line 224 of file KYVPDefines.h.

uDataWordsArr

```
uint32_t uDataWordsArr[KY_CXP_EVENT_MAX_DATA_SIZE/4]
```

Definition at line 225 of file KYVPDefines.h.

uMasterHostConnectionID

```
uint32_t uMasterHostConnectionID
```

Definition at line 222 of file KYVPDefines.h.

uTag

```
uint8_t uTag
```


Definition at line 223 of file KYVPDefines.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPDefines.h

18.48 _KYVP_CXP2_HEARTBEAT Struct Reference

Collaboration diagram for _KYVP_CXP2_HEARTBEAT:

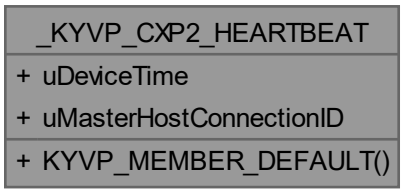

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYVP_CXP2_HEARTBEAT_VERSION)

Data Fields

- uint64_t uDeviceTime
- uint32_t uMasterHostConnectionID

18.48.1 Detailed Description

Definition at line 203 of file KYVPDefines.h.

18.48.2 Member Function Documentation

KYVP_MEMBER_DEFAULT()

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVP_CXP2_HEARTBEAT_VERSION  )
```

18.48.3 Field Documentation

uDeviceTime

```
uint64_t uDeviceTime
```

Definition at line 207 of file KYVPDefines.h.

uMasterHostConnectionID

```
uint32_t uMasterHostConnectionID
```


Definition at line 206 of file KYVPDefines.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPDefines.h

18.49 _KYVP_DEVICE_IMAGE_DETAILS Struct Reference

Collaboration diagram for _KYVP_DEVICE_IMAGE_DETAILS:

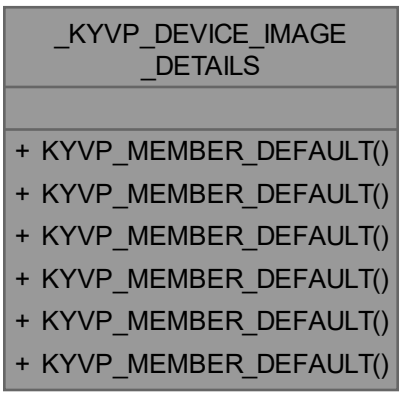

Public Member Functions

- char m_szPixelFormatName[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT ("")
- char m_szTapGeometryType[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT ("")
- uint32_t m_uVersion KYVP_MEMBER_DEFAULT (KYVP_DEVICE_IMAGE_DETAILS_VERSION)
- uint32_t m_uWidth KYVP_MEMBER_DEFAULT (UINT32_MAX)
- uint32_t m_uHeight KYVP_MEMBER_DEFAULT (UINT32_MAX)
- uint32_t m_uPixelFormat KYVP_MEMBER_DEFAULT (UINT32_MAX)

18.49.1 Detailed Description

Definition at line 456 of file KYVPDefines.h.

18.49.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
char m_szPixelFormatName[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT (
            ""  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
char m_szTapGeometryType[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT (
            ""  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
uint32_t m_uVersion KYVP_MEMBER_DEFAULT (
            KYVP_DEVICE_IMAGE_DETAILS_VERSION  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
uint32_t m_uWidth KYVP_MEMBER_DEFAULT (
            UINT32_MAX  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
uint32_t m_uHeight KYVP_MEMBER_DEFAULT (
            UINT32_MAX  )
```

KYVP_MEMBER_DEFAULT() [6/6]


```
uint32_t m_uPixelFormat KYVP_MEMBER_DEFAULT (
            UINT32_MAX  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPDefines.h

18.50 _KYVP_DEVICE_INFO Struct Reference

Collaboration diagram for _KYVP_DEVICE_INFO:

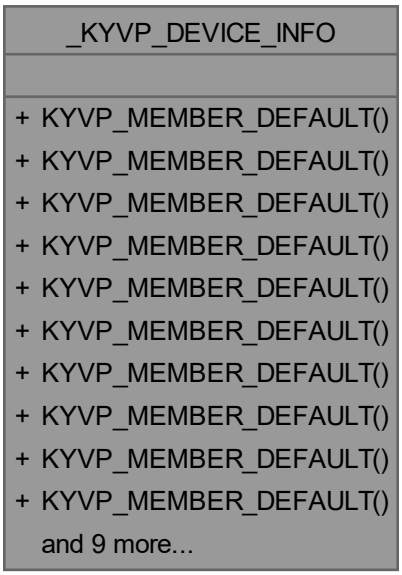

Public Member Functions

- uint8_t m_uMasterLink KYVP_MEMBER_DEFAULT ((uint8_t) -1)
- KY_PROCID m_ProcId KYVP_MEMBER_DEFAULT (0)
- uint8_t m_uLinkMask KYVP_MEMBER_DEFAULT (0)
- int m_nMaxDeviceLinks KYVP_MEMBER_DEFAULT (0)
- uint32_t m_uLinkConfig KYVP_MEMBER_DEFAULT (0)
- KY_BOOL m_bOutputCamera KYVP_MEMBER_DEFAULT (KY_FALSE)
- KY_BOOL m_bVirtualCamera KYVP_MEMBER_DEFAULT (KY_FALSE)
- KYVP_CXP_LINK_SPEED m_linkSpeed KYVP_MEMBER_DEFAULT (KYVP_CXP_LINK_SPEED_CXP0)
- uint32_t m_uVersion KYVP_MEMBER_DEFAULT (KYVP_DEVICE_INFO_VERSION)
- int m_vecDeviceConnectionTopology[MAX_PCI_INTERFACE_LINKS] KYVP_MEMBER_DEFAULT ({-1})
- uint32_t m_uStreamId[256] KYVP_MEMBER_DEFAULT ({})
- KY_BOOL m_uValidStreamId[256] KYVP_MEMBER_DEFAULT ({})
- char m_szDeviceVersion[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT ({})
- char m_szDeviceVendorName[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT ({})
- char m_szDeviceManufacturerInfo[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT ({})
- char m_szDeviceModelName[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT ({})
- char m_szDeviceID[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT ({})
- char m_szDeviceUserID[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT ({})
- char m_szDeviceFirmwareVersion[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT ({})

18.50.1 Detailed Description

Definition at line 419 of file KYVPDefines.h.

18.50.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/19]

```
uint8_t m_uMasterLink KYVP_MEMBER_DEFAULT (
             (uint8_t) - 1 )
```

KYVP_MEMBER_DEFAULT() [2/19]

```
KY_PROCID m_ProcId KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [3/19]

```
uint8_t m_uLinkMask KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [4/19]

```
int m_nMaxDeviceLinks KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [5/19]

```
uint32_t m_uLinkConfig KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [6/19]

```
KY_BOOL m_bOutputCamera KYVP_MEMBER_DEFAULT (
             KY_FALSE  )
```

KYVP_MEMBER_DEFAULT() [7/19]

```
KY_BOOL m_bVirtualCamera KYVP_MEMBER_DEFAULT (
             KY_FALSE  )
```

KYVP_MEMBER_DEFAULT() [8/19]

```
KYVP_CXP_LINK_SPEED m_linkSpeed KYVP_MEMBER_DEFAULT (
            KYVP_CXP_LINK_SPEED_CXP0  )
```

KYVP_MEMBER_DEFAULT() [9/19]

```
uint32_t m_uVersion KYVP_MEMBER_DEFAULT (
            KYVP_DEVICE_INFO_VERSION  )
```

KYVP_MEMBER_DEFAULT() [10/19]

```
int m_vecDeviceConnectionTopology[MAX_PCI_INTERFACE_LINKS] KYVP_MEMBER_DEFAULT (
            {-1}  )
```

KYVP_MEMBER_DEFAULT() [11/19]

```
uint32_t m_uStreamId[256] KYVP_MEMBER_DEFAULT (
            {}  )
```

KYVP_MEMBER_DEFAULT() [12/19]

```
KY_BOOL m_uValidStreamId[256] KYVP_MEMBER_DEFAULT (
            {}  )
```

KYVP_MEMBER_DEFAULT() [13/19]

```
char m_szDeviceVersion[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT (
            {}  )
```

KYVP_MEMBER_DEFAULT() [14/19]

```
char m_szDeviceVendorName[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT (
            {}  )
```

KYVP_MEMBER_DEFAULT() [15/19]

```
char m_szDeviceManufacturerInfo[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT (
            {}  )
```

KYVP_MEMBER_DEFAULT() [16/19]

```
char m_szDeviceModelName[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT (
            {}  )
```

KYVP_MEMBER_DEFAULT() [17/19]

```
char m_szDeviceID[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT (
             {}  )
```

KYVP_MEMBER_DEFAULT() [18/19]

```
char m_szDeviceUserID[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT (
             {}  )
```

KYVP_MEMBER_DEFAULT() [19/19]


```
char m_szDeviceFirmwareVersion[KY_MAX_DEVICE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT (
             {}  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPDefines.h

18.51 _KYVP_FRAME_AUX_DATA Struct Reference

Collaboration diagram for _KYVP_FRAME_AUX_DATA:

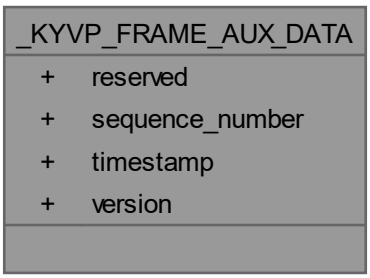

Data Fields

- uint32_t reserved
- uint32_t sequence_number
- uint64_t timestamp
- uint32_t version

18.51.1 Detailed Description

Definition at line 125 of file KYVPDefines.h.

18.51.2 Field Documentation

reserved

```
uint32_t reserved
```

Definition at line 132 of file KYVPDefines.h.

sequence_number

```
uint32_t sequence_number
```

Definition at line 130 of file KYVPDefines.h.

timestamp

```
uint64_t timestamp
```

Definition at line 131 of file KYVPDefines.h.

version

```
uint32_t version
```


Definition at line 127 of file KYVPDefines.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPDefines.h

18.52 _KYVP_IO_AUX_DATA Struct Reference

Collaboration diagram for _KYVP_IO_AUX_DATA:

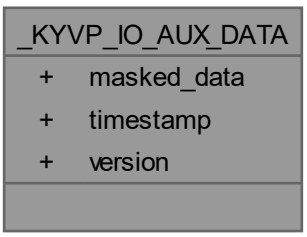

Data Fields

- uint64_t masked_data
- uint64_t timestamp
- uint32_t version

18.52.1 Detailed Description

Definition at line 106 of file KYVPDefines.h.

18.52.2 Field Documentation

masked_data

```
uint64_t masked_data
```

Definition at line 111 of file KYVPDefines.h.

timestamp

```
uint64_t timestamp
```

Definition at line 112 of file KYVPDefines.h.

version

```
uint32_t version
```


Definition at line 108 of file KYVPDefines.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPDefines.h

18.53 _KYVP_NodeDescriptor Struct Reference

Collaboration diagram for _KYVP_NodeDescriptor:

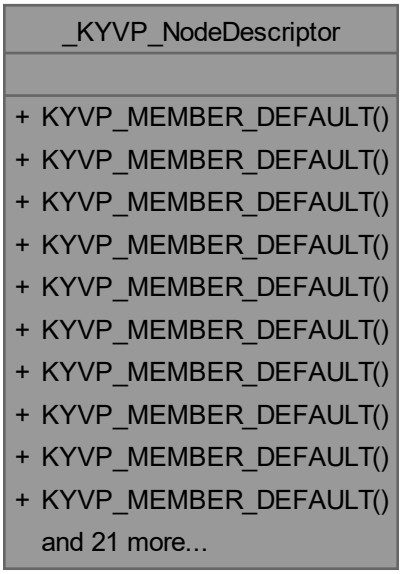

Public Member Functions

- int m_nVersion KYVP_MEMBER_DEFAULT (0)
- int64_t m_nLogicalIndex KYVP_MEMBER_DEFAULT (0)
- int64_t m_nCurSelectorValue KYVP_MEMBER_DEFAULT (0)
- int64_t m_nCurIntValue KYVP_MEMBER_DEFAULT (0)
- double m_fCurFloatValue KYVP_MEMBER_DEFAULT (0)
- int64_t m_nIncIntValue KYVP_MEMBER_DEFAULT (1)
- int64_t m_nFloatDisplayPrecision KYVP_MEMBER_DEFAULT (1)
- double m_fIncFloatValue KYVP_MEMBER_DEFAULT (1.)
- double m_fMaxFloatValue KYVP_MEMBER_DEFAULT (DBL_MAX)
- double m_fMinFloatValue KYVP_MEMBER_DEFAULT (DBL_MIN)
- int64_t m_nMinIntValue KYVP_MEMBER_DEFAULT (INT64_MAX)
- int64_t m_nMaxIntValue KYVP_MEMBER_DEFAULT (INT64_MIN)
- KY_BOOL m_bIsSelector KYVP_MEMBER_DEFAULT (KY_FALSE)
- const KY_BOOL m_bIsImplemented KYVP_MEMBER_DEFAULT (KY_FALSE)
- KY_BOOL m_bCurBoolValue KYVP_MEMBER_DEFAULT (KY_FALSE)
- KY_BOOL m_bTracing KYVP_MEMBER_DEFAULT (KY_FALSE)
- KY_BOOL m_bIsAvailable KYVP_MEMBER_DEFAULT (KY_TRUE)
- KY_BOOL m_bIsWritable KYVP_MEMBER_DEFAULT (KY_TRUE)
- KY_BOOL m_bIsReadable KYVP_MEMBER_DEFAULT (KY_TRUE)
- KYVP_NodeDescriptorType m_eDescriptorType KYVP_MEMBER_DEFAULT (KYVP_NodeDescriptorType↩ _Invalid)
- KYVP_ParameterInterfaceType m_eInterfaceType KYVP_MEMBER_DEFAULT (KYVP_Parameter↩ InterfaceType_IUnknown)

- KYVP_ParameterRepresentation m_eRepresentation KYVP_MEMBER_DEFAULT (KYVP_Parameter↩ Representation_UndefinedRepresentation)
- KYVP_ParameterVisibility m_eVisibility KYVP_MEMBER_DEFAULT (KYVP_ParameterVisibility_Beginner)
- const char *m_szParamName KYVP_MEMBER_DEFAULT (nullptr)
- const char *m_szParamDisplayName KYVP_MEMBER_DEFAULT (nullptr)
- const char *m_szToolTip KYVP_MEMBER_DEFAULT (nullptr)
- const char *m_szDescription KYVP_MEMBER_DEFAULT (nullptr)
- const char *m_szPhysicalUnitName KYVP_MEMBER_DEFAULT (nullptr)
- const struct _KYVP_NodeDescriptor *m_pParentNode KYVP_MEMBER_DEFAULT (nullptr)
- const char *m_szSelectorName KYVP_MEMBER_DEFAULT (nullptr)
- const char *m_szCurStringValue KYVP_MEMBER_DEFAULT (nullptr)

18.53.1 Detailed Description

Definition at line 174 of file KYVPNodeDescriptor.h.

18.53.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/31]

```
int m_nVersion KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/31]

```
int64_t m_nLogicalIndex KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [3/31]

```
int64_t m_nCurSelectorValue KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [4/31]

```
int64_t m_nCurIntValue KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [5/31]

```
double m_fCurFloatValue KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [6/31]

```
int64_t m_nIncIntValue KYVP_MEMBER_DEFAULT (
            1  )
```

KYVP_MEMBER_DEFAULT() [7/31]

```
int64_t m_nFloatDisplayPrecision KYVP_MEMBER_DEFAULT (
            1  )
```

KYVP_MEMBER_DEFAULT() [8/31]

```
double m_fIncFloatValue KYVP_MEMBER_DEFAULT (
            1.    )
```

KYVP_MEMBER_DEFAULT() [9/31]

```
double m_fMaxFloatValue KYVP_MEMBER_DEFAULT (
            DBL_MAX  )
```

KYVP_MEMBER_DEFAULT() [10/31]

```
double m_fMinFloatValue KYVP_MEMBER_DEFAULT (
            DBL_MIN  )
```

KYVP_MEMBER_DEFAULT() [11/31]

```
int64_t m_nMinIntValue KYVP_MEMBER_DEFAULT (
            INT64_MAX  )
```

KYVP_MEMBER_DEFAULT() [12/31]

```
int64_t m_nMaxIntValue KYVP_MEMBER_DEFAULT (
            INT64_MIN  )
```

KYVP_MEMBER_DEFAULT() [13/31]

```
KY_BOOL m_bIsSelector KYVP_MEMBER_DEFAULT (
            KY_FALSE  )
```

KYVP_MEMBER_DEFAULT() [14/31]

```
const KY_BOOL m_bIsImplemented KYVP_MEMBER_DEFAULT (
            KY_FALSE  )
```

KYVP_MEMBER_DEFAULT() [15/31]

```
KY_BOOL m_bCurBoolValue KYVP_MEMBER_DEFAULT (
            KY_FALSE  )
```

KYVP_MEMBER_DEFAULT() [16/31]

```
KY_BOOL m_bTracing KYVP_MEMBER_DEFAULT (
            KY_FALSE  )
```

KYVP_MEMBER_DEFAULT() [17/31]

```
KY_BOOL m_bIsAvailable KYVP_MEMBER_DEFAULT (
            KY_TRUE  )
```

KYVP_MEMBER_DEFAULT() [18/31]

```
KY_BOOL m_bIsWritable KYVP_MEMBER_DEFAULT (
            KY_TRUE  )
```

KYVP_MEMBER_DEFAULT() [19/31]

```
KY_BOOL m_bIsReadable KYVP_MEMBER_DEFAULT (
            KY_TRUE  )
```

KYVP_MEMBER_DEFAULT() [20/31]

```
KYVP_NodeDescriptorType m_eDescriptorType KYVP_MEMBER_DEFAULT (
            KYVP_NodeDescriptorType_Invalid  )
```

KYVP_MEMBER_DEFAULT() [21/31]

```
KYVP_ParameterInterfaceType m_eInterfaceType KYVP_MEMBER_DEFAULT (
            KYVP_ParameterInterfaceType_IUnknown  )
```

KYVP_MEMBER_DEFAULT() [22/31]

```
KYVP_ParameterRepresentation m_eRepresentation KYVP_MEMBER_DEFAULT (
            KYVP_ParameterRepresentation_UndefinedRepresentation  )
```

KYVP_MEMBER_DEFAULT() [23/31]

```
KYVP_ParameterVisibility m_eVisibility KYVP_MEMBER_DEFAULT (
            KYVP_ParameterVisibility_Beginner  )
```

KYVP_MEMBER_DEFAULT() [24/31]

```
const char *m_szParamName KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [25/31]

```
const char *m_szParamDisplayName KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [26/31]

```
const char *m_szToolTip KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [27/31]

```
const char *m_szDescription KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [28/31]

```
const char *m_szPhysicalUnitName KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [29/31]

```
const struct _KYVP_NodeDescriptor *m_pParentNode KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [30/31]

```
const char *m_szSelectorName KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [31/31]


```
const char *m_szCurStringValue KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPNodeDescriptor.h

18.54 _KYVP_PCI_CONFIG Struct Reference

Collaboration diagram for _KYVP_PCI_CONFIG:

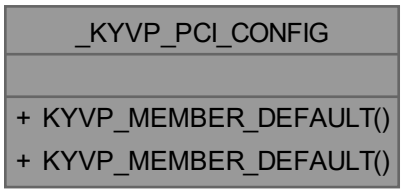

Public Member Functions

- uint8_t m_uGeneration KYVP_MEMBER_DEFAULT (UINT8_MAX)
- uint8_t m_uLanes KYVP_MEMBER_DEFAULT (UINT8_MAX)

18.54.1 Detailed Description

Definition at line 319 of file KYVPDefines.h.

18.54.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/2]

```
uint8_t m_uGeneration KYVP_MEMBER_DEFAULT (
             UINT8_MAX  )
```

KYVP_MEMBER_DEFAULT() [2/2]


```
uint8_t m_uLanes KYVP_MEMBER_DEFAULT (
             UINT8_MAX  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPDefines.h

18.55 _KYVP_PCI_INTERFACE_INFO Struct Reference

Collaboration diagram for _KYVP_PCI_INTERFACE_INFO:

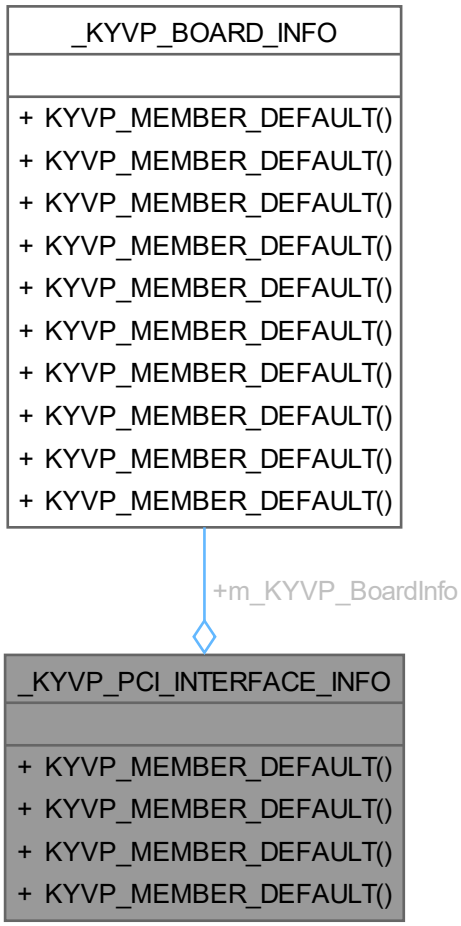

Public Member Functions

- char m_szDeviceDisplayName[KY_MAX_PCI_INTERFACE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT ("")
- KY_BOOL m_bIsVirtual KYVP_MEMBER_DEFAULT (KY_FALSE)
- uint8_t m_uVersion KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_INFO_VERSION)
- uint32_t m_uSerialNumber KYVP_MEMBER_DEFAULT (UINT32_MAX)

Data Fields

- KYVP_BOARD_INFO m_KYVP_BoardInfo

18.55.1 Detailed Description

Definition at line 381 of file KYVPDefines.h.

18.55.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/4]

```
char m_szDeviceDisplayName[KY_MAX_PCI_INTERFACE_INFO_STRING_SIZE+1] KYVP_MEMBER_DEFAULT (
             ""  )
```

KYVP_MEMBER_DEFAULT() [2/4]

```
KY_BOOL m_bIsVirtual KYVP_MEMBER_DEFAULT (
             KY_FALSE  )
```

KYVP_MEMBER_DEFAULT() [3/4]

```
uint8_t m_uVersion KYVP_MEMBER_DEFAULT (
             KYVP_PCI_INTERFACE_INFO_VERSION  )
```

KYVP_MEMBER_DEFAULT() [4/4]

```
uint32_t m_uSerialNumber KYVP_MEMBER_DEFAULT (
             UINT32_MAX  )
```

18.55.3 Field Documentation

m_KYVP_BoardInfo

```
KYVP_BOARD_INFO m_KYVP_BoardInfo
```

Definition at line 391 of file KYVPDefines.h.


The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPDefines.h

18.56 _KYVP_PCI_INTERFACE_SLOT Struct Reference

KYVP_PCI_INTERFACE_SLOT.

Collaboration diagram for _KYVP_PCI_INTERFACE_SLOT:

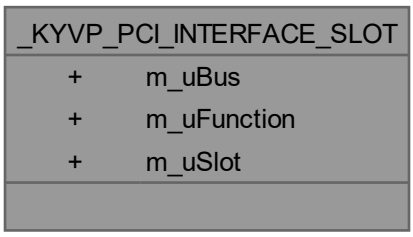

Data Fields

- uint8_t m_uBus: 8
- uint8_t m_uFunction: 3
- uint8_t m_uSlot: 5

18.56.1 Detailed Description

KYVP_PCI_INTERFACE_SLOT.

Definition at line 299 of file KYVPDefines.h.

18.56.2 Field Documentation

m_uBus

```
uint8_t m_uBus
```

Definition at line 301 of file KYVPDefines.h.

m_uFunction

```
uint8_t m_uFunction
```

Definition at line 303 of file KYVPDefines.h.

m_uSlot

```
uint8_t m_uSlot
```


Definition at line 302 of file KYVPDefines.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPDefines.h

18.57 _KYVP_PCIINTERFACE_EVENT_CXP2_EVENT Struct Reference

Collaboration diagram for _KYVP_PCIINTERFACE_EVENT_CXP2_EVENT:

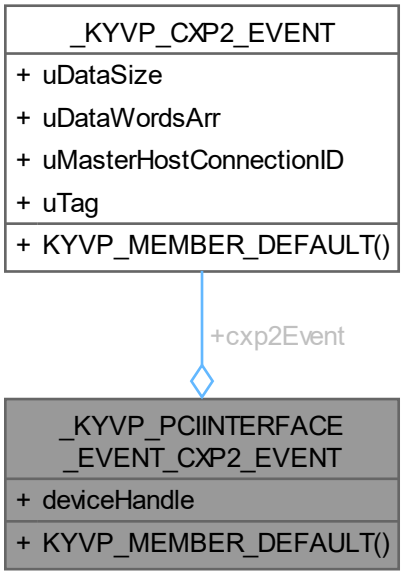

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYVP_PCIINTERFACE_EVENT_CXP2_EVENT_VERSION)

Data Fields

- KYVP_CXP2_EVENT cxp2Event
- KYVP_DEVICE_HANDLE deviceHandle

18.57.1 Detailed Description

Definition at line 1036 of file KYVPLibTL.h.

18.57.2 Member Function Documentation

KYVP_MEMBER_DEFAULT()

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVP_PCIINTERFACE_EVENT_CXP2_EVENT_VERSION  )
```

18.57.3 Field Documentation

cxp2Event

```
KYVP_CXP2_EVENT cxp2Event
```

Definition at line 1040 of file KYVPLibTL.h.

deviceHandle

```
KYVP_DEVICE_HANDLE deviceHandle
```


Definition at line 1039 of file KYVPLibTL.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibTL.h

18.58 _KYVP_PCIINTERFACE_EVENT_CXP2_HEARTBEAT Struct Reference

Collaboration diagram for _KYVP_PCIINTERFACE_EVENT_CXP2_HEARTBEAT:

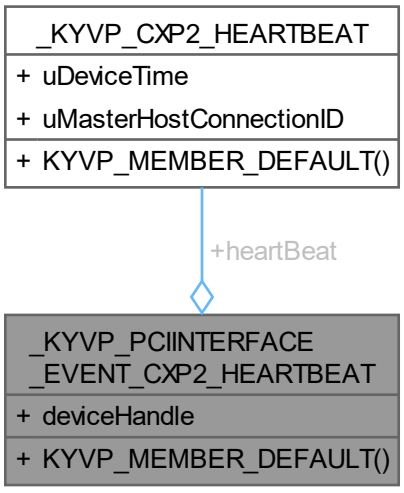

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYVP_PCIINTERFACE_EVENT_CXP2_HEARTBEAT_↩ VERSION)

Data Fields

- KYVP_DEVICE_HANDLE deviceHandle
- KYVP_CXP2_HEARTBEAT heartBeat

18.58.1 Detailed Description

Definition at line 1023 of file KYVPLibTL.h.

18.58.2 Member Function Documentation

KYVP_MEMBER_DEFAULT()

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVP_PCIINTERFACE_EVENT_CXP2_HEARTBEAT_VERSION  )
```

18.58.3 Field Documentation

deviceHandle

```
KYVP_DEVICE_HANDLE deviceHandle
```

Definition at line 1026 of file KYVPLibTL.h.

heartBeat

```
KYVP_CXP2_HEARTBEAT heartBeat
```


Definition at line 1027 of file KYVPLibTL.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibTL.h

18.59 _KYVP_PCIINTERFACE_EVENT_TEMPERATURE Struct Reference

Collaboration diagram for _KYVP_PCIINTERFACE_EVENT_TEMPERATURE:

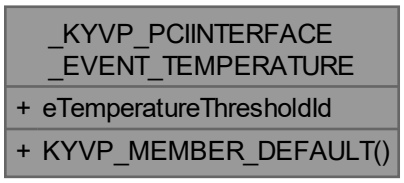

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYVP_PCIINTERFACE_EVENT_TEMPERATURE_↩ VERSION)

Data Fields

- KYVP_PCIINTERFACE_EVENT_TEMPERATURE_THRESHOLD_ID eTemperatureThresholdId

18.59.1 Detailed Description

Definition at line 1011 of file KYVPLibTL.h.

18.59.2 Member Function Documentation

KYVP_MEMBER_DEFAULT()

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVP_PCIINTERFACE_EVENT_TEMPERATURE_VERSION  )
```

18.59.3 Field Documentation

eTemperatureThresholdId

```
KYVP_PCIINTERFACE_EVENT_TEMPERATURE_THRESHOLD_ID eTemperatureThresholdId
```


Definition at line 1014 of file KYVPLibTL.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibTL.h

18.60 _KYVP_PCIINTERFACE_GENERIC_EVENT Struct Reference

Collaboration diagram for _KYVP_PCIINTERFACE_GENERIC_EVENT:

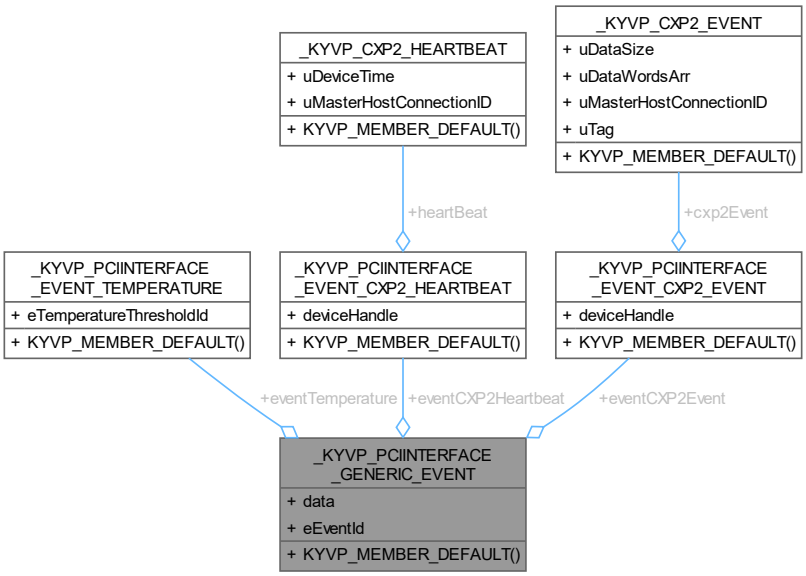

Public Member Functions

- uint32_t version KYVP_MEMBER_DEFAULT (KYVP_PCIINTERFACE_GENERIC_EVENT_VERSION)

Data Fields

- union {
  KYVP_PCIINTERFACE_EVENT_CXP2_EVENT eventCXP2Event
  KYVP_PCIINTERFACE_EVENT_CXP2_HEARTBEAT eventCXP2Heartbeat
  KYVP_PCIINTERFACE_EVENT_TEMPERATURE eventTemperature
  } data

- KYVP_PCIINTERFACE_EVENT_ID eEventId

18.60.1 Detailed Description

Definition at line 1049 of file KYVPLibTL.h.

18.60.2 Member Function Documentation

KYVP_MEMBER_DEFAULT()

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVP_PCIINTERFACE_GENERIC_EVENT_VERSION  )
```

18.60.3 Field Documentation

[union]

```
union { ... } data
```

eEventId

```
KYVP_PCIINTERFACE_EVENT_ID eEventId
```

Definition at line 1052 of file KYVPLibTL.h.

eventCXP2Event

```
KYVP_PCIINTERFACE_EVENT_CXP2_EVENT eventCXP2Event
```

Definition at line 1058 of file KYVPLibTL.h.

eventCXP2Heartbeat

```
KYVP_PCIINTERFACE_EVENT_CXP2_HEARTBEAT eventCXP2Heartbeat
```

Definition at line 1057 of file KYVPLibTL.h.

eventTemperature

```
KYVP_PCIINTERFACE_EVENT_TEMPERATURE eventTemperature
```


Definition at line 1056 of file KYVPLibTL.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibTL.h

18.61 _KYVP_PIXEL_FORMAT Struct Reference

Collaboration diagram for _KYVP_PIXEL_FORMAT:

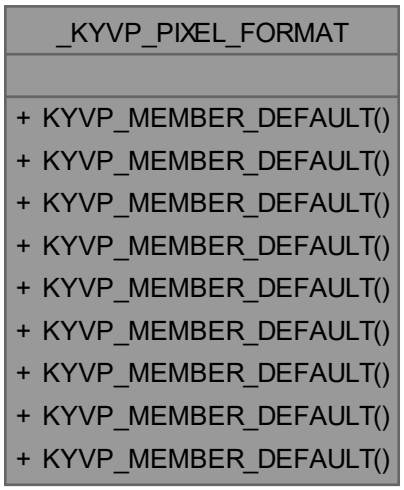

Public Member Functions

- uint32_t uPFNCValue KYVP_MEMBER_DEFAULT (0)
- uint32_t uCxpValue KYVP_MEMBER_DEFAULT (0)
- uint8_t uChannelsPerPixel KYVP_MEMBER_DEFAULT (0)
- KY_BOOL bIsPacked KYVP_MEMBER_DEFAULT (KY_FALSE)
- KY_BOOL bRGBReordered KYVP_MEMBER_DEFAULT (KY_FALSE)
- uint32_t version KYVP_MEMBER_DEFAULT (KYIMGPROC_KYVP_PIXEL_FORMAT_STRUCT_VERSION)
- const char *pszPFNCName KYVP_MEMBER_DEFAULT (nullptr)
- const char *pszCxpName KYVP_MEMBER_DEFAULT (nullptr)
- KYVP_VIDEO_PIXELIF pVPPixelIF KYVP_MEMBER_DEFAULT ({})

18.61.1 Detailed Description

Definition at line 108 of file KYIMGPROC_PixelFormatDecoder_Defines.h.

18.61.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/9]

```
uint32_t uPFNCValue KYVP_MEMBER_DEFAULT (
            0  )
```

KYVP_MEMBER_DEFAULT() [2/9]

```
uint32_t uCxpValue KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [3/9]

```
uint8_t uChannelsPerPixel KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [4/9]

```
KY_BOOL bIsPacked KYVP_MEMBER_DEFAULT (
             KY_FALSE  )
```

KYVP_MEMBER_DEFAULT() [5/9]

```
KY_BOOL bRGBReordered KYVP_MEMBER_DEFAULT (
             KY_FALSE  )
```

KYVP_MEMBER_DEFAULT() [6/9]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYIMGPROC_KYVP_PIXEL_FORMAT_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [7/9]

```
const char *pszPFNCName KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [8/9]

```
const char *pszCxpName KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [9/9]

```
KYVP_VIDEO_PIXELIF pVPPixelIF KYVP_MEMBER_DEFAULT (
             {}  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYIMGPROC_PixelFormatDecoder_Defines.h

18.62 _kyvp_update_status Struct Reference

Collaboration diagram for _kyvp_update_status:



Data Fields

- uint64_t bytes_sent
- KY_BOOL is_writing
- int struct_version
- uint64_t total_size

18.62.1 Detailed Description

Definition at line 11 of file KYVPLibExtension.h.

18.62.2 Field Documentation

bytes_sent

```
uint64_t bytes_sent
```

Definition at line 18 of file KYVPLibExtension.h.

is_writing

```
KY_BOOL is_writing
```

Definition at line 20 of file KYVPLibExtension.h.

struct_version

```
int struct_version
```

Definition at line 13 of file KYVPLibExtension.h.

total_size

```
uint64_t total_size
```


Definition at line 19 of file KYVPLibExtension.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.63 _KYVP_VIDEO_PIXELIF Struct Reference

Collaboration diagram for _KYVP_VIDEO_PIXELIF:

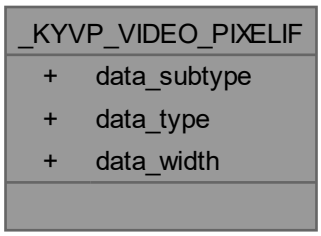

Data Fields

- KYVP_VIDEO_DATA_SUBTYPE data_subtype: 4
- KYVP_VIDEO_DATA_TYPE data_type: 8
- KYVP_VIDEO_DATA_WIDTH data_width: 4

18.63.1 Detailed Description

Definition at line 77 of file KYIMGPROC_PixelFormatDecoder_Defines.h.

18.63.2 Field Documentation

data_subtype

```
KYVP_VIDEO_DATA_SUBTYPE data_subtype
```

Definition at line 80 of file KYIMGPROC_PixelFormatDecoder_Defines.h.

data_type

```
KYVP_VIDEO_DATA_TYPE data_type
```

Definition at line 81 of file KYIMGPROC_PixelFormatDecoder_Defines.h.

data_width

```
KYVP_VIDEO_DATA_WIDTH data_width
```


Definition at line 79 of file KYIMGPROC_PixelFormatDecoder_Defines.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYIMGPROC_PixelFormatDecoder_Defines.h

18.64 _KYVPExtension_AuxDataCallback_Register_Args Struct Reference

Collaboration diagram for _KYVPExtension_AuxDataCallback_Register_Args:

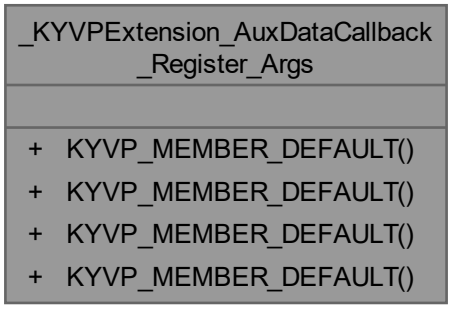

Public Member Functions

- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_AUX_DATA_CALLBACK_REGISTER_↩ ARGS_VERSION)
- KYVP_AUX_DATA_CALLBACK pCallbackFunction KYVP_MEMBER_DEFAULT (nullptr)
- void *pUserContext KYVP_MEMBER_DEFAULT (nullptr)

18.64.1 Detailed Description

Definition at line 511 of file KYVPLibExtension.h.

18.64.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/4]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
            KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [2/4]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVPEXTENSION_AUX_DATA_CALLBACK_REGISTER_ARGS_VERSION  )
```

KYVP_MEMBER_DEFAULT() [3/4]

```
KYVP_AUX_DATA_CALLBACK pCallbackFunction KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/4]


```
void *pUserContext KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.65 _KYVPExtension_AuxDataCallback_Unregister_Args Struct Reference

Collaboration diagram for _KYVPExtension_AuxDataCallback_Unregister_Args:

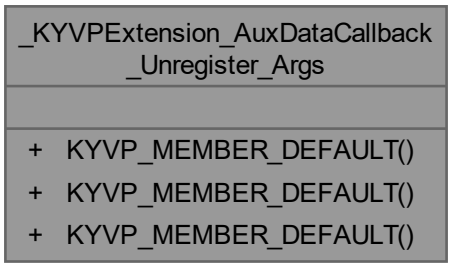

Public Member Functions

- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_AUX_DATA_CALLBACK_UNREGISTER↩ _ARGS_VERSION)
- KYVP_AUX_DATA_CALLBACK pCallbackFunction KYVP_MEMBER_DEFAULT (nullptr)

18.65.1 Detailed Description

Definition at line 530 of file KYVPLibExtension.h.

18.65.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/3]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
            KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [2/3]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVPEXTENSION_AUX_DATA_CALLBACK_UNREGISTER_ARGS_VERSION  )
```

KYVP_MEMBER_DEFAULT() [3/3]


```
KYVP_AUX_DATA_CALLBACK pCallbackFunction KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.66 _KYVPExtension_DataStream_Callback_Register_Args Struct Reference

Collaboration diagram for _KYVPExtension_DataStream_Callback_Register_Args:

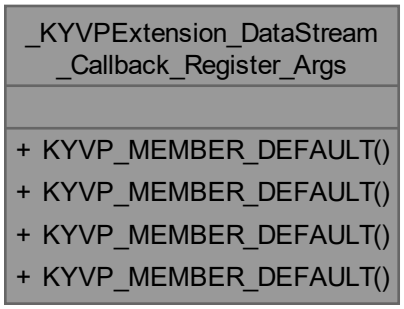

Public Member Functions

- KYVP_STREAM_HANDLE hDSHandle KYVP_MEMBER_DEFAULT (KYVP_STREAM_HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_DATASTREAMCALLBACKREGISTER_↩ ARGS_VERSION)
- KYVP_DATA_STREAM_CALLBACK pCallbackFunction KYVP_MEMBER_DEFAULT (nullptr)
- void ∗pContext KYVP_MEMBER_DEFAULT (nullptr)

18.66.1 Detailed Description

Definition at line 584 of file KYVPLibExtension.h.

18.66.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/4]

```
KYVP_STREAM_HANDLE hDSHandle KYVP_MEMBER_DEFAULT (
            KYVP_STREAM_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [2/4]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVPEXTENSION_DATASTREAMCALLBACKREGISTER_ARGS_VERSION  )
```

KYVP_MEMBER_DEFAULT() [3/4]

```
KYVP_DATA_STREAM_CALLBACK pCallbackFunction KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/4]


```
void *pContext KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.67 _KYVPExtension_DataStream_Callback_Unregister_Args Struct Reference

Collaboration diagram for _KYVPExtension_DataStream_Callback_Unregister_Args:

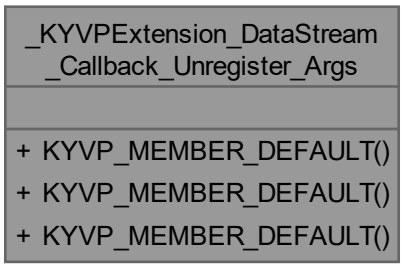

Public Member Functions

- KYVP_STREAM_HANDLE hDSHandle KYVP_MEMBER_DEFAULT (KYVP_STREAM_HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_DATASTREAMCALLBACKUNREGISTER↩ _ARGS_VERSION)
- KYVP_DATA_STREAM_CALLBACK pCallbackFunction KYVP_MEMBER_DEFAULT (nullptr)

18.67.1 Detailed Description

Definition at line 603 of file KYVPLibExtension.h.

18.67.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/3]

```
KYVP_STREAM_HANDLE hDSHandle KYVP_MEMBER_DEFAULT (
            KYVP_STREAM_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [2/3]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVPEXTENSION_DATASTREAMCALLBACKUNREGISTER_ARGS_VERSION  )
```

KYVP_MEMBER_DEFAULT() [3/3]


```
KYVP_DATA_STREAM_CALLBACK pCallbackFunction KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.68 _KYVPExtension_DataStream_Close_Args Struct Reference

Collaboration diagram for _KYVPExtension_DataStream_Close_Args:

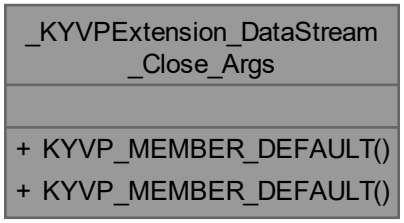

Public Member Functions

- KYVP_STREAM_HANDLE hDSHandle KYVP_MEMBER_DEFAULT (KYVP_STREAM_HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_DATASTREAM_CLOSE_ARGS_↩ VERSION)

18.68.1 Detailed Description

Definition at line 567 of file KYVPLibExtension.h.

18.68.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/2]

```
KYVP_STREAM_HANDLE hDSHandle KYVP_MEMBER_DEFAULT (
            KYVP_STREAM_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [2/2]


```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVPEXTENSION_DATASTREAM_CLOSE_ARGS_VERSION  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.69 _KYVPExtension_DataStream_Create_Args Struct Reference

Collaboration diagram for _KYVPExtension_DataStream_Create_Args:

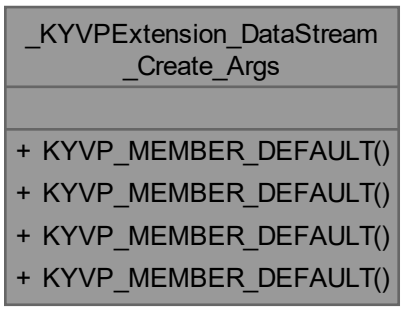

Public Member Functions

- KYVP_STREAM_BUFFERS_TYPE eStreamBufferType KYVP_MEMBER_DEFAULT (KYVP_STREAM_↩ BUFFERS_TYPE_QUEUED_BUFFERS)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_DATASTREAMCREATE_ARGS_↩ VERSION)
- const char ∗pszDevDataStreamID KYVP_MEMBER_DEFAULT (nullptr)
- KYVP_STREAM_HANDLE ∗phDSHandle KYVP_MEMBER_DEFAULT (nullptr)

18.69.1 Detailed Description

Definition at line 548 of file KYVPLibExtension.h.

18.69.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/4]

```
KYVP_STREAM_BUFFERS_TYPE eStreamBufferType KYVP_MEMBER_DEFAULT (
            KYVP_STREAM_BUFFERS_TYPE_QUEUED_BUFFERS  )
```

KYVP_MEMBER_DEFAULT() [2/4]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVPEXTENSION_DATASTREAMCREATE_ARGS_VERSION  )
```

KYVP_MEMBER_DEFAULT() [3/4]

```
const char *pszDevDataStreamID KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/4]


```
KYVP_STREAM_HANDLE *phDSHandle KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.70 _KYVPExtension_DetectDevicesManually_Args Struct Reference

Collaboration diagram for _KYVPExtension_DetectDevicesManually_Args:

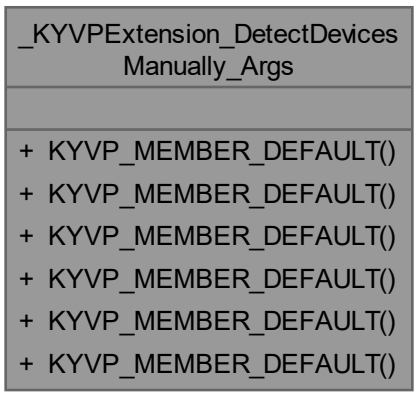

Public Member Functions

- size_t uDeviceDefinitionArrayCount KYVP_MEMBER_DEFAULT (0)
- KY_BOOL bNoDevicesAccess KYVP_MEMBER_DEFAULT (KY_FALSE)
- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_DETECTDEVICESMANUALLY_ARGS)
- KY_BOOL *pbChanged KYVP_MEMBER_DEFAULT (nullptr)
- DeviceDefinition *pDeviceDefinitionArray KYVP_MEMBER_DEFAULT (nullptr)

18.70.1 Detailed Description

Definition at line 754 of file KYVPLibExtension.h.

18.70.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
size_t uDeviceDefinitionArrayCount KYVP_MEMBER_DEFAULT (
            0  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
KY_BOOL bNoDevicesAccess KYVP_MEMBER_DEFAULT (
            KY_FALSE  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
            KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVPEXTENSION_DETECTDEVICESMANUALLY_ARGS  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
KY_BOOL *pbChanged KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/6]


```
DeviceDefinition *pDeviceDefinitionArray KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.71 _KYVPExtension_PCIInterface_CheckUpdateFile_Args Struct Reference

Collaboration diagram for _KYVPExtension_PCIInterface_CheckUpdateFile_Args:

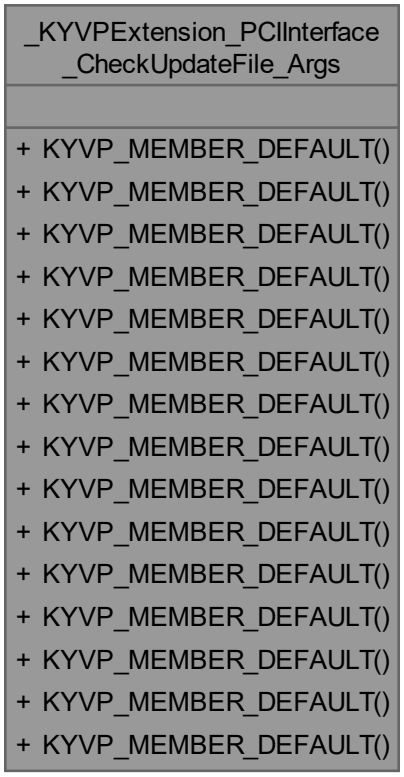

Public Member Functions

- uint16_t fileMinorRev KYVP_MEMBER_DEFAULT (0)
- uint16_t fileMajorRev KYVP_MEMBER_DEFAULT (0)
- uint16_t fileVendorId KYVP_MEMBER_DEFAULT (0)
- uint16_t fileBoardId KYVP_MEMBER_DEFAULT (0)
- uint32_t fileVersion KYVP_MEMBER_DEFAULT (0)
- uint32_t fileTimeStamp KYVP_MEMBER_DEFAULT (0)

- uint16_t flashMinorRev KYVP_MEMBER_DEFAULT (0)
- uint16_t flashMajorRev KYVP_MEMBER_DEFAULT (0)
- uint32_t flashVendorId KYVP_MEMBER_DEFAULT (0)
- uint32_t flashBoardId KYVP_MEMBER_DEFAULT (0)
- uint32_t flashVersion KYVP_MEMBER_DEFAULT (0)
- uint32_t flashTimeStamp KYVP_MEMBER_DEFAULT (0)
- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_PCIINTERFACE_CHECKUPDATEFILE↩ _ARGS_VERSION)
- char *pszFilePath KYVP_MEMBER_DEFAULT (nullptr)

18.71.1 Detailed Description

Definition at line 115 of file KYVPLibExtension.h.

18.71.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/15]

```
uint16_t fileMinorRev KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/15]

```
uint16_t fileMajorRev KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [3/15]

```
uint16_t fileVendorId KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [4/15]

```
uint16_t fileBoardId KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [5/15]

```
uint32_t fileVersion KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [6/15]

```
uint32_t fileTimeStamp KYVP_MEMBER_DEFAULT (
            0  )
```

KYVP_MEMBER_DEFAULT() [7/15]

```
uint16_t flashMinorRev KYVP_MEMBER_DEFAULT (
            0  )
```

KYVP_MEMBER_DEFAULT() [8/15]

```
uint16_t flashMajorRev KYVP_MEMBER_DEFAULT (
            0  )
```

KYVP_MEMBER_DEFAULT() [9/15]

```
uint32_t flashVendorId KYVP_MEMBER_DEFAULT (
            0  )
```

KYVP_MEMBER_DEFAULT() [10/15]

```
uint32_t flashBoardId KYVP_MEMBER_DEFAULT (
            0  )
```

KYVP_MEMBER_DEFAULT() [11/15]

```
uint32_t flashVersion KYVP_MEMBER_DEFAULT (
            0  )
```

KYVP_MEMBER_DEFAULT() [12/15]

```
uint32_t flashTimeStamp KYVP_MEMBER_DEFAULT (
            0  )
```

KYVP_MEMBER_DEFAULT() [13/15]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
            KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [14/15]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVPEXTENSION_PCIINTERFACE_CHECKUPDATEFILE_ARGS_VERSION  )
```

KYVP_MEMBER_DEFAULT() [15/15]


```
char *pszFilePath KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.72 _KYVPExtension_PCIInterface_DirectHWReadReg_Args Struct Reference

Collaboration diagram for _KYVPExtension_PCIInterface_DirectHWReadReg_Args:

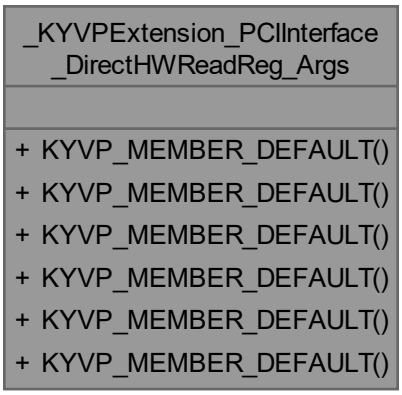

Public Member Functions

- uint64_t iBar KYVP_MEMBER_DEFAULT (0)
- uint64_t iAddress KYVP_MEMBER_DEFAULT (0)
- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_PCIINTERFACEDIRECTHWREADREG↩ _STRUCT_VERSION)
- void *pBuffer KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piSize KYVP_MEMBER_DEFAULT (nullptr)

18.72.1 Detailed Description

Definition at line 278 of file KYVPLibExtension.h.

18.72.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
uint64_t iBar KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
uint64_t iAddress KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
             KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYVPEXTENSION_PCIINTERFACEDIRECTHWREADREG_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
void *pBuffer KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/6]


```
size_t *piSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.73 _KYVPExtension_PCIInterface_DirectHWWriteReg_Args Struct Reference

Collaboration diagram for _KYVPExtension_PCIInterface_DirectHWWriteReg_Args:

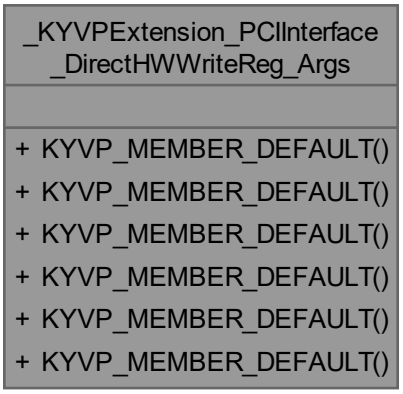

Public Member Functions

- uint64_t iBar KYVP_MEMBER_DEFAULT (0)
- uint64_t iAddress KYVP_MEMBER_DEFAULT (0)
- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_PCIINTERFACEDIRECTHWWRITEREG↩ _STRUCT_VERSION)
- const void ∗pBuffer KYVP_MEMBER_DEFAULT (nullptr)
- size_t ∗piSize KYVP_MEMBER_DEFAULT (nullptr)

18.73.1 Detailed Description

Definition at line 310 of file KYVPLibExtension.h.

18.73.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
uint64_t iBar KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
uint64_t iAddress KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
             KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYVPEXTENSION_PCIINTERFACEDIRECTHWWRITEREG_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
const void *pBuffer KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/6]


```
size_t *piSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.74 _KYVPExtension_PCIInterface_EventCallBackRegister_Args Struct Reference

Collaboration diagram for _KYVPExtension_PCIInterface_EventCallBackRegister_Args:

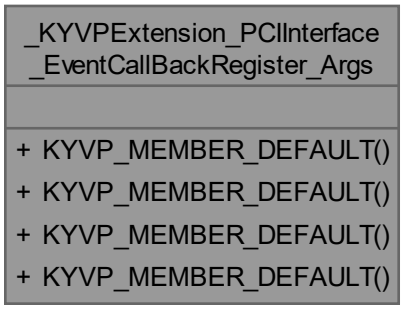

Public Member Functions

- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_PCIINTERFACE_EVENTCALLBACKREGISTER↩ _ARGS_VERSION)
- KYVP_PCI_INTERFACE_EVENT_CALLBACK pUserFunc KYVP_MEMBER_DEFAULT (nullptr)
- void *pUserContext KYVP_MEMBER_DEFAULT (nullptr)

18.74.1 Detailed Description

Definition at line 146 of file KYVPLibExtension.h.

18.74.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/4]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
            KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [2/4]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVPEXTENSION_PCIINTERFACE_EVENTCALLBACKREGISTER_ARGS_VERSION  )
```

KYVP_MEMBER_DEFAULT() [3/4]

```
KYVP_PCI_INTERFACE_EVENT_CALLBACK pUserFunc KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/4]


```
void *pUserContext KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.75 _KYVPExtension_PCIInterface_EventCallBackUnregister_Args Struct Reference

Collaboration diagram for _KYVPExtension_PCIInterface_EventCallBackUnregister_Args:

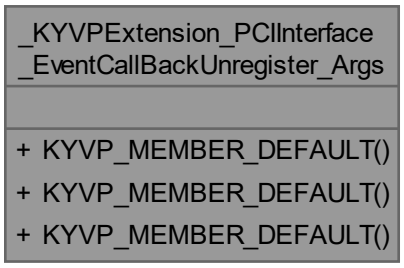

Public Member Functions

- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_PCIINTERFACE_EVENTCALLBACKUNREGISTER↩ _ARGS_VERSION)
- KYVP_PCI_INTERFACE_EVENT_CALLBACK pUserFunc KYVP_MEMBER_DEFAULT (nullptr)

18.75.1 Detailed Description

Definition at line 164 of file KYVPLibExtension.h.

18.75.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/3]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
            KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [2/3]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVPEXTENSION_PCIINTERFACE_EVENTCALLBACKUNREGISTER_ARGS_VERSION  )
```

KYVP_MEMBER_DEFAULT() [3/3]


```
KYVP_PCI_INTERFACE_EVENT_CALLBACK pUserFunc KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.76 _KYVPExtension_PCIInterface_FirmwareUpdate_Args Struct Reference

Collaboration diagram for _KYVPExtension_PCIInterface_FirmwareUpdate_Args:

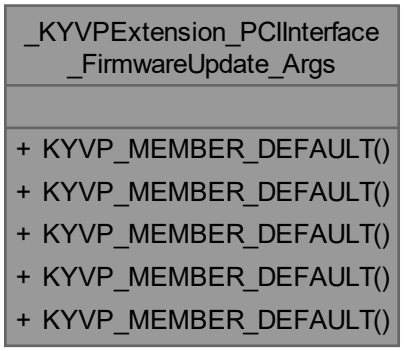

Public Member Functions

- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_PCIINTERFACE_FIRMWAREUPDATE↩ _ARGS_VERSION)
- char ∗pszFilePath KYVP_MEMBER_DEFAULT (nullptr)
- KYVP_UPDATE_CALLBACK pCallbackFunction KYVP_MEMBER_DEFAULT (nullptr)
- void ∗pUserContext KYVP_MEMBER_DEFAULT (nullptr)

18.76.1 Detailed Description

Definition at line 95 of file KYVPLibExtension.h.

18.76.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/5]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
            KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [2/5]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYVPEXTENSION_PCIINTERFACE_FIRMWAREUPDATE_ARGS_VERSION  )
```

KYVP_MEMBER_DEFAULT() [3/5]

```
char *pszFilePath KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [4/5]

```
KYVP_UPDATE_CALLBACK pCallbackFunction KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/5]


```
void *pUserContext KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.77 _KYVPExtension_PCIInterface_LinkGetStatus_Args Struct Reference

Collaboration diagram for _KYVPExtension_PCIInterface_LinkGetStatus_Args:

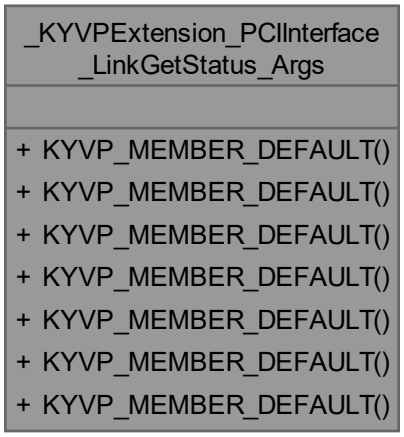

Public Member Functions

- uint64_t iLink KYVP_MEMBER_DEFAULT (0)
- KYVP_LINK_STATUS_CMD iInfoCmd KYVP_MEMBER_DEFAULT (KYVP_LINK_STATUS_CMD_LINK_↩ CONNECTION_STATUS)
- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_PCIINTERFACELINKGETSTATUS_↩ ARGS_VERSION)
- KYVP_INFO_DATATYPE *piType KYVP_MEMBER_DEFAULT (nullptr)
- void *pBuffer KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piSize KYVP_MEMBER_DEFAULT (nullptr)

18.77.1 Detailed Description

Definition at line 489 of file KYVPLibExtension.h.

18.77.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/7]

```
uint64_t iLink KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/7]

```
KYVP_LINK_STATUS_CMD iInfoCmd KYVP_MEMBER_DEFAULT (
             KYVP_LINK_STATUS_CMD_LINK_CONNECTION_STATUS  )
```

KYVP_MEMBER_DEFAULT() [3/7]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
             KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [4/7]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYVPEXTENSION_PCIINTERFACELINKGETSTATUS_ARGS_VERSION  )
```

KYVP_MEMBER_DEFAULT() [5/7]

```
KYVP_INFO_DATATYPE *piType KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/7]

```
void *pBuffer KYVP_MEMBER_DEFAULT (
              nullptr  )
```

KYVP_MEMBER_DEFAULT() [7/7]


```
size_t *piSize KYVP_MEMBER_DEFAULT (
              nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.78 _KYVPExtension_PCIInterface_LockLink_Args Struct Reference

Collaboration diagram for _KYVPExtension_PCIInterface_LockLink_Args:

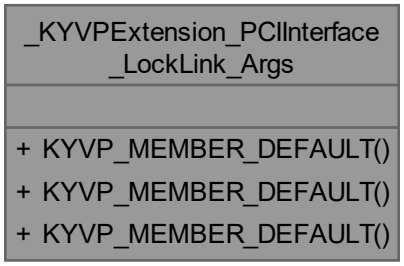

Public Member Functions

- uint64_t iLink KYVP_MEMBER_DEFAULT (0)
- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_PCIINTERFACELOCKLINK_STRUCT_↩ VERSION)

18.78.1 Detailed Description

Definition at line 339 of file KYVPLibExtension.h.

18.78.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/3]

```
uint64_t iLink KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/3]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
             KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/3]


```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYVPEXTENSION_PCIINTERFACELOCKLINK_STRUCT_VERSION  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.79 _KYVPExtension_PCIInterface_ReadLink_Args Struct Reference

Collaboration diagram for _KYVPExtension_PCIInterface_ReadLink_Args:

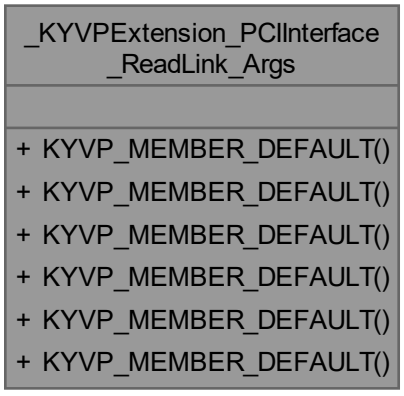

Public Member Functions

- uint64_t iLink KYVP_MEMBER_DEFAULT (0)
- uint64_t iAddress KYVP_MEMBER_DEFAULT (0)
- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_PCIINTERFACEREADLINK_STRUCT_↩ VERSION)
- void *pBuffer KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piSize KYVP_MEMBER_DEFAULT (nullptr)

18.79.1 Detailed Description

Definition at line 394 of file KYVPLibExtension.h.

18.79.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
uint64_t iLink KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
uint64_t iAddress KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
             KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYVPEXTENSION_PCIINTERFACEREADLINK_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
void *pBuffer KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/6]


```
size_t *piSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.80 _KYVPExtension_PCIInterface_SendLinkEvent_Args Struct Reference

Collaboration diagram for _KYVPExtension_PCIInterface_SendLinkEvent_Args:

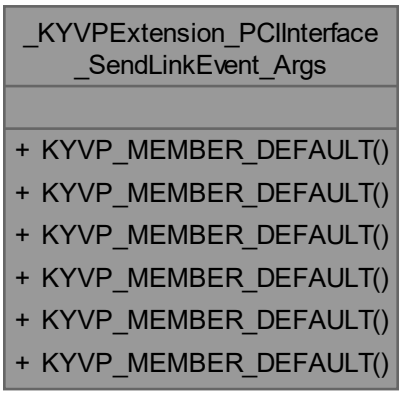

Public Member Functions

- uint64_t iLink KYVP_MEMBER_DEFAULT (0)
- uint16_t iEventId KYVP_MEMBER_DEFAULT (0)
- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_PCIINTERFACEWRITELINK_STRUCT↩ _VERSION)
- const void *pBuffer KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piSize KYVP_MEMBER_DEFAULT (nullptr)

18.80.1 Detailed Description

Definition at line 456 of file KYVPLibExtension.h.

18.80.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
uint64_t iLink KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
uint16_t iEventId KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
             KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYVPEXTENSION_PCIINTERFACEWRITELINK_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
const void *pBuffer KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/6]


```
size_t *piSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.81 _KYVPExtension_PCIInterface_UnlockLink_Args Struct Reference

Collaboration diagram for _KYVPExtension_PCIInterface_UnlockLink_Args:

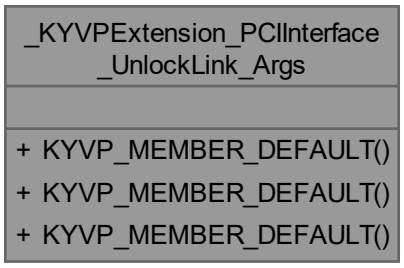

Public Member Functions

- uint64_t iLink KYVP_MEMBER_DEFAULT (0)
- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_PCIINTERFACEUNLOCKLINK_↩ STRUCT_VERSION)

18.81.1 Detailed Description

Definition at line 365 of file KYVPLibExtension.h.

18.81.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/3]

```
uint64_t iLink KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/3]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
             KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/3]


```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVPEXTENSION_PCIINTERFACEUNLOCKLINK_STRUCT_VERSION  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.82 _KYVPExtension_PCIInterface_WriteLink_Args Struct Reference

Collaboration diagram for _KYVPExtension_PCIInterface_WriteLink_Args:

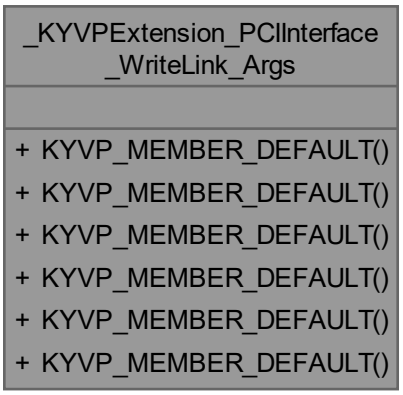

Public Member Functions

- uint64_t iLink KYVP_MEMBER_DEFAULT (0)
- uint64_t iAddress KYVP_MEMBER_DEFAULT (0)
- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_PCIINTERFACEWRITELINK_STRUCT↩ _VERSION)
- const void *pBuffer KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piSize KYVP_MEMBER_DEFAULT (nullptr)

18.82.1 Detailed Description

Definition at line 426 of file KYVPLibExtension.h.

18.82.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
uint64_t iLink KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
uint64_t iAddress KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
             KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYVPEXTENSION_PCIINTERFACEWRITELINK_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
const void *pBuffer KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/6]


```
size_t *piSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.83 _KYVPExtension_RemoteDevice_DirectHWReadReg_Args Struct Reference

Collaboration diagram for _KYVPExtension_RemoteDevice_DirectHWReadReg_Args:

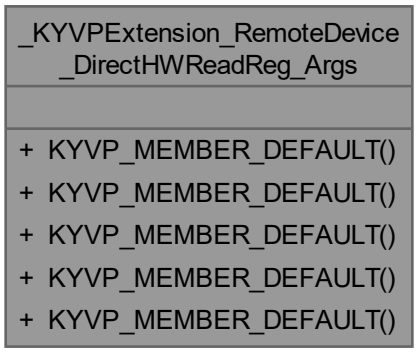

Public Member Functions

- uint64_t iAddress KYVP_MEMBER_DEFAULT (0)
- KYVP_REMOTE_DEVICE_HANDLE hRemoteDeviceHandle KYVP_MEMBER_DEFAULT (KYVP_↩ REMOTE_DEVICE_HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_REMOTEDEVICEDIRECTHWREADREG↩ _STRUCT_VERSION)
- void ∗pBuffer KYVP_MEMBER_DEFAULT (nullptr)
- size_t ∗piSize KYVP_MEMBER_DEFAULT (nullptr)

18.83.1 Detailed Description

Definition at line 191 of file KYVPLibExtension.h.

18.83.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/5]

```
uint64_t iAddress KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/5]

```
KYVP_REMOTE_DEVICE_HANDLE hRemoteDeviceHandle KYVP_MEMBER_DEFAULT (
             KYVP_REMOTE_DEVICE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/5]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVPEXTENSION_REMOTEDEVICEDIRECTHWREADREG_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [4/5]

```
void *pBuffer KYVP_MEMBER_DEFAULT (
            nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/5]


```
size_t *piSize KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.84 _KYVPExtension_RemoteDevice_DirectHWWriteReg_Args Struct Reference

Collaboration diagram for _KYVPExtension_RemoteDevice_DirectHWWriteReg_Args:

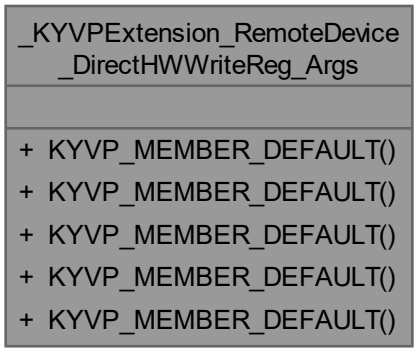

Public Member Functions

- uint64_t iAddress KYVP_MEMBER_DEFAULT (0)
- KYVP_REMOTE_DEVICE_HANDLE hRemoteDeviceHandle KYVP_MEMBER_DEFAULT (KYVP_↩ REMOTE_DEVICE_HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_REMOTEDEVICEDIRECTHWWRITEREG↩ _STRUCT_VERSION)
- const void *pBuffer KYVP_MEMBER_DEFAULT (nullptr)
- size_t *piSize KYVP_MEMBER_DEFAULT (nullptr)

18.84.1 Detailed Description

Definition at line 221 of file KYVPLibExtension.h.

18.84.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/5]

```
uint64_t iAddress KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/5]

```
KYVP_REMOTE_DEVICE_HANDLE hRemoteDeviceHandle KYVP_MEMBER_DEFAULT (
             KYVP_REMOTE_DEVICE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/5]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYVPEXTENSION_REMOTEDEVICEDIRECTHWWRITEREG_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [4/5]

```
const void *pBuffer KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/5]


```
size_t *piSize KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.85 _KYVPExtension_RemoteDevice_GetParamsCollectionHandle_Args Struct Reference

Collaboration diagram for _KYVPExtension_RemoteDevice_GetParamsCollectionHandle_Args:

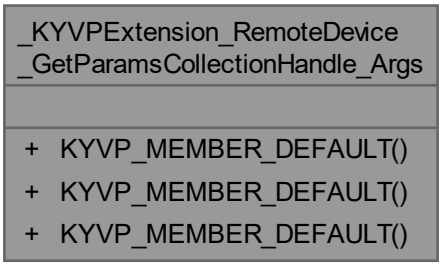

Public Member Functions

- KYVP_REMOTE_DEVICE_HANDLE hRemoteDeviceHandle KYVP_MEMBER_DEFAULT (KYVP_↩ REMOTE_DEVICE_HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_REMOTEDEVICE_GETPARAMSCOLLECTIONHANDLE↩ _ARGS)
- KYVP_COLLECTION_HANDLE *phParamsCollectionHandle KYVP_MEMBER_DEFAULT (nullptr)

18.85.1 Detailed Description

Definition at line 668 of file KYVPLibExtension.h.

18.85.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/3]

```
KYVP_REMOTE_DEVICE_HANDLE hRemoteDeviceHandle KYVP_MEMBER_DEFAULT (
            KYVP_REMOTE_DEVICE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [2/3]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVPEXTENSION_REMOTEDEVICE_GETPARAMSCOLLECTIONHANDLE_ARGS  )
```

KYVP_MEMBER_DEFAULT() [3/3]


```
KYVP_COLLECTION_HANDLE *phParamsCollectionHandle KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.86 _KYVPExtension_RemoteDevice_SetImageDetails_Args Struct Reference

Collaboration diagram for _KYVPExtension_RemoteDevice_SetImageDetails_Args:

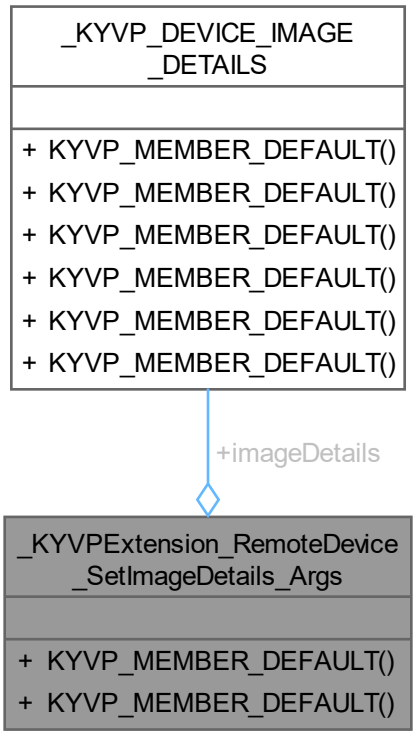

Public Member Functions

- KYVP_REMOTE_DEVICE_HANDLE hRemoteDeviceHandle KYVP_MEMBER_DEFAULT (KYVP_↩ REMOTE_DEVICE_HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_REMOTEDEVICE_SETIMAGEDETAILS↩ _ARGS_VERSION)

Data Fields

- KYVP_DEVICE_IMAGE_DETAILS imageDetails

18.86.1 Detailed Description

Definition at line 249 of file KYVPLibExtension.h.

18.86.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/2]

```
KYVP_REMOTE_DEVICE_HANDLE hRemoteDeviceHandle KYVP_MEMBER_DEFAULT (
             KYVP_REMOTE_DEVICE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [2/2]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYVPEXTENSION_REMOTEDEVICE_SETIMAGEDETAILS_ARGS_VERSION  )
```

18.86.3 Field Documentation

imageDetails

```
KYVP_DEVICE_IMAGE_DETAILS imageDetails
```


Definition at line 253 of file KYVPLibExtension.h.

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.87 _KYVPExtension_Serial_Callback_Register_Args Struct Reference

Collaboration diagram for _KYVPExtension_Serial_Callback_Register_Args:

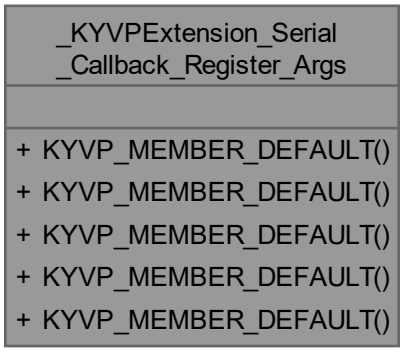

Public Member Functions

- uint64_t iLink KYVP_MEMBER_DEFAULT (0)
- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_SERIALCALLBACKREGISTER_ARGS↩ _VERSION)
- KYVP_SERIAL_CALLBACK pCallbackFunction KYVP_MEMBER_DEFAULT (nullptr)
- void *pContext KYVP_MEMBER_DEFAULT (nullptr)

18.87.1 Detailed Description

Definition at line 621 of file KYVPLibExtension.h.

18.87.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/5]

```
uint64_t iLink KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/5]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
             KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/5]

```
uint32_t version KYVP_MEMBER_DEFAULT (
             KYVPEXTENSION_SERIALCALLBACKREGISTER_ARGS_VERSION  )
```

KYVP_MEMBER_DEFAULT() [4/5]

```
KYVP_SERIAL_CALLBACK pCallbackFunction KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [5/5]


```
void *pContext KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.88 _KYVPExtension_Serial_Callback_Unregister_Args Struct Reference

Collaboration diagram for _KYVPExtension_Serial_Callback_Unregister_Args:

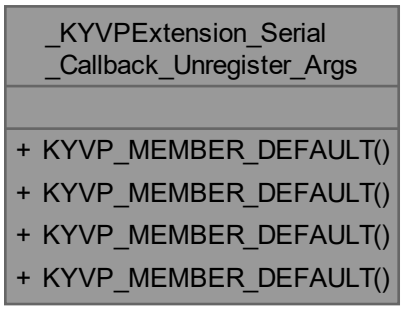

Public Member Functions

- uint64_t iLink KYVP_MEMBER_DEFAULT (0)
- KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (KYVP_PCI_INTERFACE_↩ HANDLE_INVALID)
- uint32_t version KYVP_MEMBER_DEFAULT (KYVPEXTENSION_SERIALCALLBACKUNREGISTER_↩ ARGS_VERSION)
- KYVP_SERIAL_CALLBACK pCallbackFunction KYVP_MEMBER_DEFAULT (nullptr)

18.88.1 Detailed Description

Definition at line 641 of file KYVPLibExtension.h.

18.88.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/4]

```
uint64_t iLink KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/4]

```
KYVP_PCI_INTERFACE_HANDLE hIFHandle KYVP_MEMBER_DEFAULT (
             KYVP_PCI_INTERFACE_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [3/4]

```
uint32_t version KYVP_MEMBER_DEFAULT (
            KYVPEXTENSION_SERIALCALLBACKUNREGISTER_ARGS_VERSION  )
```

KYVP_MEMBER_DEFAULT() [4/4]


```
KYVP_SERIAL_CALLBACK pCallbackFunction KYVP_MEMBER_DEFAULT (
            nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibExtension.h

18.89 _KYVPLIBTL_EVENT_NEW_BUFFER_DATA Struct Reference

Collaboration diagram for _KYVPLIBTL_EVENT_NEW_BUFFER_DATA:

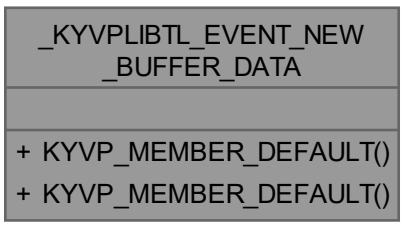

Public Member Functions

- KYVP_BUFFER_HANDLE hBufferHandle KYVP_MEMBER_DEFAULT (KYVP_BUFFER_HANDLE_↩ INVALID)
- void ∗pUserPointer KYVP_MEMBER_DEFAULT (nullptr)

18.89.1 Detailed Description

Definition at line 993 of file KYVPLibTL.h.

18.89.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/2]

```
KYVP_BUFFER_HANDLE hBufferHandle KYVP_MEMBER_DEFAULT (
            KYVP_BUFFER_HANDLE_INVALID  )
```

KYVP_MEMBER_DEFAULT() [2/2]


```
void *pUserPointer KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPLibTL.h

18.90 _PackedDataInfo Struct Reference

Collaboration diagram for _PackedDataInfo:

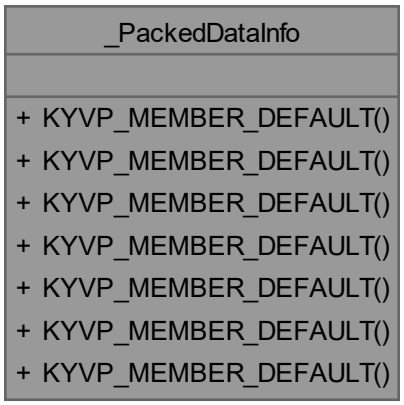

Public Member Functions

- size_t uWidth KYVP_MEMBER_DEFAULT (0)
- size_t uHeight KYVP_MEMBER_DEFAULT (0)
- size_t uUnpackedBufferSize KYVP_MEMBER_DEFAULT (0)
- DS_PACKED_DATA_MODE ePackedModeType KYVP_MEMBER_DEFAULT (DS_PACKED_DATA_MODE↩ _UNPACKED)
- DS_PACKED_DATA_PROCESSING_MODE eProcessingModeType KYVP_MEMBER_DEFAULT (DS_↩ PACKED_DATA_PROCESSING_MODE_EXPAND16)
- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYIMGPROC_PACKEDDATAINFO_STRUCT_VERSION)
- const KYIMGPROC_PIXEL_DECODER *pPixelFormat KYVP_MEMBER_DEFAULT (nullptr)

18.90.1 Detailed Description

Definition at line 291 of file KYVPImageProcessing.h.

18.90.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/7]

```
size_t uWidth KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [2/7]

```
size_t uHeight KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [3/7]

```
size_t uUnpackedBufferSize KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [4/7]

```
DS_PACKED_DATA_MODE ePackedModeType KYVP_MEMBER_DEFAULT (
             DS_PACKED_DATA_MODE_UNPACKED  )
```

KYVP_MEMBER_DEFAULT() [5/7]

```
DS_PACKED_DATA_PROCESSING_MODE eProcessingModeType KYVP_MEMBER_DEFAULT (
             DS_PACKED_DATA_PROCESSING_MODE_EXPAND16  )
```

KYVP_MEMBER_DEFAULT() [6/7]

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
             KYIMGPROC_PACKEDDATAINFO_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [7/7]


```
const KYIMGPROC_PIXEL_DECODER *pPixelFormat KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

18.91 _VPImage Struct Reference

Collaboration diagram for _VPImage:

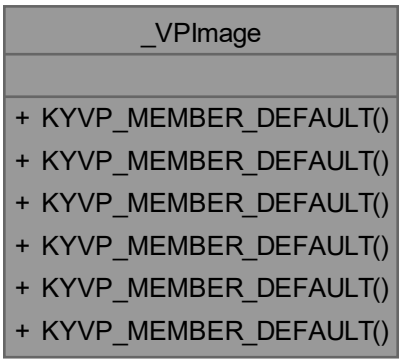

Public Member Functions

- uint32_t uWidth KYVP_MEMBER_DEFAULT (0)
- uint32_t uHeight KYVP_MEMBER_DEFAULT (0)
- size_t uBufferSize KYVP_MEMBER_DEFAULT (0)
- uint32_t uVersion KYVP_MEMBER_DEFAULT (KYIMGPROC_VPIMAGE_STRUCT_VERSION)
- void *pBuffer KYVP_MEMBER_DEFAULT (nullptr)
- KYIMGPROC_PIXEL_DECODER *pixelFormat KYVP_MEMBER_DEFAULT (nullptr)

18.91.1 Detailed Description

Definition at line 259 of file KYVPImageProcessing.h.

18.91.2 Member Function Documentation

KYVP_MEMBER_DEFAULT() [1/6]

```
uint32_t uWidth KYVP_MEMBER_DEFAULT (
              0  )
```

KYVP_MEMBER_DEFAULT() [2/6]

```
uint32_t uHeight KYVP_MEMBER_DEFAULT (
              0  )
```

KYVP_MEMBER_DEFAULT() [3/6]

```
size_t uBufferSize KYVP_MEMBER_DEFAULT (
             0  )
```

KYVP_MEMBER_DEFAULT() [4/6]

```
uint32_t uVersion KYVP_MEMBER_DEFAULT (
             KYIMGPROC_VPIMAGE_STRUCT_VERSION  )
```

KYVP_MEMBER_DEFAULT() [5/6]

```
void *pBuffer KYVP_MEMBER_DEFAULT (
             nullptr  )
```

KYVP_MEMBER_DEFAULT() [6/6]

```
KYIMGPROC_PIXEL_DECODER *pixelFormat KYVP_MEMBER_DEFAULT (
             nullptr  )
```

The documentation for this struct was generated from the following file:

- src/Doxygen/Doxygen_documentation/input/KYVPImageProcessing.h

Index

_DeviceDefinition, 108
    KYVP_MEMBER_DEFAULT, 108, 109
_DeviceLinkDefinition, 109
    KYVP_MEMBER_DEFAULT, 110
_KYIMGPROC_ConvertParam_Args, 111
    h_ImgProcHandle, 112
    KYVP_MEMBER_DEFAULT, 112
_KYIMGPROC_DeleteImageConverterArgs, 113
    hHandle, 114
    KYVP_MEMBER_DEFAULT, 113
_KYIMGPROC_DeleteVideoRecorderArgs, 114
    KYVP_MEMBER_DEFAULT, 115
    phRecordHandle, 115
_KYIMGPROC_IMAGE_CONVERTER_HANDLE, 119
    pNativePointer, 119
_KYIMGPROC_InitImageConverterArgs, 119
    KYVP_MEMBER_DEFAULT, 120
_KYIMGPROC_InitVideoRecorderArgs, 120
    KYVP_MEMBER_DEFAULT, 121
_KYIMGPROC_PIXEL_DECODER, 121
    KYVP_MEMBER_DEFAULT, 122
_KYIMGPROC_SaveImageArgs, 124
    KYVP_MEMBER_DEFAULT, 124, 125
_KYIMGPROC_SaveRawArgs, 125
    KYVP_MEMBER_DEFAULT, 126
_KYIMGPROC_SaveVideoArgs, 126
    bitRate, 127
    dFps, 127
    KYVP_MEMBER_DEFAULT, 127
    srcPixelFormat, 127
    szFileName, 127
    uHeight, 128
    uWidth, 128
    vHandler, 128
_KYIMGPROC_VIDEO_RECORDER_HANDLE, 129
    pNativePointer, 130
_KYIMGPROC_WriteVideoFrameArgs, 130
    KYVP_MEMBER_DEFAULT, 131
    pSrcImage, 131
    vHandler, 131
_KYImgProc_GetPackedDataInfo_Args, 115
    KYVP_MEMBER_DEFAULT, 116
_KYImgProc_GetPixelFormatByName_Args, 118
    KYVP_MEMBER_DEFAULT, 118
_KYImgProc_GetPixelFormat_Args, 117
    KYVP_MEMBER_DEFAULT, 117
_KYImgProc_PreproccessPackedData_Args, 122
    KYVP_MEMBER_DEFAULT, 123
_KYImgProc_StopVideoRecordArgs, 128
    KYVP_MEMBER_DEFAULT, 129
    vHandler, 129
_KYParametersHandler_CreateParameterCollection_Args, 131
    KYVP_MEMBER_DEFAULT, 132
_KYParametersHandler_DeleteParameterCollection_Args, 133
    KYVP_MEMBER_DEFAULT, 133, 134
_KYParametersHandler_GetNodeDescriptor_Args, 134
    KYVP_MEMBER_DEFAULT, 135
_KYParametersHandler_GetNodeDescriptorsArray_Args, 136
    KYVP_MEMBER_DEFAULT, 136, 137
_KYParametersHandler_GetParameterAttributeValueArgs, 137
    KYVP_MEMBER_DEFAULT, 138, 139
_KYParametersHandler_GetValueEnumAsString_Args, 141
    KYVP_MEMBER_DEFAULT, 142
_KYParametersHandler_GetValue_Args, 139
    KYVP_MEMBER_DEFAULT, 140, 141
_KYParametersHandler_InitParameters, 145
    KYVP_MEMBER_DEFAULT, 146
_KYParametersHandler_InitializeParameterCollection_Args, 144
    KYVP_MEMBER_DEFAULT, 144, 145
_KYParametersHandler_Initialize_Args, 143
    KYVP_MEMBER_DEFAULT, 143
_KYParametersHandler_InvalidateParameterCollection_Args, 147
    KYVP_MEMBER_DEFAULT, 148
_KYParametersHandler_InvalidateParameter_Args, 146
    KYVP_MEMBER_DEFAULT, 147
_KYParametersHandler_IsParameterAvailableArgs, 149
    KYVP_MEMBER_DEFAULT, 149, 150
_KYParametersHandler_RegisterParameterCollectionCallback_Args, 150
    KYVP_MEMBER_DEFAULT, 151
_KYParametersHandler_RegisterParameterCollectionTransport_Args, 152
    KYVP_MEMBER_DEFAULT, 153
_KYParametersHandler_SaveToFile_Args, 154
    KYVP_MEMBER_DEFAULT, 154, 155
_KYParametersHandler_SetValueEnumByValueName_Args, 157
    KYVP_MEMBER_DEFAULT, 158
_KYParametersHandler_SetValue_Args, 155
    KYVP_MEMBER_DEFAULT, 156, 157
_KYParametersHandler_TransportCallParams_Args, 159
    KYVP_MEMBER_DEFAULT, 159, 160
_KYParametersHandler_UnregisterParameterCollectionCallback_Args, 161
    KYVP_MEMBER_DEFAULT, 161, 162
_KYParametersHandler_UnregisterParameterCollectionTransport_Args, 162
    KYVP_MEMBER_DEFAULT, 163
_KYVPExtension_AuxDataCallback_Register_Args, 202
    KYVP_MEMBER_DEFAULT, 203

_KYVPExtension_AuxDataCallback_Unregister_Args, 204
KYVP_MEMBER_DEFAULT, 204
_KYVPExtension_DataStream_Callback_Register_Args, 205
KYVP_MEMBER_DEFAULT, 205, 206
_KYVPExtension_DataStream_Callback_Unregister_Args, 206
KYVP_MEMBER_DEFAULT, 207
_KYVPExtension_DataStream_Close_Args, 207
KYVP_MEMBER_DEFAULT, 208
_KYVPExtension_DataStream_Create_Args, 208
KYVP_MEMBER_DEFAULT, 209
_KYVPExtension_DetectDevicesManually_Args, 209
KYVP_MEMBER_DEFAULT, 210
_KYVPExtension_PCIInterface_CheckUpdateFile_Args, 211
KYVP_MEMBER_DEFAULT, 212, 213
_KYVPExtension_PCIInterface_DirectHWReadReg_Args, 214
KYVP_MEMBER_DEFAULT, 215
_KYVPExtension_PCIInterface_DirectHWWriteReg_Args, 216
KYVP_MEMBER_DEFAULT, 216, 217
_KYVPExtension_PCIInterface_EventCallBackRegister_Args, 217
KYVP_MEMBER_DEFAULT, 218
_KYVPExtension_PCIInterface_EventCallBackUnregister_Args, 219
KYVP_MEMBER_DEFAULT, 219
_KYVPExtension_PCIInterface_FirmwareUpdate_Args, 220
KYVP_MEMBER_DEFAULT, 220, 221
_KYVPExtension_PCIInterface_LinkGetStatus_Args, 221
KYVP_MEMBER_DEFAULT, 222, 223
_KYVPExtension_PCIInterface_LockLink_Args, 223
KYVP_MEMBER_DEFAULT, 224
_KYVPExtension_PCIInterface_ReadLink_Args, 224
KYVP_MEMBER_DEFAULT, 225
_KYVPExtension_PCIInterface_SendLinkEvent_Args, 226
KYVP_MEMBER_DEFAULT, 227
_KYVPExtension_PCIInterface_UnlockLink_Args, 228
KYVP_MEMBER_DEFAULT, 228
_KYVPExtension_PCIInterface_WriteLink_Args, 229
KYVP_MEMBER_DEFAULT, 230
_KYVPExtension_RemoteDevice_DirectHWReadReg_Args, 231
KYVP_MEMBER_DEFAULT, 231, 232
_KYVPExtension_RemoteDevice_DirectHWWriteReg_Args, 232
KYVP_MEMBER_DEFAULT, 233
_KYVPExtension_RemoteDevice_GetParamsCollectionHandle_Args, 234
KYVP_MEMBER_DEFAULT, 234
_KYVPExtension_RemoteDevice_SetImageDetails_Args, 235
imageDetails, 236
KYVP_MEMBER_DEFAULT, 236
_KYVPExtension_Serial_Callback_Register_Args, 236
KYVP_MEMBER_DEFAULT, 237
_KYVPExtension_Serial_Callback_Unregister_Args, 238
KYVP_MEMBER_DEFAULT, 238, 239
_KYVPLIBTL_EVENT_NEW_BUFFER_DATA, 239
KYVP_MEMBER_DEFAULT, 239
_KYVP_AUX_DATA, 164
frame_data, 165
io_data, 165
m_InterruptTimestampChrono, 165
m_InterruptTimestampHw, 165
messageID, 165
u_data, 165
version, 165
_KYVP_BOARD_INFO, 166
KYVP_MEMBER_DEFAULT, 166, 167
_KYVP_BUFFER_DATA_CHUNK, 168
bufferChunkSize, 168
pBufferChunkMemory, 168
_KYVP_BUFFER_INFO, 169
KYVP_MEMBER_DEFAULT, 170, 171
_KYVP_COLLECTION_HANDLE, 171
pNativePointer, 172
_KYVP_CXP2_EVENT, 172
KYVP_MEMBER_DEFAULT, 173
uDataSize, 173
uDataWordsArr, 173
uMasterHostConnectionID, 173
uTag, 173
_KYVP_CXP2_HEARTBEAT, 174
KYVP_MEMBER_DEFAULT, 174
uDeviceTime, 174
uMasterHostConnectionID, 174
_KYVP_DEVICE_IMAGE_DETAILS, 175
KYVP_MEMBER_DEFAULT, 176
_KYVP_DEVICE_INFO, 177
KYVP_MEMBER_DEFAULT, 178–180
_KYVP_FRAME_AUX_DATA, 180
reserved, 181
sequence_number, 181
timestamp, 181
version, 181
_KYVP_IO_AUX_DATA, 181
masked_data, 182
timestamp, 182
version, 182
_KYVP_NodeDescriptor, 183
KYVP_MEMBER_DEFAULT, 184–187
_KYVP_PCIINTERFACE_EVENT_CXP2_EVENT, 192
cxp2Event, 193
deviceHandle, 193
KYVP_MEMBER_DEFAULT, 193
_KYVP_PCIINTERFACE_EVENT_CXP2_HEARTBEAT, 193
deviceHandle, 194

heartBeat, 194
KYVP_MEMBER_DEFAULT, 194
_KYVP_PCIINTERFACE_EVENT_TEMPERATURE, 195
eTemperatureThresholdId, 195
KYVP_MEMBER_DEFAULT, 195
_KYVP_PCIINTERFACE_GENERIC_EVENT, 196
data, 197
eEventId, 197
eventCXP2Event, 197
eventCXP2Heartbeat, 197
eventTemperature, 197
KYVP_MEMBER_DEFAULT, 196
_KYVP_PCI_CONFIG, 188
KYVP_MEMBER_DEFAULT, 188
_KYVP_PCI_INTERFACE_INFO, 189
KYVP_MEMBER_DEFAULT, 190
m_KYVP_BoardInfo, 190
_KYVP_PCI_INTERFACE_SLOT, 191
m_uBus, 191
m_uFunction, 191
m_uSlot, 191
_KYVP_PIXEL_FORMAT, 198
KYVP_MEMBER_DEFAULT, 198, 199
_KYVP_VIDEO_PIXELIF, 201
data_subtype, 202
data_type, 202
data_width, 202
_KY_RESULT, 110
uResult, 111
_PackedDataInfo, 240
KYVP_MEMBER_DEFAULT, 241
_VPImage, 242
KYVP_MEMBER_DEFAULT, 242, 243
_kyvp_update_status, 200
bytes_sent, 200
is_writing, 200
struct_version, 200
total_size, 201

API Examples, 53
API Notes and Limitations, 4

bitRate
_KYIMGPROC_SaveVideoArgs, 127
bufferChunkSize
_KYVP_BUFFER_DATA_CHUNK, 168
bytes_sent
_kyvp_update_status, 200

Collecting Diagnostic information, 55
Comparison Functions, 73
KYImgProc_ImageConverterHandleIsInvalid, 74
KYImgProc_ImageConverterHandleIsNull, 74
KYImgProc_ImageConverterHandlesIsEqual, 74
KYImgProc_VideoRecorderHandleIsEqual, 75
KYImgProc_VideoRecorderHandleIsInvalid, 75
KYImgProc_VideoRecorderHandleIsNull, 77
Comparison functions, 106
KYParametersHandler_CollectionHandleIsInvalid, 106
KYParametersHandler_CollectionHandleIsNull, 107
KYParametersHandler_CollectionHandlesIsEqual, 107
cxp2Event
_KYVP_PCIINTERFACE_EVENT_CXP2_EVENT, 193

data
_KYVP_PCIINTERFACE_GENERIC_EVENT, 197
data_subtype
_KYVP_VIDEO_PIXELIF, 202
data_type
_KYVP_VIDEO_PIXELIF, 202
data_width
_KYVP_VIDEO_PIXELIF, 202
Defines, 4
deviceHandle
_KYVP_PCIINTERFACE_EVENT_CXP2_EVENT, 193
_KYVP_PCIINTERFACE_EVENT_CXP2_HEARTBEAT, 194
dFps
_KYIMGPROC_SaveVideoArgs, 127

eEventId
_KYVP_PCIINTERFACE_GENERIC_EVENT, 197
eTemperatureThresholdId
_KYVP_PCIINTERFACE_EVENT_TEMPERATURE, 195
Event Interface, 94
KYVPLibTL_DSRegisterEvent, 95
KYVPLibTL_DSUnregisterEvent, 95
KYVPLibTL_EventFlush, 95
KYVPLibTL_EventGetData, 95
KYVPLibTL_EventGetDataInfo, 95
KYVPLibTL_EventGetInfo, 95
KYVPLibTL_EventKill, 95
eventCXP2Event
_KYVP_PCIINTERFACE_GENERIC_EVENT, 197
eventCXP2Heartbeat
_KYVP_PCIINTERFACE_GENERIC_EVENT, 197
eventTemperature
_KYVP_PCIINTERFACE_GENERIC_EVENT, 197

Foundation, 12
frame_data
_KYVP_AUX_DATA, 165

h_ImgProcHandle
_KYIMGPROC_ConvertParam_Args, 112
heartBeat
_KYVP_PCIINTERFACE_EVENT_CXP2_HEARTBEAT, 194
hHandle
_KYIMGPROC_DeleteImageConverterArgs, 114

Image processing Conversation functions, 69

KYImgProc_ConvertImage, 69
KYImgProc_GetPackedDataInfo, 70
KYImgProc_PreproccessPackedData, 70
Image processing Get functions, 67
KYImgProc_GetPixelFormat, 68
KYImgProc_GetPixelFormatByName, 68
Image processing Init functions, 65, 66
KYImgProc_DeleteImageConverter, 66
KYImgProc_DeleteVideoRecorder, 67
KYImgProc_InitImageConverter, 65
KYImgProc_InitVideoRecorder, 66
Image Processing Library, 47
Image Processing Library Functions, 47
Image Processing Library Structs, 47
Image processing save and record functions, 71
KYImgProc_SaveImage, 71
KYImgProc_SaveRawData, 71
KYImgProc_StartVideoRecord, 72
KYImgProc_StopVideoRecord, 72
KYImgProc_WriteVideoFrame, 73
imageDetails
_KYVPExtension_RemoteDevice_SetImageDetails_Args, 236
Init functions, 95
KYParametersHandler_CreateParameterCollection, 96
KYParametersHandler_Initialize, 96
KYParametersHandler_InitializeParameterCollection, 97
KYParametersHandler_RegisterParameterCollectionCallback, 97
KYParametersHandler_RegisterParameterCollectionTransport, 98
Interface module, 88
KYVPLibTL_DevClose, 89
KYVPLibTL_DevGetDataStreamID, 89
KYVPLibTL_DevGetInfo, 89
KYVPLibTL_DevGetNumDataStreams, 90
KYVPLibTL_DevGetPort, 90
KYVPLibTL_DevOpenDataStream, 91
KYVPLibTL_IFClose, 91
KYVPLibTL_IFGetDeviceID, 91
KYVPLibTL_IFGetDeviceInfo, 91
KYVPLibTL_IFGetInfo, 92
KYVPLibTL_IFGetNumDevices, 92
KYVPLibTL_IFOpenDevice, 92
KYVPLibTL_IFRegisterEvent, 92
KYVPLibTL_IFUnregisterEvent, 92
KYVPLibTL_IFUpdateDeviceList, 92
Introduction, 2, 47
io_data
_KYVP_AUX_DATA, 165
is_writing
_kyvp_update_status, 200

KYImgProc_ConvertImage
Image processing Conversation functions, 69
KYImgProc_DeleteImageConverter
Image processing Init functions, 66
KYImgProc_DeleteVideoRecorder
Image processing Init functions, 67
KYImgProc_GetPackedDataInfo
Image processing Conversation functions, 70
KYImgProc_GetPixelFormat
Image processing Get functions, 68
KYImgProc_GetPixelFormatByName
Image processing Get functions, 68
KYImgProc_ImageConverterHandleIsInvalid
Comparison Functions, 74
KYImgProc_ImageConverterHandleIsNull
Comparison Functions, 74
KYImgProc_ImageConverterHandlesIsEqual
Comparison Functions, 74
KYImgProc_InitImageConverter
Image processing Init functions, 65
KYImgProc_InitVideoRecorder
Image processing Init functions, 66
KYImgProc_PreproccessPackedData
Image processing Conversation functions, 70
KYImgProc_SaveImage
Image processing save and record functions, 71
KYImgProc_SaveRawData
Image processing save and record functions, 71
KYImgProc_StartVideoRecord
Image processing save and record functions, 72
KYImgProc_StopVideoRecord
Image processing save and record functions, 72
KYImgProc_VideoRecorderHandleIsEqual
Comparison Functions, 75
KYImgProc_VideoRecorderHandleIsInvalid
Comparison Functions, 75
KYImgProc_VideoRecorderHandleIsNull
Comparison Functions, 77
KYImgProc_WriteVideoFrame
Image processing save and record functions, 73
KYParametersHandler_CollectionHandleIsInvalid
Comparison functions, 106
KYParametersHandler_CollectionHandleIsNull
Comparison functions, 107
KYParametersHandler_CollectionHandlesIsEqual
Comparison functions, 107
KYParametersHandler_CreateParameterCollection
Init functions, 96
KYParametersHandler_DeleteParameterCollection
Uninit functions, 99
KYParametersHandler_GetNodeDescriptor
Set and Get functions, 101
KYParametersHandler_GetNodeDescriptorsArray
Set and Get functions, 101
KYParametersHandler_GetParameterAttributeValue
Set and Get functions, 102
KYParametersHandler_GetValue
Set and Get functions, 102
KYParametersHandler_GetValueEnumAsString
Set and Get functions, 103
KYParametersHandler_Initialize
Init functions, 96

KYParametersHandler_InitializeParameterCollection
Init functions, 97
KYParametersHandler_InvalidateParameter
Set and Get functions, 103
KYParametersHandler_InvalidateParameterCollection
Set and Get functions, 103
KYParametersHandler_IsParameterAvailable
Set and Get functions, 104
KYParametersHandler_RegisterParameterCollectionCallback
Init functions, 97
KYParametersHandler_RegisterParameterCollectionTransport
Init functions, 98
KYParametersHandler_SaveToFile
Set and Get functions, 104
KYParametersHandler_SetValue
Set and Get functions, 105
KYParametersHandler_SetValueEnumByValueName
Set and Get functions, 105
KYParametersHandler_UnregisterParameterCollectionCallback
Uninit functions, 99
KYParametersHandler_UnregisterParameterCollectionTransport
Uninit functions, 99
KYVP Node Descriptor, 45
KYVP_MEMBER_DEFAULT
_DeviceDefinition, 108, 109
_DeviceLinkDefinition, 110
_KYIMGPROC_ConvertParam_Args, 112
_KYIMGPROC_DeleteImageConverterArgs, 113
_KYIMGPROC_DeleteVideoRecorderArgs, 115
_KYIMGPROC_InitImageConverterArgs, 120
_KYIMGPROC_InitVideoRecorderArgs, 121
_KYIMGPROC_PIXEL_DECODER, 122
_KYIMGPROC_SaveImageArgs, 124, 125
_KYIMGPROC_SaveRawArgs, 126
_KYIMGPROC_SaveVideoArgs, 127
_KYIMGPROC_WriteVideoFrameArgs, 131
_KYImgProc_GetPackedDataInfo_Args, 116
_KYImgProc_GetPixelFormatByName_Args, 118
_KYImgProc_GetPixelFormat_Args, 117
_KYImgProc_PreproccessPackedData_Args, 123
_KYImgProc_StopVideoRecordArgs, 129
_KYParametersHandler_CreateParameterCollection_Args, 132
_KYParametersHandler_DeleteParameterCollection_Args, 133, 134
_KYParametersHandler_GetNodeDescriptor_Args, 135
_KYParametersHandler_GetNodeDescriptorsArray_Args, 136, 137
_KYParametersHandler_GetParameterAttributeValueArgs, 138, 139
_KYParametersHandler_GetValueEnumAsString_Args, 142
_KYParametersHandler_GetValue_Args, 140, 141
_KYParametersHandler_InitParameters, 146
_KYParametersHandler_InitializeParameterCollection_Args, 144, 145
_KYParametersHandler_Initialize_Args, 143
_KYParametersHandler_InvalidateParameterCollection_Args, 148
_KYParametersHandler_InvalidateParameter_Args, 147
_KYParametersHandler_IsParameterAvailableArgs, 149, 150
_KYParametersHandler_RegisterParameterCollectionCallback_Args, 151
_KYParametersHandler_RegisterParameterCollectionTransport_Args, 153
_KYParametersHandler_SaveToFile_Args, 154, 155
_KYParametersHandler_SetValueEnumByValueName_Args, 158
_KYParametersHandler_SetValue_Args, 156, 157
_KYParametersHandler_TransportCallParams_Args, 159, 160
_KYParametersHandler_UnregisterParameterCollectionCallback_Arg 161, 162
_KYParametersHandler_UnregisterParameterCollectionTransport_Ar 163
_KYVPExtension_AuxDataCallback_Register_Args, 203
_KYVPExtension_AuxDataCallback_Unregister_Args, 204
_KYVPExtension_DataStream_Callback_Register_Args, 205, 206
_KYVPExtension_DataStream_Callback_Unregister_Args, 207
_KYVPExtension_DataStream_Close_Args, 208
_KYVPExtension_DataStream_Create_Args, 209
_KYVPExtension_DetectDevicesManually_Args, 210
_KYVPExtension_PCIInterface_CheckUpdateFile_Args, 212, 213
_KYVPExtension_PCIInterface_DirectHWReadReg_Args, 215
_KYVPExtension_PCIInterface_DirectHWWriteReg_Args, 216, 217
_KYVPExtension_PCIInterface_EventCallBackRegister_Args, 218
_KYVPExtension_PCIInterface_EventCallBackUnregister_Args, 219
_KYVPExtension_PCIInterface_FirmwareUpdate_Args, 220, 221
_KYVPExtension_PCIInterface_LinkGetStatus_Args, 222, 223
_KYVPExtension_PCIInterface_LockLink_Args, 224
_KYVPExtension_PCIInterface_ReadLink_Args, 225
_KYVPExtension_PCIInterface_SendLinkEvent_Args, 227
_KYVPExtension_PCIInterface_UnlockLink_Args, 228
_KYVPExtension_PCIInterface_WriteLink_Args, 230
_KYVPExtension_RemoteDevice_DirectHWReadReg_Args,

231, 232
_KYVPExtension_RemoteDevice_DirectHWWriteReg_Args, 233
_KYVPExtension_RemoteDevice_GetParamsCollectionHandle_Args, 234
_KYVPExtension_RemoteDevice_SetImageDetails_Args, 236
_KYVPExtension_Serial_Callback_Register_Args, 237
_KYVPExtension_Serial_Callback_Unregister_Args, 238, 239
_KYVPLIBTL_EVENT_NEW_BUFFER_DATA, 239
_KYVP_BOARD_INFO, 166, 167
_KYVP_BUFFER_INFO, 170, 171
_KYVP_CXP2_EVENT, 173
_KYVP_CXP2_HEARTBEAT, 174
_KYVP_DEVICE_IMAGE_DETAILS, 176
_KYVP_DEVICE_INFO, 178–180
_KYVP_NodeDescriptor, 184–187
_KYVP_PCIINTERFACE_EVENT_CXP2_EVENT, 193
_KYVP_PCIINTERFACE_EVENT_CXP2_HEARTBEAT, 194
_KYVP_PCIINTERFACE_EVENT_TEMPERATURE, 195
_KYVP_PCIINTERFACE_GENERIC_EVENT, 196
_KYVP_PCI_CONFIG, 188
_KYVP_PCI_INTERFACE_INFO, 190
_KYVP_PIXEL_FORMAT, 198, 199
_PackedDataInfo, 241
_VPImage, 242, 243
KYVP_ParametersHandler Description, 37
KYVPExtension, 55
KYVPExtension Structs, 58
KYVPLibTL Event Functions, 35
KYVPLibTL Functions, 25
KYVPLibTL Handles, 13
KYVPLibTL Interface Functions, 28
KYVPLibTL Introduction, 13
KYVPLibTL Library, 13
KYVPLibTL Stream Functions, 31
KYVPLibTL Structs, 14
KYVPLibTL System Functions, 26
KYVPLibTL_CloseLib
System module, 78
KYVPLibTL_DevClose
Interface module, 89
KYVPLibTL_DevGetDataStreamID
Interface module, 89
KYVPLibTL_DevGetInfo
Interface module, 89
KYVPLibTL_DevGetNumDataStreams
Interface module, 90
KYVPLibTL_DevGetPort
Interface module, 90
KYVPLibTL_Device_GetPortURL
Low level functions, 80
KYVPLibTL_Device_ReadPort
Low level functions, 81
KYVPLibTL_Device_WritePort
Low level functions, 81
KYVPLibTL_DevOpenDataStream
Interface module, 91
KYVPLibTL_DSAllocAndAnnounceBuffer
Stream module, 93
KYVPLibTL_DSAnnounceBuffer
Stream module, 93
KYVPLibTL_DSClose
Stream module, 93
KYVPLibTL_DSGetBufferID
Stream module, 93
KYVPLibTL_DSGetBufferInfo
Stream module, 93
KYVPLibTL_DSGetInfo
Stream module, 94
KYVPLibTL_DSQueueBuffer
Stream module, 94
KYVPLibTL_DSRegisterEvent
Event Interface, 95
KYVPLibTL_DSRevokeBuffer
Stream module, 94
KYVPLibTL_DSStartAcquisition
Stream module, 94
KYVPLibTL_DSStopAcquisition
Stream module, 94
KYVPLibTL_DSUnregisterEvent
Event Interface, 95
KYVPLibTL_EventFlush
Event Interface, 95
KYVPLibTL_EventGetData
Event Interface, 95
KYVPLibTL_EventGetDataInfo
Event Interface, 95
KYVPLibTL_EventGetInfo
Event Interface, 95
KYVPLibTL_EventKill
Event Interface, 95
KYVPLibTL_GetPortURL
Low level functions, 82
KYVPLibTL_IFClose
Interface module, 91
KYVPLibTL_IFGetDeviceID
Interface module, 91
KYVPLibTL_IFGetDeviceInfo
Interface module, 91
KYVPLibTL_IFGetInfo
Interface module, 92
KYVPLibTL_IFGetNumDevices
Interface module, 92
KYVPLibTL_IFOpenDevice
Interface module, 92
KYVPLibTL_IFRegisterEvent
Interface module, 92
KYVPLibTL_IFUnregisterEvent
Interface module, 92
KYVPLibTL_IFUpdateDeviceList

Interface module, 92
KYVPLibTL_InitLib
System module, 78
KYVPLibTL_PCIInterface_GetPortURL
Low level functions, 82
KYVPLibTL_PCIInterface_ReadPort
Low level functions, 82
KYVPLibTL_PCIInterface_WritePort
Low level functions, 83
KYVPLibTL_ReadPort
Low level functions, 83
KYVPLibTL_RemoteDevice_GetPortURL
Low level functions, 84
KYVPLibTL_RemoteDevice_ReadPort
Low level functions, 84
KYVPLibTL_RemoteDevice_WritePort
Low level functions, 86
KYVPLibTL_Stream_GetPortURL
Low level functions, 86
KYVPLibTL_Stream_ReadPort
Low level functions, 87
KYVPLibTL_Stream_WritePort
Low level functions, 87
KYVPLibTL_TLClose
System module, 78
KYVPLibTL_TLGetInfo
System module, 79
KYVPLibTL_TLGetInterfaceID
System module, 79
KYVPLibTL_TLGetInterfaceInfo
System module, 79
KYVPLibTL_TLGetNumInterfaces
System module, 79
KYVPLibTL_TLOpen
System module, 79
KYVPLibTL_TLOpenInterface
System module, 79
KYVPLibTL_TLUpdateInterfaceList
System module, 79
KYVPLibTL_WritePort
Low level functions, 87

Library Exiting, 52
Low level functions, 80
KYVPLibTL_Device_GetPortURL, 80
KYVPLibTL_Device_ReadPort, 81
KYVPLibTL_Device_WritePort, 81
KYVPLibTL_GetPortURL, 82
KYVPLibTL_PCIInterface_GetPortURL, 82
KYVPLibTL_PCIInterface_ReadPort, 82
KYVPLibTL_PCIInterface_WritePort, 83
KYVPLibTL_ReadPort, 83
KYVPLibTL_RemoteDevice_GetPortURL, 84
KYVPLibTL_RemoteDevice_ReadPort, 84
KYVPLibTL_RemoteDevice_WritePort, 86
KYVPLibTL_Stream_GetPortURL, 86
KYVPLibTL_Stream_ReadPort, 87
KYVPLibTL_Stream_WritePort, 87
KYVPLibTL_WritePort, 87

m_InterruptTimestampChrono
_KYVP_AUX_DATA, 165
m_InterruptTimestampHw
_KYVP_AUX_DATA, 165
m_KYVP_BoardInfo
_KYVP_PCI_INTERFACE_INFO, 190
m_uBus
_KYVP_PCI_INTERFACE_SLOT, 191
m_uFunction
_KYVP_PCI_INTERFACE_SLOT, 191
m_uSlot
_KYVP_PCI_INTERFACE_SLOT, 191
masked_data
_KYVP_IO_AUX_DATA, 182
messageID
_KYVP_AUX_DATA, 165

Overview, 3

Parameters Handler Functions, 47
Parameters Handler Library, 37
Parameters Handler Library Structs, 37
pBufferChunkMemory
_KYVP_BUFFER_DATA_CHUNK, 168
phRecordHandle
_KYIMGPROC_DeleteVideoRecorderArgs, 115
pNativePointer
_KYIMGPROC_IMAGE_CONVERTER_HANDLE, 119
_KYIMGPROC_VIDEO_RECORDER_HANDLE, 130
_KYVP_COLLECTION_HANDLE, 172
pSrcImage
_KYIMGPROC_WriteVideoFrameArgs, 131

reserved
_KYVP_FRAME_AUX_DATA, 181
Revision History, 1

sequence_number
_KYVP_FRAME_AUX_DATA, 181
Set and Get functions, 100
KYParametersHandler_GetNodeDescriptor, 101
KYParametersHandler_GetNodeDescriptorsArray, 101
KYParametersHandler_GetParameterAttributeValue, 102
KYParametersHandler_GetValue, 102
KYParametersHandler_GetValueEnumAsString, 103
KYParametersHandler_InvalidateParameter, 103
KYParametersHandler_InvalidateParameterCollection, 103
KYParametersHandler_IsParameterAvailable, 104
KYParametersHandler_SaveToFile, 104
KYParametersHandler_SetValue, 105
KYParametersHandler_SetValueEnumByValueName, 105
srcPixelFormat

_KYIMGPROC_SaveVideoArgs, 127
Stream module, 93
KYVPLibTL_DSAllocAndAnnounceBuffer, 93
KYVPLibTL_DSAnnounceBuffer, 93
KYVPLibTL_DSClose, 93
KYVPLibTL_DSGetBufferID, 93
KYVPLibTL_DSGetBufferInfo, 93
KYVPLibTL_DSGetInfo, 94
KYVPLibTL_DSQueueBuffer, 94
KYVPLibTL_DSRevokeBuffer, 94
KYVPLibTL_DSStartAcquisition, 94
KYVPLibTL_DSStopAcquisition, 94
struct_version
_kyvp_update_status, 200
System module, 77
KYVPLibTL_CloseLib, 78
KYVPLibTL_InitLib, 78
KYVPLibTL_TLClose, 78
KYVPLibTL_TLGetInfo, 79
KYVPLibTL_TLGetInterfaceID, 79
KYVPLibTL_TLGetInterfaceInfo, 79
KYVPLibTL_TLGetNumInterfaces, 79
KYVPLibTL_TLOpen, 79
KYVPLibTL_TLOpenInterface, 79
KYVPLibTL_TLUpdateInterfaceList, 79
szFileName
_KYIMGPROC_SaveVideoArgs, 127

timestamp
_KYVP_FRAME_AUX_DATA, 181
_KYVP_IO_AUX_DATA, 182
total_size
_kyvp_update_status, 201

u_data
_KYVP_AUX_DATA, 165
uDataSize
_KYVP_CXP2_EVENT, 173
uDataWordsArr
_KYVP_CXP2_EVENT, 173
uDeviceTime
_KYVP_CXP2_HEARTBEAT, 174
uHeight
_KYIMGPROC_SaveVideoArgs, 128
uMasterHostConnectionID
_KYVP_CXP2_EVENT, 173
_KYVP_CXP2_HEARTBEAT, 174
Uninit functions, 98
KYParametersHandler_DeleteParameterCollection, 99
KYParametersHandler_UnregisterParameterCollectionCallback, 99
KYParametersHandler_UnregisterParameterCollectionTransport, 99
uResult
_KY_RESULT, 111
uTag
_KYVP_CXP2_EVENT, 173
uWidth
_KYIMGPROC_SaveVideoArgs, 128

version
_KYVP_AUX_DATA, 165
_KYVP_FRAME_AUX_DATA, 181
_KYVP_IO_AUX_DATA, 182
vHandler
_KYIMGPROC_SaveVideoArgs, 128
_KYIMGPROC_WriteVideoFrameArgs, 131
_KYImgProc_StopVideoRecordArgs, 129