
Flux estimator of the 3-ph induction motor

Description

This software module implements the flux estimator with the rotor flux angle for the 3-ph induction motor based upon the integral of back emf's (voltage model) approach. To reduce the errors due to pure integrator and stator resistance measurement, the compensated voltages produced by PI compensators are introduced. Therefore, this flux estimator can be operating over a wide range of speed, even at very low speed.



Availability

This IQ module is available in one interface format:

1) The C interface version

Module Properties

Type: Target Independent, Application Dependent

Target Devices: 28x Fixed Point or Piccolo

C Version File Names: aci_fe.h

IQmath library files for C: IQmathLib.h, IQmath.lib

C Interface

Object Definition

The structure of ACIFE object is defined by following structure definition

```
typedef struct { _iq ThetaFlux;
                                      // Output: Rotor flux angle
              _iq IQsS;
                                      // Input: Stationary q-axis stator current
                                      // Input: Stationary d-axis stator current
              _iq IDsS;
                                      // Parameter: Constant using in current model
              _iq K1;
                                      // Variable: Rotating d-axis rotor flux (current model)
              iq FluxDrE;
                                      // Parameter: Constant using in current model
              ig K2;
              _iq FluxQrS:
                                      // Variable: Stationary q-axis rotor flux (current model)
              iq FluxDrS;
                                      // Variable: Stationary d-axis rotor flux (current model)
              ig K3;
                                      // Parameter: Constant using in stator flux computation
              _iq K4;
                                      // Parameter: Constant using in stator flux computation
              iq FluxDsS;
                                      // Variable: Stationary d-axis stator flux (current model)
              _iq FluxQsS;
                                      // Variable: Stationary q-axis stator flux (current model)
              _iq PsiQsS;
                                      // Variable: Stationary d-axis stator flux (voltage model)
                                      // Parameter: PI proportional gain
              _iq Kp;
              _iq UiDsS;
                                      // Variable: Stationary d-axis integral term
              _iq UCompDsS;
                                      // Variable: Stationary d-axis compensated voltage
                                      // Parameter: PI integral gain
              iq Ki;
              _iq PsiQsS:
                                      // Variable: Stationary q-axis stator flux (voltage model)
                                      // Variable: Stationary q-axis integral term
              _iq UiQsS;
              iq UCompQsS;
                                      // Variable: Stationary q-axis compensated voltage
              _iq EmfDsS;
                                      // Variable: Stationary d-axis back emf
              _iq UDsS;
                                      // Input: Stationary d-axis stator voltage
                                      // Parameter: Constant using in back emf computation
              _iq K5;
                                      // Parameter: Constant using in back emf computation
              _iq K6;
                                      // Variable: Stationary q-axis back emf
              _iq EmfQsS;
              iq UQsS;
                                      // Input: Stationary q-axis stator voltage
                                      // Parameter: Constant using in rotor flux computation
              _iq K8;
                                      // Parameter: Constant using in rotor flux computation
              ig K7;
              _iq PsiDrS:
                                      // Output: Stationary d-axis estimated rotor flux
                                      // Output: Stationary q-axis estimated rotor flux
               iq PsiQrS;
             } ACIFE;
```

typedef ACIFE *ACIFE_handle;

Module Terminal Variables

Item	Name	Description	Format [*]	Range(Hex)
Inputs	UDsS	stationary d-axis stator voltage	GLOBAL_Q	80000000-7FFFFFF
	UQsS	stationary q-axis stator voltage	GLOBAL_Q	80000000-7FFFFFF
	IDsS	stationary d-axis stator current	GLOBAL_Q	80000000-7FFFFFF
	IQsS	stationary q-axis stator current	GLOBAL_Q	80000000-7FFFFFF
Outputs	PsiDrS	stationary d-axis rotor flux linkage	GLOBAL_Q	80000000-7FFFFFF
	PsiQrS	stationary q-axis rotor flux linkage	GLOBAL_Q	80000000-7FFFFFF
	ThetaFlux	rotor flux linkage angle	GLOBAL_Q	00000000-7FFFFFF
				(0 - 360 degree)
ACIFE	K1	K1 = Tr/(Tr+T)	GLOBAL_Q	80000000-7FFFFFF
parameter	K2	K2 = T/(Tr+T)	GLOBAL_Q	80000000-7FFFFFF
	K3	K3 = Lm/Lr	GLOBAL_Q	80000000-7FFFFFF
	K4	K4 = (Ls*Lr-Lm*Lm)/(Lr*Lm)	GLOBAL_Q	80000000-7FFFFFF
	K5	K5 = Rs*lb/Vb	GLOBAL_Q	80000000-7FFFFFF
	K6	K6 = T*Vb/(Lm*Ib)	GLOBAL_Q	80000000-7FFFFFF
	K7	K7 = Lr/Lm	GLOBAL_Q	80000000-7FFFFFF
	K8	K8 = (Ls*Lr-Lm*Lm)/(Lm*Lm)	GLOBAL_Q	80000000-7FFFFFF
Internal	FluxDrE	stationary d-axis rotor flux	GLOBAL_Q	80000000-7FFFFFF
	FluxQrE	stationary q-axis rotor flux	GLOBAL_Q	80000000-7FFFFFF
	FluxDsS	stationary d-axis stator flux	GLOBAL_Q	80000000-7FFFFFF
	FluxQsS	stationary q-axis stator flux	GLOBAL_Q	80000000-7FFFFFF
	PsiQsS	stationary d-axis stator flux	GLOBAL_Q	80000000-7FFFFFF
	PsiQsS	stationary q-axis stator flux	GLOBAL_Q	80000000-7FFFFFF
	UiDsS	stationary d-axis integral term	GLOBAL_Q	80000000-7FFFFFF
	UiQsS	stationary q-axis integral term	GLOBAL_Q	80000000-7FFFFFF
	EmfDsS	stationary d-axis back emf	GLOBAL_Q	80000000-7FFFFFF
	EmfQsS	stationary q-axis back emf	GLOBAL_Q	80000000-7FFFFFF
	UCompDsS	stationary d-axis comp. voltage	GLOBAL_Q	80000000-7FFFFFF
	UCompQsS	stationary q-axis comp. voltage	GLOBAL_Q	80000000-7FFFFFF

GLOBAL_Q valued between 1 and 30 is defined in the IQmathLib.h header file.

Special Constants and Data types

ACIFE

The module definition is created as a data type. This makes it convenient to instance an interface to the flux estimator of Induction Motor module. To create multiple instances of the module simply declare variables of type ACIFE.

ACIFE_handle

User defined Data type of pointer to ACIFE module

ACIFE DEFAULTS

Structure symbolic constant to initialize ACIFE module. This provides the initial values to the terminal variables as well as method pointers.

Methods

ACIFE_MACRO(ACIFE_handle);

This definition implements one method viz., the flux estimator of Induction Motor computation macro. The input argument to this macro is the module handle.

Module Usage

Instantiation

The following example instances two ACIFE objects ACIFE fe1, fe2;

Initialization

```
To Instance pre-initialized objects
ACIFE fe1 = ACIFE_DEFAULTS;
ACIFE fe2 = ACIFE_DEFAULTS;
```

Invoking the computation macro

```
ACIFE_MACRO(fe1);
ACIFE_MACRO(fe2);
```

Example

The following pseudo code provides the information about the module usage.

```
main()
{
       fe1.K1 = parem1_1;
                                               // Pass parameters to fe1
       fe1.K8 = parem1 8;
                                               // Pass parameters to fe1
       fe2.K1 = parem2_1;
                                               // Pass parameters to fe2
       fe2.K10_fe = parem2_8;
                                               // Pass parameters to fe2
}
void interrupt periodic interrupt isr()
{
       fe1.UDsS= voltage dq1.d;
                                               // Pass inputs to fe1
       fe1.UQsS= voltage_dq1.q;
                                               // Pass inputs to fe1
       fe1.IQsS=current dq1.d;
                                               // Pass inputs to fe1
       fe1.IDsS=current_dq1.q;
                                               // Pass inputs to fe1
       fe2.UDsS= voltage_dq2.d;
                                               // Pass inputs to fe2
       fe2.UQsS= voltage_dq2.q;
                                               // Pass inputs to fe2
                                               // Pass inputs to fe2
       fe2.IQsS=current_dq2.d;
       fe2.IDsS=current_dq2.q;
                                               // Pass inputs to fe2
```

```
ACIFE_MACRO(fe1);
                                        // Call compute macro for fe1
ACIFE_MACRO(fe2);
                                        // Call compute macro for fe2
flux1.d = fe1.PsiDrS;
                                        // Access the outputs of fe1
flux1.q = fe1.PsiQrS;
                                        // Access the outputs of fe1
angle1 = fe1.ThetaFlux;
                                        // Access the outputs of fe1
flux2.d = fe2.PsiDrS;
                                        // Access the outputs of fe2
flux2.q = fe2.PsiQrS;
                                        // Access the outputs of fe2
angle2 = fe2.ThetaFlux;
                                        // Access the outputs of fe2
```

}

Constant Computation Macro

Since the flux estimator of Induction motor module requires eight constants (K1,..., K8) to be input basing on the machine parameters, base quantities, mechanical parameters, and sampling period. These eight constants can be internally computed by the macro (aci_fe_const.h). The followings show how to use the C constant computation macro.

Object Definition

The structure of ACIFE CONST object is defined by following structure definition

```
typedef struct { float32 Rs;
                                        // Input: Stator resistance (ohm)
                float32 Rr;
                                       // Input: Rotor resistance (ohm)
                float32 Ls:
                                       // Input: Stator inductance (H)
                float32 Lr;
                                       // Input: Rotor inductance (H)
                float32 Lm;
                                       // Input: Magnetizing inductance (H)
                float32 lb;
                                       // Input: Base phase current (amp)
                float32 Vb;
                                       // Input: Base phase voltage (volt)
                float32 Ts;
                                       // Input: Sampling period in sec
                                       // Output: constant using in rotor flux calculation
                float32 K1;
                float32 K2;
                                       // Output: constant using in rotor flux calculation
                float32 K3;
                                       // Output: constant using in rotor flux calculation
                float32 K4:
                                       // Output: constant using in stator current calculation
                float32 K5;
                                       // Output: constant using in stator current calculation
                float32 K6;
                                       // Output: constant using in stator current calculation
                float32 K7:
                                       // Output: constant using in stator current calculation
                float32 K8;
                                       // Output: constant using in torque calculation
              } ACIFE CONST;
```

typedef ACIFE_CONST *ACIFE_CONST_handle;

Module Terminal Variables

Item	Name	Description	Format	Range(Hex)
Inputs	Rs	Stator resistance (ohm)	Floating	N/A
-	Rr	Rotor resistance (ohm)	Floating	N/A
	Ls	Stator inductance (H)	Floating	N/A
	Lr	Rotor inductance (H)	Floating	N/A
	Lm	Magnetizing inductance (H)	Floating	N/A
	lb	Base phase current (amp)	Floating	N/A
	Vb	Base phase voltage (volt)	Floating	N/A
	Ts	Sampling period (sec)	Floating	N/A
Outputs	K1	constant using in rotor flux calculation	Floating	N/A
-	K2	constant using in rotor flux calculation	Floating	N/A
	K3	constant using in rotor flux calculation	Floating	N/A
	K4	constant using in stator current cal.	Floating	N/A
	K5	constant using in stator current cal.	Floating	N/A
	K6	constant using in stator current cal.	Floating	N/A
	K7	constant using in stator current cal.	Floating	N/A
	K8	constant using in torque calculation	Floating	N/A

Special Constants and Data types

ACIFE CONST

The module definition is created as a data type. This makes it convenient to instance an interface to the flux estimation of Induction Motor constant computation module. To create multiple instances of the module simply declare variables of type ACIFE_CONST.

ACIFE_CONST_handle

User defined Data type of pointer to ACIFE_CONST module

ACIFE_CONST_DEFAULTS

Structure symbolic constant to initialize ACIFE_CONST module. This provides the initial values to the terminal variables as well as method pointers.

Methods

ACIFE_CONST_MACRO (ACIFE_CONST_handle);

This definition implements one method viz., the flux estimator of Induction Motor constant computation macro. The input argument to this macro is the module handle.

Module Usage

Instantiation

The following example instances two ACIFE_CONST objects ACIFE_CONST fe1_const, fe2_const;

```
Initialization
       To Instance pre-initialized objects
       ACIFE_CONST fe1_const = ACIFE_CONST_DEFAULTS;
       ACIFE_CONST fe2_const = ACIFE_CONST_DEFAULTS;
       Invoking the computation macro
       ACIFE_CONST_MACRO(fe1_const);
       ACIFE_CONST_MACRO(fe2_const);
Example
       The following pseudo code provides the information about the module usage.
main()
       fe1_const.Rs = Rs1;
                                      // Pass floating-point inputs to fe1_const
                                      // Pass floating-point inputs to fe1_const
       fe1_const.Rr = Rr1;
                                      // Pass floating-point inputs to fe1 const
       fe1_const.Ls = Ls1;
                                      // Pass floating-point inputs to fe1_const
       fe1_const.Lr = Lr1;
       fe1 const.Lm = Lm1;
                                      // Pass floating-point inputs to fe1 const
       fe1 const.lb = lb1;
                                      // Pass floating-point inputs to fe1 const
                                      // Pass floating-point inputs to fe1_const
       fe1_const.Vb = Vb1;
                                      // Pass floating-point inputs to fe1 const
       fe1 const.Ts = Ts1;
                                      // Pass floating-point inputs to fe2_const
       fe2\_const.Rs = Rs2;
       fe2 const.Rr = Rr2;
                                      // Pass floating-point inputs to fe2 const
                                      // Pass floating-point inputs to fe2_const
       fe2\_const.Ls = Ls2;
                                      // Pass floating-point inputs to fe2_const
       fe2\_const.Lr = Lr2;
       fe2 const.Lm = Lm2;
                                      // Pass floating-point inputs to fe2 const
       fe2_const.lb = lb2;
                                      // Pass floating-point inputs to fe2 const
       fe2 const.Vb = Vb2;
                                      // Pass floating-point inputs to fe2_const
                                      // Pass floating-point inputs to fe2 const
       fe2 const.Ts = Ts2;
       ACIFE_CONST_MACRO(fe1_const);
                                              // Call compute macro for fe1_const
       ACIFE CONST MACRO (fe2 const); // Call compute macro for fe2 const
       fe1.K1 = IQ(fe1\_const.K1);
                                      // Access the floating-point outputs of fe1_const
       fe1.K8 = IQ(fe1 const.K8); // Access the floating-point outputs of fe1 const
       fe2.K1 = IQ(fe2 const.K1);
                                      // Access the floating-point outputs of fe2 const
       fe2.K8 = _IQ(fe2_const.K8); // Access the floating-point outputs of fe2_const
```

{

}

Technical Background

The overall of the flux estimator [1] can be shown in Figure 1. The rotor flux linkages in the stationary reference frame are mainly computed by means of the integral of back emf's in the voltage model. By introducing the compensated voltages generated by PI compensators, the errors associated with pure integrator and stator resistance measurement can be taken care. The equations derived for this flux estimator are summarized as follows:

Continuous time:

Firstly, the rotor flux linkage dynamics in synchronously rotating reference frame $\left(\omega=\omega_{\rm e}=\omega_{\rm w.}\right)$ can be shown as below:

$$\frac{d\psi_{dr}^{e,i}}{dt} = \frac{L_m}{\tau_m} i_{ds}^e - \frac{1}{\tau_m} \psi_{dr}^{e,i} + (\omega_e - \omega_r) \psi_{qr}^{e,i}$$
(1)

$$\frac{d\psi_{qr}^{e,i}}{dt} = \frac{L_m}{\tau_e} i_{qs}^e - \frac{1}{\tau_e} \psi_{qr}^{e,i} - (\omega_e - \omega_r) \psi_{dr}^{e,i}$$
 (2)

where L_m is the magnetizing inductance (H), $\tau_{\rm r} = \frac{L_{\rm r}}{R_{\rm r}}$ is the rotor time constant (sec), and $\omega_{\rm r}$

is the electrically angular velocity of rotor (rad/sec).

In the current model, total rotor flux linkage is aligned into the d-axis component, which is modeled by the stator currents, thus

$$\psi_{r}^{e,i}=\psi_{dr}^{e,i} \text{ and } \psi_{qr}^{e,i}=0 \tag{3}$$

Substituting $\,\psi^{\,{\rm e},{\rm i}}_{\,{\rm qr}}=0\,$ into (1)-(2), yields the oriented rotor flux dynamics are

$$\frac{d\psi_{dr}^{e,i}}{dt} = \frac{L_m}{\tau_r} i_{ds}^e - \frac{1}{\tau_r} \psi_{dr}^{e,i}$$
(4)

$$\psi_{qr}^{e,i} = 0 \tag{5}$$

Note that (4) and (5) are the classical rotor flux vector control equations. Then, the rotor flux linkages in (4)-(5) are transformed into the stationary reference frame performed by inverse park transformation.

$$\psi_{dr}^{s,i} = \psi_{dr}^{e,i} \cos(\theta_{\psi_r}) - \psi_{qr}^{e,i} \sin(\theta_{\psi_r}) = \psi_{dr}^{e,i} \cos(\theta_{\psi_r})$$
 (6)

$$\psi_{\text{or}}^{\text{s,i}} = \psi_{\text{dr}}^{\text{e,i}} \sin(\theta_{\text{w}_{\text{c}}}) + \psi_{\text{or}}^{\text{e,i}} \cos(\theta_{\text{w}_{\text{c}}}) = \psi_{\text{dr}}^{\text{e,i}} \sin(\theta_{\text{w}_{\text{c}}}) \tag{7}$$

where θ_{ψ} is the rotor flux angle (rad).

Then, the stator flux linkages in stationary reference frame are computed from the rotor flux linkages in (6)-(7)

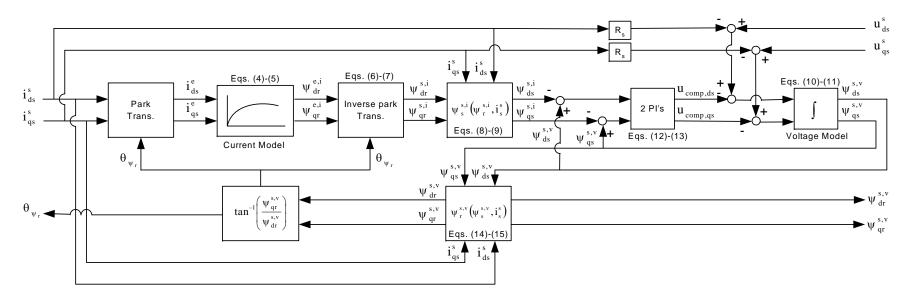


Figure 1: Overall system of flux estimator

$$\psi_{ds}^{s,i} = L_s i_{ds}^s + L_m i_{dr}^s = \left(\frac{L_s L_r - L_m^2}{L_r}\right) i_{ds}^s + \frac{L_m}{L_r} \psi_{dr}^{s,i}$$
(8)

$$\psi_{qs}^{s,i} = L_s i_{qs}^s + L_m i_{qr}^s = \left(\frac{L_s L_r - L_m^2}{L_r}\right) i_{qs}^s + \frac{L_m}{L_r} \psi_{qr}^{s,i}$$
(9)

where L_s and L_r are the stator and rotor self inductance (H), respectively.

Next, the stator flux linkages in the voltage model is computed by means of back emf's integration with compensated voltages.

$$\psi_{ds}^{s,v} = \int (u_{ds}^{s} - i_{ds}^{s} R_{s} - u_{comp,ds}) dt$$
 (10)

$$\psi_{qs}^{s,v} = \int \left(u_{qs}^s - i_{qs}^s R_s - u_{comp,qs} \right) dt \tag{11}$$

where R_s is the stator resistance (Ω), u_{ds}^s , u_{qs}^s are stationary dq-axis stator voltages, and the compensated voltages are computed by the PI control law as follows:

$$u_{\text{comp,ds}} = K_{p} \left(\psi_{\text{ds}}^{\text{s,v}} - \psi_{\text{ds}}^{\text{s,i}} \right) + \frac{K_{p}}{T_{I}} \int \left(\psi_{\text{ds}}^{\text{s,v}} - \psi_{\text{ds}}^{\text{s,i}} \right) dt$$
 (12)

$$u_{\text{comp,qs}} = K_{p} \left(\psi_{\text{qs}}^{\text{s,v}} - \psi_{\text{qs}}^{\text{s,i}} \right) + \frac{K_{p}}{T_{I}} \int \left(\psi_{\text{qs}}^{\text{s,v}} - \psi_{\text{qs}}^{\text{s,i}} \right) dt \tag{13}$$

The proportional gain K_P and the reset time T_I are chosen such that the flux linkages computed by current model is dominant at low speed because the back emf's computed by the voltage model are extremely low at this speed range (even zero back emf's at zero speed). While at high speed range, the flux linkages computed by voltage model is dominant.

Once the stator flux linkages in (10)-(11) are calculated, the rotor flux linkages based on the voltage model are further computed, by rearranging (8)-(9), as

$$\psi_{dr}^{s,v} = -\left(\frac{L_{s}L_{r} - L_{m}^{2}}{L_{m}}\right)i_{ds}^{s} + \frac{L_{r}}{L_{m}}\psi_{ds}^{s,v}$$
(14)

$$\psi_{qr}^{s,v} = -\left(\frac{L_{s}L_{r} - L_{m}^{2}}{L_{m}}\right)i_{qs}^{s} + \frac{L_{r}}{L_{m}}\psi_{qs}^{s,v}$$
(15)

Then, the rotor flux angle based on the voltage model is finally computed as

$$\theta_{\psi_{r}} = \tan^{-1} \left(\frac{\psi_{qr}^{s,v}}{\psi_{dr}^{s,v}} \right)$$
 (16)

Discrete time:

The oriented rotor flux dynamics in (4) is discretized by using backward approximation as follows:

$$\frac{\psi_{dr}^{e,i}(k) - \psi_{dr}^{e,i}(k-1)}{T} = \frac{L_m}{\tau_r} i_{ds}^e(k) - \frac{1}{\tau_r} \psi_{dr}^{e,i}(k)$$
(17)

where T is the sampling period (sec). Rearranging (17), then it gives

$$\psi_{dr}^{e,i}(k) = \left(\frac{\tau_r}{\tau_r + T}\right) \psi_{dr}^{e,i}(k-1) + \left(\frac{L_m T}{\tau_r + T}\right) i_{ds}^e(k)$$
 (18)

Next, the stator flux linkages in (10)-(11) are discretized by using trapezoidal (or tustin) approximation as

$$\psi_{ds}^{s,v}(k) = \psi_{ds}^{s,v}(k-1) + \frac{T}{2} \left(e_{ds}^{s}(k) + e_{ds}^{s}(k-1) \right)$$
 (19)

$$\psi_{qs}^{s,v}(k) = \psi_{qs}^{s,v}(k-1) + \frac{T}{2} \left(e_{qs}^{s}(k) + e_{qs}^{s}(k-1) \right)$$
 (20)

where the back emf's are computed as

$$e_{ds}^{s}(k) = u_{ds}^{s}(k) - i_{ds}^{s}(k)R_{s} - u_{comp.ds}(k)$$
 (21)

$$e_{gs}^{s}(k) = u_{gs}^{s}(k) - i_{gs}^{s}(k)R_{s} - u_{comp,gs}(k)$$
 (22)

Similarly, the PI control laws in (12)-(13) are also discretized by using trapezoidal approximation as

$$u_{\text{comp,ds}}(k) = K_{p} \left(\psi_{\text{ds}}^{s,v}(k) - \psi_{\text{ds}}^{s,i}(k) \right) + u_{\text{comp,ds,i}}(k-1)$$
 (23)

$$u_{\text{comp,qs}}(k) = K_{p} \left(\psi_{qs}^{s,v}(k) - \psi_{qs}^{s,i}(k) \right) + u_{\text{comp,qs,i}}(k-1)$$
 (24)

where the accumulating integral terms are as

$$u_{\text{comp,ds,i}}(k) = u_{\text{comp,ds,i}}(k-1) + \frac{K_{p}T}{T_{I}} \left(\psi_{ds}^{s,v}(k) - \psi_{ds}^{s,i}(k) \right)$$

$$= u_{\text{comp,ds,i}}(k-1) + K_{p}K_{I} \left(\psi_{ds}^{s,v}(k) - \psi_{ds}^{s,i}(k) \right)$$
(25)

$$u_{\text{comp,qs,i}}(k) = u_{\text{comp,qs,i}}(k-1) + \frac{K_{p}T}{T_{I}} \left(\psi_{qs}^{s,v}(k) - \psi_{qs}^{s,i}(k) \right)$$

$$= u_{\text{comp,qs,i}}(k-1) + K_{p}K_{I} \left(\psi_{qs}^{s,v}(k) - \psi_{qs}^{s,i}(k) \right)$$
(26)

where $K_{_{\rm I}}=\frac{T}{T_{_{\rm I}}}\,.$

Discrete time and Per-unit:

Now all equations are normalized into the per-unit by the specified base quantities. Firstly, the rotor flux linkage in current model (18) is normalized by dividing the base flux linkage as

$$\psi_{dr,pu}^{e,i}(k) = \left(\frac{\tau_r}{\tau_r + T}\right) \psi_{dr,pu}^{e,i}(k-1) + \left(\frac{T}{\tau_r + T}\right) i_{ds,pu}^e(k) \qquad \text{pu} \quad (27)$$

where $\psi_b = L_m I_b$ is the base flux linkage (volt.sec) and I_b is the base current (amp).

Next, the stator flux linkages in the current model (8)-(9) are similarly normalized by dividing the base flux linkage as

$$\psi_{ds,pu}^{s,i}(k) = \left(\frac{L_s L_r - L_m^2}{L_r L_m}\right) i_{ds,pu}^s(k) + \frac{L_m}{L_r} \psi_{dr,pu}^{s,i}(k) \quad \text{pu} \quad (28)$$

$$\psi_{qs,pu}^{s,i}(k) = \left(\frac{L_s L_r - L_m^2}{L_r L_m}\right) i_{qs,pu}^s(k) + \frac{L_m}{L_r} \psi_{qr,pu}^{s,i}(k) \quad \text{pu}$$
 (29)

Then, the back emf's in (21)-(22) are normalized by dividing the base phase voltage V_b

$$e_{ds,pu}^{s}(k) = u_{ds,pu}^{s}(k) - \frac{I_{b}R_{s}}{V_{b}}i_{ds,pu}^{s}(k) - u_{comp,ds,pu}(k)$$
 pu (30)

$$e_{qs,pu}^{s}(k) = u_{qs,pu}^{s}(k) - \frac{I_{b}R_{s}}{V_{b}}i_{qs,pu}^{s}(k) - u_{comp,qs,pu}(k)$$
 pu (31)

Next, the stator flux linkages in the voltage model (19)-(20) are divided by the base flux linkage.

$$\psi_{ds,pu}^{s,v}(k) = \psi_{ds,pu}^{s,v}(k-1) + \frac{V_b T}{L_m I_b} \left(\frac{e_{ds,pu}^s(k) + e_{ds,pu}^s(k-1)}{2} \right) \quad \text{pu (32)}$$

$$\psi_{qs,pu}^{s,v}(k) = \psi_{qs,pu}^{s,v}(k-1) + \frac{V_b T}{L_m I_b} \left(\frac{e_{qs,pu}^s(k) + e_{qs,pu}^s(k-1)}{2} \right) \quad \text{pu} \quad (33)$$

Similar to (28)-(29), the normalized rotor flux linkages in voltage model are

$$\psi_{dr,pu}^{s,v}(k) = -\left(\frac{L_{s}L_{r} - L_{m}^{2}}{L_{m}L_{m}}\right) i_{ds,pu}^{s}(k) + \frac{L_{r}}{L_{m}} \psi_{ds,pu}^{s,v}(k) \quad \text{pu} \quad (34)$$

$$\psi_{qr,pu}^{s,v}(k) = -\left(\frac{L_{s}L_{r} - L_{m}^{2}}{L_{m}L_{m}}\right)i_{qs,pu}^{s}(k) + \frac{L_{r}}{L_{m}}\psi_{qs,pu}^{s,v}(k) \quad \text{pu} \quad (35)$$

In conclusion, the discrete-time, per-unit equations are rewritten in terms of constants.

<u>Current model</u> – rotor flux linkage in synchronously rotating reference frame $(\omega = \omega_{\text{nu}})$

$$\psi_{dr,pu}^{e,i}(k) = K_1 \psi_{dr,pu}^{e,i}(k-1) + K_2 i_{ds,pu}^e(k) \qquad \text{pu}$$
 (36)

where
$$K_1 = \frac{\tau_r}{\tau_r + T}$$
 , and $K_2 = \frac{T}{\tau_r + T}$.

<u>Current model</u> – rotor flux linkages in the stationary reference frame $(\omega = 0)$

$$\psi_{ds,pu}^{s,i}(k) = K_4 i_{ds,pu}^s(k) + K_3 \psi_{dr,pu}^{s,i}(k) \quad \text{pu}$$
 (37)

$$\psi_{\text{os.pu}}^{\text{s,i}}(\mathbf{k}) = \mathbf{K}_4 \mathbf{i}_{\text{os.pu}}^{\text{s}}(\mathbf{k}) + \mathbf{K}_3 \psi_{\text{or.pu}}^{\text{s,i}}(\mathbf{k}) \quad \text{pu}$$
(38)

where
$$K_3=\frac{L_m}{L_r}$$
 , and $K_4=\frac{L_sL_r-L_m^2}{L_rL_m}$.

<u>Voltage model</u> – back emf's in the stationary reference frame $(\omega = 0)$

$$e_{ds,pu}^{s}(k) = u_{ds,pu}^{s}(k) - K_{5}i_{ds,pu}^{s}(k) - u_{comp,ds,pu}(k)$$
 pu (39)

$$e_{qs,pu}^{s}(k) = u_{qs,pu}^{s}(k) - K_{5}i_{qs,pu}^{s}(k) - u_{comp,qs,pu}(k) \qquad \text{pu} \qquad (40)$$

where $K_{5}=\frac{I_{b}R_{s}}{V_{b}}$.

<u>Voltage model</u> – stator flux linkages in the stationary reference frame $(\omega = 0)$

$$\psi_{ds,pu}^{s,v}(k) = \psi_{ds,pu}^{s,v}(k-1) + K_6 \left(\frac{e_{ds,pu}^s(k) + e_{ds,pu}^s(k-1)}{2} \right) \quad \text{pu} \quad (41)$$

$$\psi_{qs,pu}^{s,v}(k) = \psi_{qs,pu}^{s,v}(k-1) + K_6 \left(\frac{e_{qs,pu}^s(k) + e_{qs,pu}^s(k-1)}{2} \right) \quad \text{pu} \quad (42)$$

where
$$K_{_{6}}=\frac{V_{_{b}}T}{L_{_{m}}I_{_{b}}}\,.$$

<u>Voltage model</u> – rotor flux linkages in the stationary reference frame $(\omega = 0)$

$$\psi_{dr,pu}^{s,v}(k) = -K_8 i_{ds,pu}^s(k) + K_7 \psi_{ds,pu}^{s,v}(k)$$
 pu (43)

$$\psi_{\text{gr,pu}}^{\text{s,v}}(k) = -K_8 i_{\text{gs,pu}}^{\text{s}}(k) + K_7 \psi_{\text{gs,pu}}^{\text{s,v}}(k)$$
 pu (44)

where
$$\,K_{7}=\frac{L_{r}}{L_{m}}$$
 , and $\,K_{8}=\frac{L_{s}L_{r}-L_{m}^{2}}{L_{m}L_{m}}\,.$

Voltage model - rotor flux angle

$$\theta_{\psi_{r},pu}(k) = \frac{1}{2\pi} \tan^{-1} \left(\frac{\psi_{qr,pu}^{s,v}(k)}{\psi_{dr,pu}^{s,v}(k)} \right) \qquad \text{pu}$$
 (45)

Notice that the rotor flux angle is computed by a look-up table of 0°-45° with 256 entries.

In fact, equations (36)-(44) are mainly employed to compute the estimated flux linkages in per-unit. The required parameters for this module are summarized as follows:

The machine parameters:

- stator resistance (R_s)
- rotor resistance (R_r)
- stator leakage inductance (L_{sl})
- rotor leakage inductance (L_{rl})
- magnetizing inductance (L_m)

The based quantities:

- base current (I_b)
- base phase voltage (V_b)

The sampling period:

sampling period (T)

Notice that the stator self inductance is $L_{\rm s}=L_{\rm sl}+L_{\rm m}$ (H) and the rotor self inductance is $L_{\rm r}=L_{\rm rl}+L_{\rm m}$ (H).

Next, Table 1 shows the correspondence of notations between variables used here and variables used in the program (i.e., aci_fe.c, aci_fe.h). The software module requires that both input and output variables are in per unit values.

	Equation Variables	Program Variables
	$\mathbf{u}_{ ext{ds}}^{ ext{s}}$	UDsS
Inputs	u_{qs}^{s}	UQsS
	$\mathbf{i}_{ ext{ds}}^{ ext{s}}$	IDsS
	i_{qs}^s	IQsS
Outputs _	$\psi_{ m dr}^{ m s,v}$	PsiDrS
Outputs	$\psi^{ m s,v}_{ m qr}$	PsiQrS
	$ heta_{\psi_{ m r}}$	ThetaFlux
	$\psi_{ m dr}^{ m e,i}$	FluxDrE
	$\psi_{dr}^{s,i}$	FluxDrS
	$\psi^{s,i}_{qr}$	FluxQrS
	$\psi_{ m ds}^{ m s,i}$	FluxDsS
Others -	$\psi_{ m qs}^{ m s,i}$	FluxQsS
Others	$\psi_{ m ds}^{ m s,v}$	PsiQsS
	$\psi_{ m qs}^{ m s,v}$	PsiQsS
	$\mathbf{e}_{ ext{ds}}^{ ext{s}}$	EmfDsS
	e_{qs}^s	EmfQsS
_	$u_{\mathrm{comp,ds}}$	UCompDsS
	$u_{\mathrm{comp,qs}}$	UCompQsS

Table 1: Correspondence of notations

References:

[1] C. Lascu, I. Boldea, and F. Blaabjerg, "A modified direct torque control for induction motor sensorless drive", *IEEE Trans. Ind. Appl.*, vol. 36, no. 1, pp. 122-130, January/February 2000.