



SPARROW Assembly & Setup Guide

Solar-Powered Acoustic and Remote Recording Observation Watch

SPARROW Setup Guide

This comprehensive guide is designed to help you seamlessly prepare your SPARROW device for deployment. It's divided into three sections: software setup, hardware setup and sensor setup. By following the step-by-step instructions, you'll ensure a smooth, efficient, and trouble-free setup experience.

Table of Contents

1. Introduction	2
1.1 Open-Source Statement	2
2. Important Safety Information	3
3. Prerequisites	7
3.1 Hardware Requirements:	7
3.2 Software Requirements:	7
4. SOFTWARE SETUP	7
4.1 Starlink Setup and Configuration	8
4.2 Installing the Jetson OS on SSD Using NVIDIA SDK Manager	10
4.2.1 Download and Install NVIDIA SDK Manager	10
4.2.2 Prepare the Jetson Orin Nano and SSD	11
4.2.3 Flashing the Jetson with the OS	12
5. Flashing the AudioMoth	14
6. HARDWARE SETUP	17
6.1 Introduction	17
6.2 Component Inventory	17
6.3 SPARROW Hardware Assembly Guide	29
6.3.1 COMPUTE : Assembling the Jetson Orin Nano	29
6.3.2 POWER : Solar Generation, Battery and Network Assembly	40
7 Initial Jetson Orin Nano Configuration	54
7.1 First Boot and Basic Setup	54
7.2 Registering for a SPARROW Account and Obtaining an Access Key	54
7.3 Transferring and Running the SPARROW Setup Script	55
7.4 OPTIONAL : Remote Access Setup with Headless DisplayPort Emulator	57
8. SENSOR SETUP	58
8.1 Configuring ReoLink Wi-Fi Cameras	58
8.2 Peripheral Sensor Assembly	62
9. Field Deployment Tips	64
10. SPARROW Unit Product Specification Sheet	67

1. Introduction

The biodiversity of our planet is rapidly declining. We've likely reached a tipping point where it is crucial to use every tool at our disposal to help preserve what remains¹. **Solar-Powered Acoustic and Remote Recording Observation Watch (SPARROW)**, developed by Microsoft's AI for Good Lab is an AI-powered edge computing solution designed to operate autonomously in the most remote corners of the planet. Solar-powered and equipped with advanced sensors, it collects biodiversity data from camera traps, acoustic monitors, and other environmental detectors that are processed using our most advanced PyTorch-based wildlife AI models on low-energy edge GPUs. The resulting critical data is then transmitted via low-Earth orbit satellites directly to the cloud, allowing researchers to access fresh, actionable insights in real time, no matter where they are.

Printing Recommendation:

For clarity and accuracy, this guide should be printed in **color**. Many diagrams and component labels **rely on color coding for correct identification**. Printing in black and white may result in unreadable or misleading instructions, increasing the risk of assembly errors.

1.1 Open-Source Statement

The SPARROW device is an open-source, end-user assembled system. This project is provided as-is, without certification or approval for any jurisdiction.

Because components may vary based on user selection, it is the sole responsibility of the end-user to ensure that:

- All hardware components used comply with applicable local regulatory requirements, including but not limited to:
 - Electrical safety standards for wiring, connectors, and power systems.
 - Radio equipment type approval for any wireless modules or transmitters.
 - Environmental and material compliance (e.g., hazardous substances restrictions).
- The completed assembly meets national and regional certification requirements for the location where the SPARROW unit will be installed.
- Any modifications or substitutions made do not violate local laws or safety regulations.

Failure to ensure compliance may result in legal liability, safety hazards, and operational restrictions. Users should consult relevant regulatory authorities and standards before installation. End-users are strongly advised to seek professional review and guidance before installation or operation to confirm compliance with all applicable laws and standards.

Users follow this guide at their own risk. Microsoft provides these instructions for informational purposes only. Certain steps, such as custom wiring, power configuration, or integration of third-party components, may void manufacturer warranties on individual parts. All risks associated with component selection, installation, and usage rest solely with the end-user. Users are strongly advised to review original component warranties and consult qualified professionals before proceeding.

¹ Hooper, D. U., Adair, E. C., Cardinale, B. J., Byrnes, J. E. K., Hungate, B. A., Matulich, K. L., Gonzalez, A., Duffy, J. E., Gamfeldt, L., & O'Connor, M. I. (2012). A global synthesis reveals biodiversity loss as a major driver of ecosystem change. *Nature*, 486(7401), 105–108. <https://doi.org/10.1038/nature11118>

2. Important Safety Information

CAUTION: Read Assembly & Setup Guide Before Beginning Work

Read this SPARROW Assembly & Setup Guide (“Setup Guide”) in its entirety before beginning work. Pay special attention to the safety warnings and instructions in the Setup Guide.

Building and/or repairing any electronic device can present a risk of electric shock, fire, serious personal injury, death, damage to the device or other property, environmental harm, and/or other hazards. Exercise caution when undertaking the activities described in this Setup Guide.

The activities identified in this Setup Guide should only be undertaken by technically inclined individuals with the knowledge, experience, and specialized tools required to construct an electronic device.

WARNING: Follow all Safety and Health Information

Read and follow all warnings, precautions, handling, and use instructions provided by the manufacturers of hardware components listed in the Hardware Bill of Materials (“BOM”). Failure to follow the manufacturers’ instructions provided for set up, use, and care of the hardware components selected for your build can increase the risk of serious personal injury, death, property damage, and/or environmental harm. You can request additional information and support by contacting the hardware component manufacturer.

In addition, please read and follow the additional safety and health information provided in this Setup Guide. Failure to follow the additional information provided can increase the risk of serious personal injury, death, property damage, and/or environmental harm.

WARNING: Use Personal Protective Equipment

We recommend wearing protective eyewear and gloves when constructing, installing, disassembling, and/or re-assembling a SPARROW unit.

Review and follow the instructions in this Setup Guide when installing, servicing, or inspecting the SPARROW device at heights.

WARNING: Battery Safety

Improper use or handling of devices or their batteries may result in battery failure; electric shock; fire; serious personal injury; death; damage to the device, other property, and/or the surrounding environment.

- Before beginning SPARROW unit construction, ensure your workspace is free of flammable debris or materials, has adequate ventilation, and that you have a fire suppressant device (example: fire blanket, container of sand, Class B fire extinguisher) within easy reach or you are within 20 feet of a fireproof enclosure.
- Keep your workspace clear of debris, extra tools, and sharp objects. Avoid using tools that conduct electricity.

- Exercise caution when using sharp tools near the battery to avoid impacting or poking the battery.
- Do not puncture, impact, strike, bend, or crush the battery. If a battery is impacted, dropped, dented, or punctured during installation, DO NOT proceed. Discard the battery pack and use a new one.
- Do not leave loose screws or parts inside the SPARROW unit.
- Do not heat, puncture, mutilate, or dispose of the SPARROW unit batteries installed in your unit in fire. Do not leave or charge the SPARROW unit batteries in direct sunlight or expose its batteries to temperatures outside the recommended operating range identified by the battery manufacturer for an extended period.
- Do not modify or remanufacture the battery installed for your SPARROW unit; attempt to insert foreign objects into the battery, immerse or expose the battery to water or in other liquids or expose the battery to fire, as this might lead to explosion, or other hazards.
- Protect the SPARROW unit and its batteries from excessive rain, snow, or other types of moisture.
- Ensure you handle, recycle, and/or dispose of used or damaged batteries in accordance with local laws and regulations.

Electrical and Wiring Safety

Always use the proper wire gauge when constructing, installing, or servicing the SPARROW device. Failure to use the proper wire gauge may result in overheating and fire hazards due to undersized wiring, electrical shock or short circuits from improper connection, device malfunction or permanent damage; follow applicable safety, code and compliance standards.

- Follow the wire gauge specifications provided by the component part manufacturer.
- Do not substitute smaller or unapproved wire sizes or types.
- Ensure all connections are secure and insulated to prevent accidental contact.
- Avoid working on electrical installations during adverse weather conditions such as high winds, thunderstorms, rain, ice, or snow.
- We recommend that all electrical wiring-related activities only be conducted by a trained and licensed professional using approved materials.

To help protect your SPARROW unit from environmental hazards and wildlife interference, it is strongly recommended to install any exposed wiring inside approved conduits to prevent physical damage from rodents, birds, or other animals; moisture intrusion that can lead to corrosion or short circuits; or UV degradation of cables in outdoor environments all of which can expose powered wires and pose an electric shock and fire hazard through short circuits.

Always select conduits rated for outdoor use and compliance with local electrical codes. Secure the conduit properly to avoid strain on connections and maintain system integrity.

WARNING: Working at Heights

Do NOT work at heights without proper safety measures and use of personal protective equipment when installing, servicing, or inspecting the SPARROW device at height. Failure to comply may result in falls leading to severe injury or death, damage to equipment, surrounding property, and/or the environment, and violation of workplace safety regulations.

- Always use approved fall protection equipment (harnesses, anchors, guardrails).

- Ensure ladders, scaffolds, and platforms are stable and secure before use.
- Do not work alone—maintain communication with a safety partner.
- Avoid working at heights during adverse weather conditions such as high winds, thunderstorms, rain, ice, or snow.
- Follow all local occupational health and safety standards.

WARNING: Proper Installation

To avoid hazards related to improper device installation, installation must be performed by individuals who have read this Setup Guide and fully understand the installation requirements and environment prior to beginning work.

Consult a professional installer if you do not have the necessary equipment or expertise, or if you are uncertain your proposed mounting environment and mounting solutions will properly support your SPARROW device and not create a hazard, damage, or harm to the installation area or structure.

Safe Ground Anchoring

For ground mounted units, ensure the SPARROW device is securely anchored to stable ground before installation or operation. Improper anchoring may result in device tipping or collapse, causing severe injury, death, or other damage. Insufficient anchoring can lead to system misalignment, reducing performance and reliability and create hazards during high winds, seismic activity, or accidental impact.

- Use approved anchoring hardware and methods as specified by local requirements.
- Verify soil stability and load-bearing capacity before installation.
- Do not install on loose, uneven, eroding, or flood-prone surfaces without adhering to regulations and requirements for this area.
- Inspect anchors regularly for signs of corrosion, loosening, or structural compromise.
- Follow all local building codes and safety regulations for ground-mounted systems.

Failure to properly anchor the unit can lead to catastrophic failure, personal injury or death, and legal non-compliance.

WARNING: Avoid Flammable or Explosive Environments

Do not build, install, or operate the SPARROW unit near flammable materials or within a flammable or explosive environment. Keep all flammable liquids, gases, and solids away from the installation site. Do not install the SPARROW unit in areas with combustible dust, vapors, or fumes. Failure to comply may result in fire or explosion hazards due to the ignition of combustible substances, causing severe injury or death to users, bystanders, and wildlife, property damage, and/or permanent damage to the SPARROW unit and the surrounding environment.

WARNING: Unseen Hazards

Mounting locations can contain unseen hazards or obstacles. Cutting or drilling into an unseen hazard may cause serious personal injury, death, or other harm.

Assess your mounting environment and always make sure there are no unseen hazards associated with the mounting surface prior to drilling and/or cutting. It is the installer's responsibility to locate unseen hazards prior to and to avoid any identified hazards during installation.

WARNING: Ergonomic Lifting

To reduce the risk of lifting related injuries, death, or damage to your SPARROW unit or the environment, use good ergonomic lifting practices during installation, maintenance, and use, including but not limited to:

- Plan ahead. Make sure the lifting team agrees on the plan.
- Determine if you can lift the unit. Is it too heavy or too awkward?
- Decide if you need lifting aid.
- Check your environment for obstructions and slippery surfaces.
- Lift with your legs, not your back.
- Bend at your knees, keeping the back straight.
- Keep the unit close to your body.
- Center your body over the unit. Keep the feet about shoulder width apart.
- Lift straight up smoothly.
- Keep your torso straight; do not twist while lifting or after the load is lifted.
- Set the unit slowly and smoothly into place a straight back; do not let go until the unit is set in place.

WARNING: Solar Panel Glass

Do not install or use the SPARROW unit if any solar panels are cracked, broken, or otherwise damaged. To reduce the risk of personal injury, avoid touching a solar panel that is broken, chipped, or cracked and arrange to have it replaced. Using damaged solar panels may result in electrical hazards, including shock or short circuit, fire risk due to exposed or damaged internal components; and reduced system performance or failure.

WARNING: Do not Modify or Alter the Solar Panel or Battery Terminals

To reduce the risk of fire, electrical shock, causing severe injury or death to users, bystanders, wildlife, the environment, and/or the SPARROW unit, do not modify, tamper with, or attempt to alter the DC terminals of the solar panel array or the terminals of the battery bank used to construct the SPARROW unit.

3. Prerequisites

Before you begin, ensure you have **all the necessary hardware listed in the Bill of Materials (BOM) and software components ready.**

How to Use This Guide

Before starting any assembly, **read each section completely**, including all steps and notes—before taking action. This ensures you understand the sequence, required tools, and safety precautions. Skipping ahead or acting without reviewing the entire section may lead to errors, damage, or safety hazards.

Assembly Time Estimate

Please note that actual build time may vary based on experience. While the original estimate is **approximately 2 hours**, first-time users often require more time. As a guideline, **allow 1.5 hours for tech-savvy users and up to 4 hours for beginners.**

Power Requirements

Ensure your build space has access to at least **two electrical outlets**. This is necessary to power both the PC (used for flashing and configuration) and the Starlink unit in parallel during setup. Additional outlets may be required for charging tools or other peripherals.

Required Tools

- Monitor with DisplayPort cable or adapter for NVIDIA Jetson DP out
- Precision Knife (e.g., X-Acto knife),
- Micro USB to USB A Cable and USB Type C Cable
- Mini Shunt Jumper (one is included with the recommended Solar Power Control Unit)
- Zip Ties
- Electric Drill with Conical Drill Step Bit Set (4mm- 35mm)
- Electrical insulation tape and Permanent Marker
- Anti-static wrist strap (optional but recommended)
- Basic Hand Tools:
 - Pliers, Scissors, Angle/Micro Cutting Pliers
 - Wire Strippers
 - Precision Screwdriver Set or Electronics Repair Toolkit
 - Magnifying Glass, Plastic Spudger

3.1 Software Requirements:

- **Host PC running Ubuntu 20.04 (Super User credentials will be required)**
- **NVIDIA SDK Manager** (latest version)
- **Internet Connection** (for downloading necessary files and Docker Images)
- **SPARROW Setup Script** (this script can be found in the SPARROW GitHub Repo: <https://github.com/microsoft/sparrow-client>)

3.2 Hardware Requirements:

- **NVIDIA Jetson Orin Nano Developer Kit**
- **SSD (Solid State Drive) Capacity: Minimum 1TB recommended**
- **Power Supply: Compatible with Jetson Orin Nano (typically 5V/4A)**
- **Host PC (running Ubuntu 20.04) with internet access**
- **Keyboard, Mouse, and Monitor (for initial setup)**
- **Mobile Phone**

4. SOFTWARE SETUP

4.1 Starlink Setup and Configuration

Starlink Account Requirements

To ensure uninterrupted connectivity, confirm whether a **pre-existing Starlink account is available** before beginning setup. If no account exists, users must create one and complete activation prior to installation. Include clear instructions for account creation alongside the app installation steps and specify any required credentials or subscription details. This clarification helps avoid delays during deployment and ensures proper configuration of the Starlink unit.

Starlink Setup Note


The Starlink kit includes its own instructions for basic assembly and activation, typically in an outdoor setting. Follow these steps as a **sub-assembly** within the overall process. For clarity, ensure the LED indicator on the Starlink device is lit to confirm it is powered on.

Important: Starlink requires an outdoor connection to establish service. If your assembly location is indoors, plan for an optimal setting where the dish can connect to the sky. If immediate setup is not required, this step can be compartmentalized and completed later in a suitable location.

Starlink Configuration

SPARROW uses Starlink to provide location and power usage statistics. This requires turning on advanced logging in the Starlink app. While Starlink is powered on connect to it using the Starlink app.

Navigate to ADVANCED at the bottom of the main screen:

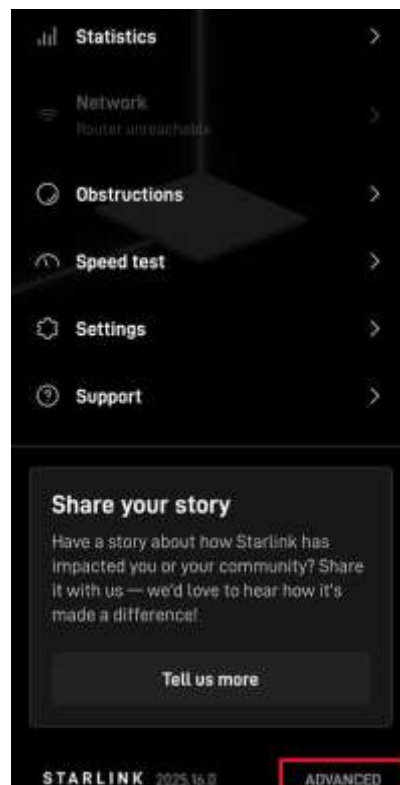

Scroll down and select DEBUG DATA:



Under Starlink Location enable Allow access on local network:



The Starlink configuration is now COMPLETE.

4.2 Installing the Jetson OS on SSD Using NVIDIA SDK Manager

The NVIDIA SDK Manager simplifies the process of flashing your Jetson device with the appropriate operating system and software packages directly onto the SSD. Please note that a computer running **Ubuntu 20.04** is required to complete the setup.

4.2.1 Download and Install NVIDIA SDK Manager

1. Register for NVIDIA Developer Program:

- Visit the [NVIDIA Developer](#) website.
- If you don't have an account, create one and sign in.

2. Download SDK Manager:

- Navigate to the [NVIDIA SDK Manager](#) page.
- Download the latest version of the SDK Manager for Linux.

3. Install SDK Manager:

- Open a terminal on your Ubuntu host PC.
- Navigate to the directory where the SDK Manager was downloaded, typically ~/Downloads:

```
cd ~/Downloads
```

- Make the downloaded .deb package executable and install it using dpkg:

```
sudo apt update
```

```
sudo apt install -y ./sdkmanager_*.deb
```

- **Note:** Replace sdkmanager_*.deb with the actual filename if necessary.

4. Launch SDK Manager:


- After installation, launch the SDK Manager from the terminal:

```
Sdkmanager
```

4.2.2 Prepare the Jetson Orin Nano and SSD

Install the M.2 SSD drive into the NVIDIA Jetson Orin Nano following the next steps:

1. Flip the Jetson Orin Nano board so the underside is facing up.
2. Identify the M.2 Key M slot (marked in **RED** in the next picture).
3. Confirm the standoff position matches your SSD length (commonly 2280).
4. Remove the SSD mounting Screw
5. Hold the SSD at about a 30° angle and align the notch on the SSD connector with the slot on the board.
6. Gently slide the SSD into the connector until it is fully seated.
7. Press the SSD down so it lies flat against the standoff.
8. Align the mounting hole on the SSD with the standoff screw hole.
9. Use the provided Phillips screw to secure the SSD in place. **DO NOT OVERTIGHTEN!**

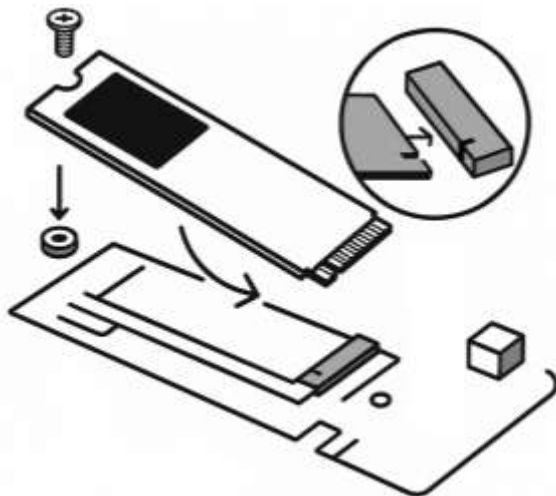

Prepare the Jetson for flashing:

1. **Connect Jetson to Host PC:**
 - Use the Micro-USB or USB-C cable to connect your Jetson Orin Nano to the host PC.
 - **Important:** Ensure the Jetson is powered off before connecting (No power lead connected).
2. **Put Jetson in Recovery Mode:**
 - To put a Jetson Orin Nano in **recovery mode**, first make sure it is powered off. Place a jumper to short the **FC_REC** and **GND** pin (either left or right of FC_REC) on the button header (marked in **RED** below), then reconnect the power cable.



3. Power On the Jetson:

- Connect the power supply to the Jetson.
- The device should power on, indicated by LEDs or display output (if connected).
- **IMPORTANT NOTE:** The cooling fan on the Orin unit **will not run while in recovery mode** (jumper in place); this is expected behaviour.

4.2.3 Flashing the Jetson with the OS

1. Login to SDK Manager:

Upon launching the SDK Manager (***sdksmanager*** command from terminal), log in using your NVIDIA Developer credentials. The Jetson should be automatically selected:



2. Select Product Category and Version:

- **Product Category:** Select "Jetson".
- **Product:** Choose "Jetson Orin Nano".
- **Operating System:** Select "JetPack", "5.x".

3. Select Components:

- Ensure that the "Jetson OS" is selected.
- Select additional SDK components, CUDA, NVIDIA Container Runtime.

4. Start the Installation:

- Click the **"Continue to Step 02"** button.
- Review the license agreements and accept them to proceed.
- The SDK Manager will handle downloading the necessary files and flashing the Jetson device directly onto the SSD in the Jetson. Please note you will need a minimum of 50GB of storage available in the host PC to complete the download.
- Once all downloads are complete click the **"Continue to Step 03"** button.



Once the download is complete you will also be asked where you would like to flash the OS and SDK components:

- **Selected device:** Jetson Orin Nano [8GB developer kit version]
- **OEM Configuration:** Pre-config (enter username/password when prompted). **Important set the username as "sparrow"**.
- **Storage Device:** choose SD card or SSD (depending on what hardware you installed)

5. Monitor the Flashing Process:

- The SDK Manager will display the progress of downloading, flashing, and installing components.
- **Do Not Disconnect** the Jetson Orin Nano or interrupt the process.

6. Completion:


- Once the flashing process is complete, the Jetson Orin Nano will reboot.
- Power down the Jetson Orin Nano.
- **REMOVE THE JUMPER INSTALLED TO PUT JETSON IN RECOVERY MODE**

You can now continue with the hardware build.

Next Steps: You may proceed to the hardware build (Section 6). Note that Section 5 also includes a software-related task (flashing AudioMoth). Ensure you review the entire section before starting, as some activities may be performed in parallel. **Pro Tip:** *While hardware assembly is underway, ancillary software tasks such as flashing AudioMoth can be performed in parallel by another team member, provided all required components and tools are available.*

5. Flashing the AudioMoth

Step 1: Install the USB Microphone Firmware on the host PC

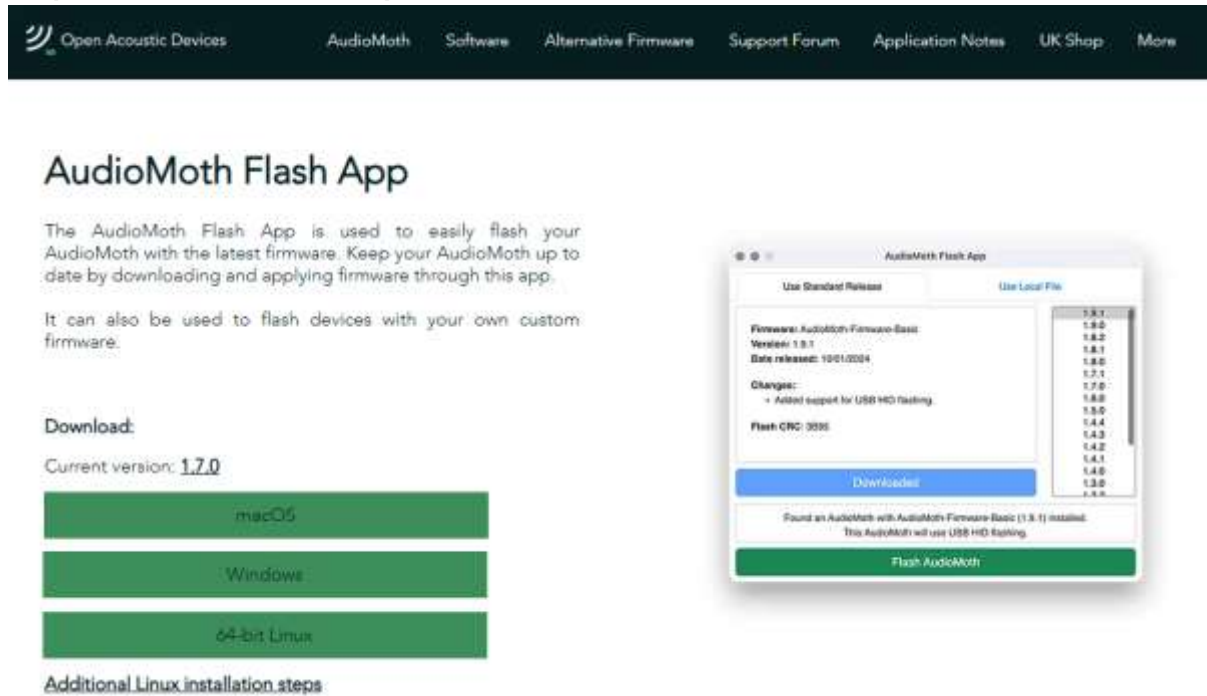

AudioMoth Flash App

The AudioMoth Flash App is used to easily flash your AudioMoth with the latest firmware. Keep your AudioMoth up to date by downloading and applying firmware through this app.

It can also be used to flash devices with your own custom firmware.

Download:

Current version: **1.7.0**

macOS

Windows


64-bit Linux

[Additional Linux installation steps](#)


AudioMoth Flash App Interface:

- Use Standard Release (selected) / Use Local File
- Firmware: AudioMoth-Firmware-Basic
- Version: 1.9.1
- Date released: 10/01/2024
- Changes:
 - Added support for USB HD recording.
- Flash CRC: 3935
- Download button
- Found an AudioMoth with AudioMoth Firmware-Basic (1.9.1) installed. This AudioMoth will use USB HD Recording.
- Flash AudioMoth button
- Version list (1.9.1 to 1.4.3)


1. **Go to the [AudioMoth website](#)** and download the **AudioMoth Flash App**. The AudioMoth Flash App is used to flash your AudioMoth with the latest firmware.
 - a. Download, Install the AudioMoth Flash App on your computer (you can use Windows, macOS or 64-bit Linux systems).
2. **Open the AudioMoth Flash App** on your computer.

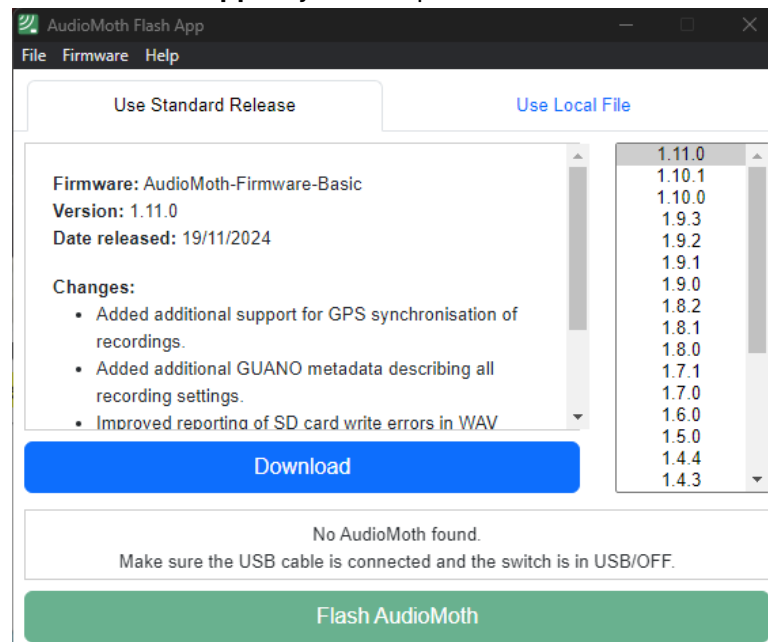

3. Select the **USB Microphone** firmware from the Firmware menu.

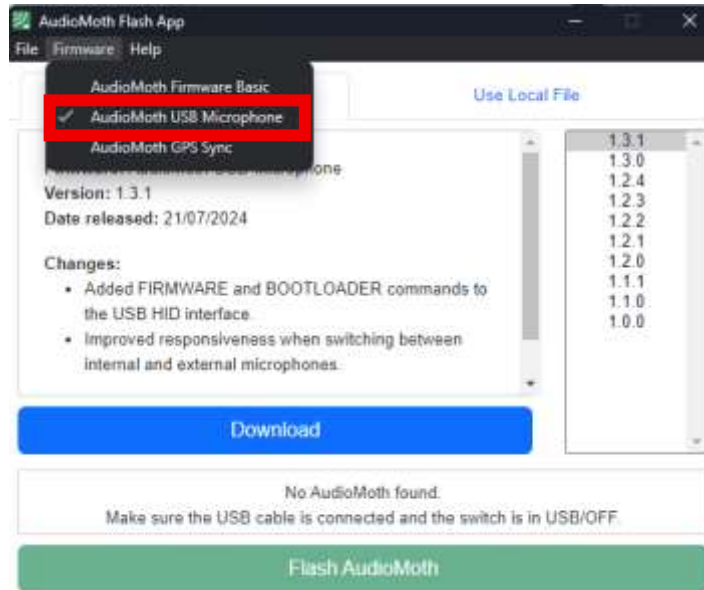


4. Select the **1.3.1 Firmware** version from the list at the right and click the **BLUE** "Download" Button.

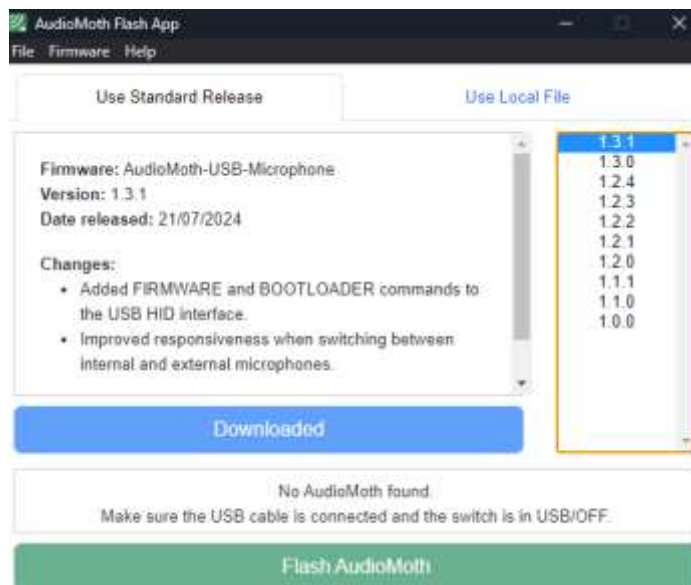

5. **Connect the AudioMoth board to the computer using the Micro USB port.**
6. Make sure the micro-USB cable is connected, and white micro-switch in the AudioMoth is set to the **USB/OFF** position.



7. **Flash the firmware** by clicking the **GREEN** “Flash AudioMoth ” button.

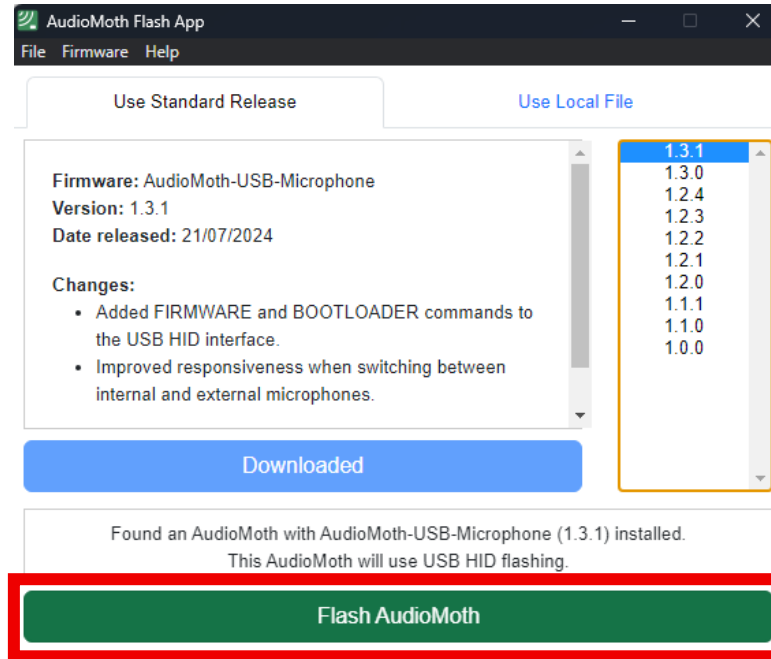

8. After the flashing process is completed the progress bar will be full and a “*Firmware has been successfully updated.*” message is displayed, at this point you can disconnect the micro-USB cable from the AudioMoth board.
9. Flip the white micro-switch on the AudioMoth from the **USB/OFF position** to the **CUSTOM position**.
10. **Your AudioMoth is now ready for deployment.**

6. HARDWARE SETUP

6.1 Introduction

The SPARROW device can be divided into 3 main component systems:

- **COMPUTE:** Includes the solar controller, edge device and associated devices and the low earth satellite networking solution.
- **POWER:** Solar panels or renewable energy generation components, battery which can be configured differently depending on the deployment scenario.
- **SENSOR:** Includes the Peripheral Sensors (Cameras, Microphones, External Sensors, etc.) that surround the SPARROW unit.

The following steps will guide you through the assembly process of a standard SPARROW unit using solar energy. The guide will cover all necessary components and describe how the components interact with each other. If you follow the steps outlined in this guide, you should have a fully functional SPARROW unit ready for deployment.


6.2 Component Inventory

The following components highlight each of the required parts to build a full SPARROW unit. This guide provides a brief explanation and description of the function of each component and how it works in the overall system.

You can download the complete SPARROW Bill of Materials from: aka.ms/sparrowbom


Solar Panel Array:

The solar panels should be connected in a 24 Volt array (2x 12v solar panels working in series).

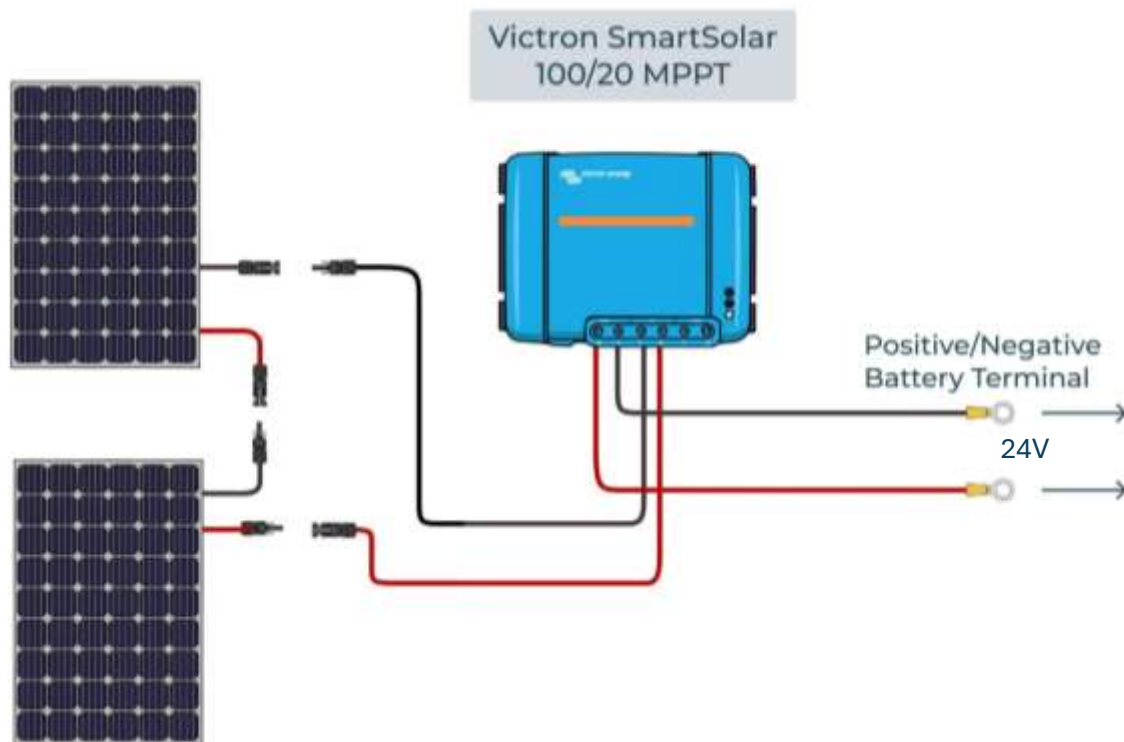

Batteries:

You can use either LiFePO4 or AGM batteries. Since the system works in a 24V configuration, you can use either a single 24V battery or (at least) a pair of 12V batteries running in series as shown in the diagram below.

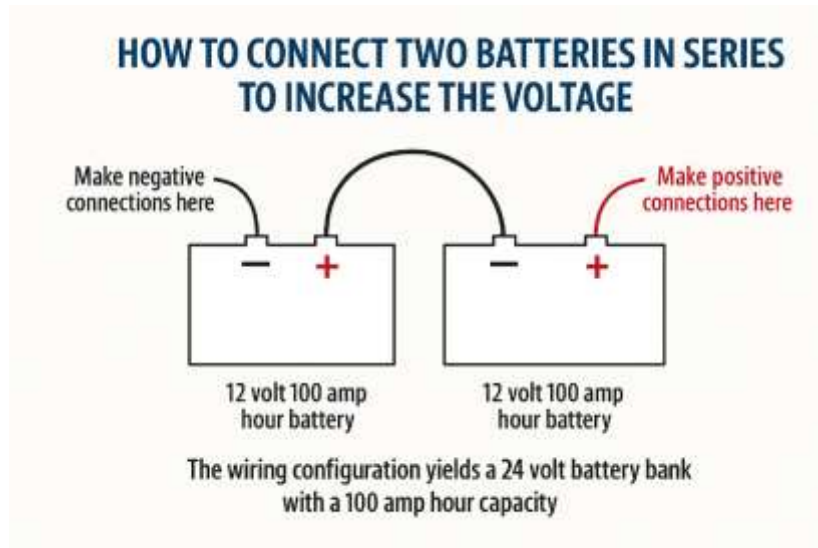

Edge Computing Device:



The SPARROW unit uses a NVIDIA Jetson Orin Nano. This component runs all the required software services including the AI models. All the sensors directly interface with the Jetson to provide real-time environmental readings.

Solar Charge Controller:




The solar controller is responsible for maintaining and charging the batteries. It also provides the required voltage to the entire SPARROW system. It also manages the various power profiles to ensure continuous operation and recovery in the event of power loss.

Solar Charge Controller USB Data Cable:



The solar controller USB data cable is responsible for interfacing the solar charge controller with the main edge computing device. This enables the system to remotely monitor system voltages charging profiles, solar generation values, and overall health of the power system.

Shuttle Click Expansion Board

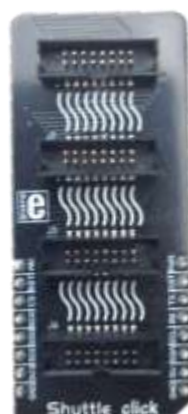

The Shuttle click is a mikroBUS socket expansion board, which allows stacking up to four click boards on a single mikroBUS.

Shuttle Click BUS Board:



The Shuttle Click BUS Board connects to the female 16 pin IDE ribbon cable connector in the Shuttle Click Expansion Board and converts it into a female MikroBUS board with the various sensors and relay board. This is the BUS standard used throughout the SPARROW system.

Pi 3 Click Shield:



The Pi 3 Click Shield converts the 40 pin GPIO 40-pin expansion header into two female MicroBUS connectors.

RTC 10 Click Board:



The RTC 10 Click board is a real-time clock (RTC). The device incorporates a battery and is responsible for maintaining accurate timekeeping when power to the SPARROW device is interrupted.

Environment 3 Click Board:



Environment 3 Click is a four-in-one environmental high-linearity/high-accuracy pressure, humidity, and temperature sensor. The BME688 can detect Volatile Organic Compounds (VOCs), Volatile Sulfur Compounds (VSCs), and other gases such as carbon monoxide and hydrogen in part per billion (ppb) range. It provides absolute temperature accuracy, typical of $\pm 1^{\circ}\text{C}$, and best performance when operated within the pressure, temperature, and humidity range of 300-110hPa, 0-65°C, and 10-90%RH. This is the sensor that is used to monitor atmospherics outside the main SPARROW case/housing.

Temp-Hum 9 Click Board:



The Temp-Hum 9 click board is a temperature and humidity sensing board. It can measure a wide range of temperature and relative humidity values with high accuracy, good reliability, and low hysteresis. This sensor monitors conditions inside the main SPARROW case/housing. Temp-Hum 9 click can measure the humidity in the range from 0 to 100 %RH and temperature in the range from -40°C to $+125^{\circ}\text{C}$ with a typical accuracy of $\pm 2\%$ RH and $\pm 0.2^{\circ}\text{C}$.

XBee 3 Click Board (FOR EUROPEAN UNITS ONLY):



XBee 3 Click is a compact XBee RF module add-on board for long range low-power wireless communication applications. The module can run either a proprietary DigiMesh or point-to-multipoint networking protocol with reliable long range performance and, data redundancy.

M.2 SSD:



The M.2 SSD is the main compact, high-speed storage device that plugs directly into the Jetson Orin Nano main board. The main operating system as well as all data logged will be stored locally to this device.

Relay 3 Click:



Relay click 3 is a dual relay Click board, featuring two single-pole double-throw relays which can be operated by output pins of the host microcontroller (MCU). This board can control a wide range of power applications. The two SRD-5VDC-SL-C relays used on this Click board are hermetically sealed relays which require 5V across their coils while consuming about 0.4W while active. They allow up to 28VDC across the connected load, while conducting up to 7A. The board is used as a remote ON/OFF switch to manage power to Starlink.

MHF4/RP-SMA Connectors and 6dBi External Antennas:



This pair of IPEX MHF4-to-RP-SMA pigtail cables and dual 6dBi Wi-Fi antennas enable strong, stable wireless connectivity for high-performance networking.

Optional: 10dBi Long Range Dual Band WiFi Fiberglass Antenna



Recommended High Gain/Long-Range/ Outdoor Waterproof/Dual-Band/Omnidirectional Antenna featuring 10ft long weatherproof cable and RP-SMA connectors.

WAGO Connector:



A WAGO connector is a tool-free electrical connector that uses a spring clamp or lever mechanism to secure wires. It's widely used because it's **fast, safe, and reusable**, eliminating the need for twisting or crimping wires.

Electrical Junction Box:



This electrical junction box is IP65 rated, or NEMA 4(x) equivalent rating, making it suitable for outdoor applications and able to withstand rain, dust, and other outdoor elements.

Wire Spool:



16–20 AWG (you can go with any gauge between 18 and 20 AWG) black and red wire spool, this is the standard wiring we'll use throughout the SPARROW unit build for all power connections.

Cable Glands:



Assorted waterproof cable glands (50 pcs, adjustable 3–16 mm) with gaskets, used throughout the SPARROW unit build for secure, weatherproof cable routing.

Solar Panel Wire with PV004 Connectors:



Used for connecting the solar panels PV004 connectors to the solar charge controller.

From Battery to SAE Connector Wire Set:



This is the wire set that will connect to the battery terminals. It features a quick disconnect SAE connector and includes a Positive ATC Style Fuse Holder with 30A Fuse and 2pcs extra fuses.

Batteries SAE Connector to PV004 Connector - Solar Charge Controller Wire Set:



This cable will connect the battery to the solar controller. It includes the necessary polarity inverter adaptor to maintain the polarity from the battery cables.

Jetson Power Jack Cable:


L-Shape 5.5mm x 2.5mm DC power supply cable, this is a 90-degree right angle plug to bare wire open end pigtail power cord used for powering the Jetson Orin Nano.

STARLINK Weatherproof Connector:

This Starlink Adapter includes a waterproof kit for standard Ethernet cables, designed to connect with a female RJ45 adapter. Once connected, both the female and male ends are fully waterproof, protecting your network components from moisture and dirt, ensuring reliable connections.

AudioMoth DEV Kit and Case:

The AudioMoth Dev Kit and Case is a waterproof injection moulded enclosure for AudioMoth Dev. The underside of the case has an M16 cap that can be interchanged to fit external cable glands.

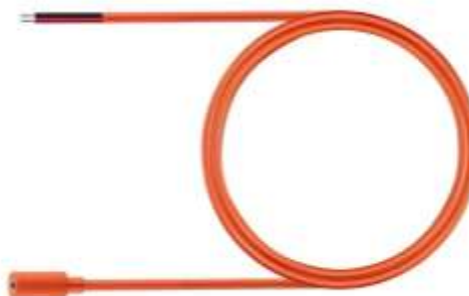Starlink Power Socket Cable (Optional):

This DC Power Cable features a 5.5mm x 2.1mm DC female plug used for connecting the Starlink Power Cable. You can use this or the following Starlink Power Socket Connector and build your own Starlink power cable.

Starlink Power Socket Connector (Optional):




Female 5.5x2.1mm Female DC Adapter. This is used instead of the assembled orange cable shown above, if you want to DIY build a Starlink female power connector.

OPTIONAL: Headless Display Port Emulator Adapter



A compact DisplayPort emulator that simulates a monitor for seamless headless operation and remote access.

Starlink Mini Kit

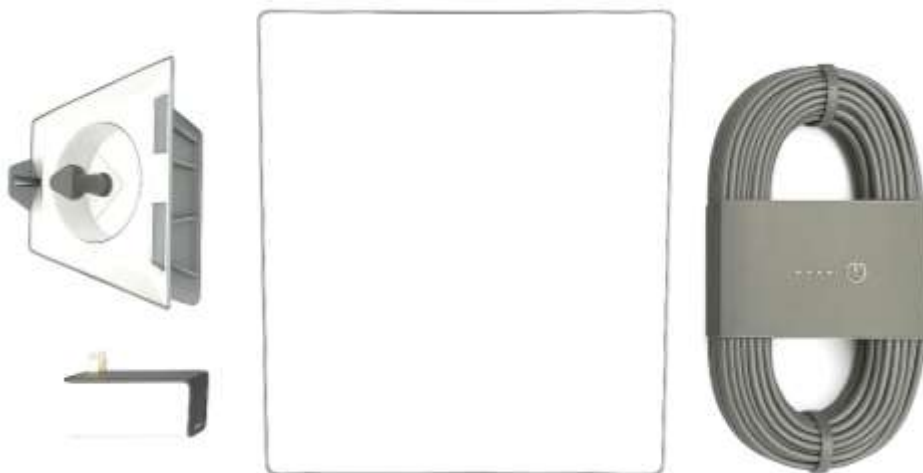

Starlink Mini is a compact, portable satellite internet kit with an integrated Wi-Fi router, delivering high-speed, low-latency connectivity anywhere with minimal power consumption. Included in this kit is the Starlink DC power cable used in this system.

Micro USB to USB A cable



Micro USB cable used for connecting the AudioMoth recorder to the SPARROW main unit.

IMPORTANT: An average length of at least 3' is recommended.

Monitor or portable monitor with a Display Port Cable or Adaptor



A portable monitor is necessary for effortless connection to the NVIDIA Jetson DP out for high-resolution, low-latency display.

IMPORTANT: The NVIDIA Jetson Orin Nano uses a DisplayPort output. If your monitor only supports HDMI (or another input type), make sure you have the appropriate DisplayPort-to-HDMI adapter (or the correct adapter for your monitor's input) ready before starting the setup.

6.3 SPARROW Hardware Assembly Guide

6.3.1 **COMPUTE**: Assembling the Jetson Orin Nano

1. Gather Required Tools and Components

- M.2 NVMe SSD (PCIe Gen 3 recommended; sizes 1TB or larger are recommended)
- Jetson Orin Nano Super Developer Kit
- Small Phillips screwdriver (usually size #0 or #1)
- Anti-static wrist strap (optional but recommended)
- Mounting screw (included with the Jetson kit)

2. Power Down and Prepare the Workspace

- Shut down the Jetson Orin Nano completely.
- Disconnect the power supply and all peripherals (keyboard, mouse, HDMI, etc.).
- Work on an anti-static mat or non-conductive surface to avoid electrostatic discharge.



Start by disconnecting the two onboard Wi-Fi antennas from the Wi-Fi card, as we will be upgrading the system to use external antennas. These are simple press-on MHF4 connectors (marked in **RED** in the picture above); you can unplug them by gently pulling upward from the board on the terminals.

Here is the step-by-step breakdown of this procedure:

1. Flip the board so you can see the Wi-Fi card.
2. Identify the two MHF4 connectors (tiny round connectors) where the antenna cables attach. They are marked in **RED** in the picture above.
3. **Do NOT pull on the cables as this can rip the connector off the board.**

4. Place a fingernail or a plastic spudger under the metal cap of the connector (not the wire).
5. Apply gentle upward pressure until the connector pops off the jack. Repeat for the second antenna.
6. If available, use an **MHF4** removal tool for extra safety.

Pro Tips:

- **Magnification helps:** These connectors are tiny; a magnifying glass or head loupe can make the job easier.
- **Avoid metal tools:** Use plastic tools to reduce the risk of shorting or scratching the Jetson.

⚠ IMPORTANT SAFETY STEP:

After removing the cables from the onboard Wi-Fi card, apply a small strip of electrical tape over each **MHF4** connector on the antenna wires as shown in **RED** in the picture below. This prevents the exposed metal ends from touching other components on the board. **If left uninsulated, these connectors can cause an electrical short, which may result in permanent damage to your NVIDIA Jetson Orin Nano.**



Installing MHF4-to-RP-SMA Cables on the Wi-Fi Card

For this part we will need:

- MHF4-to-RP-SMA pigtail cables (length appropriate for your enclosure)
- Jetson Orin Nano Developer Kit
- Plastic spudger or tweezers (optional, for handling connectors)

Work on an anti-static surface and wear an anti-static wrist strap if possible.

1. Make sure the **Jetson Unit is NOT Connected to Power** and **fully turned OFF**.
2. Locate the Wi-Fi Card (Flip the board to access the Wi-Fi module).
3. Identify the two **MHF4** antenna connectors on the card (previously disconnected from the stock antennas).
4. Take the MHF4 end of the pigtail cable. Align it carefully with the socket on the Wi-Fi card.
Tip: The connector is tiny so use magnification if needed. MHF4 connectors are delicate; avoid repeated connect/disconnect cycles.
5. Press straight down on the metal cap of the connector until you feel a soft click.
Do NOT push at an angle or apply force to the cable itself.
Check alignment when reconnecting: When you reattach the MHF4 connectors, press straight down until you feel a soft click.
6. Repeat for the second connector.



Mounting the Jetson Orin Nano with Zip Ties to the internal Backplate.

Tools & Materials you will need for this section:

- Jetson Orin Nano Developer Kit
- Electrical junction box with perforated backplate
- Heavy-duty zip ties
- Drill (if holes need enlarging)
- Marker or pencil

Step-by-Step Instructions:

1. Remove the mounting backplate from the Electrical Junction Box by removing all Philips screws securing it to the box.
2. Place the backplate on a flat, stable surface.
3. Position the Jetson Orin Nano in the bottom-left corner of the backplate as per the reference picture above.
4. Ensure clearance for ports, airflow, and cable routing.
5. Align the board so its mounting holes or edges line up with perforations.
6. Mark the holes where zip ties will pass through, ideally near the board's mounting holes for stability.
7. If the perforations are too small for your zip ties, enlarge them slightly with a drill.
8. Remove any sharp edges to avoid cutting the zip ties.
9. Thread zip ties through the perforations and over the board at secure points as shown in the reference picture above (avoid covering connectors or components).
10. Tighten the zip ties gradually, alternating sides to keep the board level.
11. **Do not overtighten**, just enough to hold the board firmly without bending it.
12. Cut off the extra length of each zip tie for a clean finish.
13. Ensure the board is stable and does not shift.
14. Check that all ports are accessible and cables can be routed without strain.
15. **Confirm the correct positioning and make sure the RP-SMA connectors/cables are not trapped under the Jetson unit.**




Shuttle Click Boards + Sensors Installation + Solar Control Unit

Tools & Materials


- Jetson Orin Nano Developer Kit
- Pi 3 Click Shield (40-pin GPIO compatible)
- Two Shuttle Click Expansion Boards
- Five Shuttle Click BUS Boards
- Sensors (to connect via Shuttle Click BUS Boards):
 - RTC 10 Click
 - Environment 3 Click
 - Temp-Hum 9 Click
 - XBee 3 Click
 - Relay 3 Click
- Ribbon Cables for Shuttle Click Boards
- Anti-Static Wrist Strap (optional but recommended)
- Zip-Ties for Securing Components

Step by Step Guide:


1. Prepare the workspace.
2. Locate the 40-pin GPIO male header on the Jetson Orin Nano as shown in **RED** below.

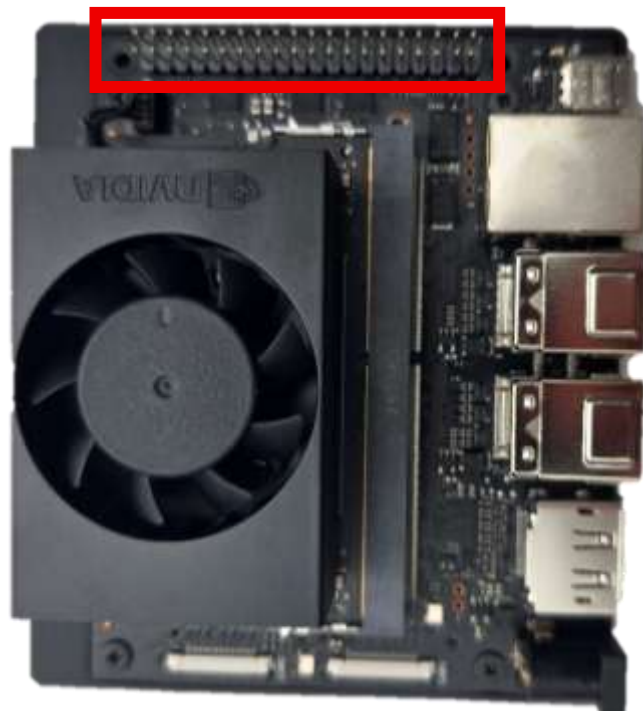

3. Align the **Pi 3 Click Shield's** female header with the GPIO header.
4. Press down gently and evenly until fully seated.

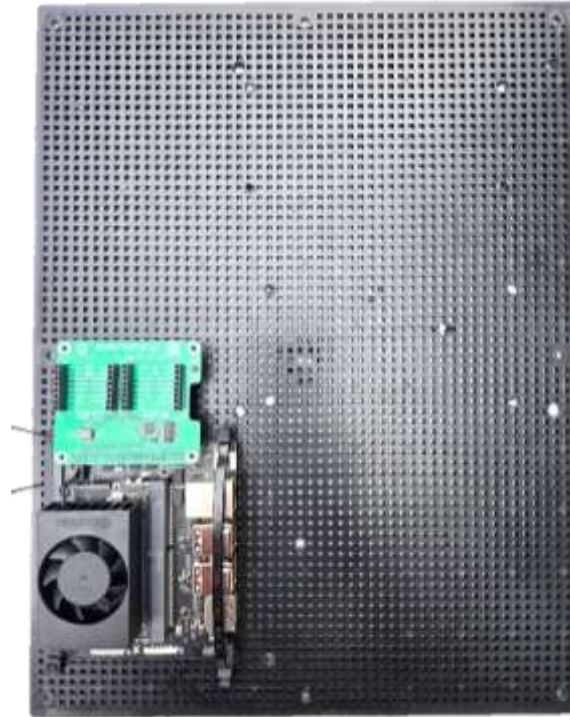


5. Install Shuttle Click Boards: Identify the mikroBUS sockets on the Pi 3 Click Shield.
6. Insert Shuttle Click Board 1 into an available socket as shown in the image below.

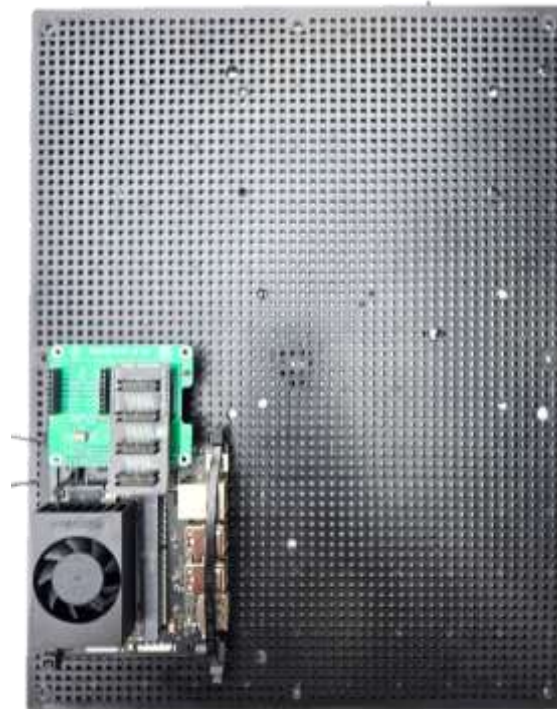

7. Insert Shuttle Click Board 2 into the other available socket.



8. Ensure both are firmly seated and oriented correctly.
9. Each Shuttle Click BUS Board has a connector for a ribbon cable.
10. Insert one end of the ribbon cable into the Shuttle Click board connector (check orientation).
11. Secure the other end to the Shuttle Click BUS Board.
12. Connect the first Shuttle Click BUS Board ribbon cable to the top left connector in the Shuttle Click Board as shown below.

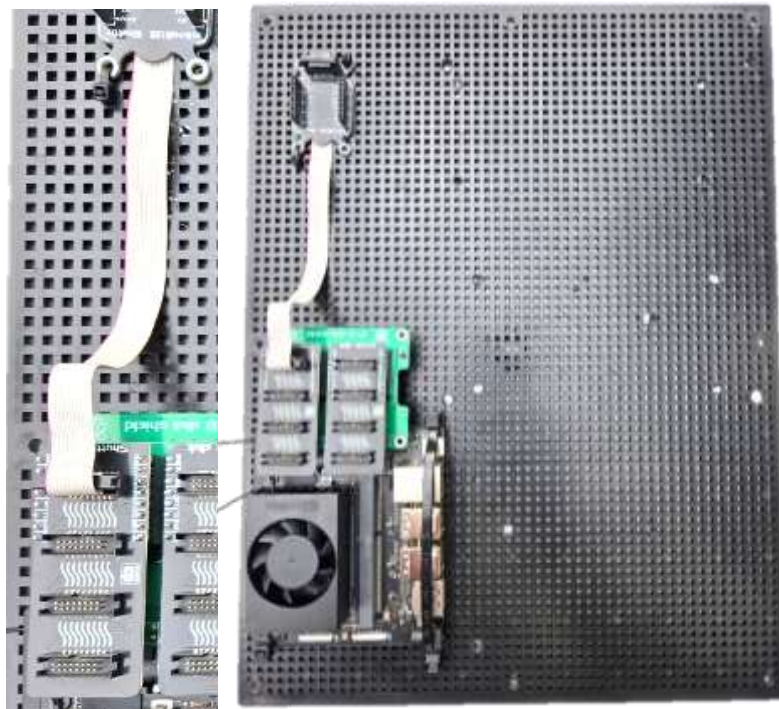

13. Connect the XBee 3 Click board to the Shuttle Click BUS Board.
(NOTE: NOT FOR US - EUROPEAN ONLY)



14. Repeat for the rest of the Shuttle Click BUS Boards and sensor click boards as per the following picture.
15. Connect another Shuttle Click BUS Board ribbon cable to the connector in the Shuttle Click Board.



16. Now install the RTC 10 Click Board as shown below.



17. Connect another Shuttle Click BUS Board ribbon cable to the connector in the Shuttle Click Board and secure it to the back panel:



18. Now install the Temp-Hum 9 Click Board as shown below.



19. Connect another Shuttle Click BUS Board ribbon cable to the connector in the Shuttle Click Board and secure it to the back panel.



20. Now install the Environment 3 Click Board as shown below.



21. Now just as we did with the Jetson, we will position and secure the Solar Charge Controller to the backplate using zip ties as per the following picture.



6.3.2 POWER: Solar Generation, Battery and Network Assembly

1. Cut a 5 inch (15 cm) long piece of **RED** wire and strip the wires ends to expose ½ inch (around 1cm) of the core filaments. (you can separate the twin Black and Red speaker wire into each color to have single wire)
2. Connect that wire to the **POSITIVE (+)** Load output of the solar controller by unscrewing the Philips screw of the terminal and inserting the stripped cable end into it.



Tip: Twisting the wire ends helps to keep the filament strands from fraying.

3. Cut a 6 inch (15 cm) long piece of **BLACK** wire and strip the wires ends to expose ½ inch (around 1cm) of the core filaments.
4. Connect that wire to the **NEGATIVE (-)** Load output of the solar controller by unscrewing the Philips screw of the terminal and inserting the stripped cable end into it.
5. Attach a separate WAGO connector to each wire tip: one connector for the **RED** wire and a different connector for the **BLACK** wire.

Do NOT insert both wires into the same connector under any circumstance.

How to use WAGO connectors?



WAGO connectors are very easy to use:

- a. Ensure the copper conductor is clean and undamaged.
- b. Lift the lever on the Wago connector to open the clamping point.
- c. Push the stripped end fully into the connector slot until it stops and make sure no bare copper is exposed outside the connector.
- d. Press the lever down until it locks in place. This clamps the wire securely.
- e. Gently tug the wire to ensure it's firmly held.
- f. Double-check that the insulation is flush with the connector edge.

*** To remove a wire simply lift the lever and pull the wire out.**




6. Connect the ribbon cable of the last Shuttle Click BUS Board to a free slot Shuttle Click board ribbon connector. We will use this board to install the Relay click 3 Board.




7. We will now start wiring the Relay Click 3 Board before installing it into the Shuttle Click BUS Board. Cut a 4 inch (10 cm) long piece of **RED** wire and strip the wires ends to expose ¼ inch (around 0.5cm) of the core filaments on one end, and ½ inch (around 1cm) on the other.
8. Connect the ½ inch (around 1cm) stripped end to a free port of the WAGO connector that contains the **RED** wire we installed previously.
9. Connect the short ¼ inch (around 0.5cm) stripped end to the **COM 2** terminal of one the relay output connectors in the Relay Click 3 Board. You can use either one. To do this simply unscrew the screw for the **COM 2** port and push the stripped end fully into the connector slot until it stops and make sure no bare copper is exposed outside the connector.

Pro Tip: In the case the bare twisted cable core diameter is too big to fully fit inside the Relay Click 3 Board relay output port, you may carefully trim some filaments until the cable does fit. As a rule of thumb try to remove the minimum amount possible of material necessary to make it fit.


The result should look like this:

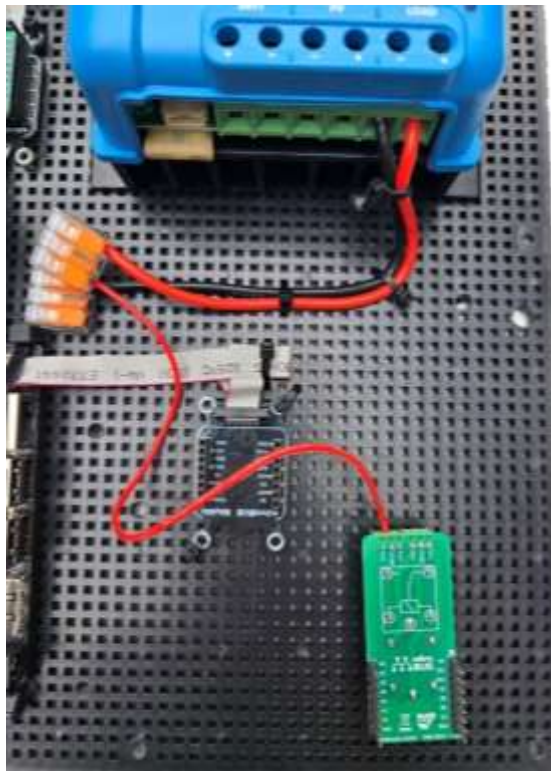


10. Now cut a second 6 inch (15 cm) long piece of **RED** wire and strip the wires ends to expose $\frac{1}{4}$ inch (around 0.5cm) of the core filaments on one end, and $\frac{1}{2}$ inch (around 1cm) on the other.
11. Connect this second **RED** wire to the **NC 2** relay port on the Relay Click 3 Board. The result should look like this:

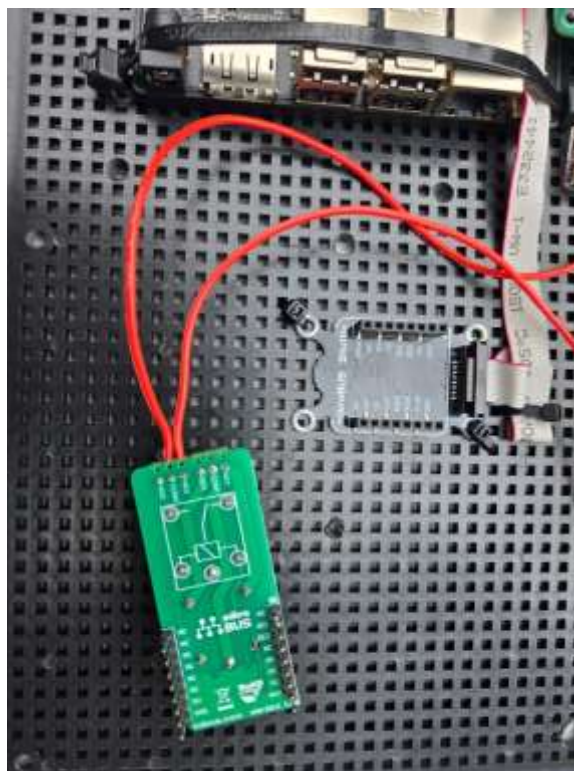

12. Now plug the wired Relay Click 3 Board to the free Shuttle Click BUS Board we installed last.

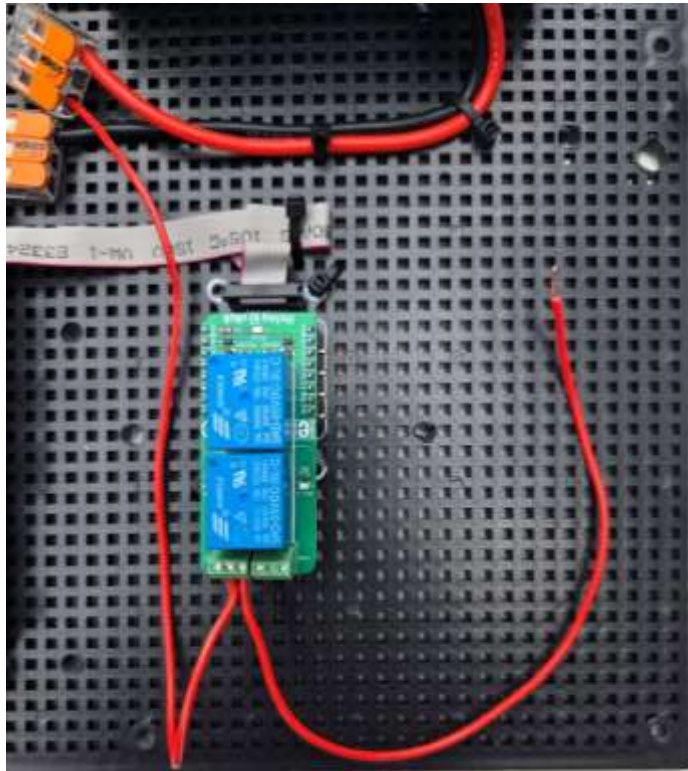

13. Connect the free end of the **RED** wire to the **POSITIVE (+)** terminal of the DC Starlink power female jack.

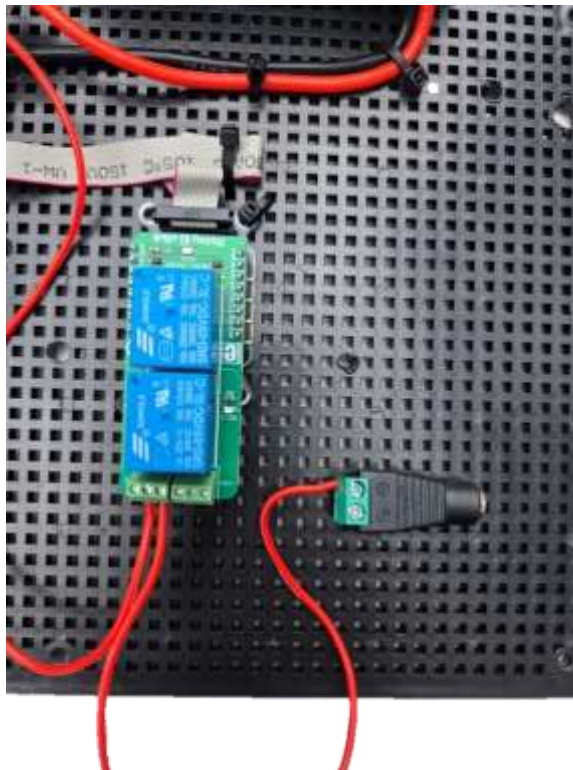


14. Now cut another 6 inch (15 cm) long piece of **BLACK** wire and strip the wire's ends to expose ½ inch (around 1cm) on each end.


15. Connect one of the ½ inch (around 1cm) stripped core end to the WAGO connector that had the **NEGATIVE (-) BLACK** cable we had previously installed and the other end to the **NEGATIVE (-)** terminal of the DC Starlink power female jack.



16. Connect the DC Power jack for the Jetson. Just as with the STARLINK power DC Power Jack, the cables are colour coded, **RED** for **Positive (+)** and **BLACK** for **Negative (-)**. Connect the **RED** wire to the WAGO connector containing all **RED** for **Positive (+)** wires

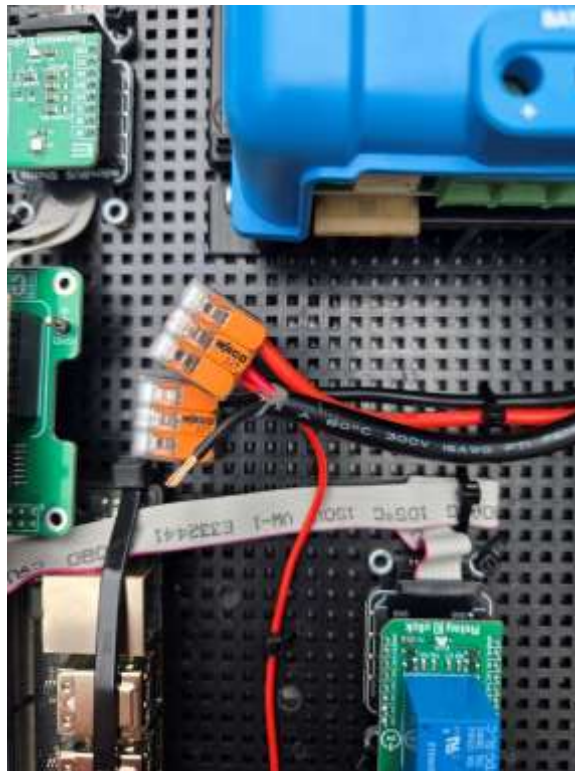

17. Do the same thing for the **BLACK** Negative (-) wire and connect it to the WAGO connector containing all **BLACK** for Negative (-) wires.

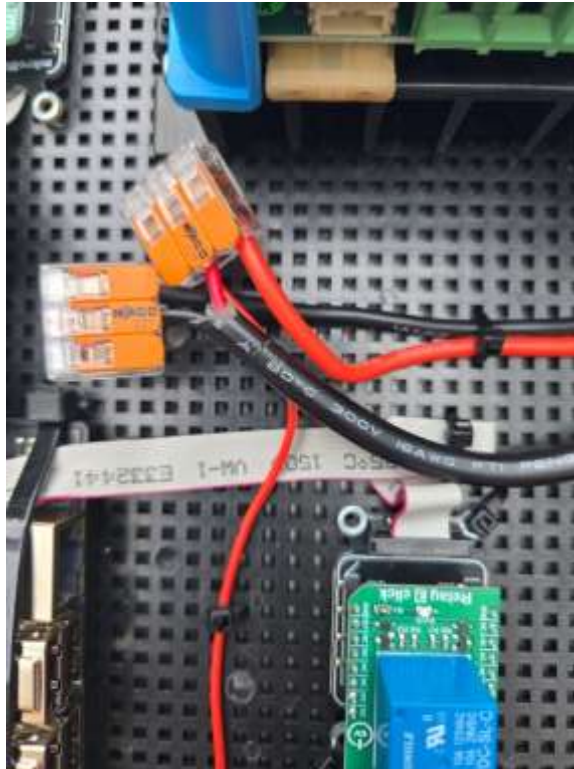

18. Now, install the Victron Energy USB bus cable going from the front left white port of the solar controller to any free USB port on the Nvidia Jetson (remove the Black jumper that comes by default on the white port before installing the white connector end of the USB BUS cable to the solar controller).



19. At this point, the assembled system should look like this:




20. Now secure the removable backplate to the inside of the electrical junction box using the provided screws. Carefully flex the black plastic backplate to force the backplate past the protruding vents inside the electrical junction box.

21. Once the backplate is secure in place, using a conical stepper bit, drill on the right side of the bottom of the case, two 25mm (0.98 inches) holes.




22. Prepare the battery cable for installation by cutting the PV004 terminals off the end, and then stripping the ends, as per the following diagram. This is the end that will connect to the solar controller.

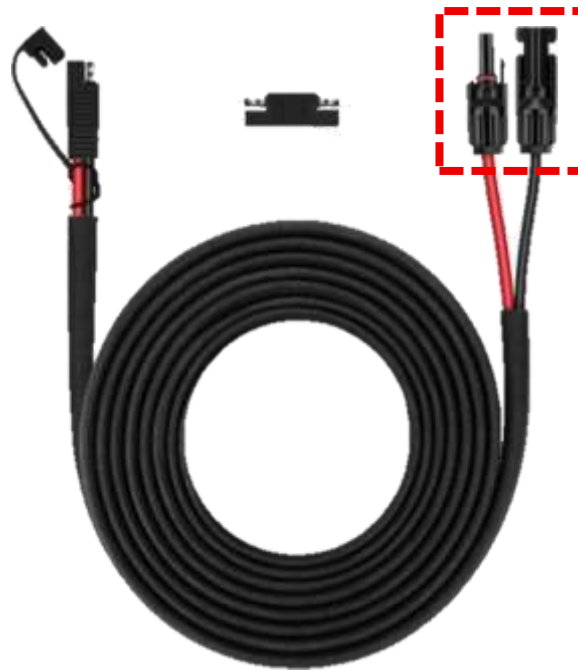

23. Use the first **RIGHTMOST** 25mm (0.98 inches) hole and install one of the PG19 glands. Route through the cable gland the cables that go from the battery (or batteries if using multiple) to the solar controller, and the cables that come from the solar panels into the solar controller as per the following diagram.
24. Install the battery terminal cables to SAE connector as per the following diagram.

Important Note: The solar panels must be connected in **SERIES**. The connectors are polarized, meaning they can only go in one way. Closely follow the diagram below when making the connections. **DO NOT CONNECT THE CABLES THAT GO FROM THE SOLAR PANELS AND THE BATTERY TO THE CABLES WE HAVE INSTALLED INTO THE SOLAR CONTROLLER'S TERMINALS YET.**

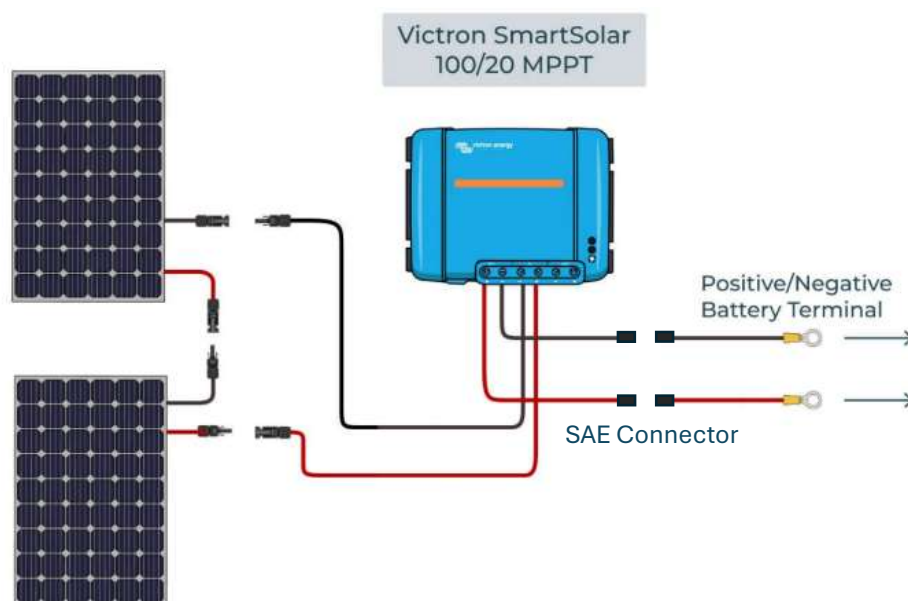

25. Install the **BLACK** for Negative (-) and **RED** for Positive (+) wires that go from the solar panels to the solar controllers PV positive and negative input respectively, following the previous diagram.




*Please note that the **Orange and Blue** wires shown in this image are the cables that go to the battery, these wires will be **BLACK** for Negative (-) and **RED** for Positive (+) respectively when using the battery cable listed and recommended in the BOM.



26. Use the **SECOND RIGHTMOST** 25mm (0.98 inches) hole and install the other PG19 gland.


27. Route through the cable gland, the STARLINK Ethernet Cable, STARLINK POWER cable and the Micro USB cable for the AudioMoth as shown in the image below.

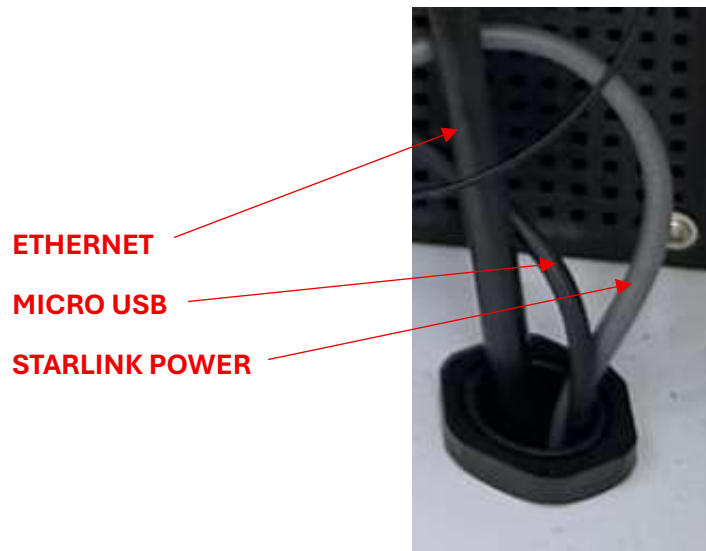

To achieve this:

- First, route the STARLINK POWER cable, through the Sealing Nut of the cable gland, and then insert it through the Clamping Ring and into the Case.
- Second, route the micro-USB cable for the AudioMoth, this cable must be inserted and routed from the inside of the case. Route the micro-USB connector outward, through the cable gland and Sealing Nut. The USB type A connector will remain inside the case.
- Finally insert the ethernet cable following the diagram below. **If you are using an ethernet cable with a protective sheath over the connector, trimming or removal of the protective sheath might be necessary to fit through the gland.**

The following diagram shows how the cables should be routed through the cable gland.

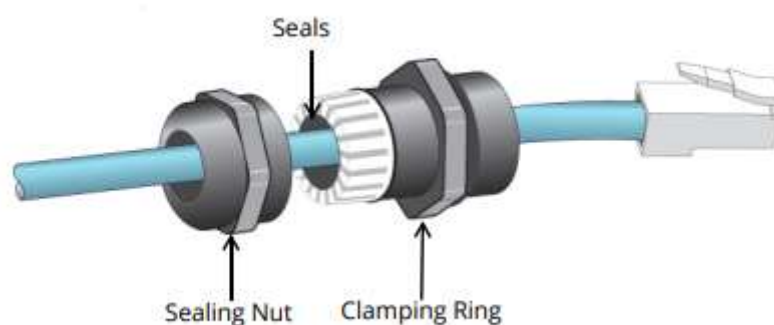

28. Connect the AudioMoth USB cable and the STARLINK Ethernet cable to their respective USB (you can use any port) and Ethernet port on the Nvidia Jetson Orin Nano.
29. **IMPORTANT NOTE:** To ensure proper weather-tightness of all cable entries, verify that **cable glands are fully seated, correctly assembled, and securely tightened.** Improper installation may lead to water ingress and damage to internal components.

30. Connect the STARLINK POWER cable to its corresponding female connector.



31. **When using the external 10dB long range optional fiberglass Wi-Fi antenna:** With the stepper bit and drill, make two 16mm (0.6 inches) on the left bottom side of the case.

Install the smaller PG9 cable glands on the pair of new 16mm (0.6 inches) holes on the box and use them to route the external antenna cables into the electrical Junction box.



When using the 6dB common plastic Wi-Fi antenna: continue by drilling 2 small holes on the side of the case to install the FEMALE RP-SMA connector by securing it in place with the provided lock nut as shown below:



32. Connect the external antennas or antenna cables to the Wi-Fi RP-SMA connectors.
33. Connect the other end of the STARLINK ethernet cable to the weatherproof Starlink ethernet adaptor and assemble the weather-proof adaptor as described in the following diagram.



34. Connect the weather-proof ethernet connector to the STARLINK ethernet port. Press it in and make sure the ethernet connector is correctly seated.
35. Connect the other end of the STARLINK POWER CABLE to the antenna. Press it in and make sure the terminal is fully seated. It is crucial for the power plug to be correctly seated inside the antennas power port to make sure it remains weather-proof.
36. **Double-check all previous connections** (AudioMoth, Jetson, case, etc.) are secure.
37. **Tighten all connections securely to avoid loose wiring.**
38. **Verify polarity before powering up**, incorrect wiring can damage the system.
39. **CONNECT THE CABLES THAT GO FROM THE SOLAR CONTROLLER TO THE SOLAR PANELS PV004 CONNECTORS AND FROM THE SOLAR CONTROLLER TO THE BATTERY SAE CONNECTOR.**
40. Once everything is connected correctly, the system should power on automatically.
41. Check the solar controller display or indicator lights to confirm power on status.
42. **CONGRATULATIONS! You have finished the main unit build assembly.**

7 Initial Jetson Orin Nano Configuration

After finishing the hardware build, perform the initial setup on your Jetson device.

IMPORTANT: The NVIDIA Jetson Orin Nano uses a DisplayPort output. If your monitor only supports HDMI (or another input type), make sure you have the appropriate DisplayPort-to-HDMI adapter (or the correct adapter for your monitor's input) ready before starting the setup.

7.1 First Boot and Basic Setup

1. Connect Peripherals:

- **Keyboard and Mouse:** Connect via USB ports.
- **Monitor:** Connect using the DisplayPort.
- **Network Connection:** Ensure your Jetson is connected to the internet via Ethernet or StarLink.

2. Power On:

- If not already powered on, connect the power supply to the Jetson Orin Nano.

3. System Update (Optional but Recommended):

- Open a terminal and run the following commands to ensure all packages are up to date:

```
sudo apt update
```

```
sudo apt upgrade -y
```

```
sudo reboot
```

7.2 Registering for a SPARROW Account and Obtaining an Access Key

1. Create an account on the SPARROW site:

Note: The steps in this Section 7.2 are for users who choose to sign-up for an account for access to and use of our SPARROW dashboard which is governed by separate terms and conditions. Users choosing to host their own dashboard will need to register and obtain an access key from their own site or alter this requirement by modifying the client source code.


- Navigate to <https://dashboard.sparrow-earth.com/> and click “Sign Up” and complete the registration process.
- To obtain the API key click on profile:



- On the profile page go to the API Keys section and enter a friendly name in the “Label” field for your new SPARROW unit and click “Generate New API Key” once you are done.



- This will create the API Key for your new SPARROW device, click on the “Reveal” to show the API Key.

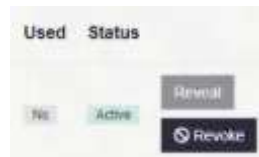

- You will be prompted during the installation process of the Setup Script to enter the API Key you just generated and your Username.

7.3 Transferring and Running the SPARROW Setup Script

With your Jetson Orin Nano up and running, the next step is to set up the environment required for the SPARROW project. This involves transferring and executing the provided `sparrow_setup.sh` script.

1. Obtain the Setup Script:

- Ensure you have the `sparrow_setup.sh` script available on your host PC.
- This script is typically provided via the SPARROW project repository (e.g., GitHub).

To access the SPARROW project repository please visit: aka.ms/sparrow

2. Navigate to Script Location:

```
cd ~/
```

3. Change Permissions to Make Executable:

```
sudo chmod +x sparrow_setup.sh
```


4. Execute the Script with Root Privileges:

- It's crucial to run the setup script with `sudo` to grant the necessary permissions for installing software and modifying system configurations:


```
sudo ./sparrow_setup.sh
```

5. Follow Interactive Prompts:

- The script will guide you through the setup process:

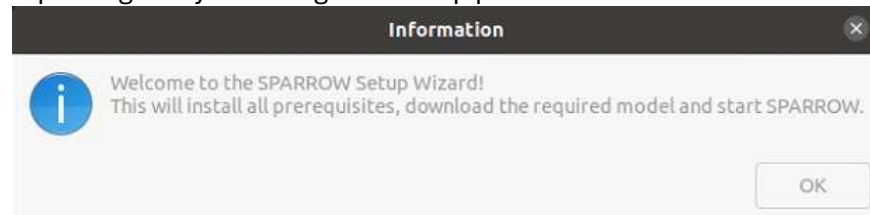


- Confirm that the Jetson OS has been installed directly onto the SSD:

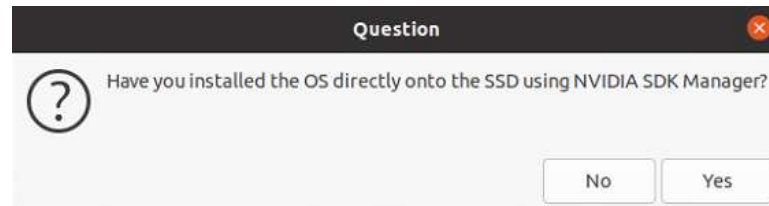


- Click ok to complete the connectivity check. Please note an ethernet connection is required. **Wi-Fi cannot be used** as the set-up script will automatically configure the Wi-Fi access point:



- Enter your SPARROW access API key from your account (obtained in step 7.2):

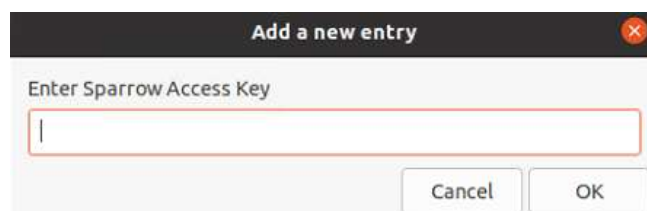

- Confirm your SPARROW access API key:

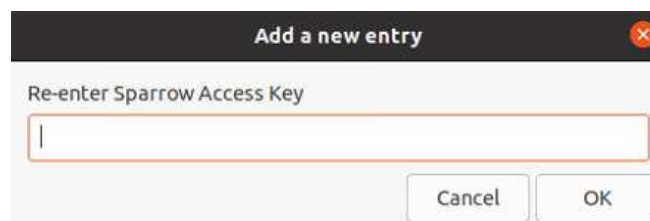

- You will be prompted to also enter your SPARROW Dashboard Username that was used to generate that API Key.

- For remote access click yes to install TeamViewer. Make sure to record the TeamViewer ID:



Important Note: If you choose to install and use TeamViewer for remote access during SPARROW setup or maintenance, please note that **it is the responsibility of the individual or organization to obtain an appropriate license directly from TeamViewer.**

SPARROW documentation does not provide or include licensing for third-party software.

- Once setup is complete you will see the following message:
“SPARROW Setup Completed Successfully!”
 Please note the SPARROW service will already be running in detach mode.

7.4 OPTIONAL: Remote Access Setup with Headless DisplayPort Emulator

When using TeamViewer remote desktop software, the Jetson Orin Nano requires a DisplayPort signal to enable the desktop environment.

Without a monitor or emulator, you’ll only get a black screen.

- 1. Configure TeamViewer unattended access.**
- 2. Install DisplayPort Headless Emulator.**
 Insert the DisplayPort emulator into the Jetson Orin Nano’s DisplayPort output.
 Ensure it is firmly seated.
- 3. Test Remote Desktop.**
 From your remote PC, connect to the Jetson using TeamViewer.
 You should now see the full Jetson desktop environment.

Troubleshooting

If the screen remains black:

1. Power cycle the Jetson:
 - Unplug the power jack.
 - Wait a few seconds.
 - Plug the power jack back in.
2. Ensure the emulator is connected during this process.

Check display settings in Settings → Display to confirm resolution.

Why This Matters

Without the emulator, the Jetson won’t output a display signal, making remote troubleshooting impossible.

This setup is essential for headless deployments, system checks, and field troubleshooting.

Pro Tip: Use a 4K-capable emulator if you need high resolution for development.

Keep the emulator installed permanently if the system will run headless.

8. SENSOR SETUP

8.1 Configuring ReoLink Wi-Fi Cameras

Once the docker container is running (7.3 section completed) you can connect and configure the ReoLink cameras to transmit images to the SPARROW unit.

1. **Download the ReoLink app:**

- download the ReoLink app on your mobile device from the Google Play Store or Apple App Store (no registration is required to use the ReoLink app):




2. **⚠ IMPORTANT: Do NOT log in to any Reolink account in the app during setup.**
If you are already logged in, log out before continuing.
This step is critical—if you remain logged in, the cameras will not send alerts when there is no active internet connection.
3. **Connect your phone to the SPARROW Wi-Fi network:**
- Open your Wi-Fi settings on your phone and search for the SPARROW SSID. Connect to the SSID and enter your password.
4. **Open the ReoLink app and click on the icon shown below to add a new camera:**




5. **Each camera comes with its own distinct QR code which can be found on the outside of the camera. Using the ReoLink app scan the QR code as shown below:**



6. Follow the on-screen instructions to join the ReoLink camera to the SPARROW SSID.
7. Enter a local password:

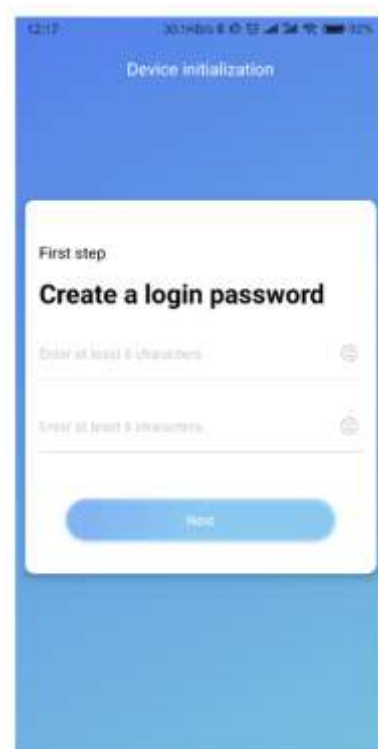


8. Name the camera and click the button Next to enter the next page:

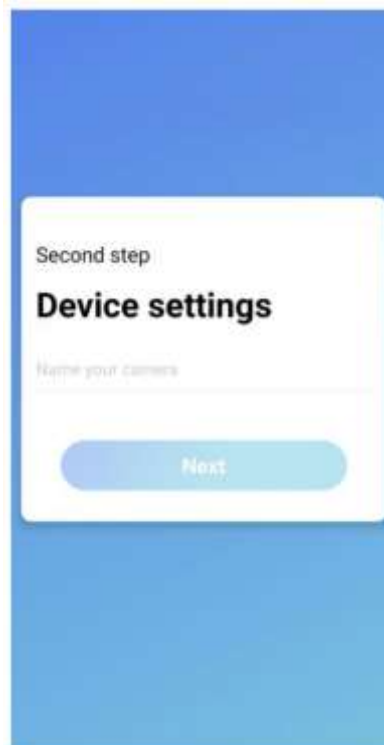


9. Read the tips and click Use now to finish the Initialisation:



10. On the camera settings page click on Email Alerts:

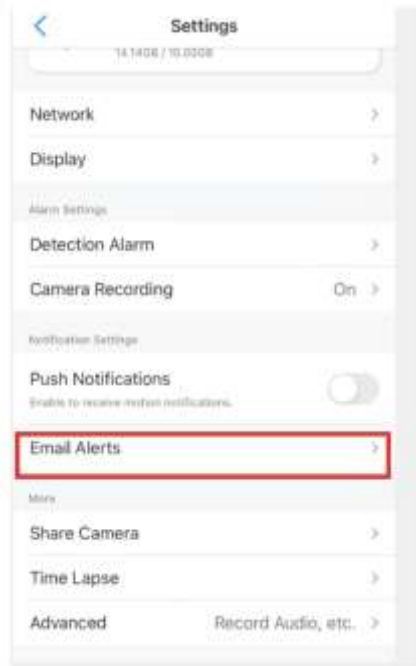

11. Enable Email Alerts then click Set up Now:

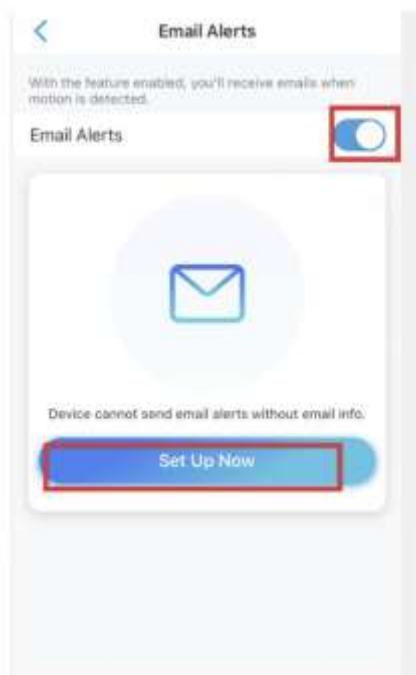

12. Fill in the required information and click save. You must use the following settings:

- Sender address: camera@localnetwork.com
- Password: (Check the sparrow setup script)
- SMTP Server 10.42.0.1
- Port: 25
- Turn off SSL/TLS
- Recipient Address 1: alerts@localnetwork.com (when using Android this setting is available after first setting it up with the Sender Address)
- Click Save
- Click Test and make sure you get the test success confirmation message

8.2 Peripheral Sensor Assembly

AudioMoth DEV Microphone Setup

What You'll Need:

- AudioMoth DEV Board
- AudioMoth DEV Case
- Micro USB cable
- Nvidia Jetson Orin Nano
- Cable gland (for the case)
- Precision knife (e.g., X-Acto knife)
- Internet access for firmware download

Step 1: Prepare the AudioMoth DEV Case.



1. **Open the case** and locate the battery cradle inside.
2. **Remove the battery cradle:**
 - a. Undo the straps holding it in place.
 - b. Lift the entire cradle out of the green box.
 - c. You should now have an empty case.

Step 2: Install the Cable Gland.



1. **Find the cable passthrough placeholder M16 cap on the case.**
2. **Remove the placeholder M16 cap.**
3. **Install a PG9 cable gland in its place.**
 - a. Make sure it is tightened securely to prevent movement.

Step 3: Prepare the Micro USB Cable.

1. **Check if the Micro USB connector fits through the cable gland.**
 - a. If it does not fit, proceed to the next step.
2. **Trim the Micro USB connector carefully:**
 - a. Use a precision knife to shave off some of the outer rubber casing.
 - b. Important: Do NOT cut into the internal data wires.
 - c. Take your time—small cuts are safer than deep cuts.

Step 4: Route the Cable.

1. **Insert the Micro USB cable through the cable gland** from the outside of the case.
2. **Pull enough cable inside** so it can comfortably reach the AudioMoth board.

Step 5: Connect and Position the AudioMoth.

1. **Plug the Micro USB connector into the AudioMoth.**
2. **Place the AudioMoth board inside the case** in its designated position.
3. **Ensure the cable is neatly routed** and not pinched by the case edges.

Step 6: Final Check.


1. **Confirm the cable gland is tight.**
2. Make sure the AudioMoth is secure in its locking tabs, and the cable is connected properly.
3. Close the case.
4. AudioMoth is now ready for field deployment, use the provided Velcro straps or zip-ties to secure it in its final location.

9. Field Deployment Tips

Installing SPARROW in Tree Canopy

- When deploying SPARROW units in dense forest environments, mounting the system high in the tree canopy is critical for optimal performance.
- Position the solar panels and Starlink antenna at the highest possible point, ideally above or at the edge of the canopy, to minimize foliage interference. This ensures unobstructed line-of-sight for the antenna and maximum solar exposure throughout the day.
- Use secure climbing techniques or professional arborist support for safety and always verify that mounting hardware is rated for outdoor conditions and wind loads.
- Route all cables neatly along the trunk using UV-resistant cable ties and weatherproof junctions to prevent strain and moisture ingress.
- Finally, confirm that the installation is stable and that the solar panel angle is optimized for the local latitude to maximize energy capture.



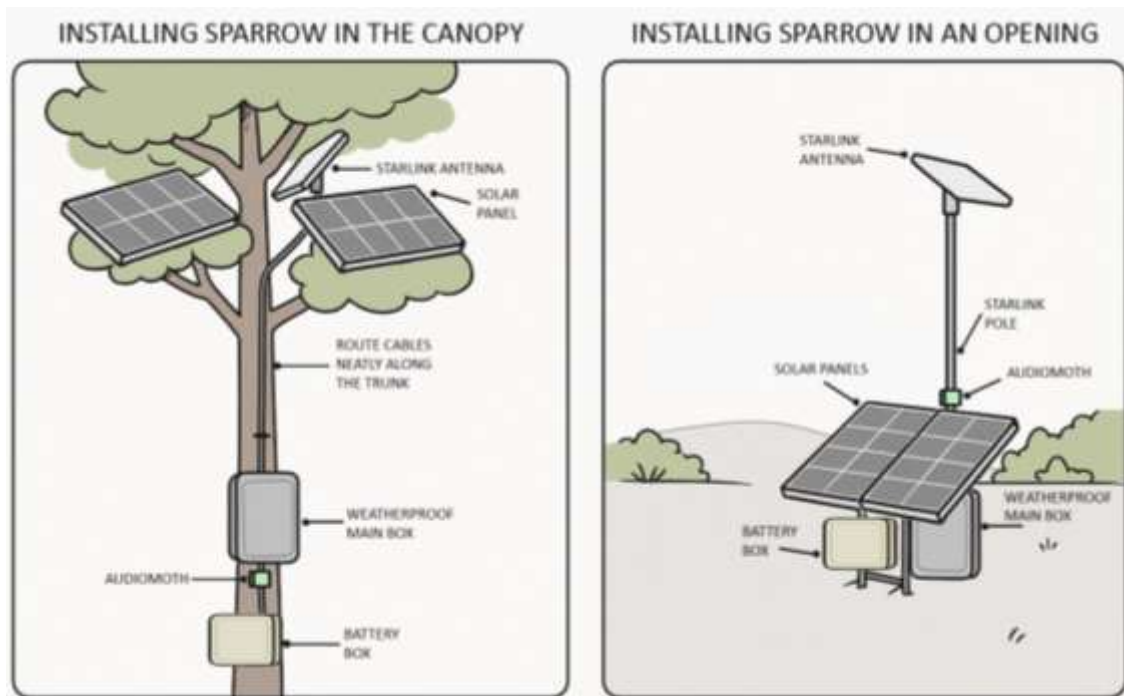

Installing Sparrow in Treeline Openings (No Canopy Cover)

- For open-area deployments, Sparrow can be configured as a compact ground-based system.
- Use solar panel mounting brackets that elevate the panels off the ground and allow for adjustable tilt angles to optimize sunlight exposure year-round.
- Ensure the brackets are anchored securely to withstand wind and wildlife interference.
- The Starlink antenna should be mounted on a fixed pole support, positioned away from obstructions such as shrubs or terrain features to maintain a clear view of the sky.
- Keep all electronics housed in a weatherproof enclosure and elevate the enclosure slightly above ground level to avoid water pooling.
- For added reliability, consider using guy wires for pole stability and protective conduit for exposed cables.
- This setup is ideal for rapid deployment and easy maintenance in open landscapes.



Additional Suggestions

- **Weatherproofing:** Apply silicone seals or gaskets on all enclosure entry points to prevent moisture ingress.
- **Wildlife Protection:** Use mesh guards, zip-ties or double sheath wires to protect cables from rodents and birds.
- **Maintenance Access:** Leave enough slack in cables and plan for safe access to solar panels and antennas for cleaning or adjustments.
- **Power Monitoring:** If possible, integrate a remote monitoring solution to track solar performance and battery health.
- **AudioMoth Positioning:** The AudioMoth microphone can be secured under the main box to the tree trunk or the main cable bundle when installing SPARROW in the Canopy. For Opening installations, the AudioMoth recorder can be secured to the main solar panel mounting brackets.
- **Battery Case:** For deployments of SPARROW units in the wild, it is essential to house the battery system in a weatherproof container to extend battery life and overall lifespan. Using plastic totes or weatherproof bin containers provides effective protection against moisture and environmental exposure. To maintain the enclosure's integrity while routing cables, cable glands should be used to seal entry points and prevent water ingress. In cold environments, adding thermal insulation inside the container will help maintain optimal battery temperature and improve performance. This setup is especially beneficial in humid or flood-prone areas, where elevated placement and optional ventilation valves can further enhance durability.

10. SPARROW Unit Product Specification Sheet

Key Features & Capabilities

- **AI-powered edge computing** for wildlife and environmental monitoring
- **Solar-powered, autonomous operation** in remote locations
- **Multi-sensor integration:** acoustic, visual, environmental, and wireless sensors
- **Real-time data transmission** via low-Earth orbit satellites (Starlink), cellular (GSM, 3G, 4G, 5G)* or RF (XBee, LoRa)*
- **Robust field deployment options:** canopy or ground, weatherproof, wildlife-resistant

Component	Specification / Description	Details / Features
Main Compute Device	NVIDIA Jetson Orin Nano Developer Kit	Edge AI processing, runs PyTorch-based wildlife models, interfaces with all sensors
Storage	M.2 NVMe SSD (PCIe Gen 3)	Stores OS and all logged data locally, 1TB or larger recommended
Power Supply	Solar 24V Power Matrix	Solar-powered, supports LiFePO4 or AGM batteries in 24V configuration
Solar Panel Array	2x 12V panels in series (24V array)	Powers system, maximizes solar exposure, overall dimensioning subject to use case
Battery Bank	LiFePO4 preferred, AGM compatible	24V 100Ah capacity recommended (a pair of 12V batteries connected in series can be used)
Solar Charge Controller	Victron SmartSolar 100/20 MPPT Controller	Manages charging, power profiles, and system voltage
Networking	Starlink Mini Satellite Internet	Location and power usage stats, advanced logging via Starlink app.
Wi-Fi Module	Onboard Wi-Fi card with MHF4-to-SMA connectors and external antennas	For local wireless connectivity and remote monitoring
Sensor Expansion Environmental Sensors	Shuttle Click Expansion Board, BUS Board, Pi 3 Click Shield Environment 3 Click Board (BME688)	mikroBUS standard sockets for stacking up to four click boards each, GPIO expansion hub Pressure: 300 to 110hPa Temperature: 0 to 65°C (±1°C) Humidity: 10-90%RH VOCs, VSCs, CO, H ₂ detection.
	Temp-Hum 9 Click Board (SHTC3)	Temperature: -40°C to +125°C (±0.2°C) Humidity: 0-100% RH (±2% RH), monitors unit internal conditions
Real-Time Clock	RTC 10 Click Board (DS3231M)	Maintains accurate time during power interruptions
Wireless Connectivity	Digi XBee RF module	Low-power CE/RED RF module with superior performance and interference immunity from Digi International. The module can run either a proprietary DigiMesh or point-to-multipoint networking protocol. Operating between 863MHz and 870MHz (868MHz) or 902 MHz and 928MHz frequency range (900MHz) depending on location.
Relay Board	Relay 3 Click Board (SRD-5VDC-SL-C relays)	Dual relay, remote ON/OFF for Starlink, 28VDC/7A max load
Audio Sensor	AudioMoth DEV Board & Case	USB Microphone, waterproof enclosure, firmware upgradable and remotely configurable.
Cameras	ReoLink Argus Eco Wi-Fi Camera	Temperature Range: -10 °C to 55 °C Weather Resistance: Rated IP65 Resolution: 1080p HD (1920 × 1080) Night Vision: Up to 10 meters (33 feet) Wi-Fi: IEEE 802.11 b/g/n Battery: 5200mAh rechargeable battery Solar: Compatible with Reolink Solar Panel Configurable via app, QR code setup, email alerts, SMTP integration.

*Support for these communication systems pending development.