



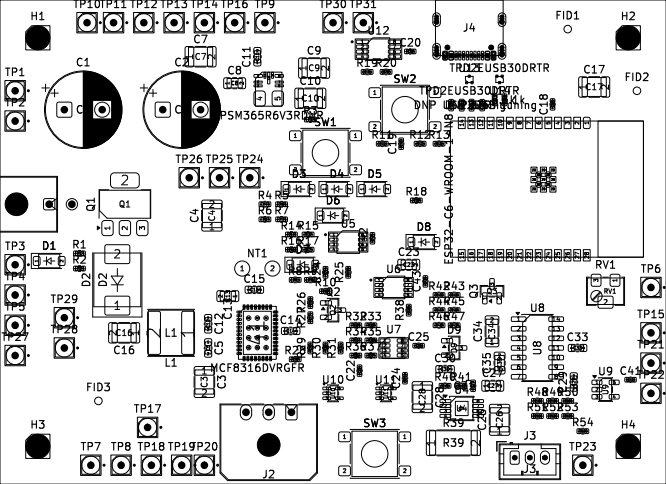


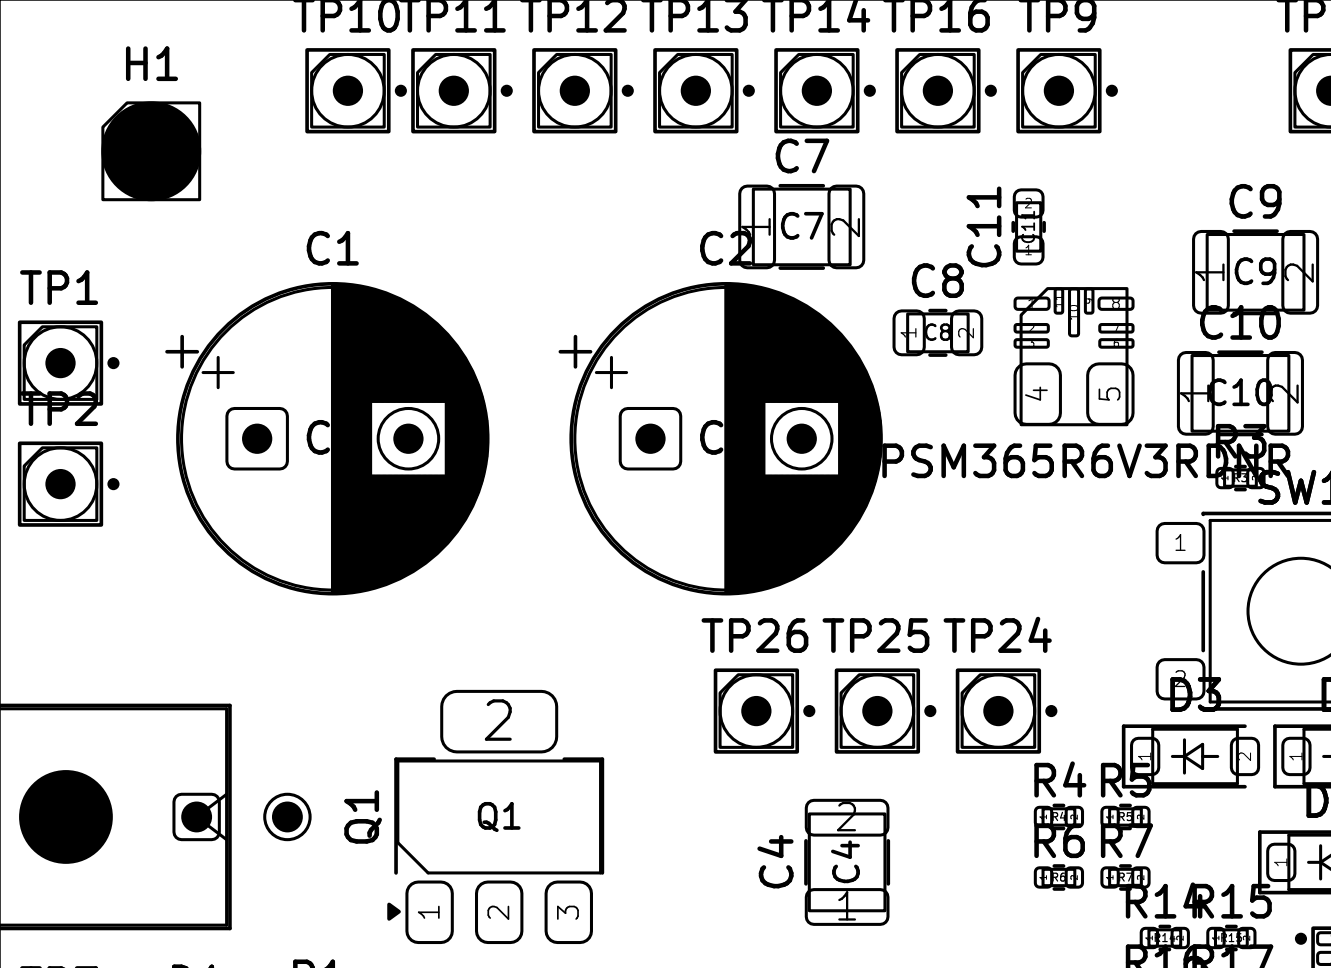

30 TP31




U12



R19 R20

(1010) (1020)

SW2

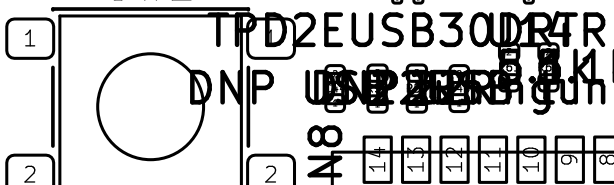

TPD2EUSB30DRTR

DNP USB 2.0 programming

R11

(1010)

R12 R13

(1010) (1020)



D5

D4

6

U5

U2

R18

(1010)

D8

32-C6-WROOM-1

J4

TPD1EUSB30DRTR

FID1

H2

C17

FID2

C18

(1010)

