



xClarity

Rack Editor & Bulk Import

CheKim Chhuor (CK)
April 2015



Content


- Rack View & Editor
- Bulk Import




Rack View & Editor

Rack cabinet feature


- Allow user to create virtual rack and assign devices to it
- Can add managed devices and view/edit properties
 - e.g. x3650 M5, Flex chassis
- Can add “filler” for non-managed devices
 - e.g. generic faceplate, BNT switch, V7000
- Devices and fillers can be bulk imported with rack assignment all at once
- Support racks of 37U and 42U in this release

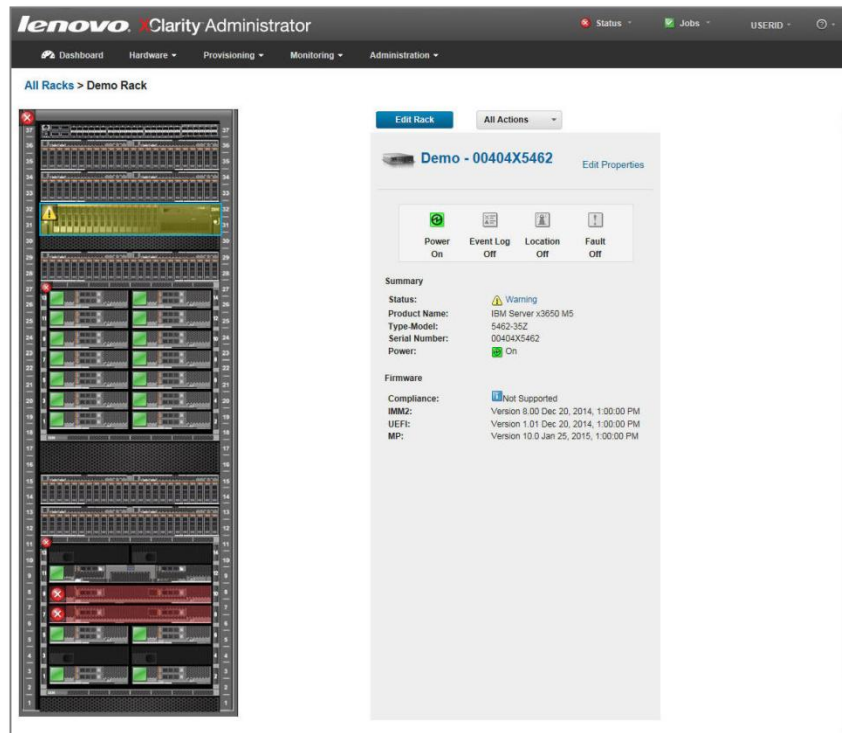

Entry points and create new rack

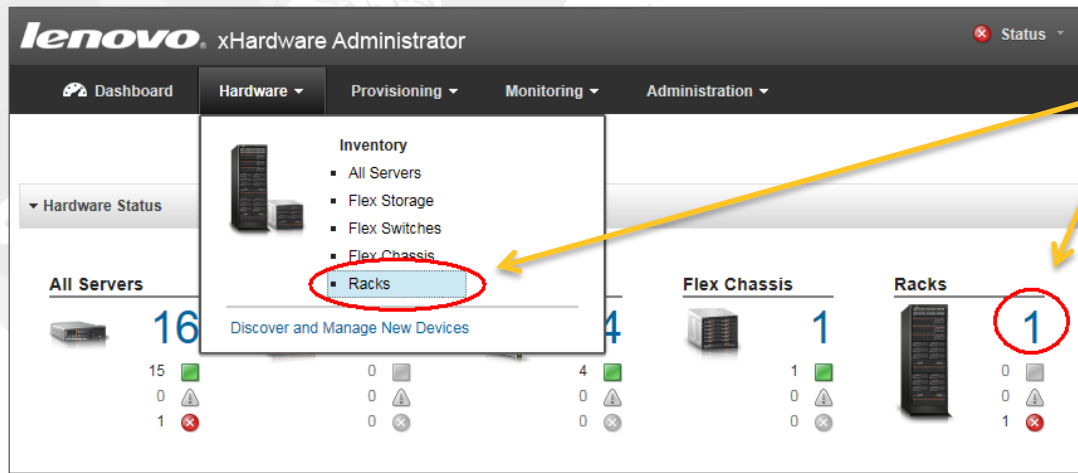


Two entry points to rack view

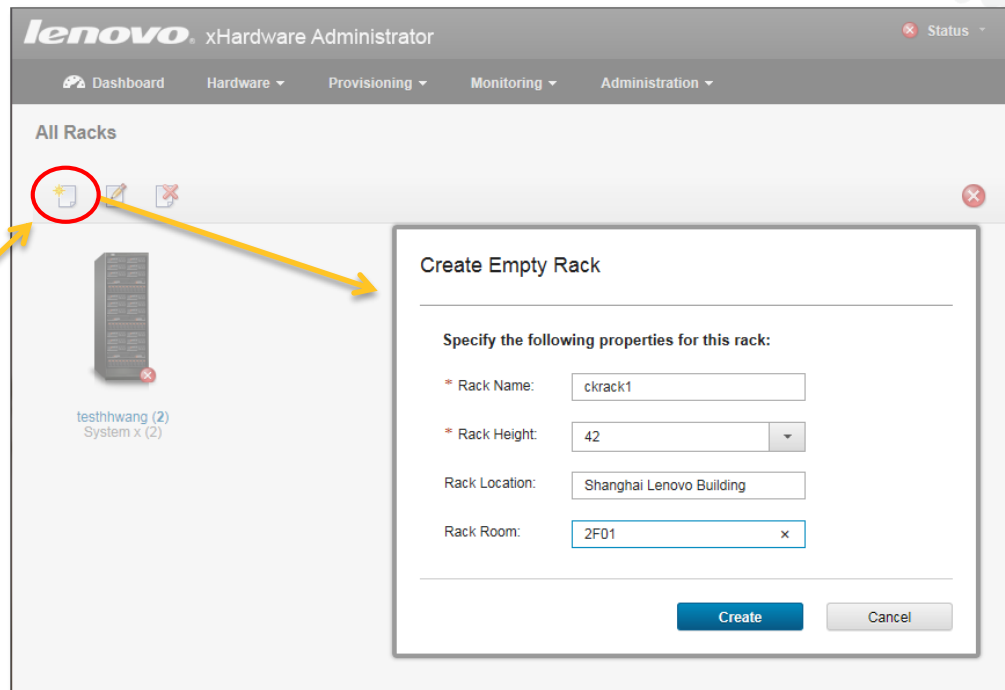


Create new rack then fill in properties

View mode and Edit mode

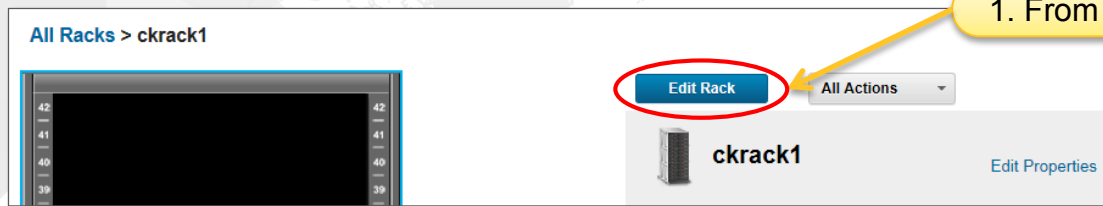


1. From View mode to Edit mode...

4. Don't forget to Save editing, location info will be pushed to IMM & CMM upon saving

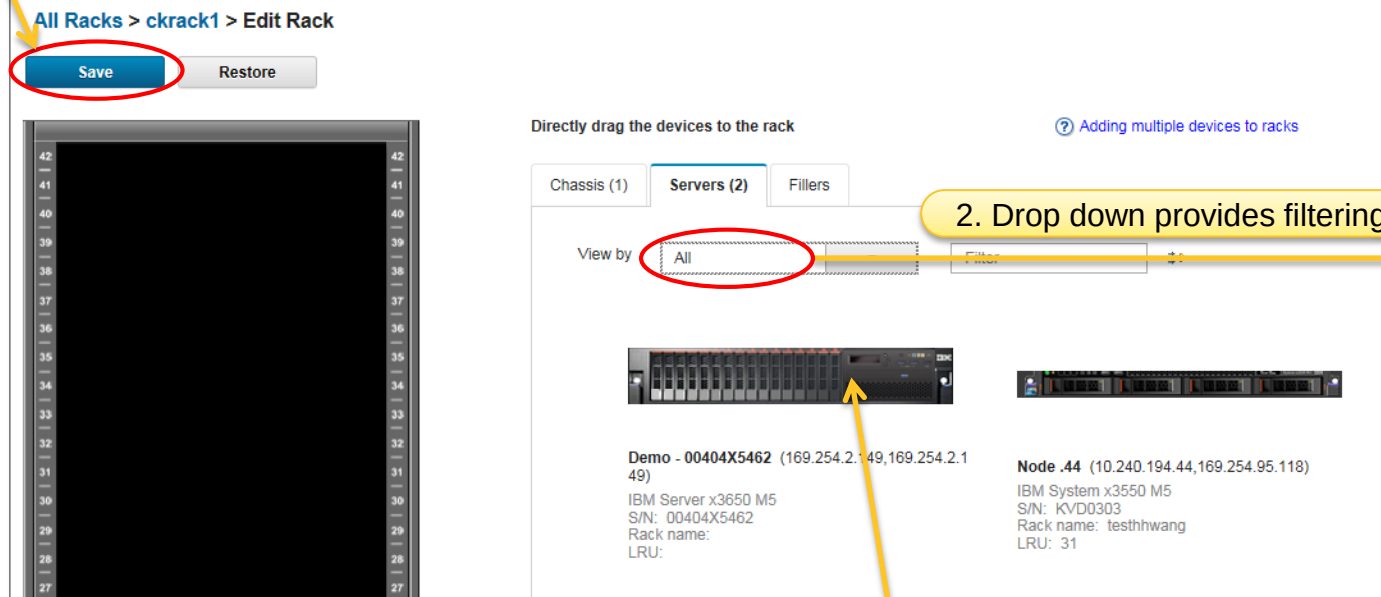

2. Drop down provides filtering

3. Drag and drop devices to assign to the rack

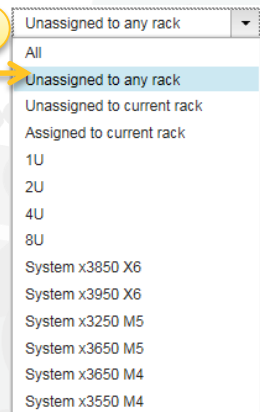

Adding a filler to rack

1. Drag and drop filler to rack
2. Save editing
3. Edit filler properties
4. Enter URL (optional)
5. URL displayed

All Racks > ckrack1



1

2

3

4

5

Filler_33_ckrack1

Summary

LRU: 33
Height: 1U
Type: Filler
Product Name: Lenovo RackSwitch
Launch URL:

Filler_33_ckrack1: Edit Properties

Name: Filler_33_ckrack1
Height: 1
LRU: 33
Launch URL: <http://10.240.194.100/manage>

Save Close

All Racks > ckrack1 > Edit Rack

Save Restore

2

Directly drag the devices to the rack

Chassis (1) Servers (2) Fillers

1U Filler
2U Filler
4U Filler

1

Filler_33_ckrack1 Edit Properties


Summary

LRU: 33
Height: 1U
Type: Filler
Product Name: Lenovo RackSwitch
Launch URL: <http://10.240.194.100/manage>

5

Chassis summary

All Racks > ckrack1

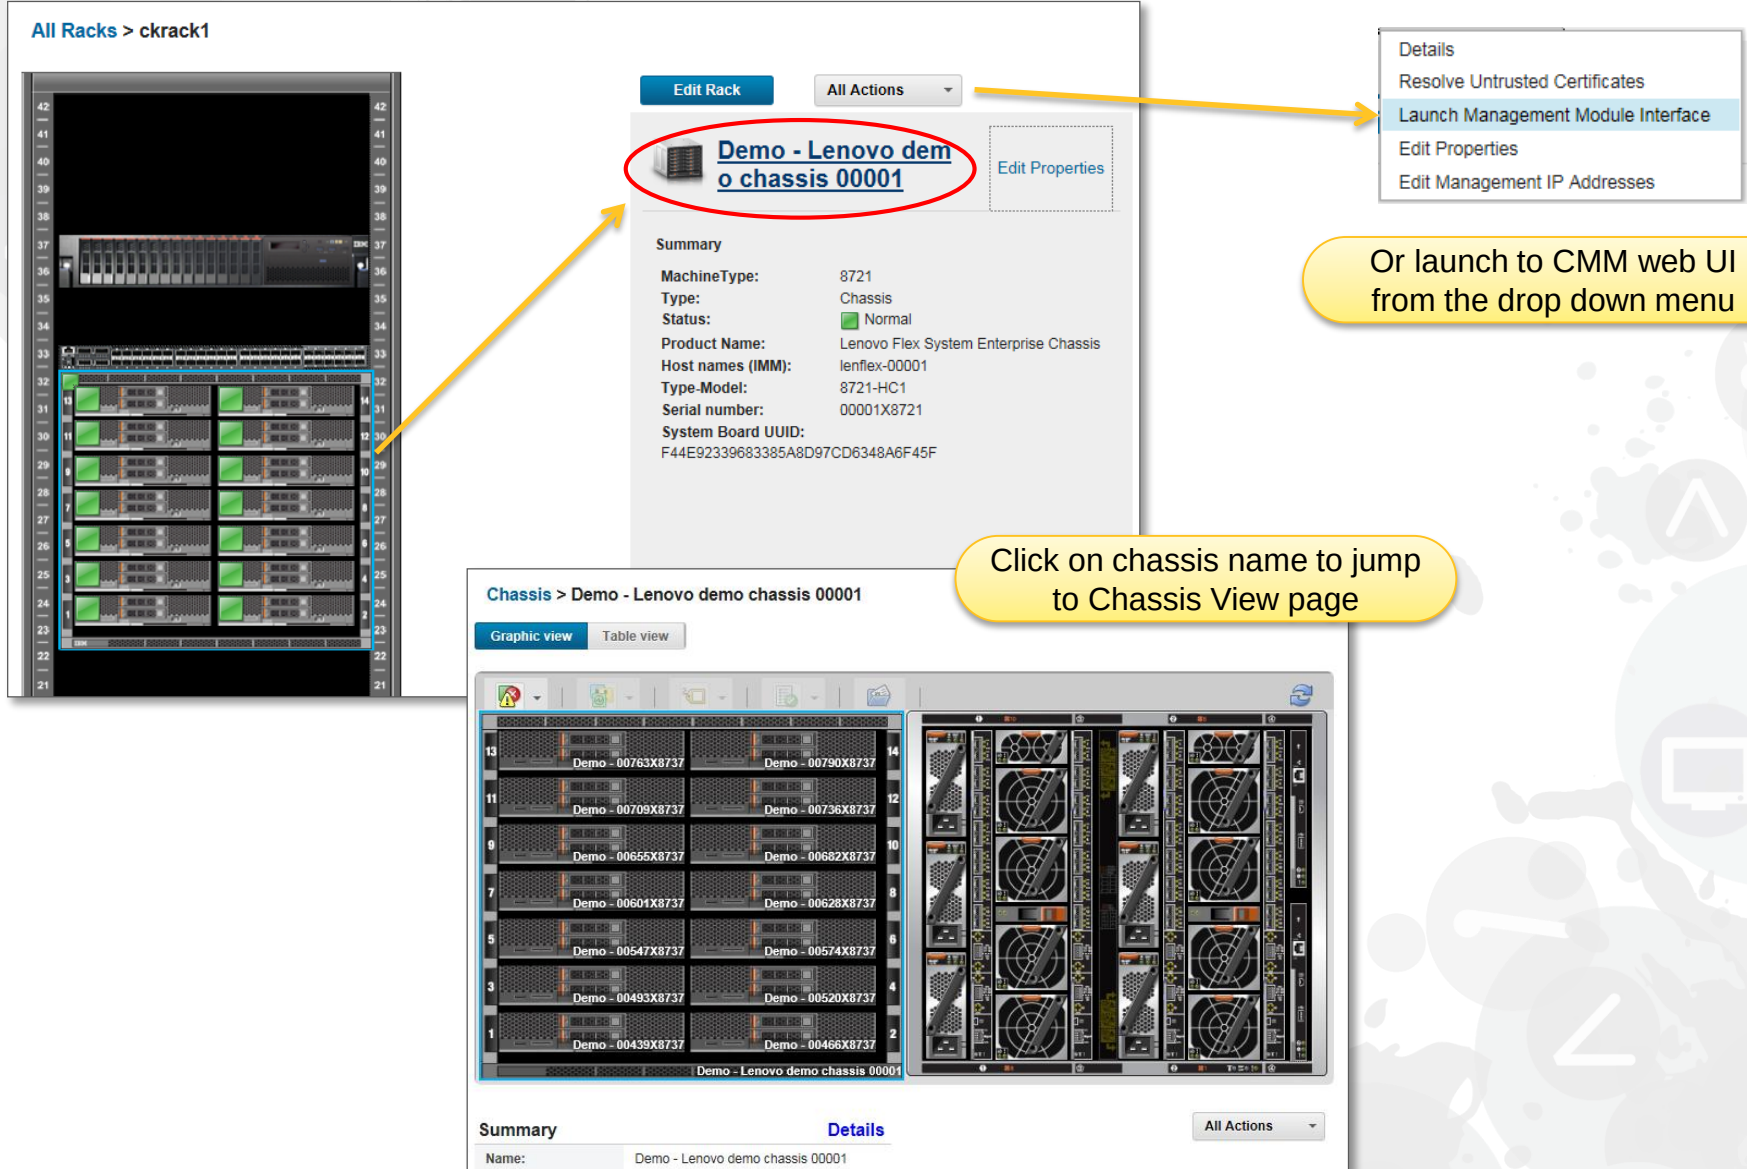

Edit Rack **All Actions** **Edit Properties**

Demo - Lenovo demo chassis 00001

Summary

MachineType: 8721
Type: Chassis
Status: ☒ Normal
Product Name: Lenovo Flex System Enterprise Chassis
Host names (IMM): lenflex-00001
Type-Model: 8721-HC1
Serial number: 00001X8721
System Board UUID: F44E92339683385A8D97CD6348A6F45F

Chassis > Demo - Lenovo demo chassis 00001

Graphic view **Table view**

Summary **Details** **All Actions**


Name: Demo - Lenovo demo chassis 00001

Or launch to CMM web UI from the drop down menu

Click on chassis name to jump to Chassis View page

Server summary

All Racks > ckrack1

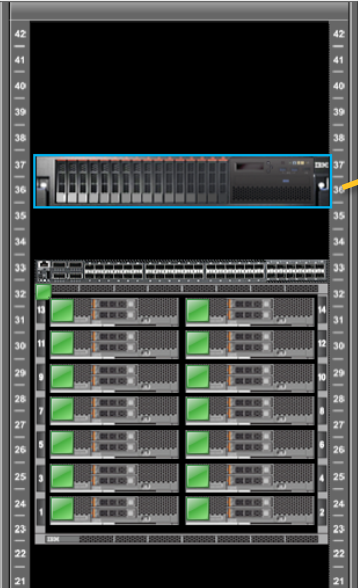

Edit Rack **All Actions** **Edit Properties**

Demo - 00404X5462

Power On Event Log Off Location Off Fault Off

Summary

Status: Normal
Product Name: IBM Server x3650 M5
Type-Model: 5462-35Z
Serial Number: 00404X5462
Power: On

Firmware

Compliance: Not Supported
IMM2: Version 8.00 Dec 20, 2014, 1:00:00 PM
UEFI: Version 1.01 Dec 20, 2014, 1:00:00 PM
MP: Version 10.0 Jan 25, 2015, 1:00:00 PM

- Details
- Resolve Untrusted Certificates
- Launch Management Module Interface**
- Edit Properties
- Launch Remote Control
- Power Actions

Launch to IMM web UI or Remote Control

Click on server name to jump to inventory details

Demo - 00404X5462 **Normal**

General


- Summary
- Inventory Details**

Servers > Inventory Details

Edit Properties

- Firmware
- Management Module Network
- Asset Information
- Processors: (2) Installed, (0) Empty Bays
- Memory: (24) Installed, (0) Empty Bays

All Racks

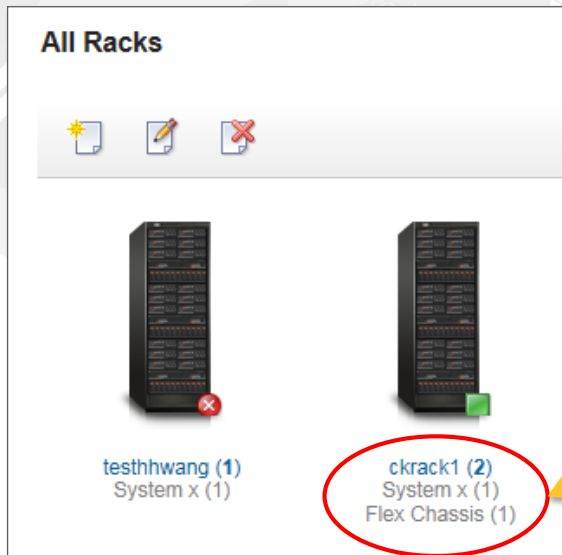


Numbers show total servers and chassis assigned to this rack



Bulk Import

Bulk import feature

- Allow batch discovery and management servers and chassis
- Can change some basic system settings upon successful management
 - E.g. assign new IP, hostname, display name, rack assignment
- Provide a global credential for all servers and 1 for all chassis
- Or, each record can override with unique credential if needed
- Template file is provided in Excel format (with help text) and csv (without)
- File must be saved in csv when submitting for import

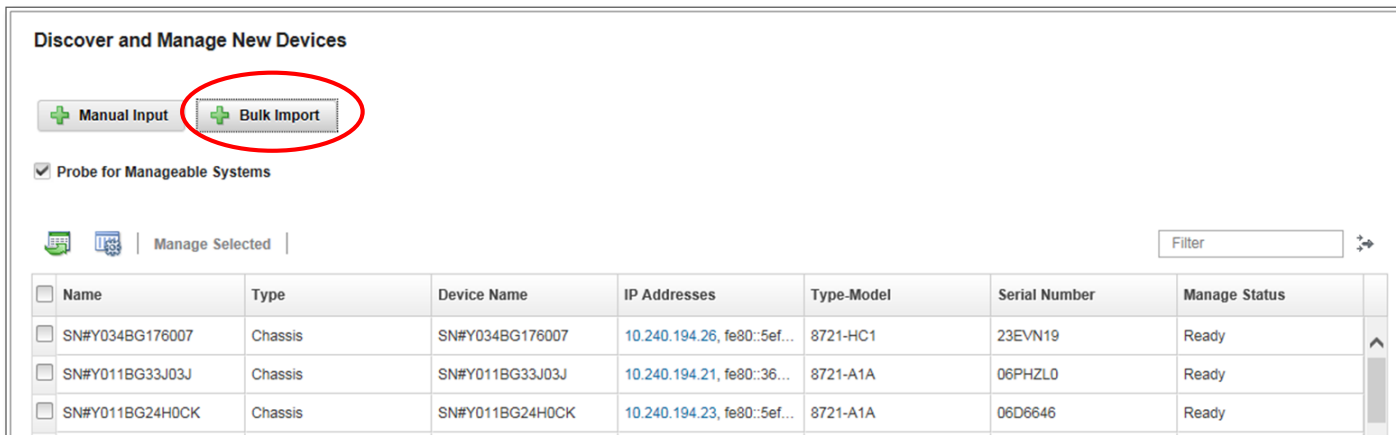

Discover and Manage New Devices

☒ Probe for Manageable Systems

| Manage Selected |

☐	Name	Type	Device Name	IP Addresses	Type-Model	Serial Number	Manage Status
☐	SN#Y034BG176007	Chassis	SN#Y034BG176007	10.240.194.26, fe80::5ef...	8721-HC1	23EVN19	Ready
☐	SN#Y011BG33J03J	Chassis	SN#Y011BG33J03J	10.240.194.21, fe80::36...	8721-A1A	06PHZL0	Ready
☐	SN#Y011BG24H0CK	Chassis	SN#Y011BG24H0CK	10.240.194.23, fe80::5ef...	8721-A1A	06D6646	Ready

Entry point

The screenshot displays the Lenovo xHardware Administrator web interface. The main navigation bar includes Dashboard, Hardware, Provisioning, Monitoring, and Administration. The Hardware section is active, showing a summary of device counts: All Servers (16), Flex Chassis (1), and Racks (2). A yellow arrow points from the 'Discover and Manage New Devices' button in the main interface to the 'Bulk Import' button in the 'Discover and Manage New Devices' window.

Discover and Manage New Devices

☒ Manual Input ☒ Bulk Import

☒ Probe for Manageable Systems

Name	Type	Device Name	IP Addresses	Type-Model	Serial Number	Manage Status
☐ SN#Y034BG176007	Chassis	SN#Y034BG176007	10.240.194.26, fe80::5ef...	8721-HC1	23EVN19	Ready
☐ SN#Y011BG33J03J	Chassis	SN#Y011BG33J03J	10.240.194.21, fe80::36...	8721-A1A	06PHZL0	Ready
☐ SN#Y011BG24H0CK	Chassis	SN#Y011BG24H0CK	10.240.194.23, fe80::5ef...	8721-A1A	06D6646	Ready
☐ SN#Y030BG16802L	Chassis	SN#Y030BG16802L	10.240.194.20, fe80::5ef...	8721-HC1	23ENY13	Ready
☐ SN#Y034BG176001	Chassis	SN#Y034BG176001	10.240.194.24, fe80::5ef...	8721-HC1	23ENY12	Ready
☐ SN#Y011BG32W01E	Chassis	SN#Y011BG32W01E	10.240.194.22, fe80::36...	8721-A1A	06PVMY9	Ready
☐ SN#Y011BG32301A	Chassis	SN#Y011BG32301A	10.240.194.25, fe80::36...	8721-HC1	23ENY18	Ready
☐ SN#06CHHYN	Rack-Tower Server	SN#06CHHYN	10.240.195.165, 2002:9...	5464-AC1	06CHHYN	Ready
☐ SN#23X9488	Rack-Tower Server	SN#23X9488	10.240.197.171, 2002:9...	3837-AC1	23X9488	Ready
☐ ZJ10F	Rack-Tower Server	ZJ10F	10.240.195.123, 2002:9...	6241-AC1	23Y1289	Ready
☐ SN#06CHHXZ	Rack-Tower Server	SN#06CHHXZ	10.240.199.107, 2002:9...	5464-AC1	06CHHXZ	Ready
☐ TCT_Kong	Rack-Tower Server	TCT_Kong	10.240.194.13, 2002:97...	8722-AC1	23D4802	Not Ready

Provide input

Bulk Import

The import job will run in the background and might take several minutes to complete. Bulk import is performed as a job. You can go to the [Jobs](#) page to view the status of the job as it progresses.

Import Data File:

Step1: Download the template file [in Excel](#) or [in CSV](#) format

Step2: Enter information in the template file then save as CSV format

Step3: Upload the CSV file for processing

template-0304.csv

Credentials:

Server Management Module

Current credentials (global)

USERID

.....

New credentials (global)
(Note: Used only if the current credentials expired)

.....

.....

Chassis Management Module

Current credentials (global)

USERID

.....

Recovery password (global)

.....

.....

New credentials (global)
(Note: Used only if the current credentials expired)

.....

.....

The Excel format has inline help for guidance

Save the "Data" worksheet into csv format

Provide server and/or chassis global credentials based on what you need to import (no validation here)

Status

Jobs

With Errors(3)

Running(0)

Completed(8)

Default Task Label

Ended: No start time specified.

Default Task Label

Ended: No start time specified.

Manage job for 7750f7cedf7f11d...

Ended: Mar 2, 2015, 3:36:18 PM

Showing 3 of 3

[View All Jobs](#)

Bulk import: basic scenario

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W
	#Type	Serial Number	Current IP	Current username	Current password	New password	Chassis recovery password	New IPv4	IPv4 subnet mask	IPv4 default gateway	IPv4 DNS1	IPv4 DNS2	New IPv6	IPv6 prefix	IPv6 gateway	IPv6 DNS1	IPv6 DNS2	Domain	Host name	Display name	Rack name	Lowest rack unit	Height
1																							
2	xserver		10.2.1.101																				
3	xserver		10.2.1.102																				
4	xserver		10.2.1.103																				
5	xserver		10.2.1.104																				
6	flexchassis		10.2.1.201																				
7																							
8																							
9																							
10																							

Data | Readme

This is all you need to provide for a basic discovery & management

Bulk Import

The import job will run in the background and might take several minutes to complete. Bulk import is performed as a job. You can go to the [Jobs](#) page to view the status of the job as it progresses.

Import Data File:
Step1: Download the template file in [Excel](#) or in [CSV](#) format
Step2: Enter information in the template file then save as CSV format
Step3: Upload the CSV file for processing

template-0304.csv

Credentials:

Server Management Module

Current credentials (global)

USERID

New credentials (global)
(Note: Used only if the current credentials expired)

Chassis Management Module

Current credentials (global)

USERID

Recovery password (global)

New credentials (global)
(Note: Used only if the current credentials expired)

Fill these values if you're discovering servers

Fill these values if you're discovering chassis

Bulk import: advanced scenario

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	
1	Required fields (Type + SN or IP)													Optional fields										
	Type	Serial Number	Current IP	Current username	Current password	New password	Chassis recovery password	New IPv4	IPv4 subnet mask	IPv4 default gateway	IPv4 DNS1	IPv4 DNS2	New IPv6	IPv6 prefix	IPv6 gateway	IPv6 DNS1	IPv6 DNS2	Domain	Host name	Display name	Rack name	Lowest rack unit	Height	
2	xserver		10.1.0.198																					Explains
3	xserver	P67X30EL																						; discov
4	flexchassis		10.1.0.213	USERID	passw0rdx	Pa55word@	abcd1234																	; discov
5	flexchassis	Z3499DD				Pa55word@	abcd1234	9.27.20.51	255.255.255.0	9.27.20.1	9.0.148.50	9.0.146.50												; manag
6	xserver	35T88XP		USERID	passw0rdy	abcd1234												ebg.lenovo.com	chassis01	chassis03	SH3G05A34	25		; initial
7	xserver		10.1.0.214					10.1.2.213	255.255.255.0	10.1.2.1	9.0.148.50	9.0.146.50	2002:9	2002:93	2002:939::	2002:93	2002:9	ebg.lenovo.com	host4	c02node01	SH3G05B12	38		; overrid
8	rack																	ebg.lenovo.com	host5	web02	SH3G05B12	10		; manag
9	rack																			SG2R01A01				37 ; define
10	filler																			SH3G05A34				42 ; define
11	filler																			APC UPS	SH3G05A34	1		4 ; define
12	filler																			FC switch	SH3G05A34	40		2 ; define
13	filler																			KVM switch	SH3G05B12	22		1 ; define
14																								
15																								
16	How to use this spreadsheet																							
17	This spreadsheet is intended for batch import of management endpoints and rack location information.																							
18	Columns A - C -- Required fields (Type, plus serial number or current IP address)																							
19	Columns D - G -- Provide credentials if different than global credentials																							
20	Columns H - T -- Optionally provide information if you want to apply changes to the device upon successful management																							
21	Columns U - W -- Optionally provide information for rack creation and assignment																							
22																								
23	Type supported																							
24	flexchassis -- Flex System Chassis, 10U																							
25	xserver -- Rack mounted System x server																							
26	rack -- Rack cabinet of various height, do not put smaller or larger number than the supported heights, 42U is assumed by default																							
27	filler -- Placeholder for unmanaged object, support heights of 1U, 2U or 4U, shown as generic filler graphic																							
28																								
29	Rack height supported																							
30	37U, 42U																							
31																								
32																								

Readme



THANK YOU GRAZIE MERCI DANKE GRAZIAS 謝謝 СПАСИБО
GRACIAS OBRIGADO ありがとう DANK TAKK BEDANKT DAKUJEM

